 
 
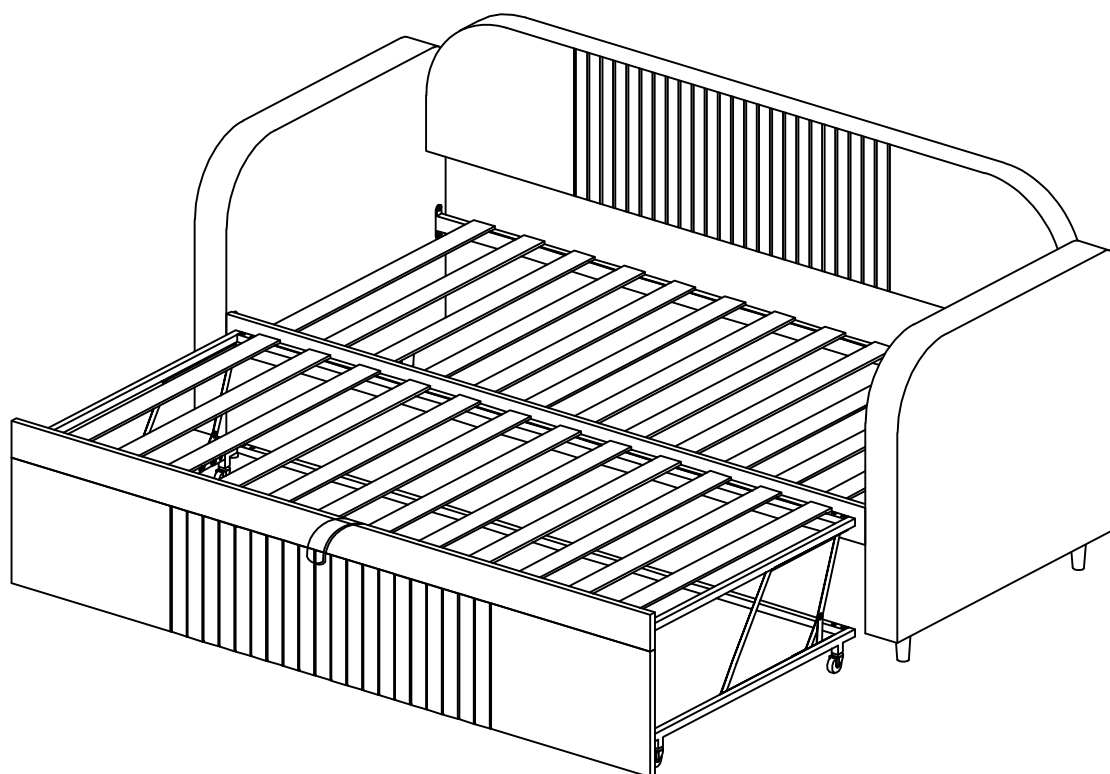 





INSTUCTIONS
N623P182190 / N623P182191
90X190

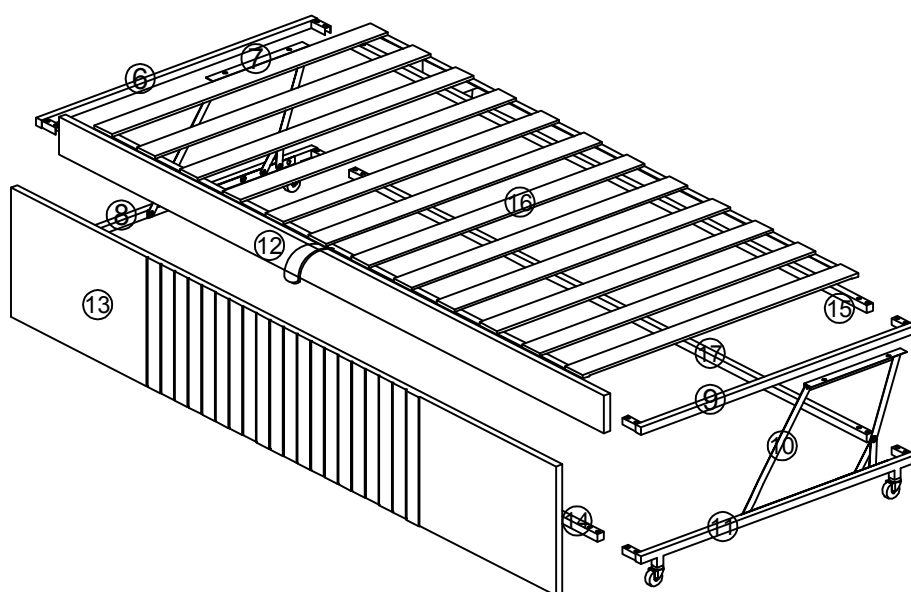

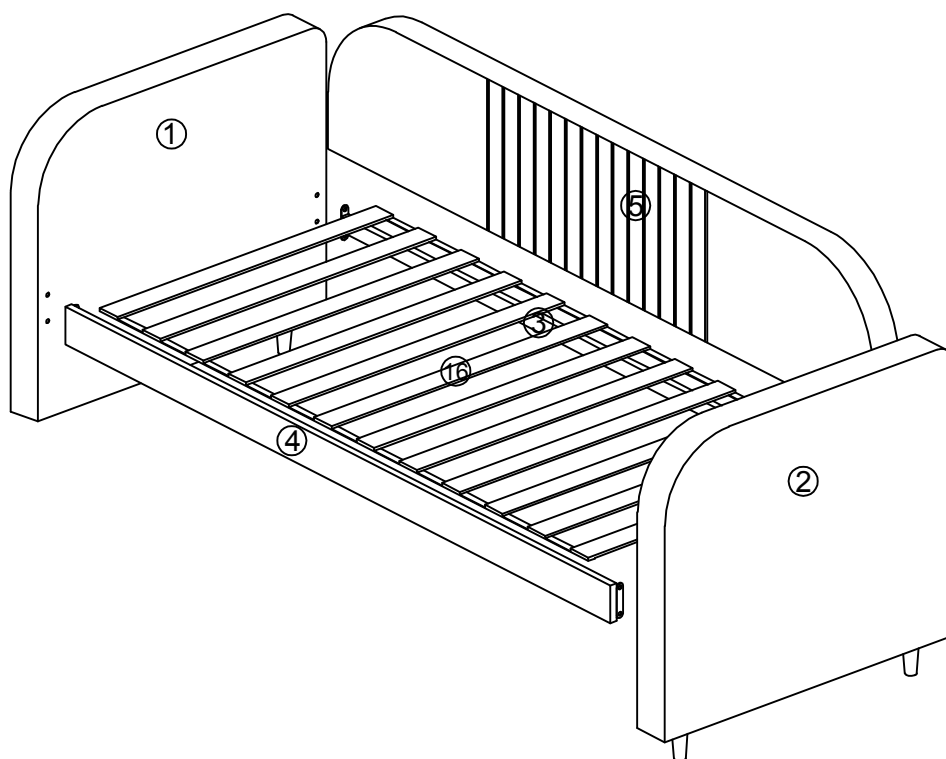

Part List





 
 
 
N623P182190

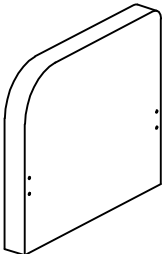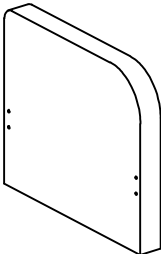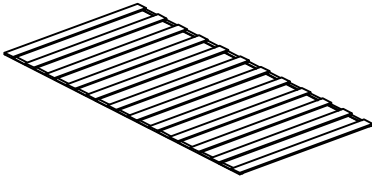1		2		16	
x1		x1		x2	


HARDWARE

A.x8  M8x25mm	B.x8  M8x30mm	C.x30  M6x16mm	D.x38 
E.x4  M3x20mm	F.x4 	G.x2 	I.x1 
J.x1 			

       N623P182191


3 	4 	5 	6 	7 
x1	x1	x1	x1	x1
8 	9 	10 	11 	12 
x1	x1	x1	x1	x1
13 	14 	15 	17 	H.x4 
x1	x1	x1	x1	

 STEP 1

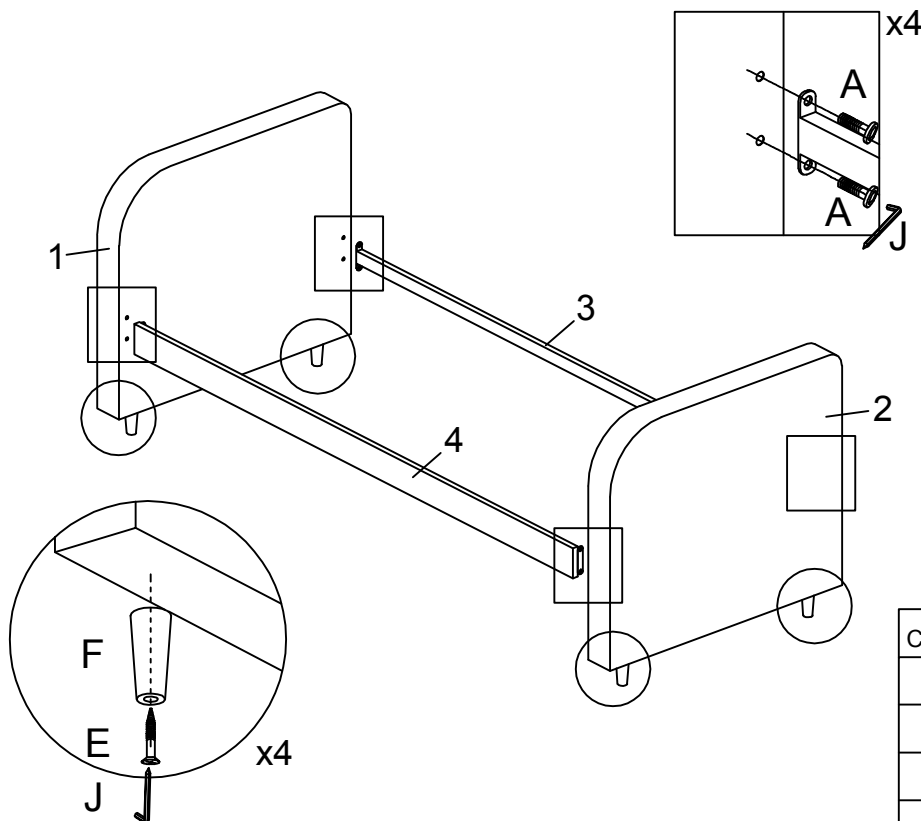


CODE	HARDWARE	QTY
A	M8X25mm	8
E	M3X20mm	4
F		4
J		1

 STEP 2

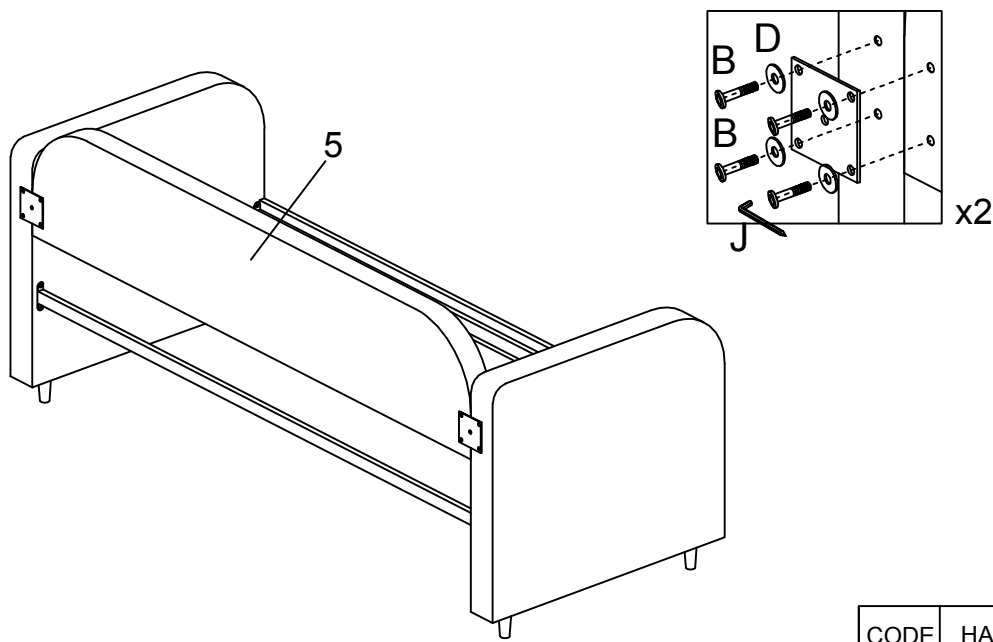


CODE	HARDWARE	QTY
B	M6X30mm	8
D	M6	8
J		1

 STEP 3

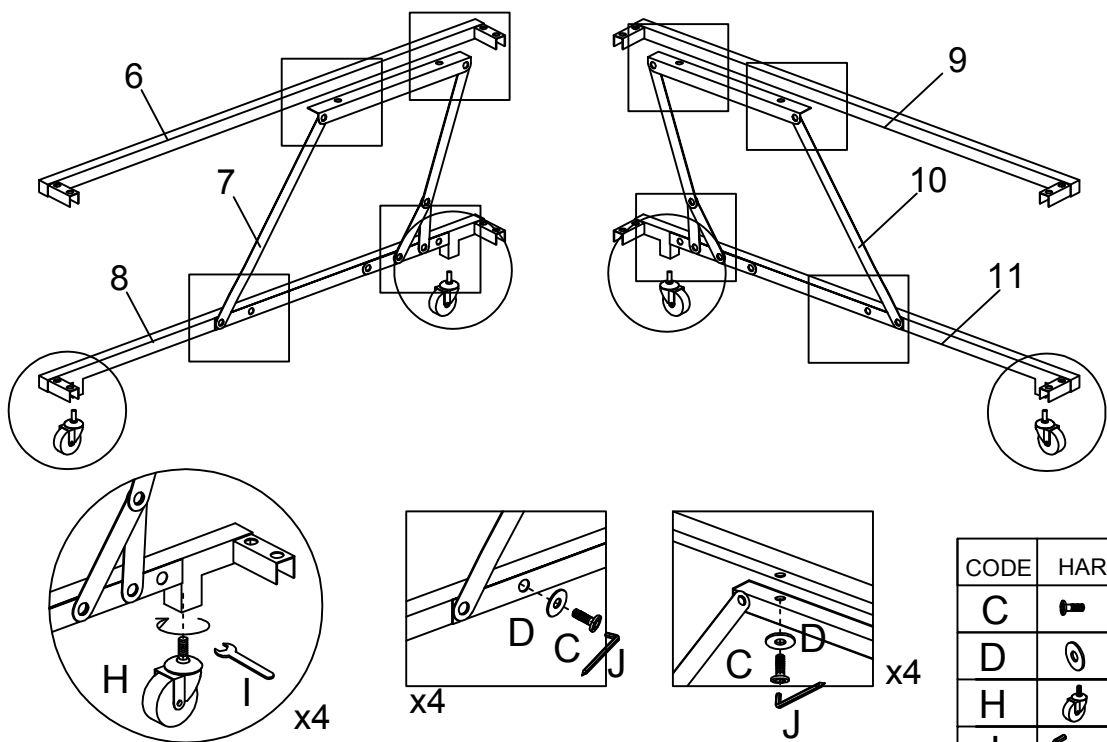


CODE	HARDWARE	QTY
C	M6X16mm	8
D	M6	8
H		4
J		1
I		1

 STEP 4

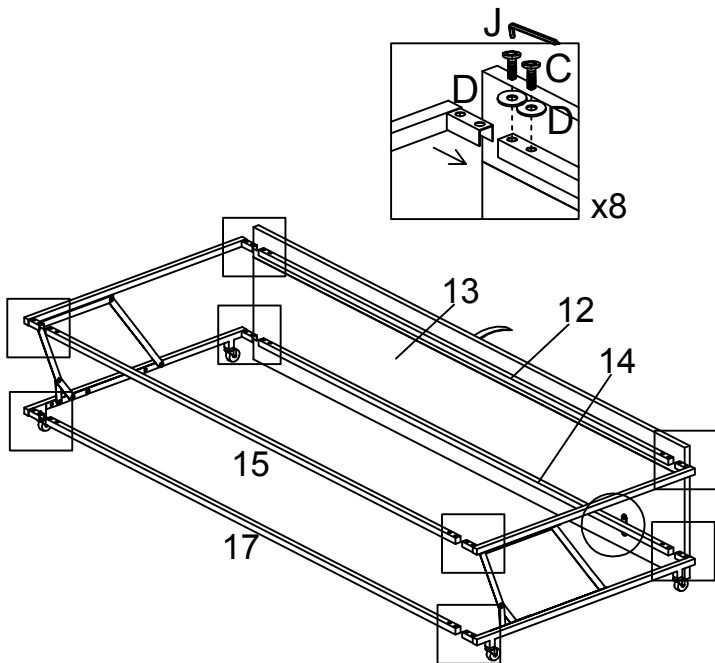


CODE	HARDWARE	QTY
C	M6X16mm	22
D	M6	22
J		1

 STEP 5

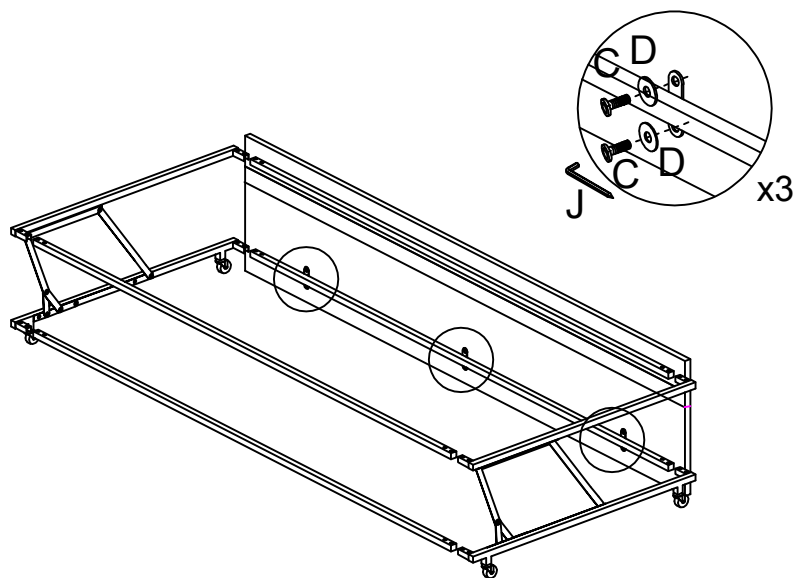


CODE	HARDWARE	QTY
C	 M6X16mm	22
D	 M6	22
J		1

 STEP 6

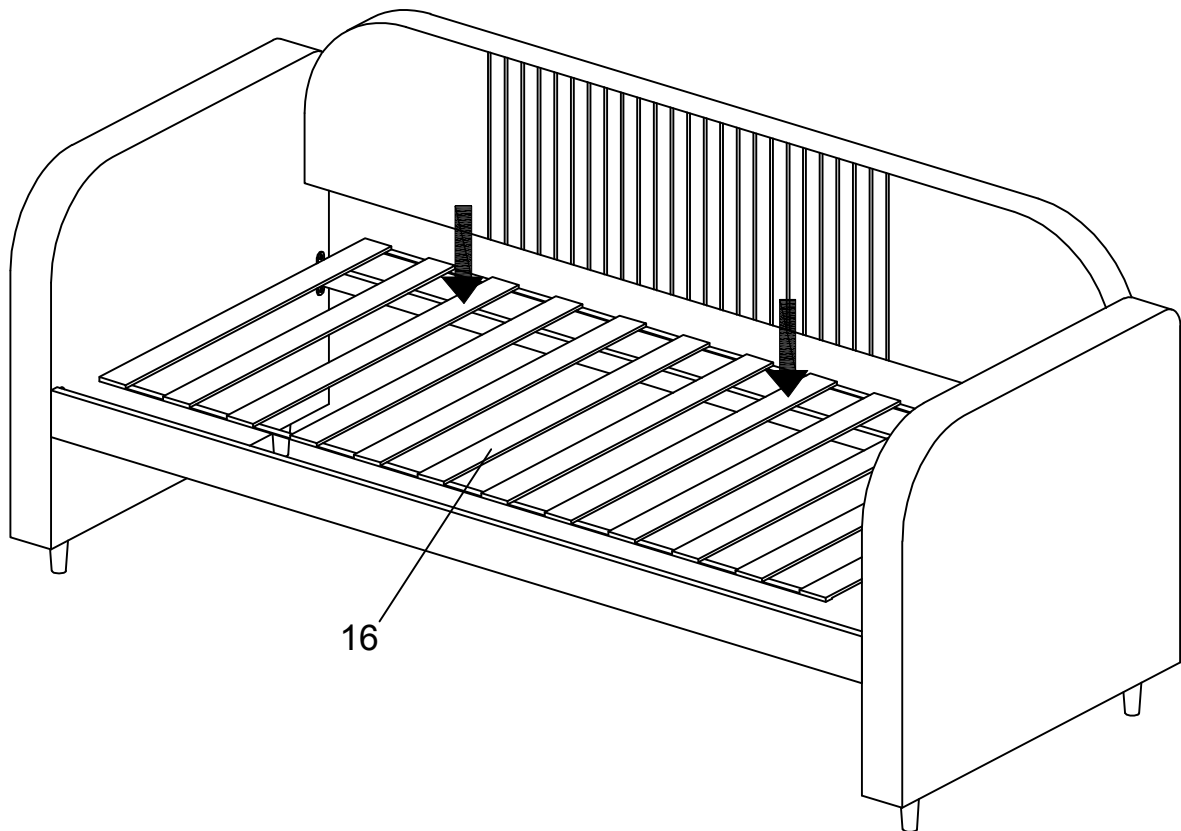

 STEP 7

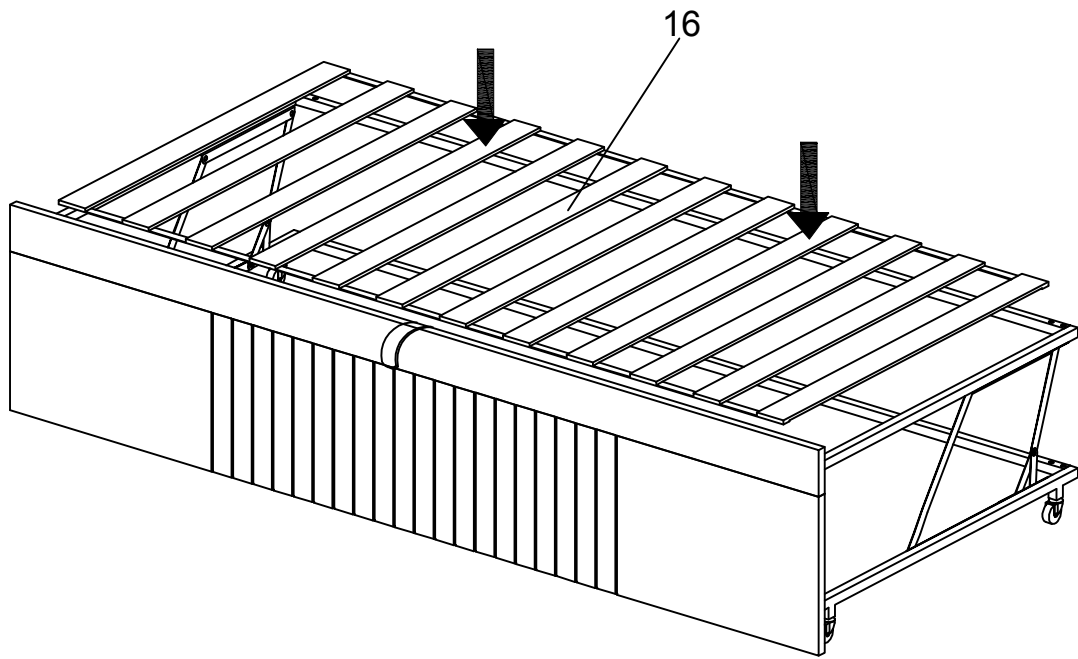

STEP 8

