

Passend für folgende Modelle:

Marke	Typennummer	Modell
AEG	90094073600	CX7-2-S360
AEG	90094071300	CX7-2-30GM
AEG	90094072000	CX7-2-35RM
AEG	90094071500	CX7-2-35D6
AEG	90094073100	CX7-2-45AN
AEG	90094072300	CX7-2-35TM
AEG	90094073900	CX7-2-I360
AEG	90094073200	CX7-2-45WM
AEG	90094072700	CX7-2-35RM
AEG	90094071900	CX7-2-35FF
AEG	90094071700	CX7-2-45IM
AEG	90094073400	CX7-2-45WMFLOOR ST
AEG	90094071600	CX7-2-45BM
AEG	90094071400	CX7-2-35TM
AEG	90094073800	CX7-2-B360FLOOR ST
AEG	90094071200	CX7-2-30BP
AEG	90094073300	CX7-2-45AN
AEG	90094071100	CX7-2-30DB FLOOR STI
AEG	90094071800	CX7-2-35FF
AEG	90094072200	CX7-2-30GM
AEG	90094072100	CX7-2-30DB
AEG	90094073500	CX7-2-B360
AEG	90094073700	CX7-2-I360
Electrolux	90094076500	ZB3314AK
Electrolux	90094072800	EER7ANIMAL
Electrolux	90094074700	ZB3324B
Electrolux	90094070500	EER75STM
Electrolux	90094075300	ZB3320P
Electrolux	90094070600	EER7GREEN
Electrolux	90094077700	EER75NOWFLOOR STIC
Electrolux	90094072900	EER7ALLRGY
Electrolux	90094075000	ZB3302AK
Electrolux	90094075400	ZB3323BO
Electrolux	90094076200	ZB3324B
Electrolux	90094075200	ZB3314AK
Electrolux	90094076400	ZB3311
Electrolux	90094070200	Ergorapido EER73DB
Electrolux	90094070700	EER77SSM
Electrolux	90094070800	EER77MBM
Electrolux	90094075100	ZB3311
Electrolux	90094070400	EER73IGM
Electrolux	90094074500	ZB3311
Electrolux	90094074300	EER75STM
Electrolux	90094076600	ZB3323B
Electrolux	90094070300	EER73BP

Electrolux	90094074200	EER73DBFLOOR STICK
Electrolux	90094075600	ZB3325B
Electrolux	90094075500	ZB3324B
Electrolux	90094074600	ZB3323B
Electrolux	90094074900	ZB3301
Electrolux	90094074800	ZB3325B FLOOR STICK
Electrolux	90094074400	ZB3301