
BASE CAMP TV GAMING BED

IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE

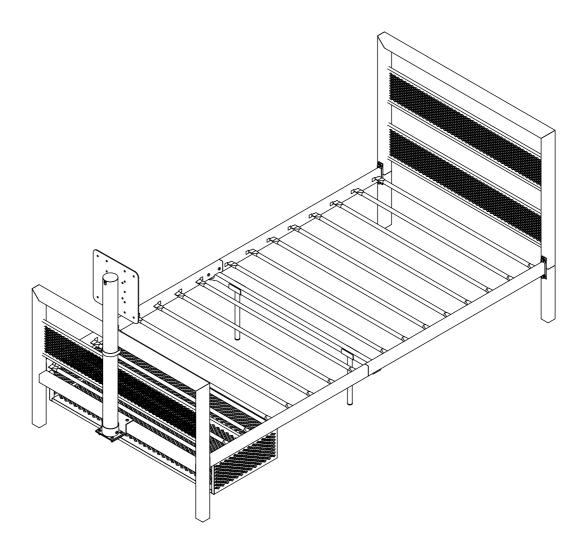



Dimensions

Width - 205 cm Depth - 95.7 cm Height - 91.5 cm

Need Help? Contact X Rocker at: www.xrockeruk.com/pages/support

IMPORTANT: You must keep your original retail receipt as proof of purchase.

LZL00-09/26/2020 1



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, Small parts may cause a choking hazard.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Dispose of all packaging carefully and responsibly.
- Place the product on flat and steady surface during use.

- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Keep these instructions for further use.
- To ensure an easier assembly we strongly advise that al fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

Care and maintenance

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal center.

Handy Hints


Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.

Components - Panels


Please check you have all the panels listed below


PARTS

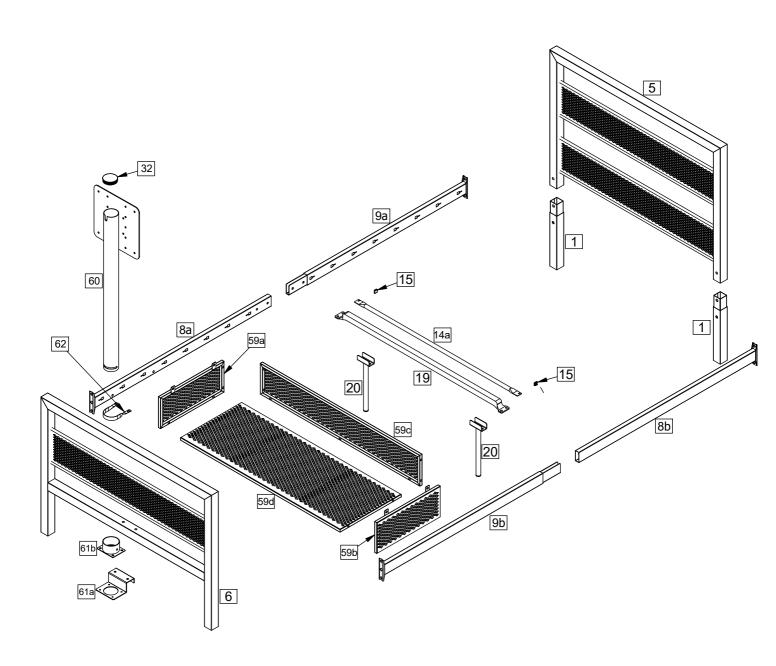


Components - Panels

Please check you have all the panels listed below

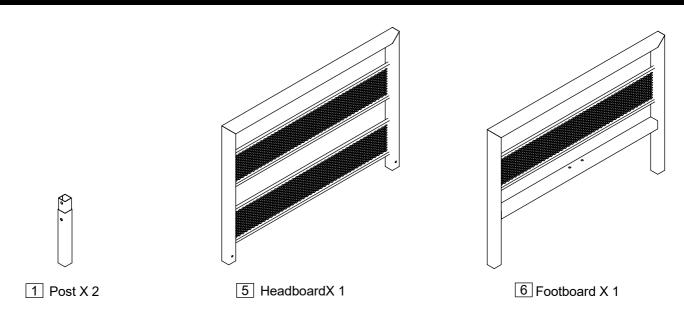


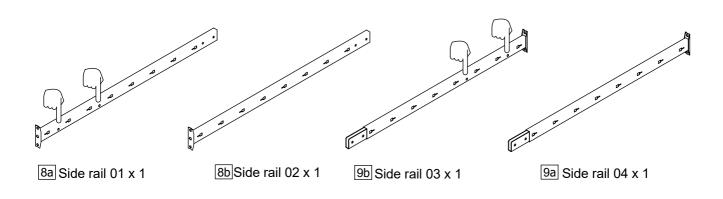

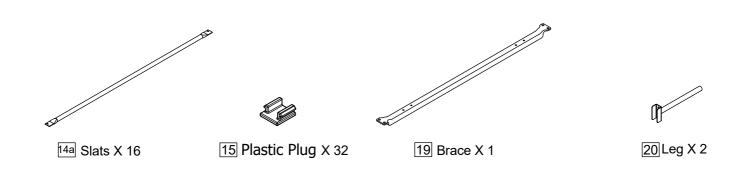

Components - Panels

Please check you have all the panels listed below

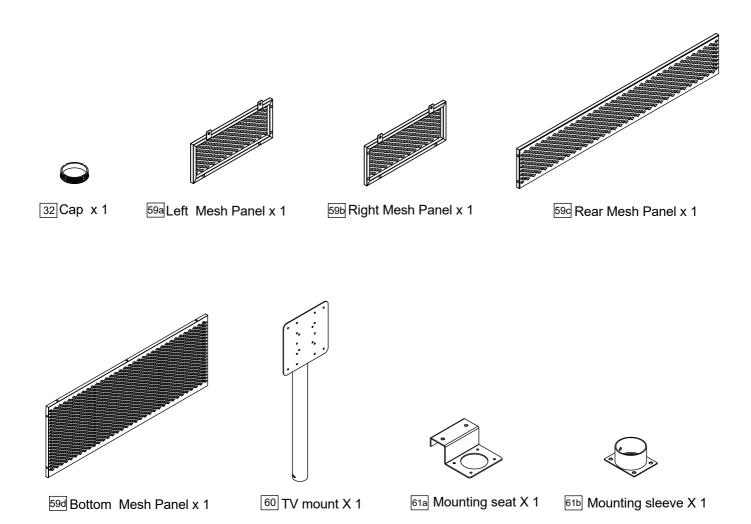



Components - Fittings


Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.


	T	I
A	B	©
0	0	@
22mm M6 Bolt x 20	17mm M6 Bolt x 14	10mm M6 Bolt x 4
O	•	•
22mm M8 Bolt x 8	Nut M6 X 1	M8 Spring washer x 8
G	•	0
M8 Metal washer x 8	Plastic washer x 8	Allen Key x 1
0	&	
Wrench x 1	EVA 01 x 1	EVA 02 x 1
M		
©		
M4 Metal washer x 4		
M4 Metal washer x 4		

Tools required


Ruler/tape measure

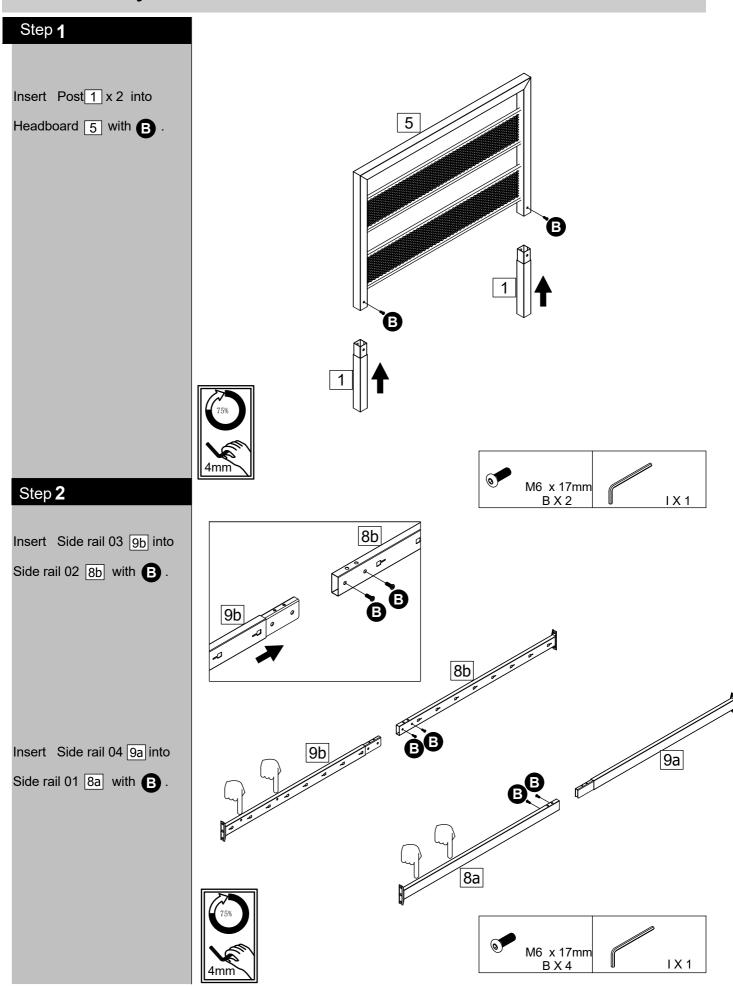

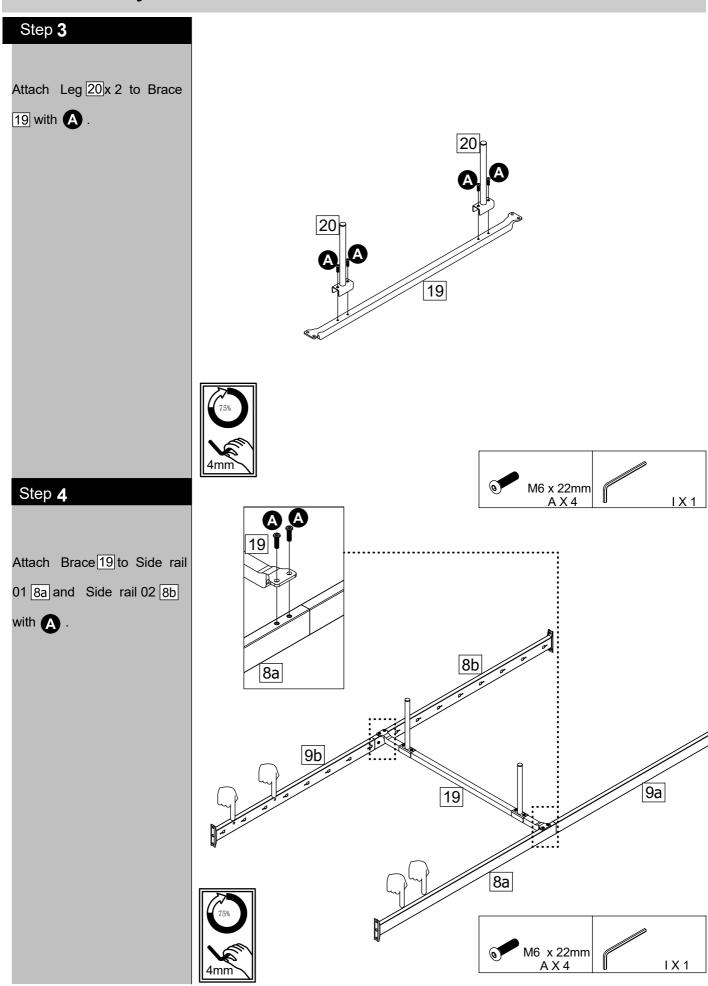


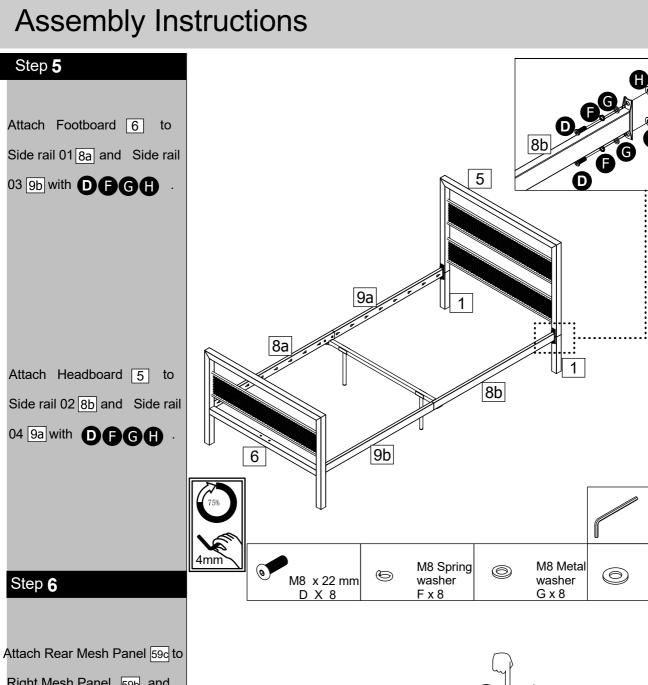

 Right Mesh Panel 59b and Left Mesh Panel 59a with A.

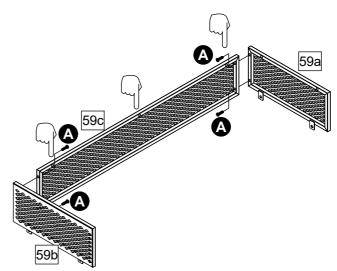





I X 1

Plastic

washer 8 x H

Step 7

Attach Bottom Mesh Panel

59d to Right Mesh Panel


59b

/Left Mesh Panel

59a and

rear Mesh Panel


59c with

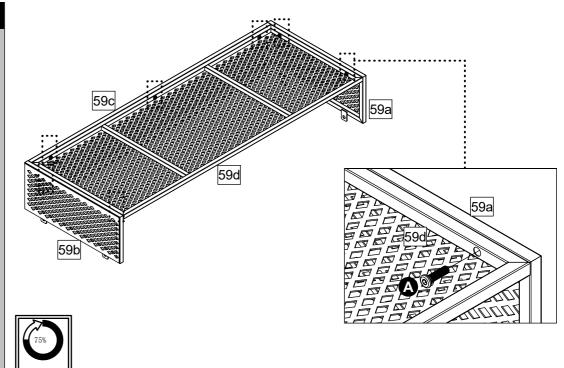

M6 x 22mm

Step 8

Attach Right Mesh Panel 59b to Side rail 03 9b and Left Mesh Panel 59a to Side rail 01 8a with **B**.

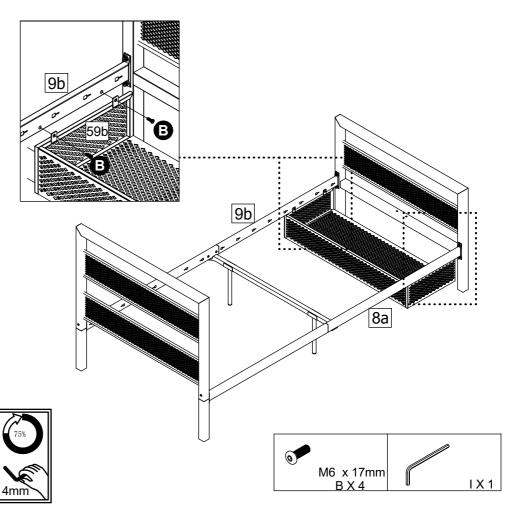


I X 1

Step 9

a: Secure the slats 14a x24 to Side rail 018a/Side rail 028b /Side rail 039b and Side rail 049a

b: Secure the plastic plug 15 x48 to Side rail 01 8a /Side rail 02 8b /Side rail 03 9b and Side rail 04 9a

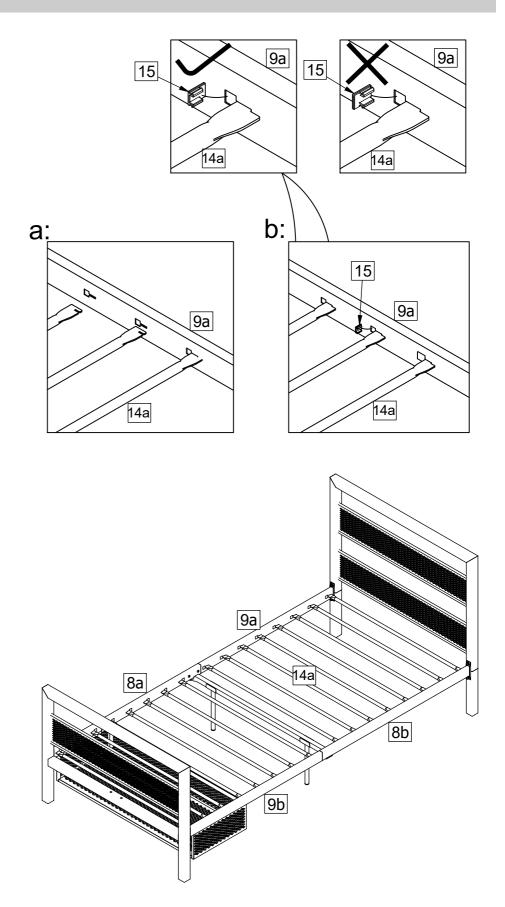



Step **10**

Attach EVA 01 to the middle of footboard 6 as shown.


Step **11**

Attach EVA 02 to the middle of buckle 62 as shown.

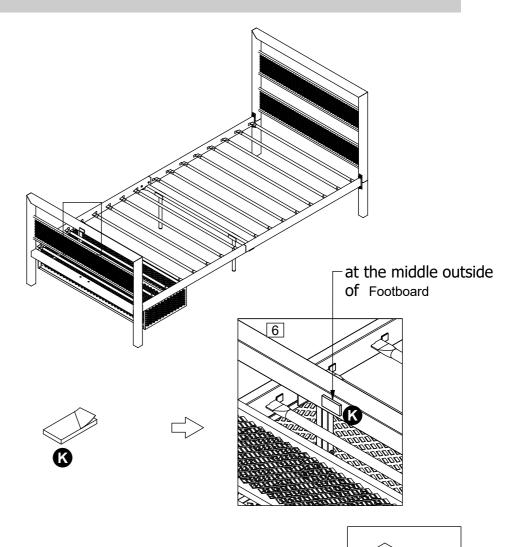

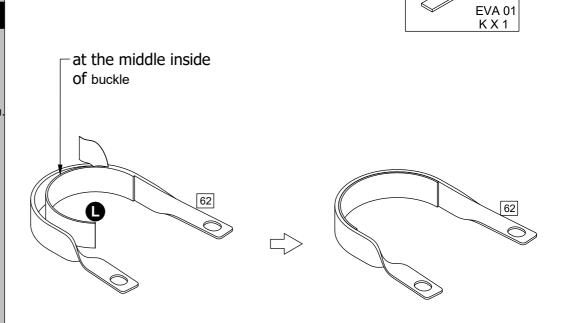



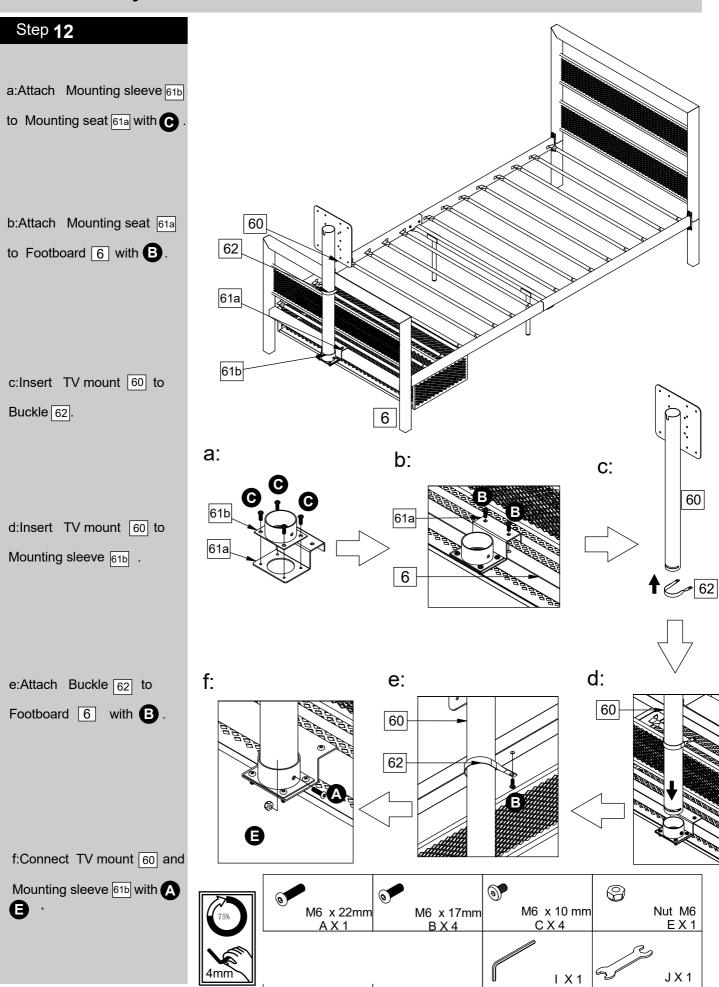


Step **13**

a: Cable (not provided) to pass through the TV mount


from top of the pole.


Please note: A minimum power cable length of 1.4m is required to connect the mounted TV to the undercarriage of the bed.


Please check your TV cable length before installation to ensure fit.

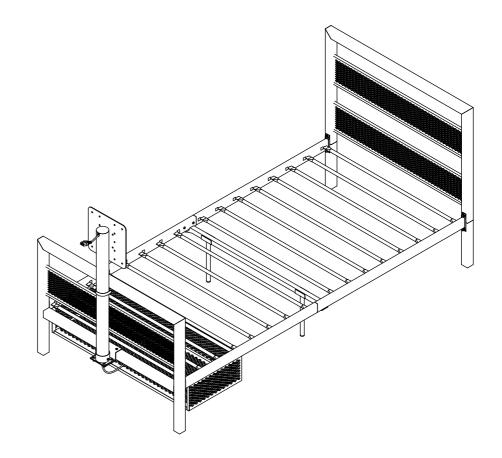

 b. Cover the pole of TV mount60 with cap 32.



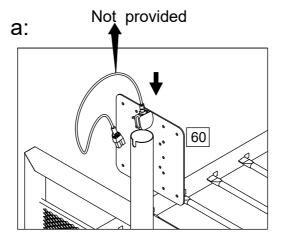

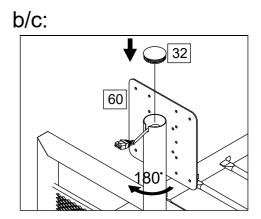

Note 1: The TV mount mates with M6 screw.

If you're using M4 screw to assemble the TV screen, please use part M washer as provided to make sure M4 screw could be also workable for it.



Note 2: If the TV pole can't be rotated freely, please loosen Screw A in step 12 (f) a little. Do not 100% tighten it.