

Passend für die folgenden Modelle:

| Marke | Typennummer | Modell |
|--------------|--------------------|---------------|
| Juno | 92550306301 | JCU17810S5 |
| AEG | 92551300001 | SCS51600S1 |
| Juno | 92550306400 | JCU17820S5 |
| AEG | 92550305200 | SCS951800S |
| AEG | 92550305500 | SCS61800S1 |
| AEG | 92550303701 | SCS5180PS1 |
| AEG | 92550300000 | SCS51800S1 |
| AEG | 92550305700 | AIK2902L |
| AEG | 92550305600 | AIK2902R |
| AEG | 92550301800 | SCS31800S1 |
| AEG | 92550301801 | SCS31800S1 |
| AEG | 92550303700 | SCS5180PS1 |
| AEG | 92550303702 | SCS5180PS1 |
| Juno | 92551300901 | JCU15810S5 |
| AEG | 92550301802 | SCS31800S1 |
| AEG | 92550300002 | SCS51800S1 |
| Philco | 92550306501 | PC2771BI |
| Philco | 92550306500 | PC2771BI |
| Dometic | 925503061 | HDC1780CB |
| AEG | 92550305201 | SCS951800S |
| Juno | 92551300900 | JCU15810S5 |
| AEG | 92551300000 | SCS51600S1 |
| Juno | 92551301000 | JCU15820S5 |
| Juno | 92550306300 | JCU17810S5 |
| Progress | 92550304000 | PKG1845 |
| AEG | 92550300001 | SCS51800S1 |
| AEG | 92551300101 | SCS61600S1 |

| | | |
|------------|-------------|------------|
| AEG | 92551300002 | SCS51600S1 |
| Juno | 92551300902 | JCU15810S5 |
| Juno | 92551301001 | JCU15820S5 |
| AEG | 92551300100 | SCS61600S1 |
| AEG | 93303370000 | AGS58800S1 |
| AEG | 93303370500 | AGS58800S1 |
| AEG | 93303370100 | AGS58800S2 |
| AEG | 93303370400 | AGS68800S1 |
| AEG | 93303370600 | AGS58800S1 |
| AEG | 92551200301 | SCS61800F1 |
| AEG | 92551200200 | SCS51800F1 |
| AEG | 92551101200 | SCS91800C1 |
| AEG | 92551200201 | SCS51800F1 |
| AEG | 92551201400 | SCSVM1800F |
| Progress | 92550304001 | PKG1845 |
| AEG | 92550305501 | SCS61800S1 |
| Juno | 92550306401 | JCU17820S5 |
| AEG | 93303360000 | AGS78800F1 |
| AEG | 93303360401 | AGS88809F0 |
| AEG | 93303360301 | AGS88800F1 |
| AEG | 93303360100 | AGS78800F2 |
| Progress | 92550304002 | PKG1845 |
| AEG | 92551200701 | SCS51800F1 |
| AEG | 92551200801 | AIK2852R |
| AEG | 92551200901 | AIK2852L |
| AEG | 92551201200 | SCS51813F1 |
| AEG | 92551201300 | SCS61800FF |
| Electrolux | 93303360700 | IG0946S |
| AEG | 93303360500 | AGS88800F1 |

| | | |
|------------|-------------|------------|
| AEG | 92551100202 | SCS71801F1 |
| AEG | 92551100102 | SCS71801F1 |
| AEG | 92550301903 | SCS51804S1 |
| AEG | 92550305701 | AIK2902L |
| AEG | 92550300402 | SCD71810S0 |
| AEG | 92550300400 | SCD71810S0 |
| AEG | 92551300200 | AIK2403R |
| AEG | 92551500700 | SCS51813S1 |
| AEG | 92551500702 | SCS51813S1 |
| AEG | 92551500100 | SCS51810S1 |
| AEG | 92550300401 | SCD71810S0 |
| Electrolux | 92551300301 | IK2355BR |
| AEG | 92551500102 | SCS51810S1 |
| Electrolux | 92551301301 | IK2355BL |
| AEG | 92550301904 | SCS51804S1 |
| AEG | 92550301803 | SCS31800S1 |
| AEG | 92550309500 | SCS51800S2 |
| AEG | 92550303703 | SCS5180PS1 |
| AEG | 92550305702 | AIK2902L |
| AEG | 92550309501 | SCS51800S2 |
| AEG | 92550300403 | SCD71810S0 |
| AEG | 92550300003 | SCS51800S1 |
| AEG | 92550305502 | SCS61800S1 |
| AEG | 92551500701 | SCS51813S1 |
| AEG | 92550305602 | AIK2902R |
| AEG | 92551500101 | SCS51810S1 |
| AEG | 92550301902 | SCS51804S1 |
| Electrolux | 92551301300 | IK2355BL |
| AEG | 92550301900 | SCS51804S1 |

| | | |
|------------|-------------|------------|
| AEG | 92550305601 | AIK2902R |
| Electrolux | 92551300300 | IK2355BR |
| AEG | 92550301901 | SCS51804S1 |
| AEG | 92551301200 | AIK2403L |
| Progress | 92556030900 | PKG1901 |
| Progress | 92551302802 | PKG1653 |
| Juno | 92550306403 | JCU17820S5 |
| Leonard | 92550318401 | LKG1853 |
| Progress | 92550318303 | PKG1853 |
| Progress | 92550318302 | PKG1853 |
| Progress | 93303373901 | PG0863 |
| Progress | 93303373902 | PG0863 |
| Leonard | 92550318403 | LKG1853 |
| Progress | 92550318304 | PKG1853 |
| Leonard | 92550318402 | LKG1853 |
| Progress | 93303373903 | PG0863 |
| Juno | 93303373401 | JCG08820S9 |
| Juno | 93303373400 | JCG08820S9 |
| Progress | 92556002601 | PKG1900 |
| Progress | 92550318301 | PKG1853 |
| Progress | 92556002600 | PKG1900 |
| Leonard | 92550318400 | LKG1853 |
| Progress | 92550318300 | PKG1853 |
| Progress | 92551302800 | PKG1653 |
| Progress | 93303373900 | PG0863 |
| Juno | 93303373402 | JCG08820S9 |
| Juno | 92551301002 | JCU15820S5 |
| Juno | 92551300903 | JCU15810S5 |
| Juno | 92550306304 | JCU17810S5 |

| | | |
|------------|-------------|--------------------|
| Progress | 92550304003 | PKG1845 |
| Dometic | 92550314200 | KBI281 IT WH-6 DOM |
| Juno | 92550306303 | JCU17810S5 |
| AEG | 92551100500 | SCS91800C0 |
| AEG | 93303370501 | AGS58800S1 |
| AEG | 92551102000 | SCS91800C0 |
| Juno | 92550306402 | JCU17820S5 |
| Electrolux | 92551101701 | IK2755BR |
| AEG | 92551100301 | SCS81800C0 |
| Juno | 92550306302 | JCU17810S5 |
| AEG | 92551100002 | SCS71800C0 |
| Electrolux | 92551101801 | IK2755BL |