

Passend für die folgenden Modelle:

<b>Marke</b>	<b>Typennummer</b>	<b>Modell</b>
Kenwood	0WKMA52001	KMA52
Kenwood	0WKMA54001	KMA54
Kenwood	0WKMX50002	KMX50 kMix STANDMIXER
Kenwood	0WKMX51002	kMix Raspberry Kitchen Machine KMX51
Kenwood	0WKMX52002	KMX52
Kenwood	0WKMX53004	KMX53
Kenwood	0WKMX54002	KMX54
Kenwood	0WKMX55002	KMX55
Kenwood	0WKMX56004	KMX56
Kenwood	0WKMX57004	KMX57
Kenwood	0WKMX58001	KMX58
Kenwood	0WKMX59001	KMX59
Kenwood	0WKMX60002	KMX60
Kenwood	0WKMX61002	KMX61
Kenwood	0WKMX61006	KMX61
Kenwood	0WKMX64002	KMX64
Kenwood	0WKMX80002	KMX80 STAND MIXER
Kenwood	0WKMX80004	KMX80 STAND MIXER
Kenwood	0WKMX81002	KMX81 STAND MIXER
Kenwood	0WKMX81004	KMX81 STAND MIXER
Kenwood	0WKMX82002	KMX82 STAND MIXER
Kenwood	0WKMX82004	KMX82 STAND MIXER
Kenwood	0WKMX83002	KMX83 STAND MIXER
Kenwood	0WKMX84001	KMX84 STAND MIXER
Kenwood	0WKMX84002	KMX84 STAND MIXER
Kenwood	0WKMX84004	KMX84 STAND MIXER
Kenwood	0WKMX93005	KMX93 STAND MIXER II kMix Boutique II blue

Kenwood	0WKMX95005	KMX95 STAND MIXER IJ kMix Boutique IJ green
Kenwood	0WKMX97005	KMX97 STAND MIXER IJ kMix Boutique IJ orange
Kenwood	0WKMX98005	KMX98 STAND MIXER IJ kMix Boutique IJ yellow
Kenwood	0WKMX99005	KMX99 STAND MIXER IJ kMix Boutique IJ magenta
Kenwood	0WKMX93006	KMX93 STAND MIXER IJ kMix Boutique IJ blue
Kenwood	0WKMX86001	KMX86 STAND MIXER
Kenwood	0WKMX93001	KMX93 STAND MIXER IJ kMix Boutique IJ blue
Kenwood	0WKMX93002	KMX93 STAND MIXER IJ kMix Boutique IJ blue
Kenwood	0WKMX93007	KMX93 STAND MIXER IJ kMix Boutique IJ blue
Kenwood	0WKMX95001	KMX95 STAND MIXER IJ kMix Boutique IJ green
Kenwood	0WKMX95002	KMX95 STAND MIXER IJ kMix Boutique IJ green
Kenwood	0WKMX97001	KMX97 STAND MIXER IJ kMix Boutique IJ orange
Kenwood	0WKMX97002	KMX97 STAND MIXER IJ kMix Boutique IJ orange
Kenwood	0WKMX97004	KMX97 STAND MIXER IJ kMix Boutique IJ orange
Kenwood	0WKMX98001	KMX98 STAND MIXER IJ kMix Boutique IJ yellow
Kenwood	0WKMX98002	KMX98 STAND MIXER IJ kMix Boutique IJ yellow
Kenwood	0WKMX98004	KMX98 STAND MIXER IJ kMix Boutique IJ yellow
Kenwood	0WKMX98006	KMX98 STAND MIXER IJ kMix Boutique IJ yellow
Kenwood	0WKMX98007	KMX98 STAND MIXER IJ kMix Boutique IJ yellow
Kenwood	0WKMX99001	KMX99 STAND MIXER IJ kMix Boutique IJ magenta
Kenwood	0WKMX99002	KMX99 STAND MIXER IJ kMix Boutique IJ magenta
Kenwood	0WKMX99004	KMX99 STAND MIXER IJ kMix Boutique IJ magenta
Kenwood	0WKMX99006	KMX99 STAND MIXER IJ kMix Boutique IJ magenta
Kenwood	0WKMX99007	KMX99 STAND MIXER IJ kMix Boutique IJ magenta
Kenwood	0WKMX50P06	KMX50P kMix STAND MIXER IJ PURPLE IJ plus AX950 MINCER ATTACHMENT
Kenwood	0WKMX93004	KMX93 STAND MIXER IJ kMix Boutique IJ BLUE
Kenwood	0WKMX95006	KMX95 STAND MIXER IJ kMix Boutique IJ GREEN
Kenwood	0WKMX97006	KMX97 STAND MIXER IJ kMix Boutique IJ ORANGE
Kenwood	0WKMX98008	KMX98 STAND MIXER IJ kMix Boutique IJ YELLOW

Kenwood	0WKMX50014	KMX50 STAND MIXER IJ WHITE
Kenwood	0WKMX54011	KMX54 STAND MIXER IJ BLACK
Kenwood	0WKMX50G02	KMX50 STAND MIXER IJ WHITE
Kenwood	0WKMX51G02	kMix Raspberry Kitchen Machine KMX51 STAND MIXER IJ RED
Kenwood	0WKMX71G04	KMX71 STAND MIXER IJ RED
Kenwood	0WKMX61G02	KMX61 STAND MIXER IJ RED
Kenwood	0WKMX50P01	KMX50 STAND MIXER IJ PURPLE
Kenwood	0W20011033	KMX50BK STAND MIXER IJ POP ART BLACK
Kenwood	0W20011027	KMX50BL STAND MIXER IJ POP ART BLUE
Kenwood	0W20011031	KMX50GR STAND MIXER IJ POP ART GREEN
Kenwood	0W20011029	KMX50GY STAND MIXER IJ POP ART GREY
Kenwood	0W20011025	KMX50RD STAND MIXER IJ POP ART RED
Kenwood	0W20011035	KMX50YW STAND MIXER IJ POP ART YELLOW
Kenwood	0W20011032	KMX50GBK STAND MIXER + GLASS BOWL IJ POP ART BLACK
Kenwood	0W20011026	KMX50GBL STAND MIXER + GLASS BOWL IJ POP ART BLUE
Kenwood	0W20011030	KMX50GGR STAND MIXER + GLASS BOWL IJ POP ART GREEN
Kenwood	0W20011028	KMX50GGY STAND MIXER + GLASS BOWL IJ POP ART GREY
Kenwood	0W20011024	KMX50GRD STAND MIXER + GLASS BOWL IJ POP ART RED
Kenwood	0W20011034	KMX50GYW STAND MIXER + GLASS BOWL IJ POP ART YELLOW
Kenwood	0WKMX51010	kMix Raspberry Kitchen Machine KMX51 STAND MIXER IJ RED
Kenwood	0WKMX52001	KMix Almond Kitchen Machine KMX52
Kenwood	0W20011189	KMX50UJ STAND MIXER
Kenwood	0W20011145	KMX50UJ STAND MIXER
Kenwood	0W20011146	KMX50GUJ STAND MIXER
Kenwood	0W20011136	KMX750BK
Kenwood	0W20011226	KMX750BK
Kenwood	0W20011225	KMX750RD
Kenwood	0W20011138	KMX750RD
Kenwood	0W20011137	KMX750WH

Kenwood	0W20011224	KMX750WH
Kenwood	0W20011139	KMX754BK
Kenwood	0W20011140	KMX754RD
Kenwood	0W20011142	KMX754WH
Kenwood	0W20011194	KMX754WH
Kenwood	0W20011193	KMX754RD
Kenwood	0W20011192	KMX754BK
Kenwood	0W20011141	KMX754CR
Kenwood	0W20011196	KMX754CR
Kenwood	0W20011244	KMX750BK
Kenwood	0W20011245	KMX750CR
Kenwood	0W20011243	KMX750WH
Kenwood	0W20011242	KMX750RD
Kenwood	0WKMX50012	KMX50W kMix STANDMIXER
Kenwood	0W20011285	KMX760GD kMix KITCHEN MACHINE IJ LIMITED EDITION IJ GOLD
Kenwood	0W20011284	KMX760GD kMix KITCHEN MACHINE IJ LIMITED EDITION IJ GOLD
Kenwood	0WKMX50010	KMX50 kMix STAND MIXER IJ WHITE
Kenwood	0WKMX50013	KMX50 kMix STAND MIXER IJ WHITE
Kenwood	0WKMX51011	KMX51 kMix STAND MIXER IJ RED
Kenwood	0WKMX51012	KMX51 kMix STAND MIXER IJ RED
Kenwood	0W20011313	KMX750AB
Kenwood	0W20011320	KMX750AB
Kenwood	0W20011338	KMX750AB
Kenwood	0W20011314	KMX750AR
Kenwood	0W20011321	KMX750AR
Kenwood	0W20011339	KMX750AR
Kenwood	0W20011289	KMX750AW
Kenwood	0W20011319	KMX750AW
Kenwood	0W20011336	KMX750AW

Kenwood	0W20011337	KMX750AC
Kenwood	0W20011322	KMX750AC
Kenwood	0W20011296	KMX750CR
Kenwood	0W20011333	KMX760BC
Kenwood	0W20011342	KMX760BC
Kenwood	0W20011334	KMX760CH
Kenwood	0W20011341	KMX760CH
Kenwood	0W20011343	KMX760GD
Kenwood	0W20011335	KMX760YG
Kenwood	0W20011340	KMX760YG
Kenwood	0W20011330	KMX761BC
Kenwood	0W20011332	KMX761CH
Kenwood	0W20011329	KMX761GD
Kenwood	0W20011331	KMX761YG
Kenwood	0W20011084	KMX50RD KM KW KMIX RED 127V BR
Kenwood	0W20011352	KMX752RD
Kenwood	0W20011361	KMX750AC