


STEP ONE

① Put the part of the robotic arm into the strap and buckle it.

② Push down the seat fittings and buckle them tightly.

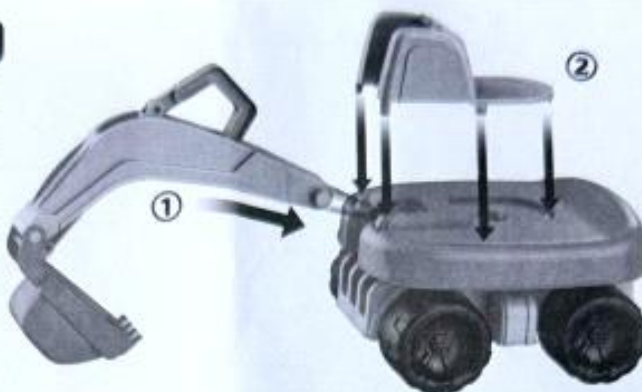

STEP TWO

After the bottom shovel assembly is up to position, take out the screws and tighten it in place.



FUNCTION

Use the handle to control the mechanical arm and bucket, and the mechanical arm can be adjusted to 4 angles.

The riding seat can be rotated 360°. Large tires adapt to a variety of ground.

