 


- EN** Motorized Floor & Ceiling TV Lift
- PL** Stand-uchwyt sufitowy elektryczny wysuwany
- DE** Motorisierter TV-Lift für Boden und Decke
- FR** Téléviseur motorisé au sol et au plafond
- ES** Elevador de TV motorizado de suelo y techo
- IT** Sollevatore TV motorizzato a pavimento e a soffitto
- NL** Gemotoriseerde vloer- en plafond TV-lift
- CZ** Motorizovaný podlahový a stropní televizní výtah
- RO** Lift TV motorizat pentru podea și tavan

MC-976


MACLEAN BRACKETS

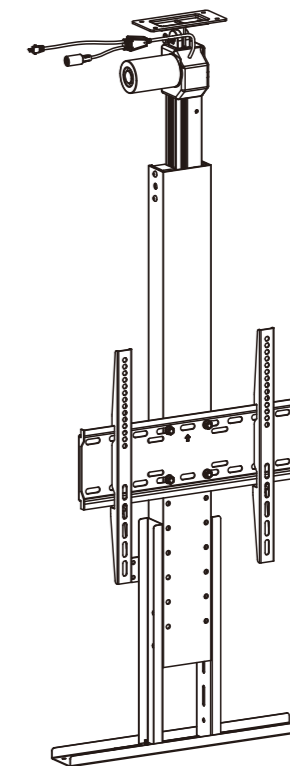

Preparation

1 What are the specifications you need to know?



 
Weight Capacity
45kg (99lbs)



Power Input
100-240V




Flat/Curved
32"-55"



VESA
Compatible

75x75	100x100
100x150	150x100
100x200	200x100
150x150	200x200
200x300	300x200
200x400	400x200
300x300	300x400
400x300	350x350
400x400	

 2 What are the tools you require while installation?



Tape



Allen Key
(Included)



Crescent Wrench
(Included)



Phillips
Screwdriver



 
Drill

3 Things you need to know before installation


Ensure that you have received all parts according to the component checklist prior to installation. If any of the components are missing or damaged, contact your local seller for a replacement.

Now let's start the installation.


Checklist and Installation

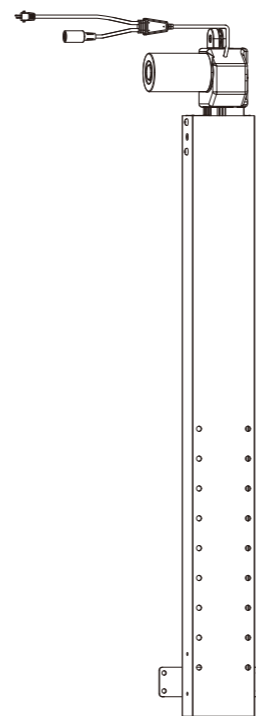


A (x1)

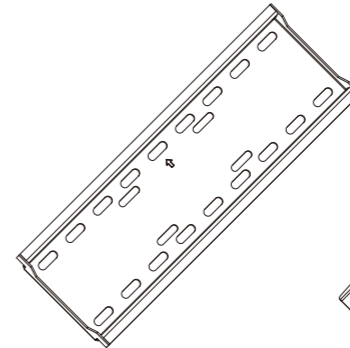 


B (x1)

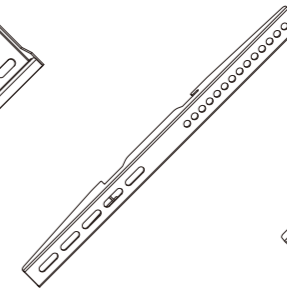 


C (x2)

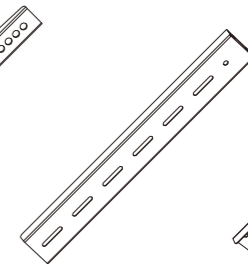 


D (x2)

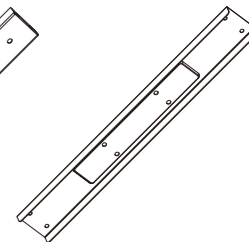 


E (x1)

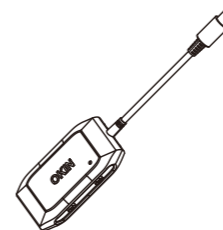 


F (x1)

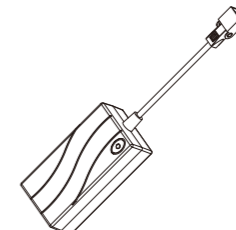 

G (x1)

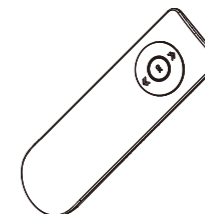 

H (x1)

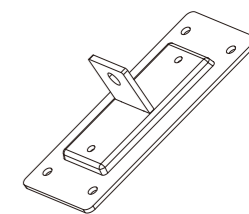 


I (x1)



This page can be torn so that it's easier for you to match the components with the images.



 J (x1)




K (x1)



L (x4)
M6X6



 M (x4)
M6X10



N (x4)
M8X15



O (x4)
D8



P (x4)
M8



Q (x12)
ST5.5X16



 
R (x1)




S (x1)
13mm



T (x1)
4mm




M-A (x4)
M6x14

 

M-B (x4)
M8x16



 M-C (x4)
M6x30



M-D (x4)
M8x35



M-E (x4)
D8



 
 
 
M-F (x4)
Ø15xØ8x5




M-G (x4)
Ø15xØ8x15




Ceiling Mounting

 Please prepare a proper cabinet before installation.

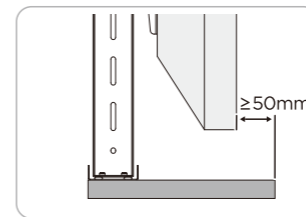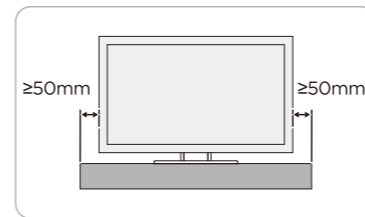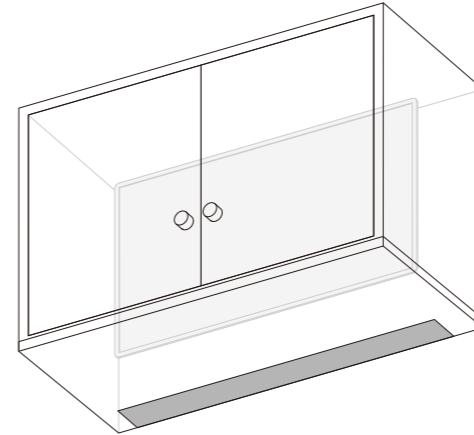


Floor Mounting

    Please prepare a proper cabinet before installation.

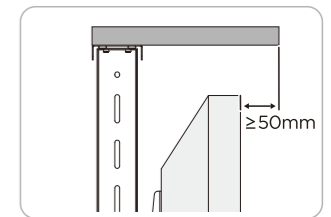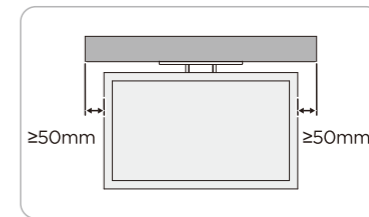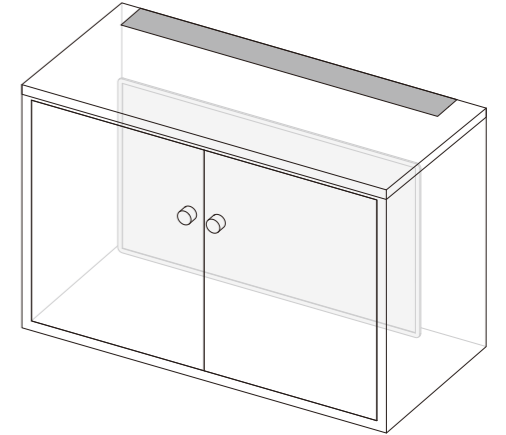


1

 
Note:
In order to avoid collision and wire pulls, keep the control box and all cables away from the TV lift.

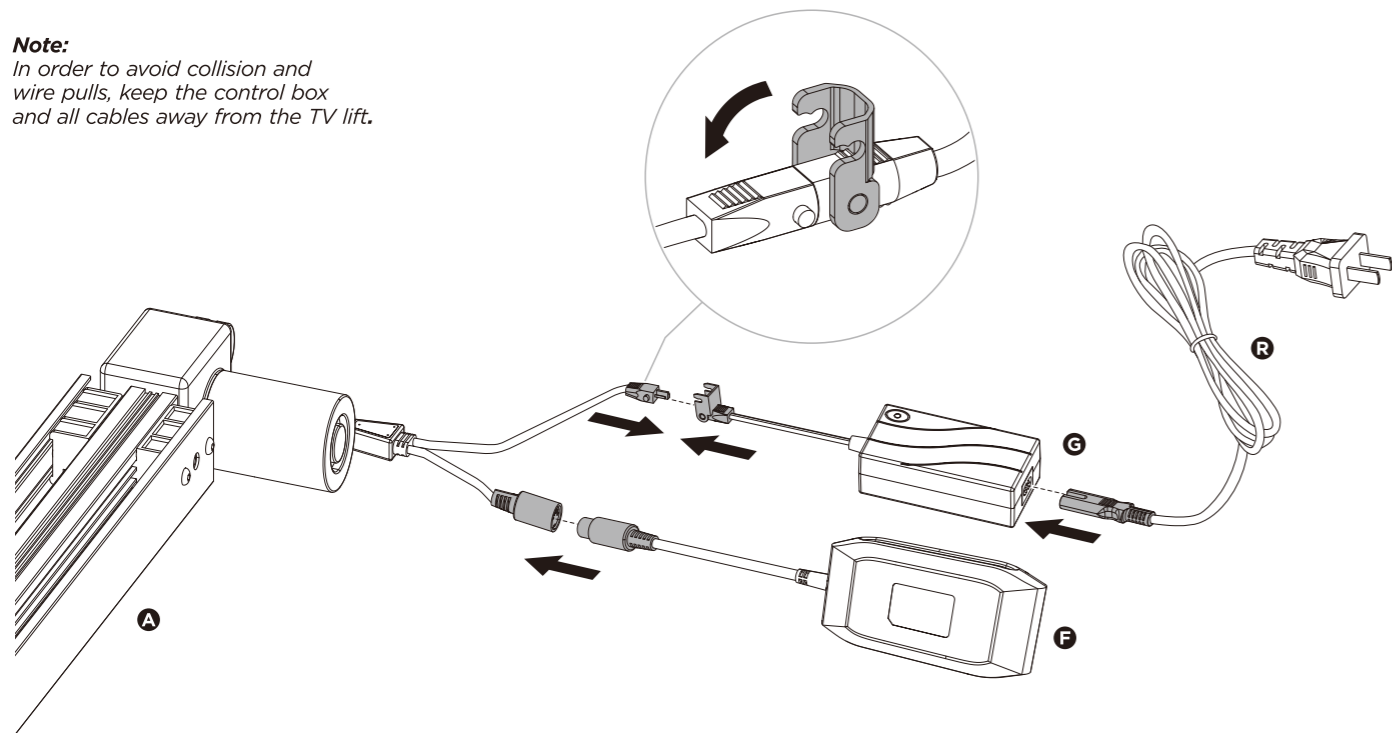



2

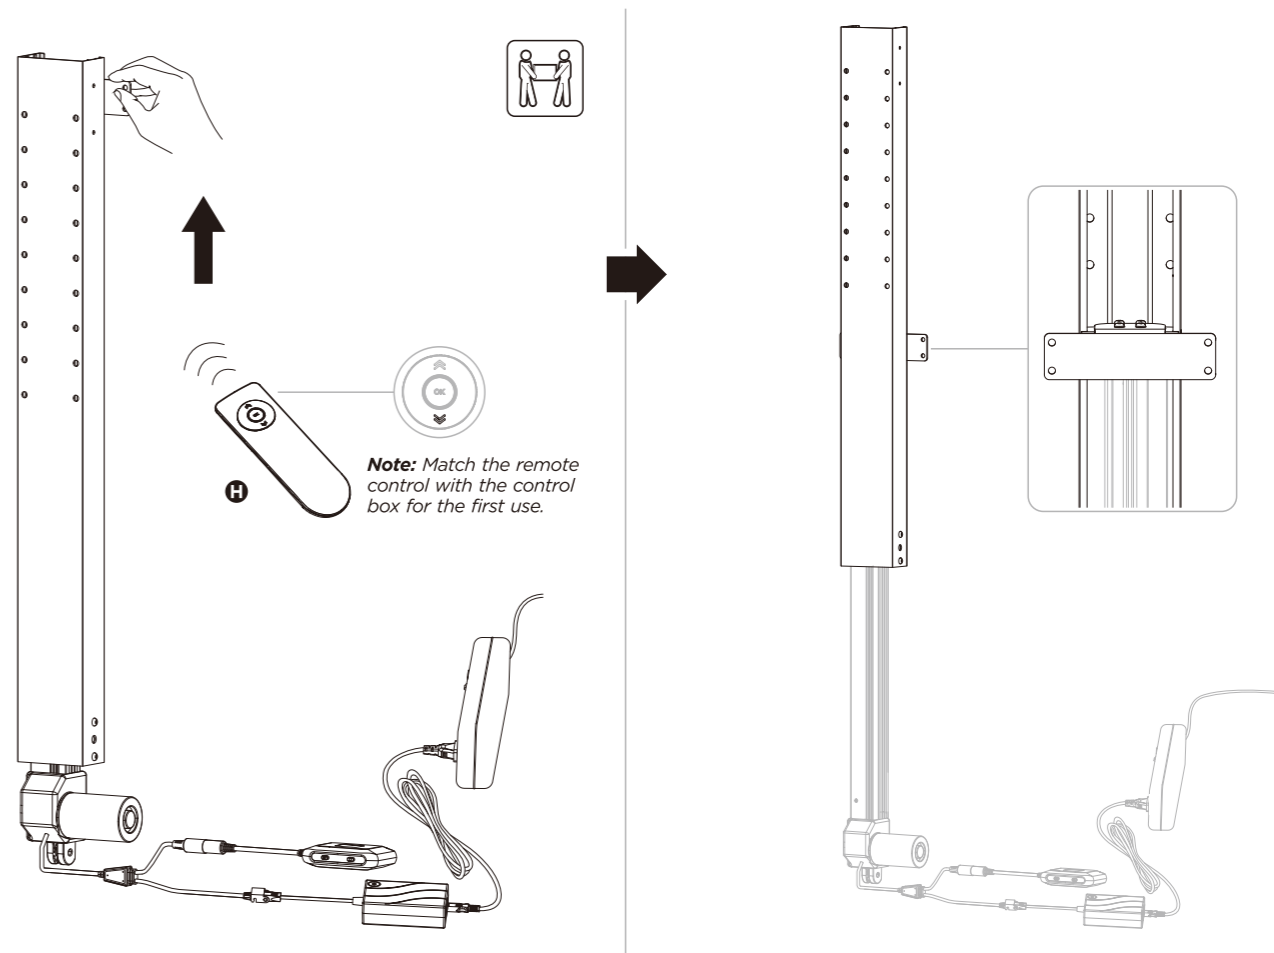 


3

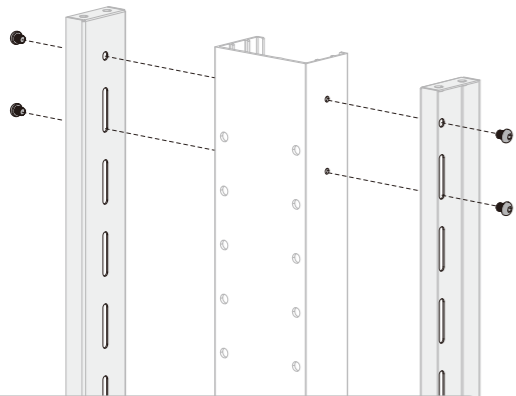 

  
Note: Install screw (L) in appropriate holes based on the actual mounting distance.

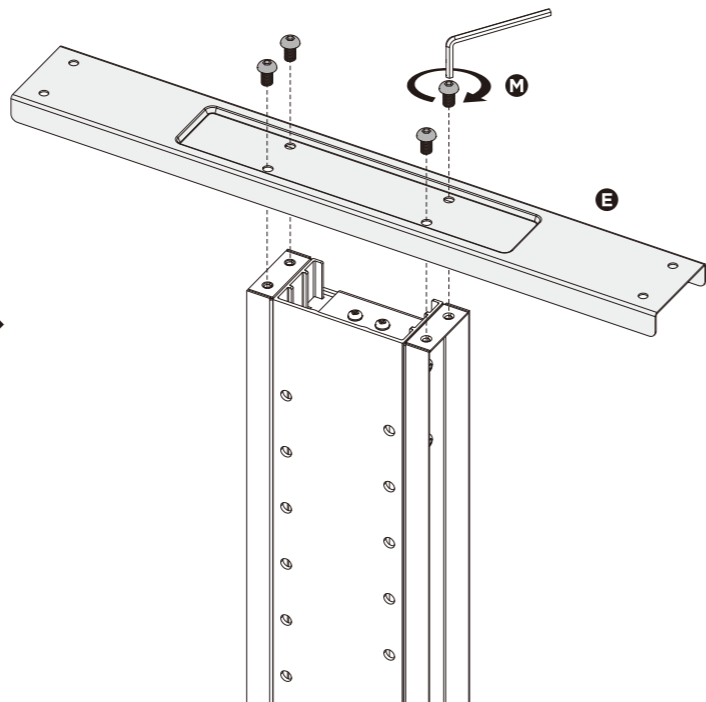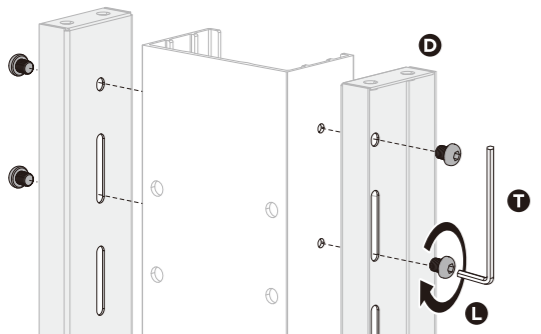


4

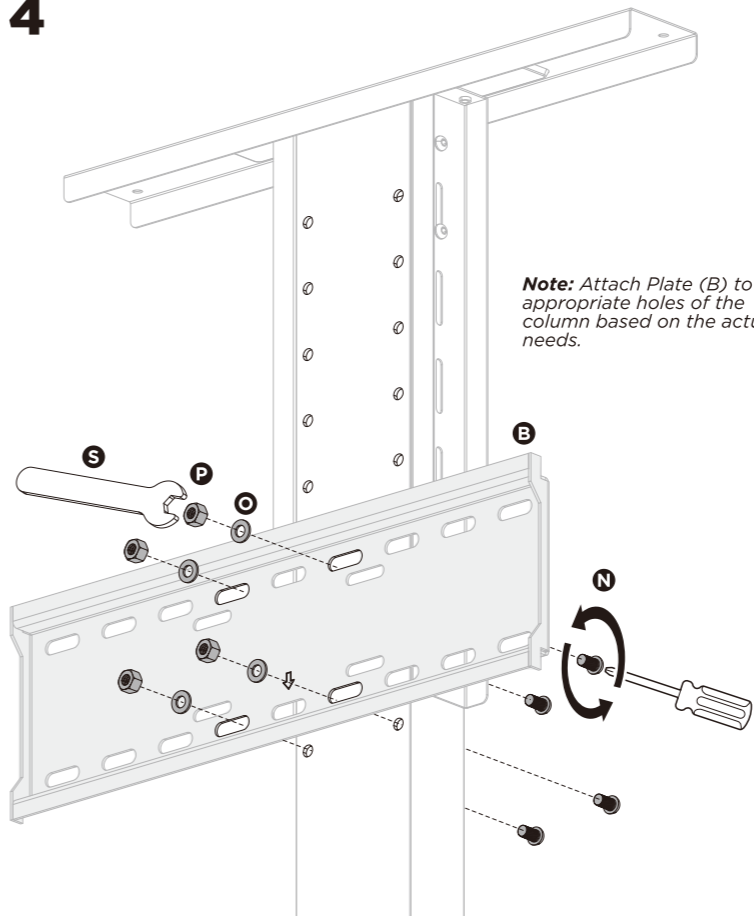 

 
Note: Attach Plate (B) to appropriate holes of the column based on the actual needs.

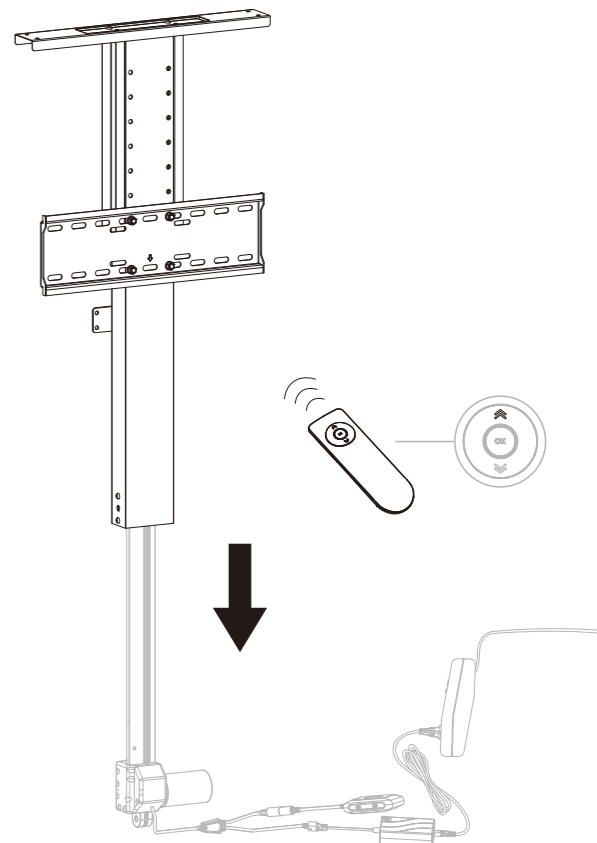


5a Ceiling Mounting

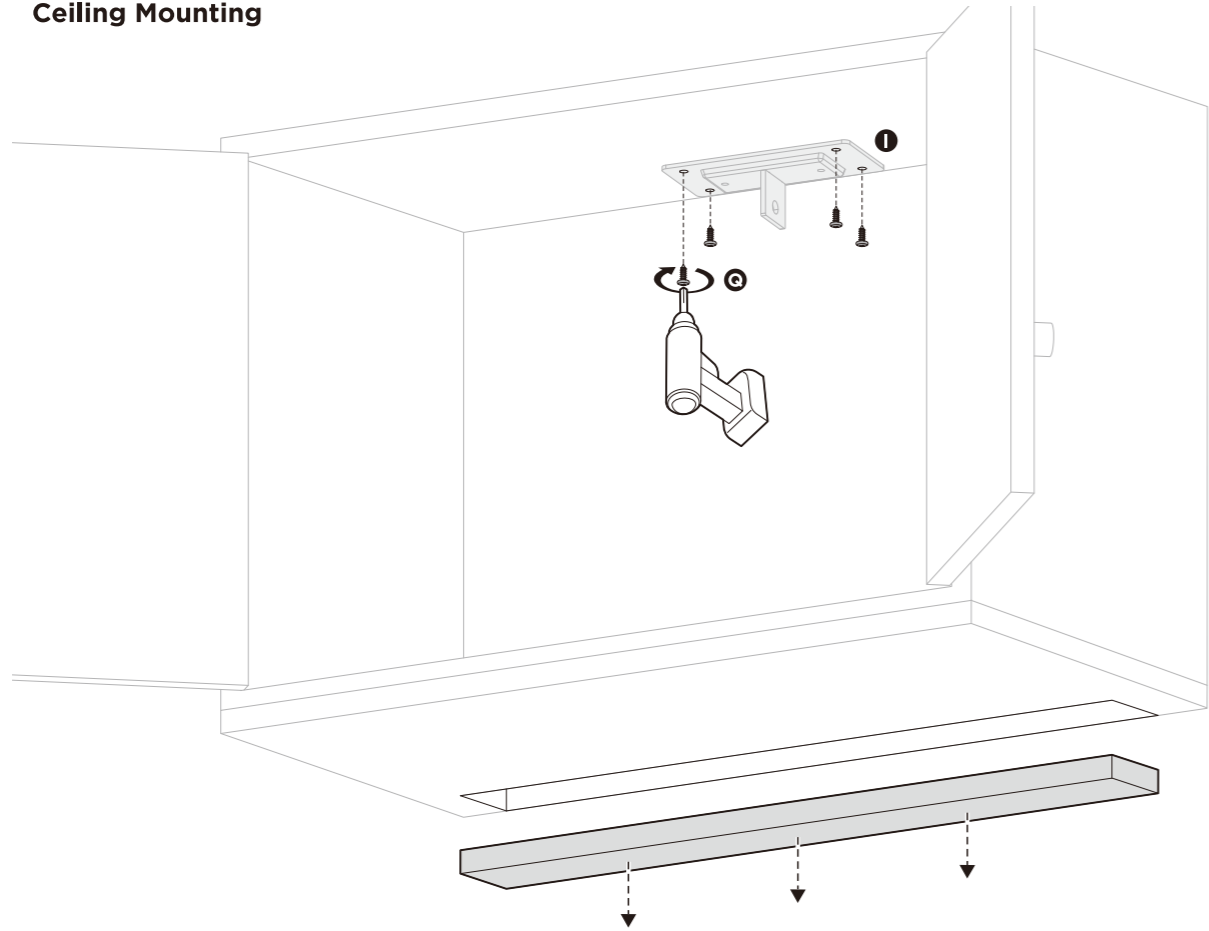 


5b Floor Mounting

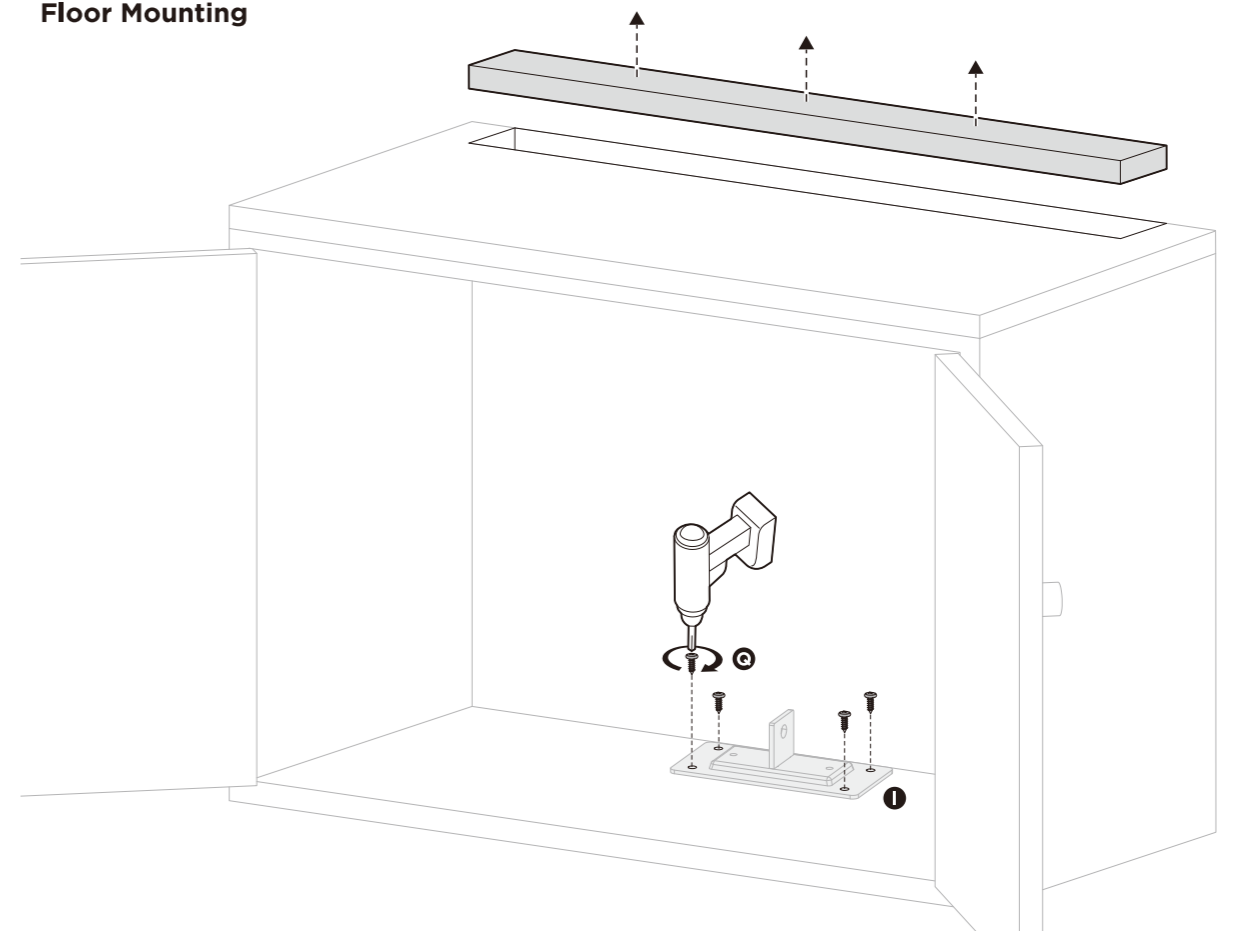 


6a Ceiling Mounting

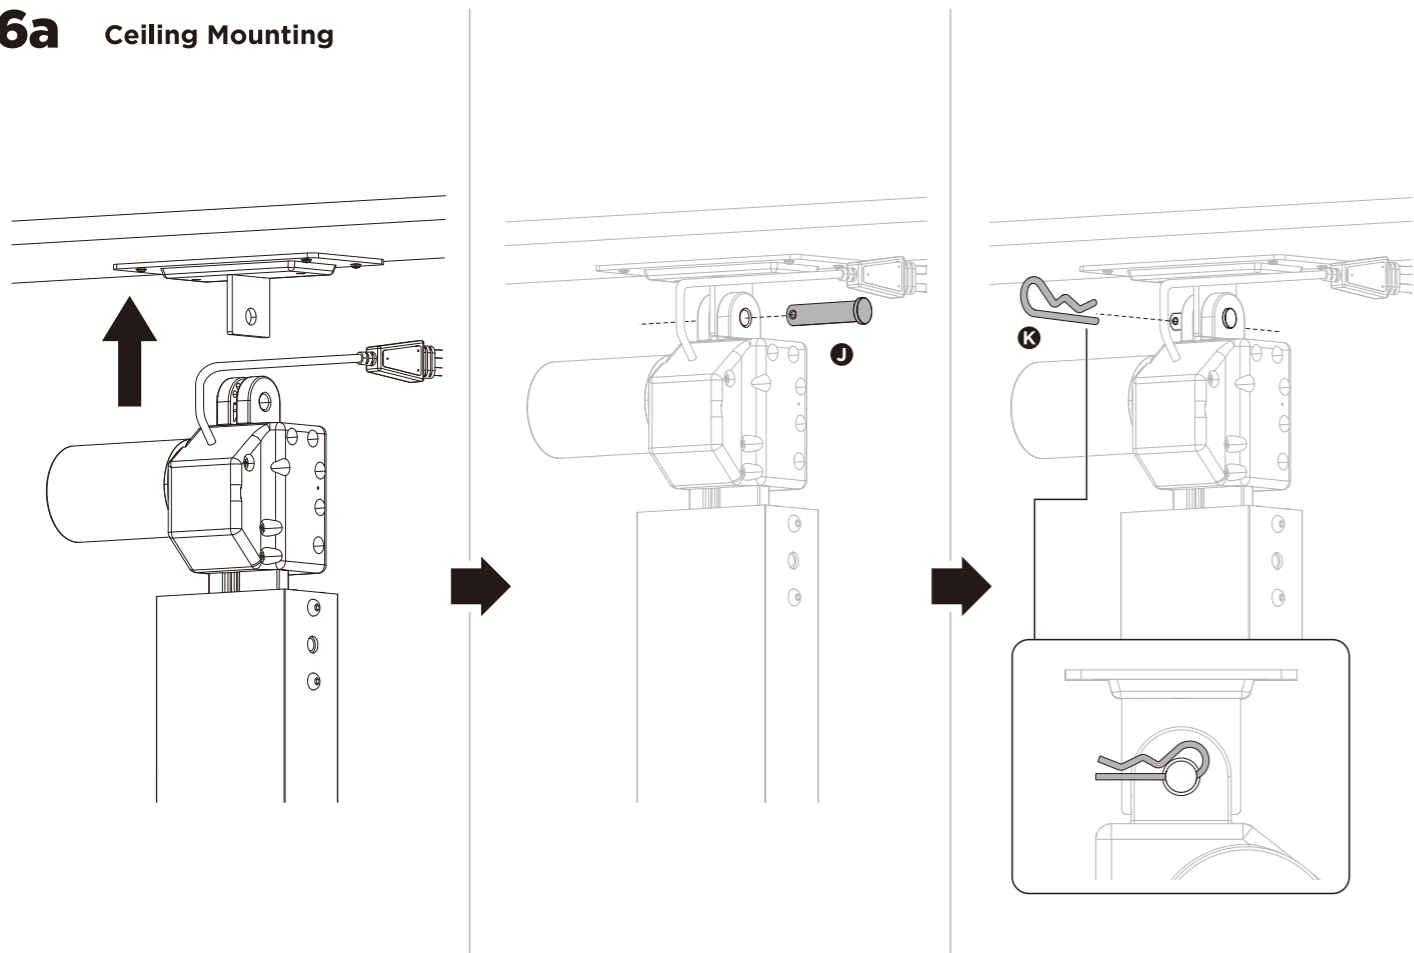 


6b Floor Mounting

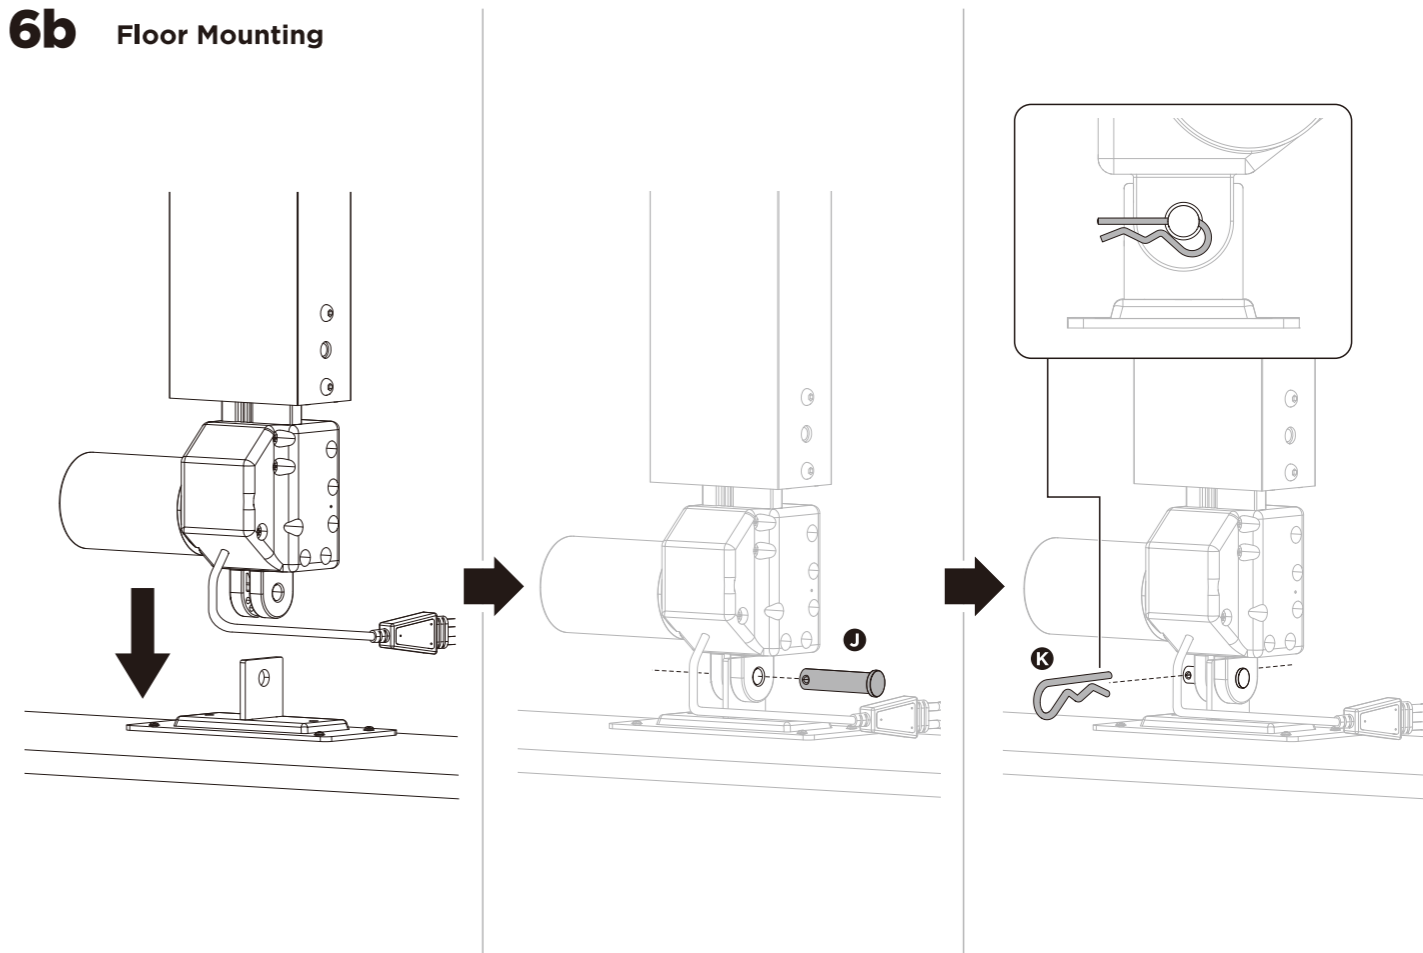 



7a Ceiling Mounting

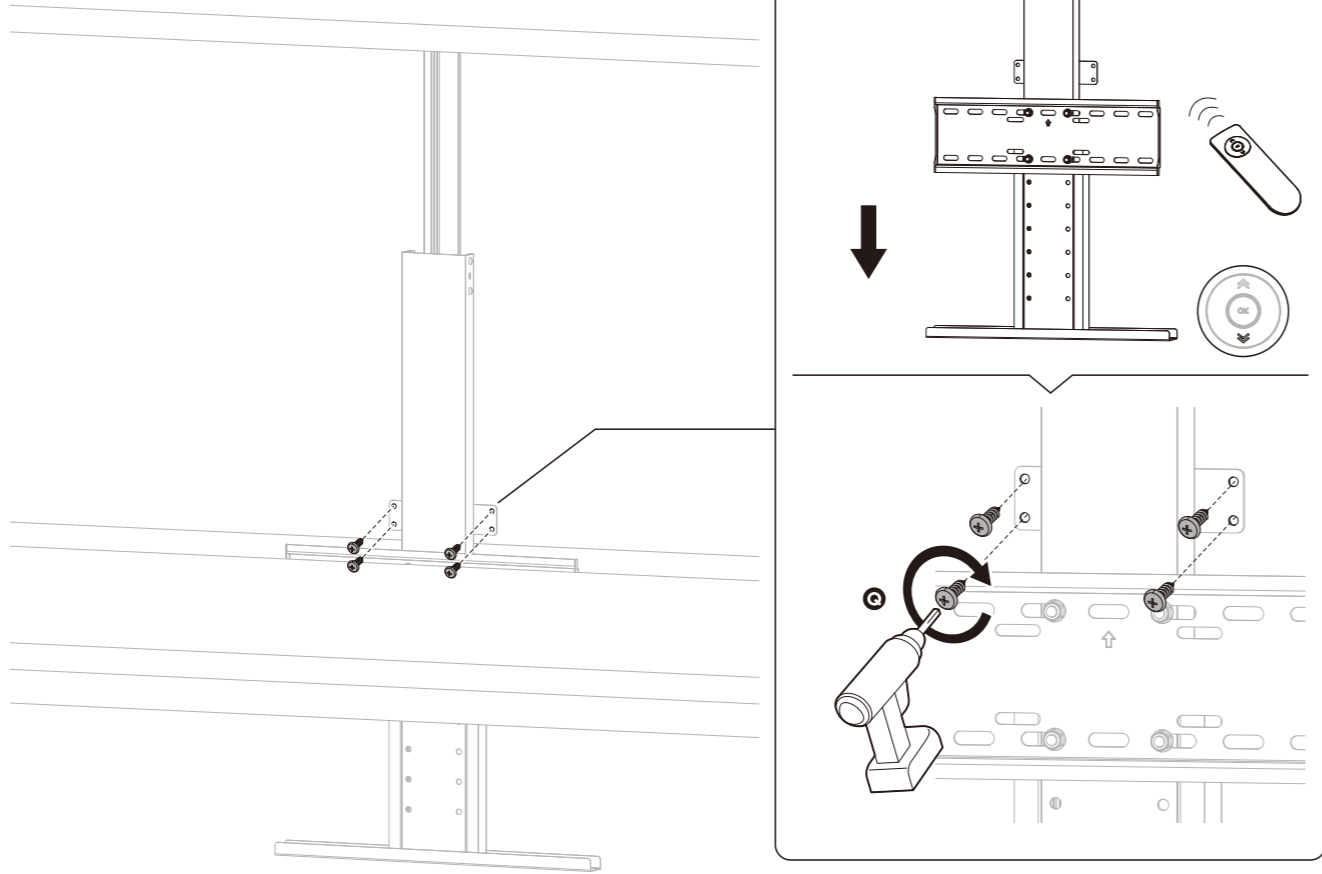 



7b Floor Mounting


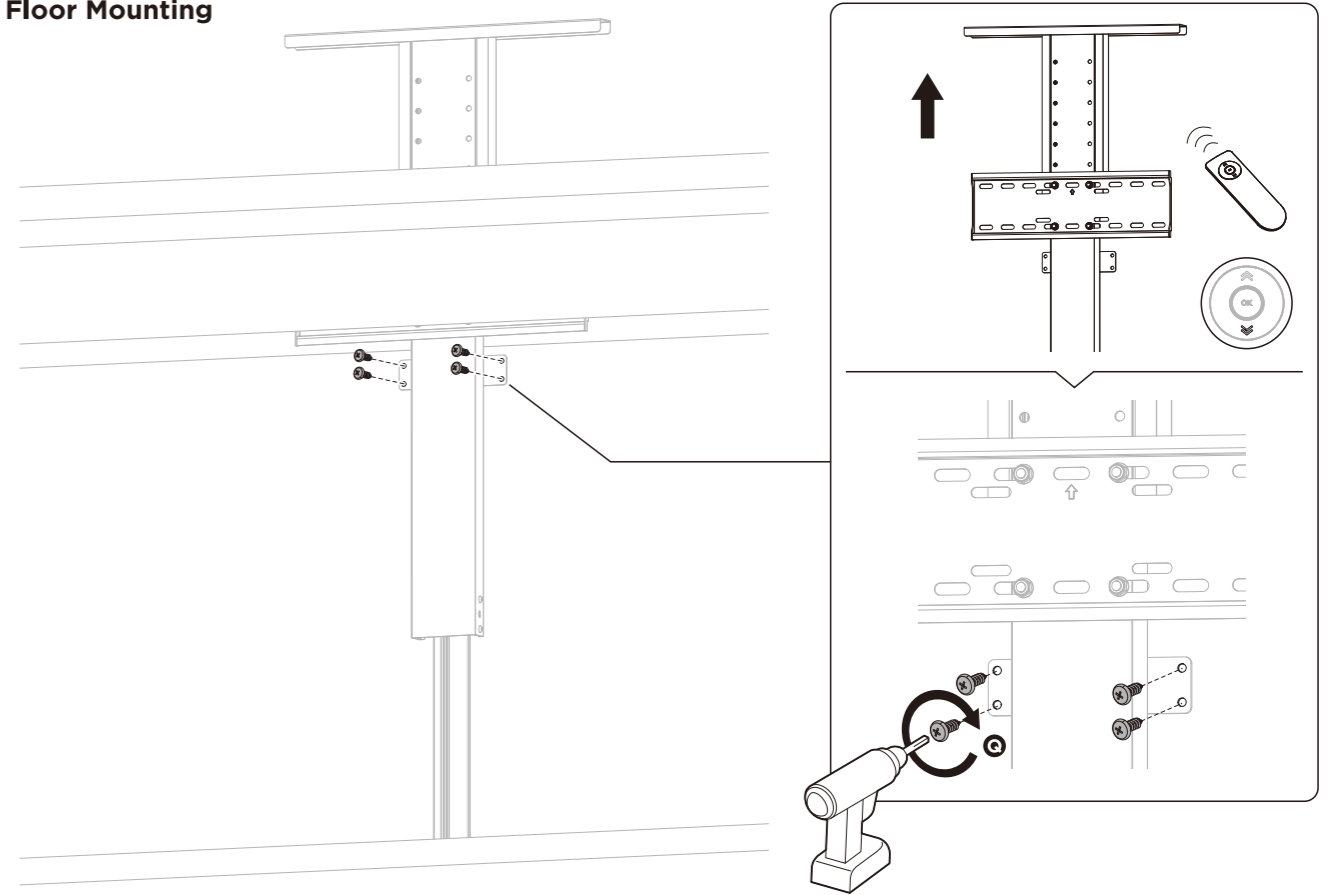 


8a Ceiling Mounting

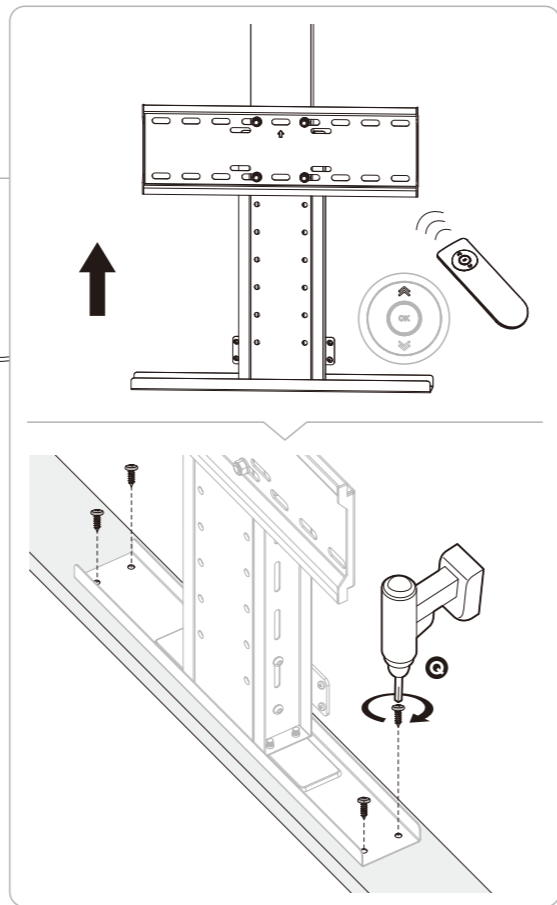 
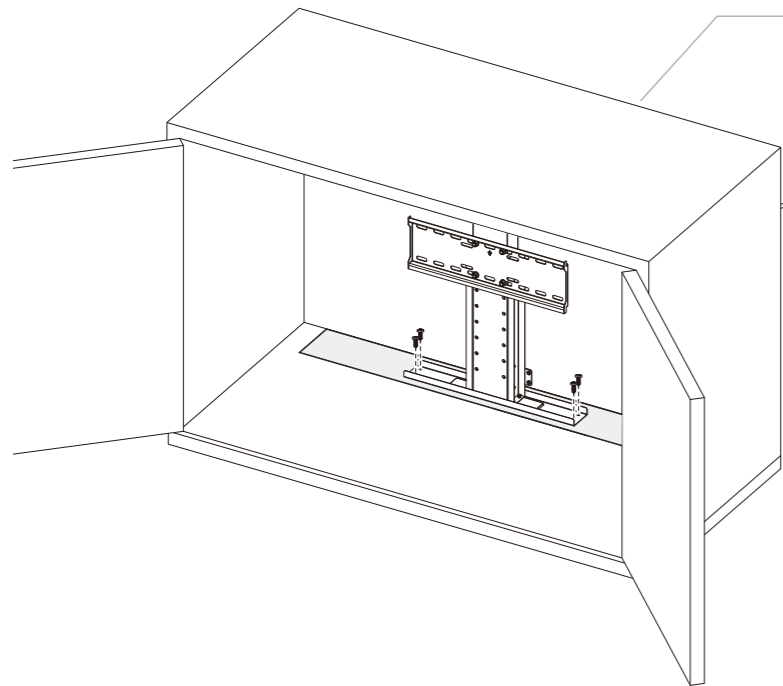 


8b Floor Mounting

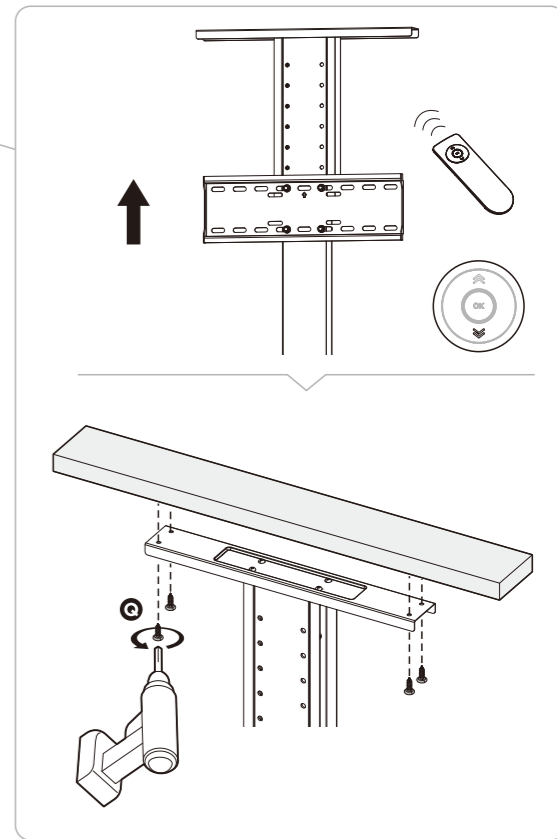 
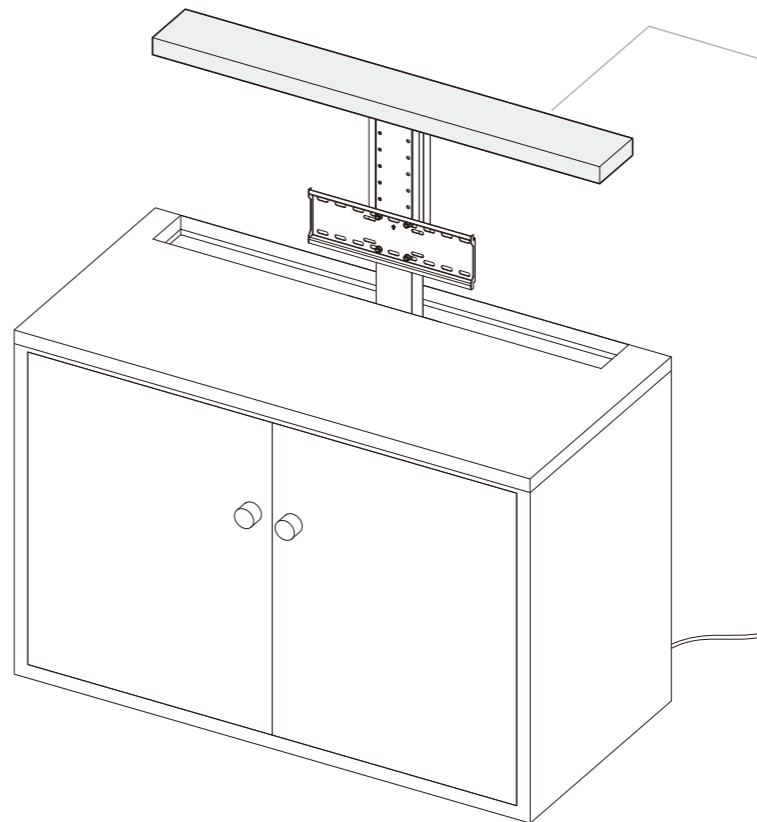 


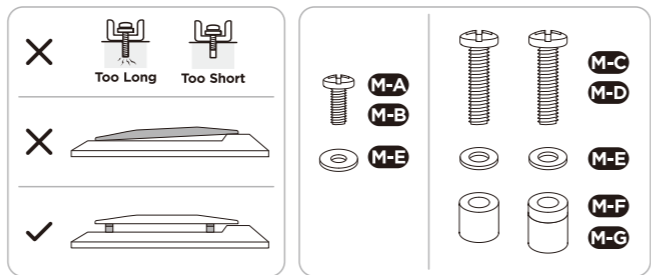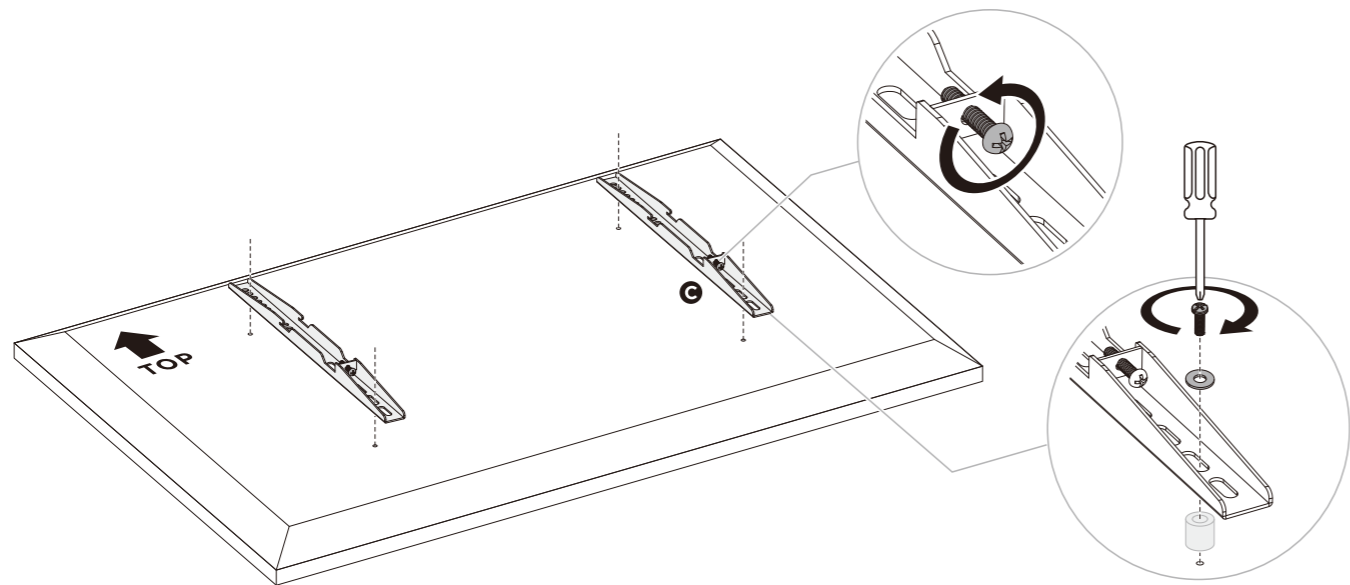  

Ceiling Mounting

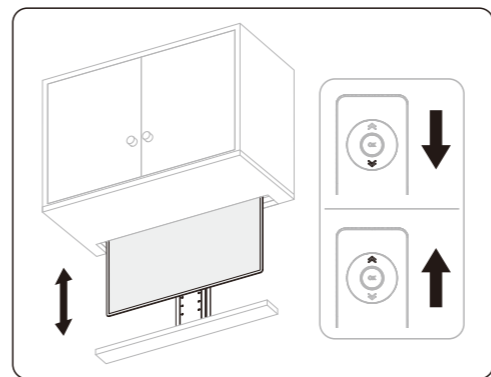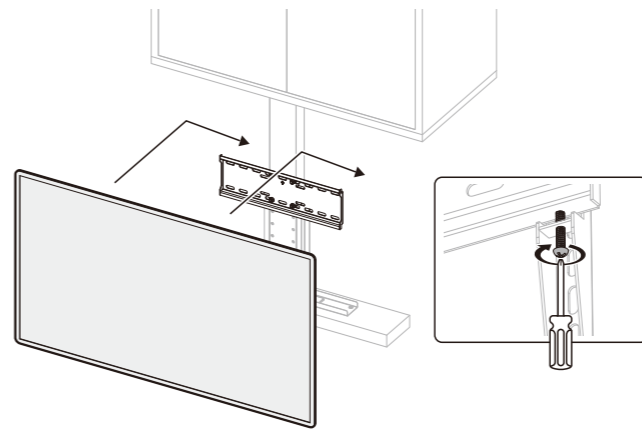  

Floor Mounting

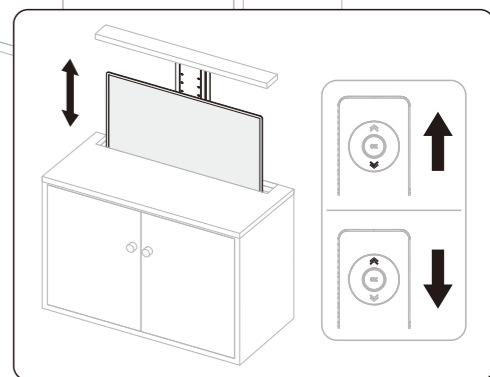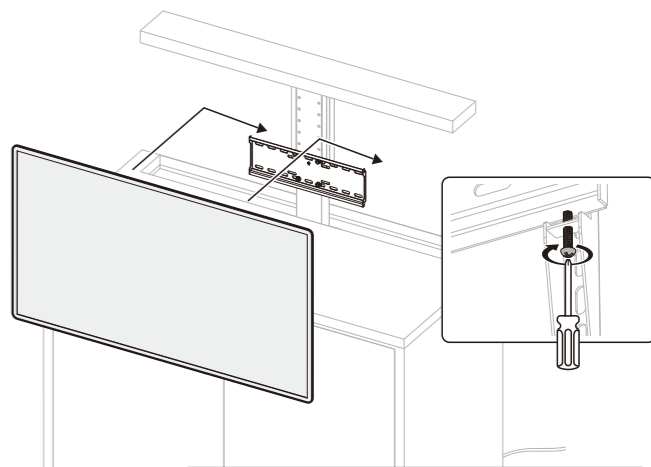  

The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.

Warnings

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they're under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.

Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit aren't allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts is damaged, please contact your service agent of purchase for a replacement.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.
- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Unplug the appliance when the system isn't in use, and place the power plug out of children reach.


Remote Control Operation Instructions

 
 


Note: The remote control is powered by two AAA batteries (not included).



A. Coding of Remote Control and Control Box

STEP1: Double press “” button of the control box to turn on the indicating light and enter program coding mode.



STEP2: Press and hold “”+ “” button on the remote control to enter program coding mode with the back light flashing. Keep pressing the two buttons until the back light stops flashing and the light of control box is off indicating success.



Note: If program coding fails because of the timeout, repeat above steps until successful.

B. Button Functions

  Remote Control

1. Upward/Downward Movement


Ceiling Mounting: Press and hold the “” button, and the mount will move upward. Press and hold the “” button, and the mount will move downward.

Floor Mounting: Press and hold the “” button, and the mount will move upward. Press and hold the “” button, and the mount will move downward.

Note: Clear up all obstacles within the range of motion.)


2. Default Position

Ceiling Mounting: Press the “” button and the mount will automatically move upward to the default highest position.

Floor Mounting: Press the “” button and the mount will automatically move downward to the default lowest position.

 
Control Box

1. Program Coding

Double press the “” button to turn on the indicating light and enter program coding mode.

2. Default Position

Ceiling Mounting: Press and hold the “” button, and the mount will move upward to the default highest position.

Floor Mounting: Press and hold the “” button, and the mount will move downward to the default lowest position.

Troubleshooting Guide



In Front

This Troubleshooting Guide will assist you in identifying and solving common problems and answering questions you may have about the product. Contact your place of purchase should the answer to your question or problem not be found in this Troubleshooting Guide and/or for any after service parts and sales support.

Possible reasons motorized mount does not respond to remote control.

TV Mount

- The AC/DC end of the power cord may be unplugged/disconnect from the outlet/mount. Check the connection to ensure the unit has power.
- Incorrect operation. Please follow the instructions found in the manual to properly operate the mount.

Remote Control&ControlBox

- The remote control operating distance may be too far and not in range of the mount. Acceptable range should be less than 30 feet (10m).
- The battery in the remote control may be low or dead. Replace the batteries.
- The program coding may fail. Follow the instructions to operate coding of remote control and control box.
- The remote control, linear actuator or control box may be broken. Check to see if the indicator LED lights on when any button is pressed. If not, contact your place of purchase for a replacement.

