

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
Tefal	GC715D40/79B	OptiGrill+ Snacking & Baking
Tefal	GC715D40/79A	OptiGrill+ Snacking & Baking
Tefal	GC712812/79B	OptiGrill+ Snacking & Baking
Tefal	GC713D40/79B	OptiGrill
Tefal	GC730D12/79A	OptiGrill Smart
Tefal	GC712D34/79B	OptiGrill
Tefal	GC706D34/79A	OptiGrill Inox 5 Levels
Tefal	GC712D12/79A	OptiGrill
Tefal	GC714812/79A	OptiGrill+ Snacking & Baking
Tefal	GC714834/79B	OptiGrill+ Snacking & Baking
Rowenta	GR712D21/79B	OptiGrill
Tefal	GC730D16/79A	OptiGrill Smart
Rowenta	GR712D21/79A	OptiGrill
Tefal	GC713D40/79A	OptiGrill
Tefal	GC730D34/79A	OptiGrill Smart
Tefal	GC716812/79A	OptiGrill+ WAFFLES PLATES
Tefal	GC712D34/79A	OptiGrill
Tefal	GC712834/79A	OptiGrill+
Tefal	GC712834/79B	OptiGrill+
Tefal	GC706D12/79A	OptiGrill Inox 5 Levels
Tefal	GC714834/79A	OptiGrill+ Snacking & Baking
Tefal	GC712812/79A	OptiGrill+ Snacking & Baking
Tefal	GC712D12/79B	OptiGrill
Tefal	GC730D12/79B	OptiGrill Smart
Tefal	GC716D12/79A	OptiGrill+
Tefal	GC714812/79B	OptiGrill+ Snacking & Baking