 
 
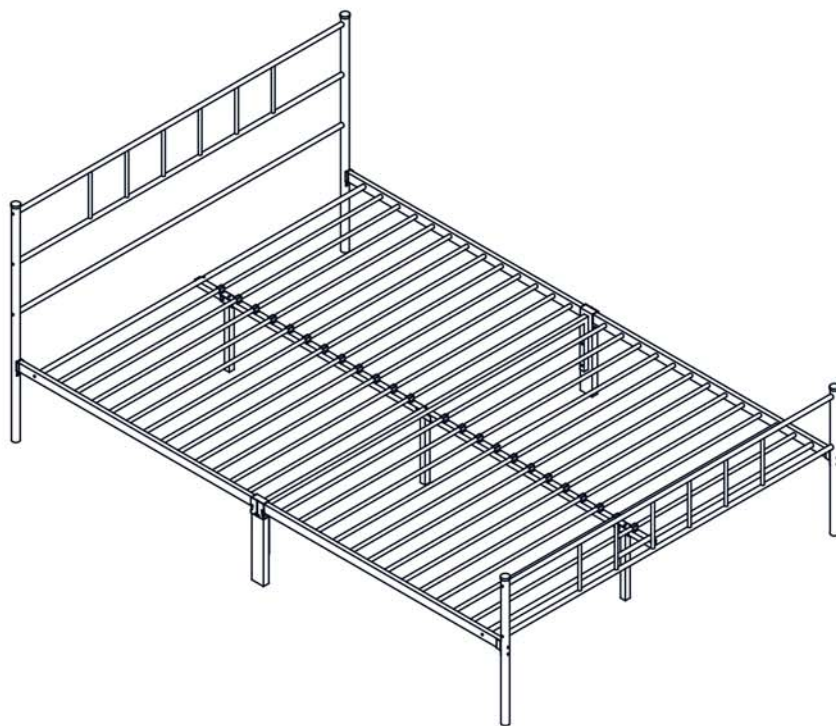 
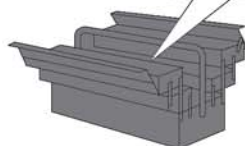 


Art. Nr. 1271 8154 / 2698 3111
8866 8923 / 9371 6667



LKZ 48694



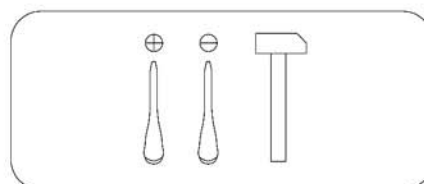


- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrukțiuni de montaj |
| (TR) Montaj talimatı | (RU) Инструкция по монтажу |

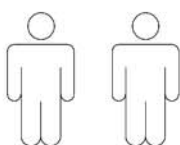

  
0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

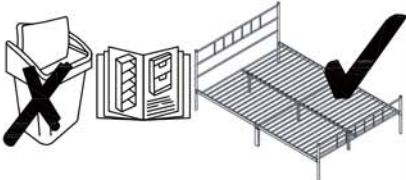
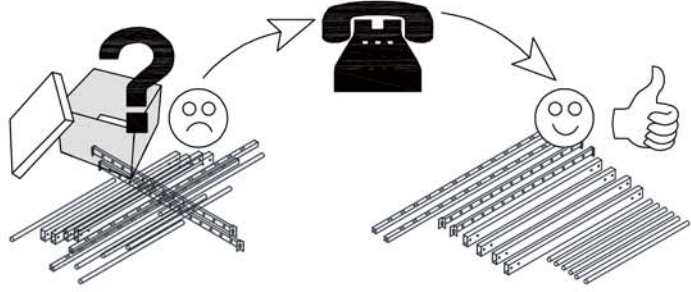
Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • Isim • Название	
Nr. • No. • N° • Номер • Č • Sz	12718154,26983111,88668923,93716667
Typ • Type • Тип • Тип	
	
	

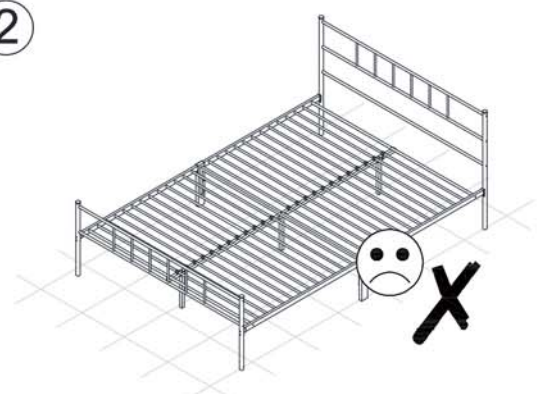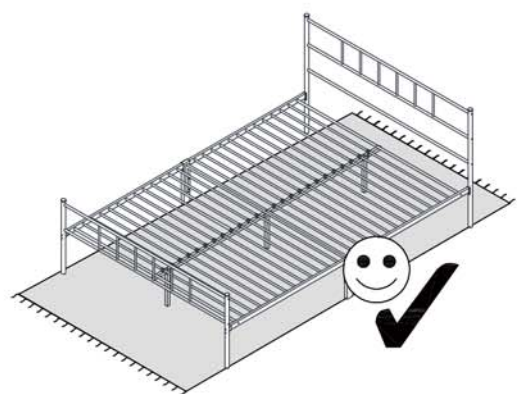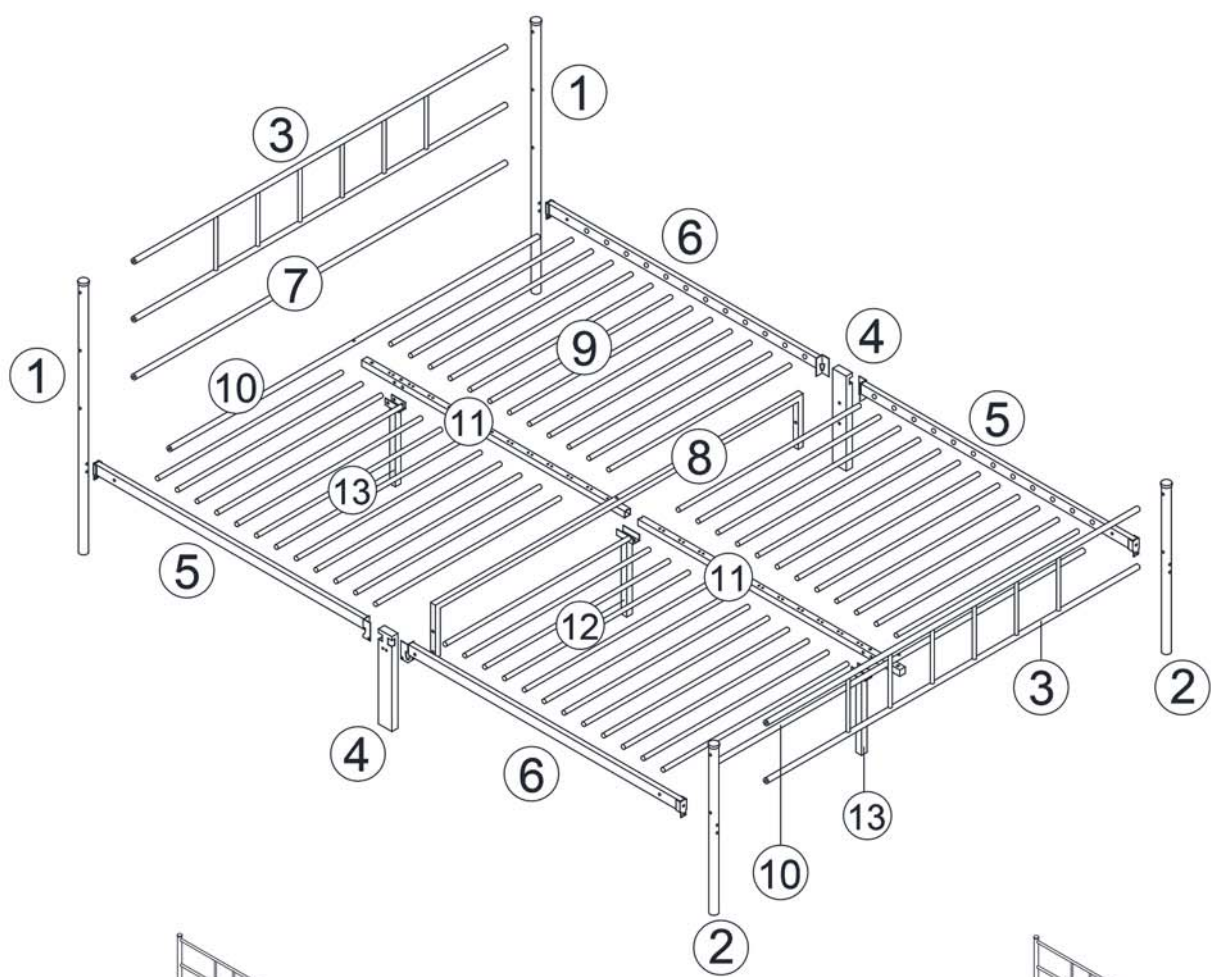   




A M8x45mm  x8	B M6x60mm  x13	C M6x40mm  x14	D M6x15mm  x2	F M8  x4
G M6  x6	H  x24	I  x1	J  x1	K  x4

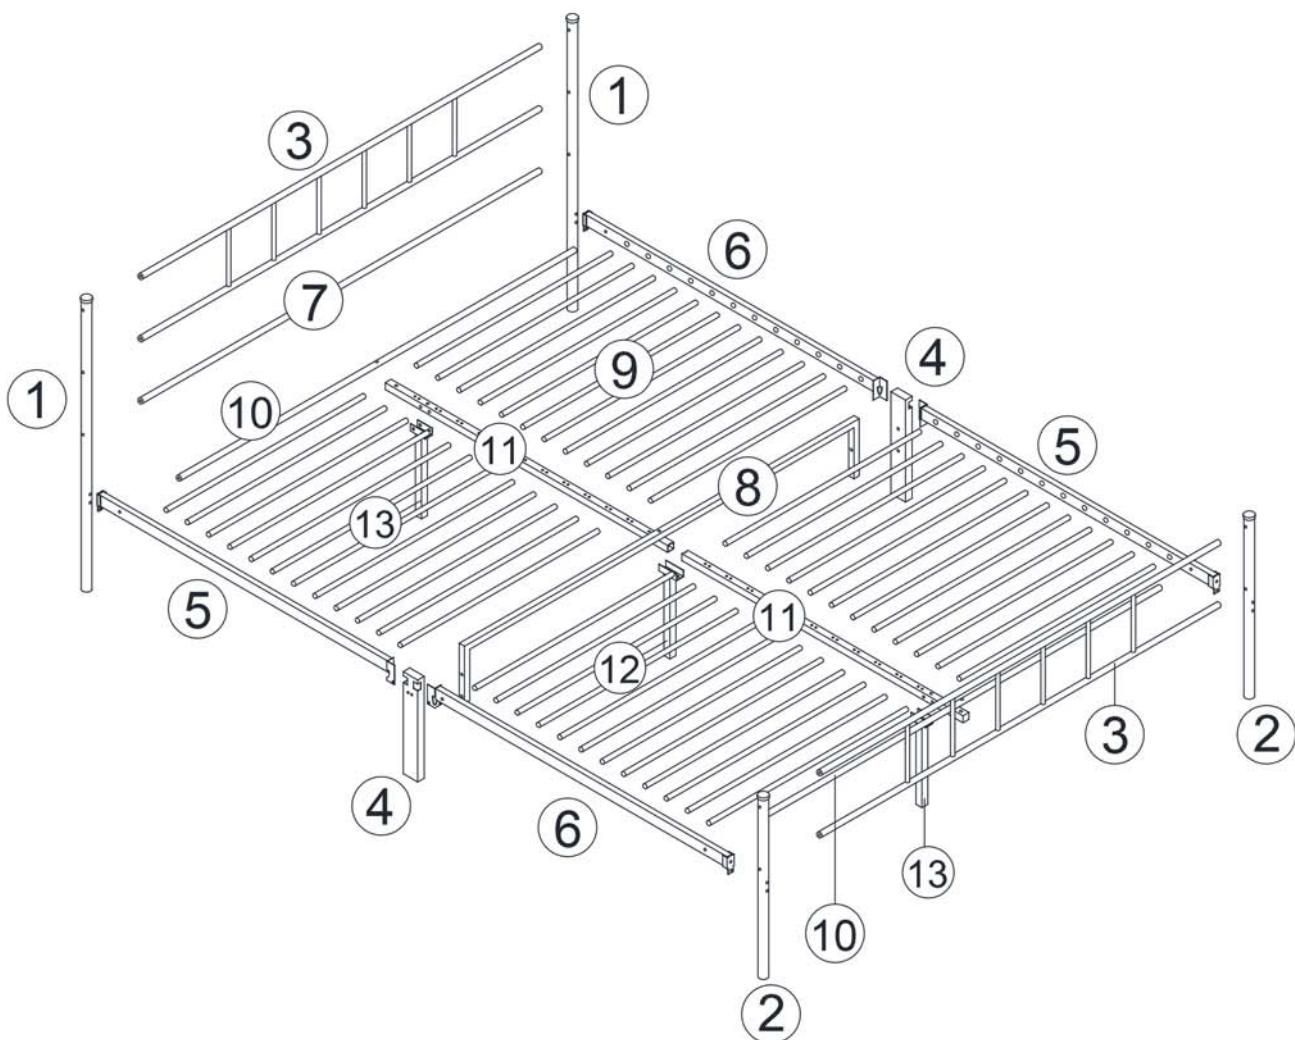 


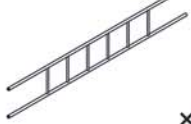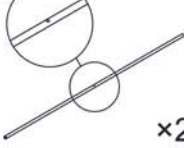  1  x2	2  x2	3  x2	4  x2	5  x2	6  x2
7  x1	8  x1	9  x48	10  x2	11  x2	12  x1
13  x2					






 
step 1

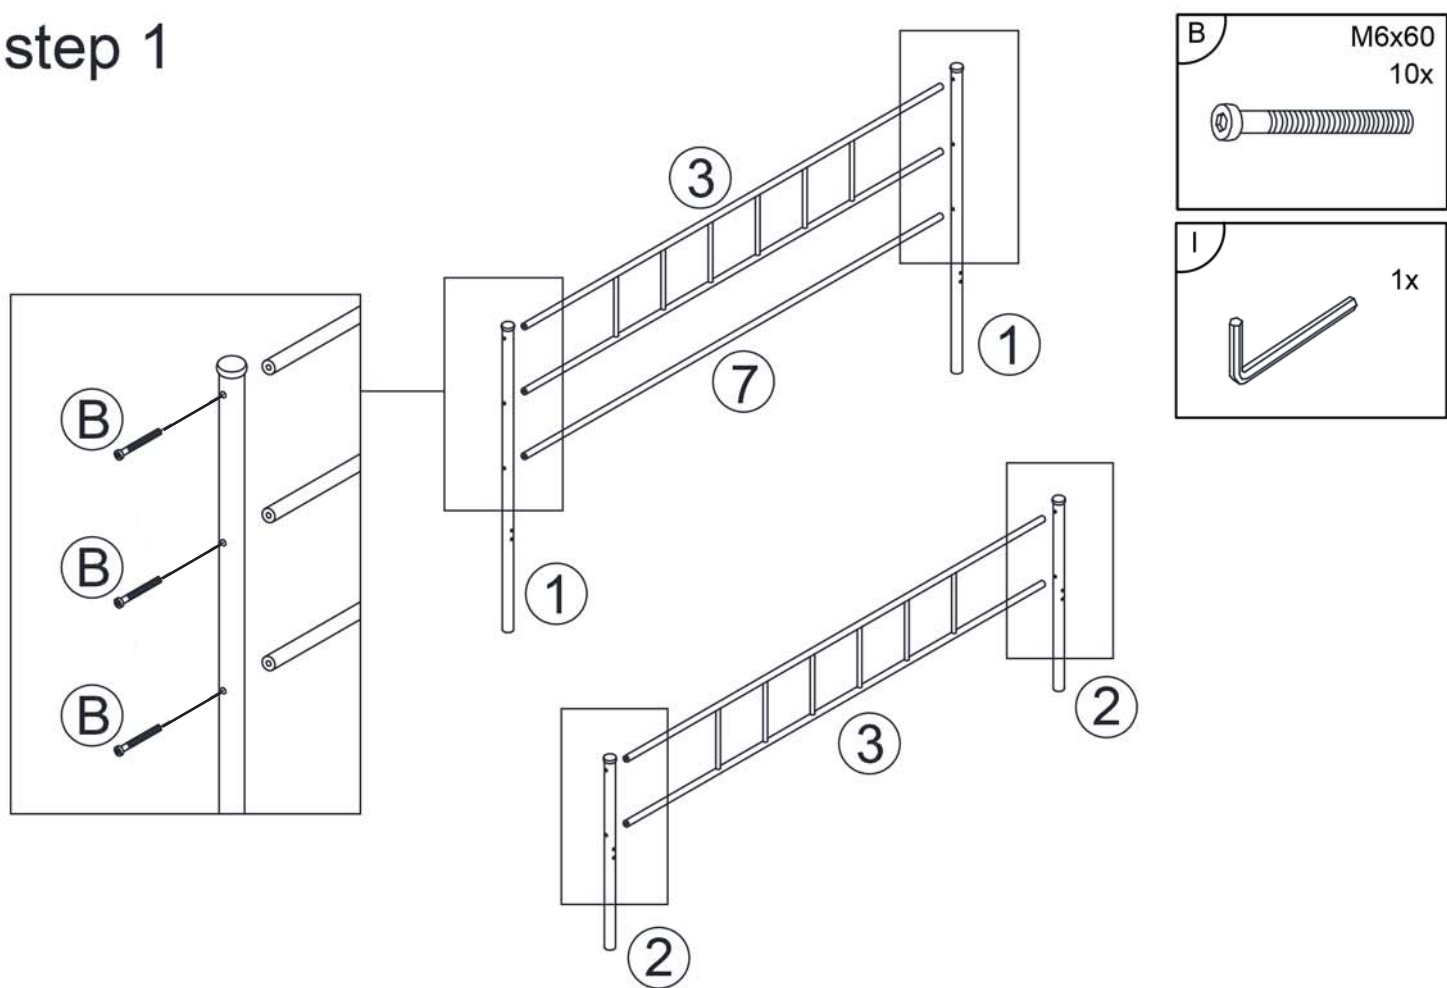





 
step 2

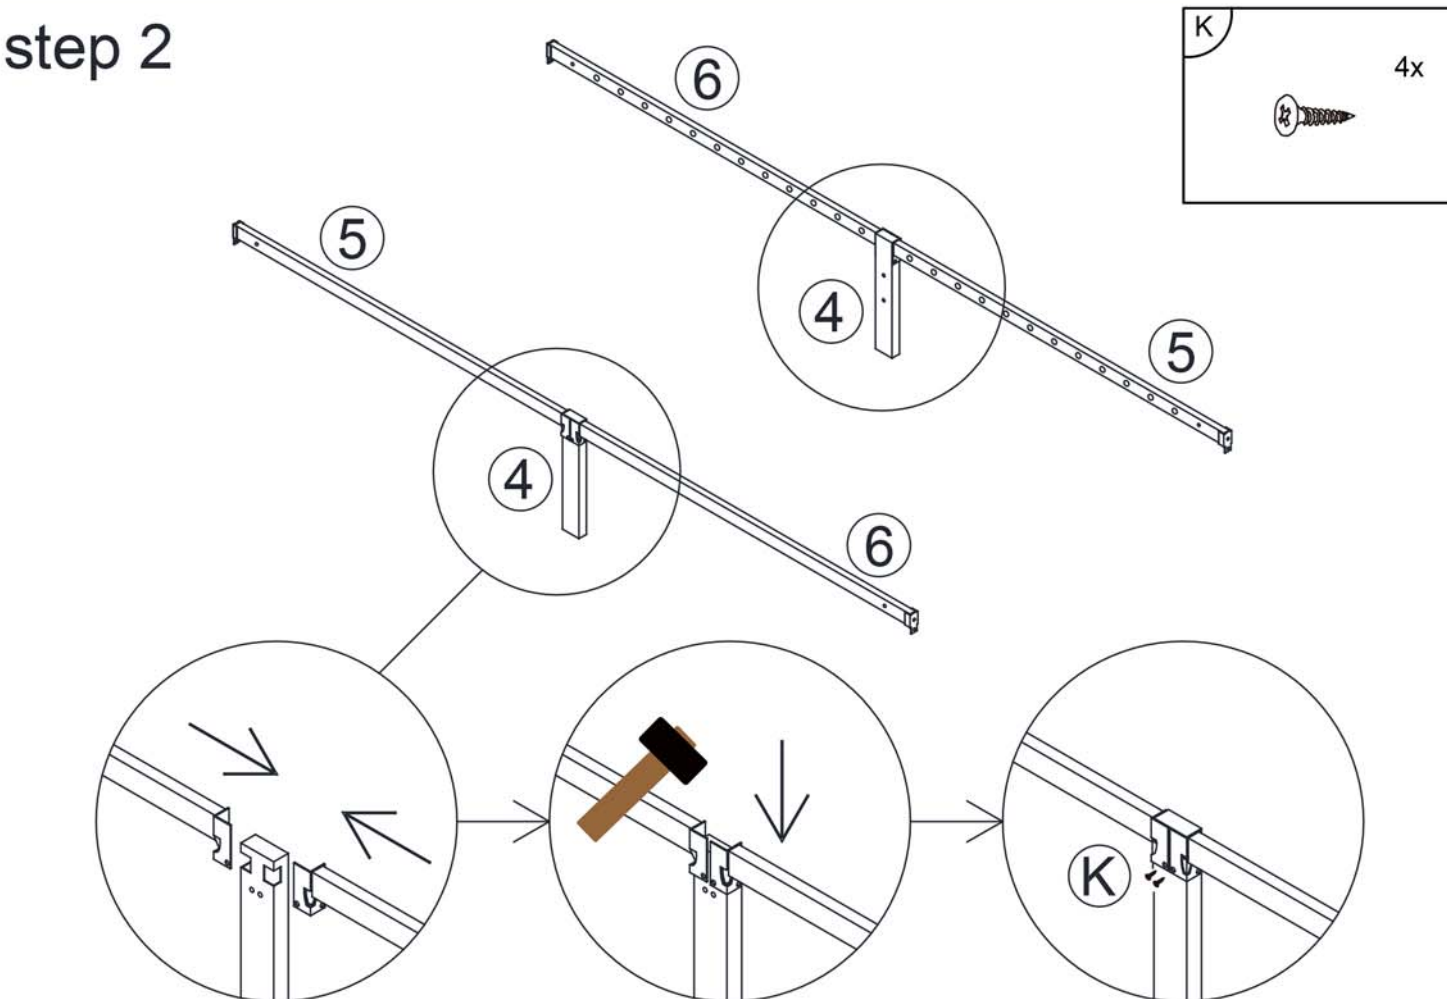

    
 
 
step 3

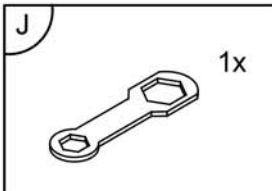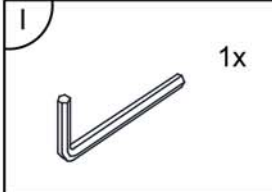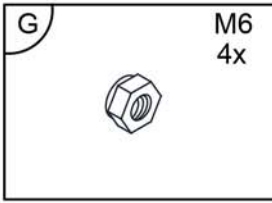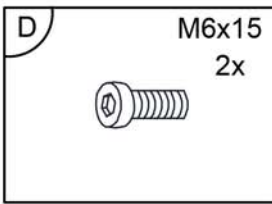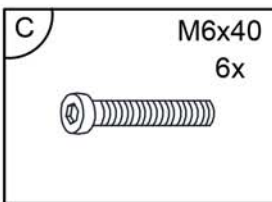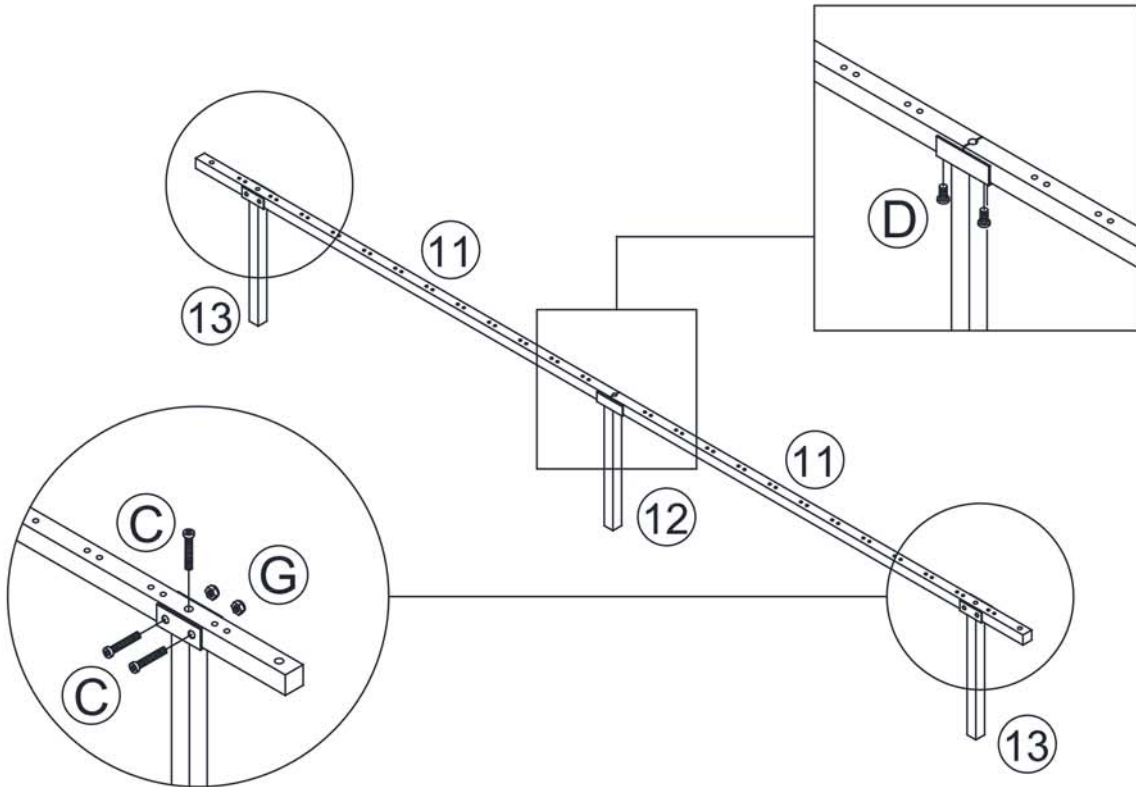

 
 
 
 
 
step 4

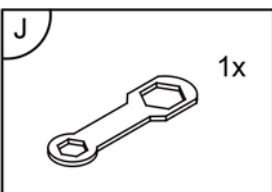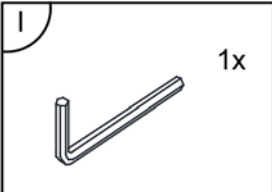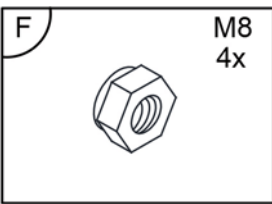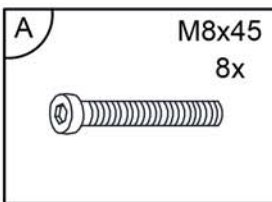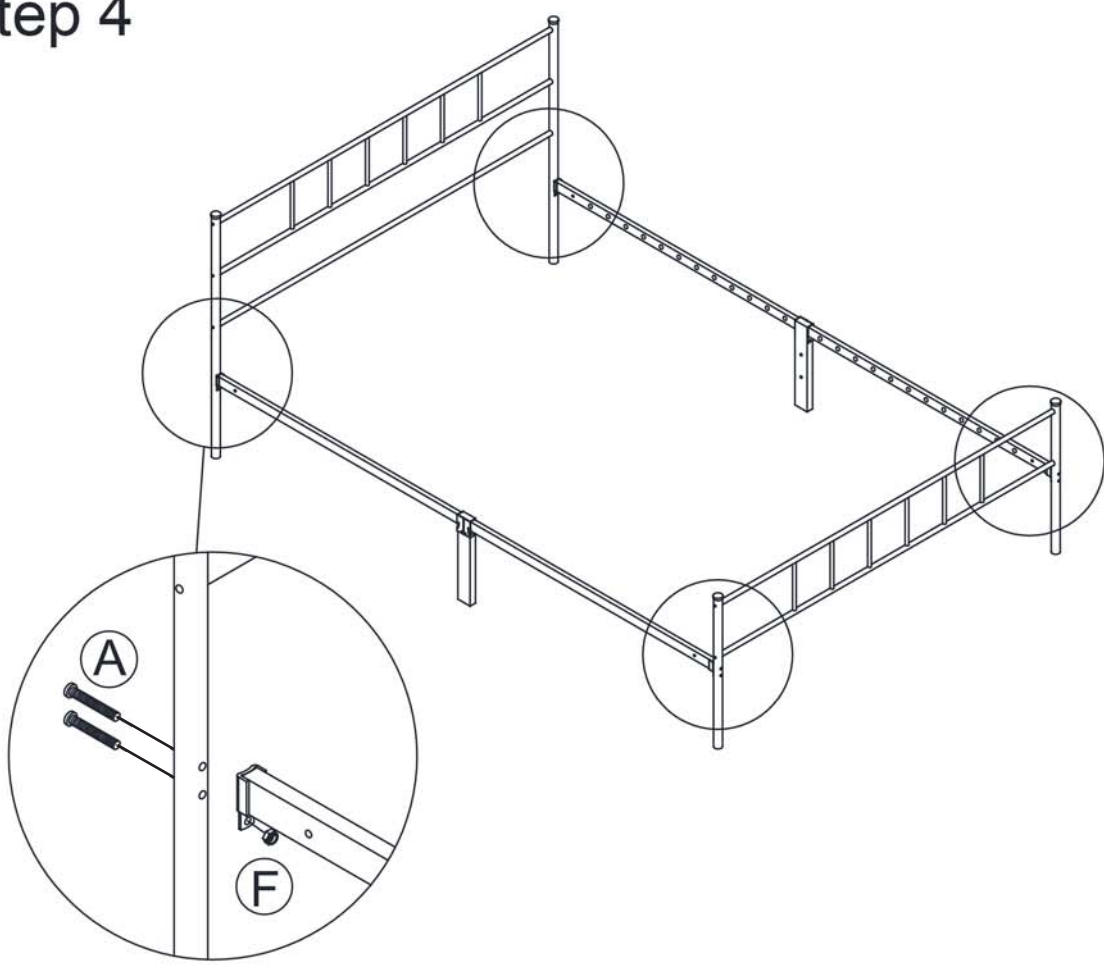

   step 5

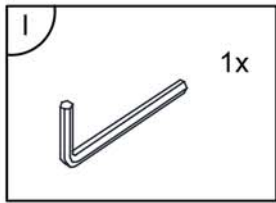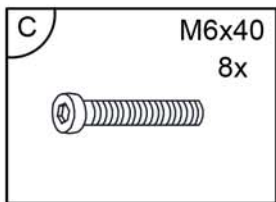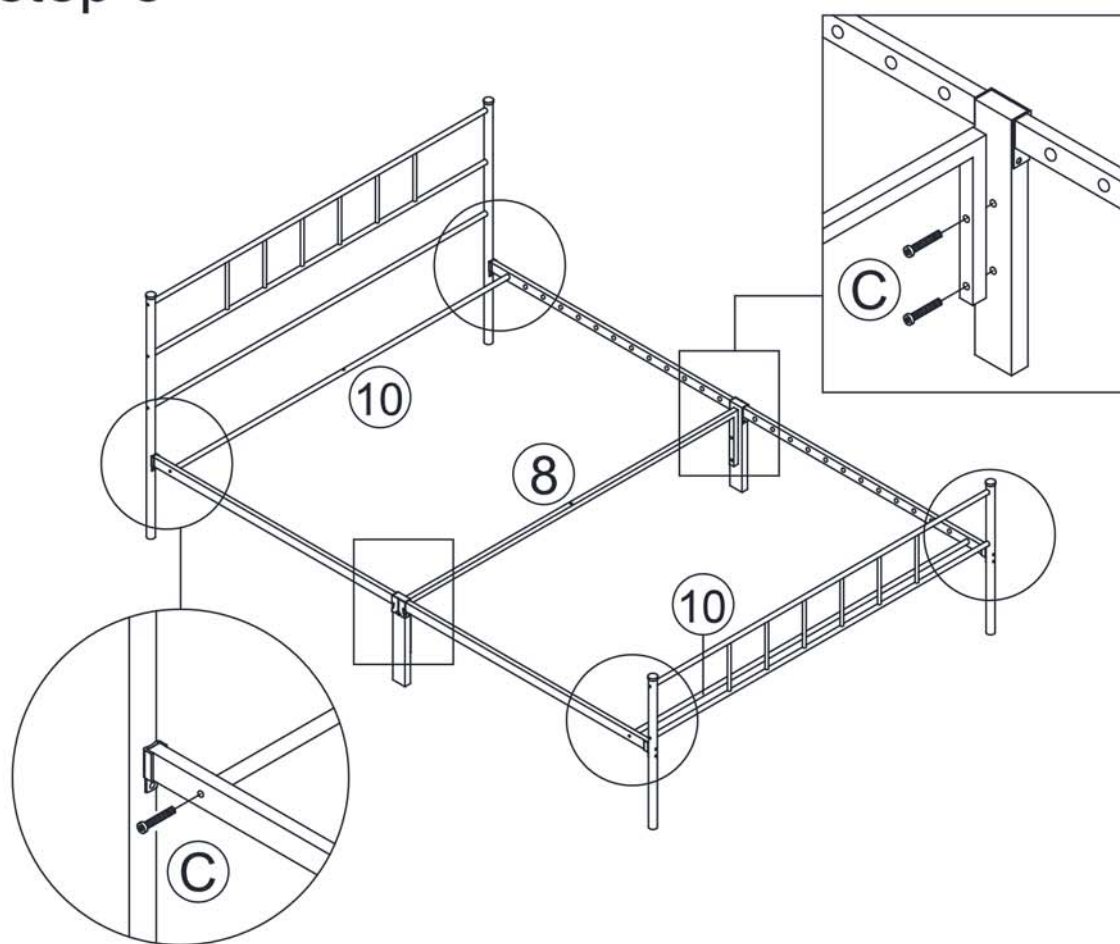

     step 6

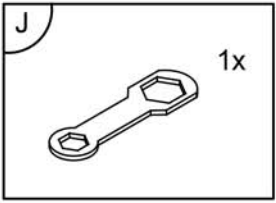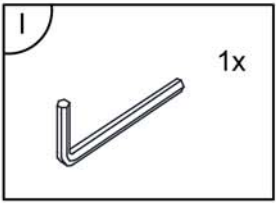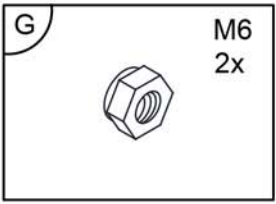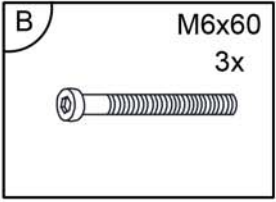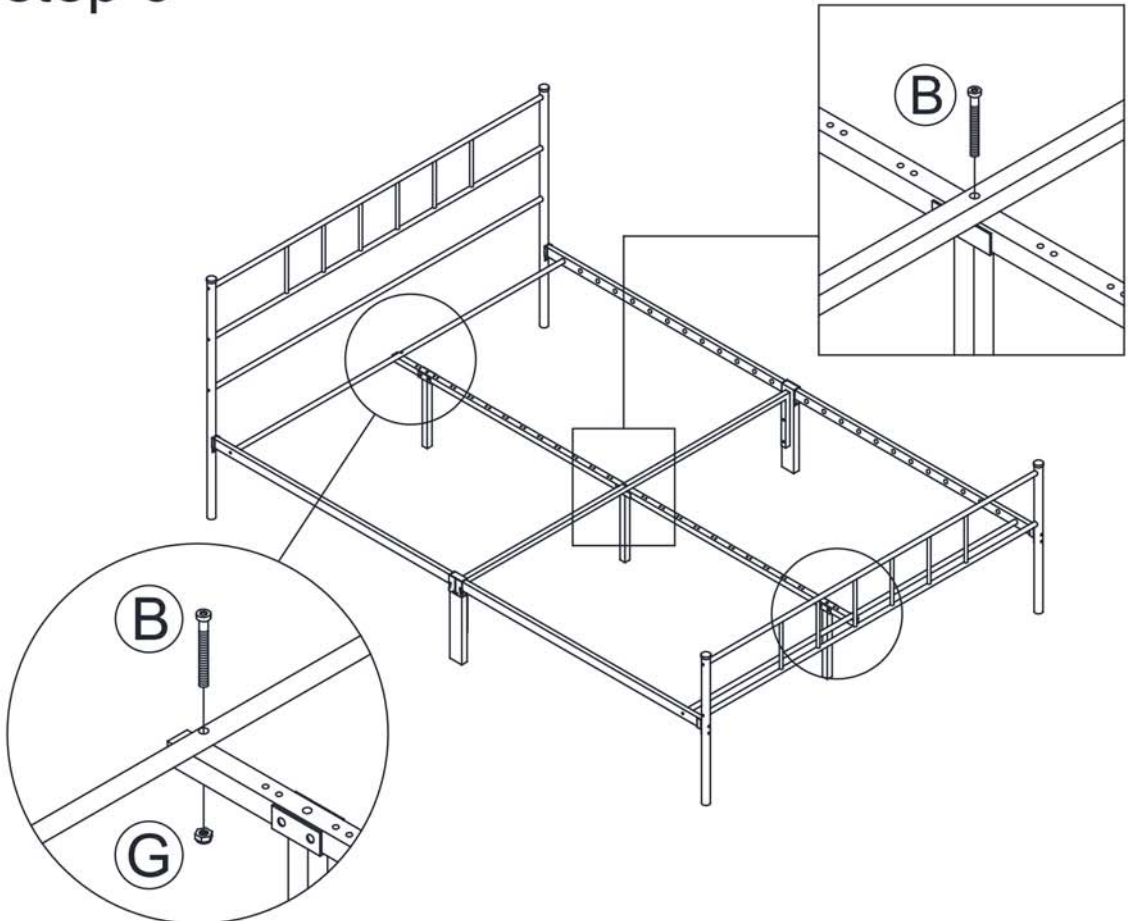

step 7

