 


INSTRUCTION MANUAL



Insight SL

<p>1.</p> <p>OFF</p>	<p>2.</p>	
<p>3.</p> <p>INPUT: AC220-240V</p>	<p>4.</p>	<p>5.</p> <p>warning: when replacing a halogen lamp, wait for it to cool, for a minimum of 5 minutes</p>
<p>6.</p> <p>ON</p>	<p>Overall Sizes:</p>	