

Passend für die folgenden Modelle:

| Marke | Typennummer | Modell              |
|-------|-------------|---------------------|
| AEG   | 90027381700 | UOECO               |
| AEG   | 91028600800 | AV1150              |
| AEG   | 91028675300 | AUS4030M            |
| AEG   | 91028423900 | P3 POWER            |
| AEG   | 91028422800 | P5 ERGO             |
| AEG   | 90315142000 | AUS3965P            |
| AEG   | 90027361600 | USALLFLOOR          |
| AEG   | 91028601900 | AV1161              |
| AEG   | 90027361601 | USALLFLOOR          |
| AEG   | 90027381801 | UOALLFLOOR          |
| AEG   | 91028694200 | AEL90               |
| AEG   | 90315167100 | SCANIMAL            |
| AEG   | 90739730100 | AUS 4030            |
| AEG   | 90027381800 | UOALLFLOOR          |
| AEG   | 91028600700 | AV1140              |
| AEG   | 91028691700 | AEL8815             |
| AEG   | 90315210700 | UCALLFLOOR          |
| AEG   | 90315138600 | AUP3840C            |
| AEG   | 90315210901 | UCDELUXE            |
| AEG   | 90027381901 | UODELUXE            |
| AEG   | 91028698100 | AUO8870             |
| AEG   | 91028841600 | AO7350              |
| AEG   | 90315210600 | UCORIGIN            |
| AEG   | 90315210701 | UCALLFLOOR          |
| AEG   | 91028421000 | SYSTEM_PRO P5 ULTRA |
| AEG   | 90027381900 | UODELUXE            |
| AEG   | 90315210900 | UCDELUXE            |
| AEG   | 90315148100 | AUS3931W            |
| AEG   | 91028423200 | P5 ULTRA            |
| AEG   | 91028422900 | P5 TURBO            |
| AEG   | 91028422700 | P5 POWER            |
| AEG   | 91028423100 | P5 POWER            |
| AEG   | 91028698400 | AUO8817             |
| AEG   | 91028698101 | AUO8870             |
| AEG   | 90739740100 | AUS 4040            |
| AEG   | 91028697801 | AUO8820P            |
| AEG   | 90027381600 | UOGREEN             |
| AEG   | 91028697800 | AUO8820P            |
| AEG   | 90008382900 | AEO5430             |
| AEG   | 90008383200 | AEO5460             |
| AEG   | 90315148000 | AUS3931CP           |
| AEG   | 90315146200 | AUS3966P            |
| AEG   | 91028692300 | AEL8870             |
| AEG   | 91028773600 | AVC1171             |
| AEG   | 90315163302 | ASC6926             |

|     |             |                       |
|-----|-------------|-----------------------|
| AEG | 91028703400 | AMX7026               |
| AEG | 90315103300 | AES340                |
| AEG | 91028878800 | ACX6425               |
| AEG | 90315156100 | AJG6700               |
| AEG | 90315110201 | ACX 6206 NS           |
| AEG | 91028878902 | ACX6206N              |
| AEG | 91028661700 | AAM 6105 A            |
| AEG | 90315131300 | AUA3840T              |
| AEG | 91028665400 | ACX6208               |
| AEG | 90315153500 | AJM6717               |
| AEG | 91028425000 | P5 TURBO              |
| AEG | 90315143400 | AUS3930               |
| AEG | 91028641700 | AEC7571               |
| AEG | 91028876100 | AAM 6140 N            |
| AEG | 91028794300 | A Viva Quickstop 2220 |
| AEG | 90025787300 | Vampyr                |
| AEG | 91028795600 | A Viva Quickstop 2221 |
| AEG | 91028495100 | A Viva Quickstop 2130 |
| AEG | 91028702700 | AMX7030               |
| AEG | 91028770700 | A Viva Control 1170   |
| AEG | 91028878801 | ACX6425               |
| AEG | 90315106901 | AES355B               |
| AEG | 91028604000 | A Viva Control 1120   |
| AEG | 91028872400 | ACX6320CD             |
| AEG | 90315170202 | AJM68FD1              |
| AEG | 91028604600 | A Viva Control 1230   |
| AEG | 90315170700 | AJM68FD1              |
| AEG | 90315106700 | AES340G               |
| AEG | 91028496300 | A Viva Quickstop 2141 |
| AEG | 91028668500 | AAM 6112              |
| AEG | 90315122600 | AAM 6103              |
| AEG | 91028774500 | AVC1171               |
| AEG | 90315155001 | AJM6815               |
| AEG | 90315155400 | AJM6830UK             |
| AEG | 90315146000 | AUS3931R              |
| AEG | 91028667000 | AirMax AAM 6113       |
| AEG | 90315152700 | AJM6830               |
| AEG | 90315156402 | AJM68SP2              |
| AEG | 91028495600 | A Viva Quickstop 2136 |
| AEG | 90315156300 | AJM68SP1              |
| AEG | 90315104500 | AESG301               |
| AEG | 90315162300 | ASC6910               |
| AEG | 91028667100 | AirMax AAM 6112       |
| AEG | 90315162102 | ASC6920               |
| AEG | 91028495900 | A Viva Quickstop 2140 |
| AEG | 91028604500 | A Viva Control 1220   |
| AEG | 91028770500 | A Viva Control 1131   |
| AEG | 90315106900 | AES355B               |

|     |             |                       |
|-----|-------------|-----------------------|
| AEG | 90315152802 | AJM6840               |
| AEG | 90315104200 | AE305SC               |
| AEG | 90315170200 | AJM68FD1              |
| AEG | 90027410900 | JMALLFLR+             |
| AEG | 91028794500 | AVQ2240               |
| AEG | 91028796200 | PORSZIVO RF AVQ2270   |
| AEG | 91028796300 | AVQ2271               |
| AEG | 90315103301 | AES340                |
| AEG | 90315153503 | AJM6717               |
| AEG | 90315152903 | AJM6850               |
| AEG | 90315152902 | AJM6850               |
| AEG | 90315152904 | AJM6850               |
| AEG | 90315152901 | AJM6850               |
| AEG | 90315163301 | ASC6926               |
| AEG | 90315153502 | AJM6717               |
| AEG | 90315153501 | AJM6717               |
| AEG | 91028878901 | ACX6206N              |
| AEG | 90315163303 | ASC6926               |
| AEG | 90315162101 | ASC6920               |
| AEG | 91028751300 | AEC7571               |
| AEG | 90027367000 | USGREEN               |
| AEG | 91028770600 | AV1121                |
| AEG | 90315154000 | AJG6800               |
| AEG | 90315162103 | ASC6920               |
| AEG | 90315162203 | ASC6940               |
| AEG | 90315162204 | ASC6940               |
| AEG | 90315162202 | ASC6940               |
| AEG | 90315162201 | ASC6940               |
| AEG | 90315156400 | AJM68SP2              |
| AEG | 90315155500 | AJM6850UK             |
| AEG | 91028703900 | AMX7021               |
| AEG | 91028701300 | AMX7025               |
| AEG | 90315153504 | AJM6717               |
| AEG | 90315170900 | AJM68FD2              |
| AEG | 90315157800 | AJM6825               |
| AEG | 91028786000 | ATC8264               |
| AEG | 91028786200 | ATC8280               |
| AEG | 90315103500 | AESG300               |
| AEG | 91028742900 | AP40E                 |
| AEG | 91028882100 | AUSÖ3000              |
| AEG | 91028774400 | AVC1171               |
| AEG | 91028773200 | AVC1170               |
| AEG | 91028490600 | A Viva Quickstop 2110 |
| AEG | 91028492300 | AVQ2100               |
| AEG | 91028602900 | A Viva Control 1171   |
| AEG | 90315152801 | AJM6840               |
| AEG | 90315163300 | ASC6926               |
| AEG | 90315162200 | ASC6940               |

|     |             |                       |
|-----|-------------|-----------------------|
| AEG | 90315162100 | ASC6920               |
| AEG | 91028880600 | AUS4045               |
| AEG | 90315152800 | AJM6840               |
| AEG | 90315103401 | AES355                |
| AEG | 91028701400 | AMX7035               |
| AEG | 91028700800 | AMX7020               |
| AEG | 90742230100 | Z5915C                |
| AEG | 90315104201 | AE305SC               |
| AEG | 90315144400 | AUSG3901UKDUST PRO    |
| AEG | 90315146600 | AUS3931R UK           |
| AEG | 90027360400 | USGREEN               |
| AEG | 90315137000 | AUP3820RP             |
| AEG | 91028796600 | AVQ2134L              |
| AEG | 90315222500 | UPGREEN               |
| AEG | 90315152701 | AJM6830               |
| AEG | 90315152702 | AJM6830               |
| AEG | 90315152804 | AJM6840               |
| AEG | 90315138400 | AUPG3801              |
| AEG | 90315152600 | AJM6820               |
| AEG | 90315171800 | JMORIGINFD            |
| AEG | 90315167500 | ASCPARKETT            |
| AEG | 90315157801 | AJM6825               |
| AEG | 90315146100 | AUS3931G              |
| AEG | 90027366800 | USENERGY              |
| AEG | 91028604700 | A Viva Control 1171   |
| AEG | 90315141900 | AUS3930               |
| AEG | 90315141800 | AUSG3900              |
| AEG | 91028872401 | ACX6320CD             |
| AEG | 91028496000 | AVQ2138               |
| AEG | 91028495200 | A Viva Quickstop 2132 |
| AEG | 91028495400 | A Viva Quickstop 2135 |
| AEG | 90315144800 | AUSG3901              |
| AEG | 91028495500 | A Viva Quickstop 2134 |
| AEG | 91028603900 | A Viva Control 1110   |
| AEG | 91028604100 | A Viva Control 1130   |
| AEG | 90315131100 | AUAG3800              |
| AEG | 90315156800 | AJM6818HF             |
| AEG | 90027360700 | USORIGINDB            |
| AEG | 90315152900 | AJM6850               |
| AEG | 91028773000 | AV1131                |
| AEG | 91028772900 | AV1160                |
| AEG | 90315133100 | AUA3820               |
| AEG | 91028771500 | AVC1171               |
| AEG | 90315152803 | AJM6840               |
| AEG | 91028602800 | AVC1162               |
| AEG | 91028701000 | AMX7020               |
| AEG | 90315162600 | ASC6945               |
| AEG | 90315222400 | UPDELUXE              |

|     |             |                       |
|-----|-------------|-----------------------|
| AEG | 91028700900 | AMX7010               |
| AEG | 90315110200 | ACX 6206 NS           |
| AEG | 90315106701 | AES340G               |
| AEG | 90315170201 | AJM68FD1              |
| AEG | 91028703800 | AMX7016               |
| AEG | 90027363200 | USENERGY              |
| AEG | 91028878900 | ACX 6206 N            |
| AEG | 91028879200 | ACX 6204 N            |
| AEG | 91028879400 | ACX 6317              |
| AEG | 91028872000 | AAM 6101 A            |
| AEG | 91028872500 | AAM6320CD             |
| AEG | 91028872200 | ACX 6206 L            |
| AEG | 91028873100 | AAM 6150              |
| AEG | 91028873000 | AAM 6140              |
| AEG | 90315162400 | ASC6925               |
| AEG | 90315131200 | AUA3820               |
| AEG | 91028874900 | ACX 6209 EC           |
| AEG | 91028874800 | ACX 6206 EC           |
| AEG | 90315134300 | AUAG3801              |
| AEG | 91028876300 | AAM 6150 N            |
| AEG | 90315137001 | AUP3820RP             |
| AEG | 90315103400 | AES355                |
| AEG | 91028870400 | ACX6204               |
| AEG | 91028660700 | ACX6204               |
| AEG | 91028697700 | AUO8815               |
| AEG | 91028663400 | ACX 6206              |
| AEG | 91028663100 | ACX 6204 A            |
| AEG | 91028665500 | ACX6209               |
| AEG | 91028663500 | ACX 6207              |
| AEG | 90315155000 | AJM6815               |
| AEG | 91028665900 | ACX 6204              |
| AEG | 91028667800 | ACX 6206 FB           |
| AEG | 91028668100 | ACX6210               |
| AEG | 90315133200 | AUA3840T              |
| AEG | 91028880300 | AUS4035               |
| AEG | 91028793700 | A Viva Quickstop 2141 |
| AEG | 91028794600 | A Viva Quickstop 2250 |
| AEG | 91028792900 | AVQ2135               |
| AEG | 91028793000 | AVQ2134               |
| AEG | 91028793300 | A Viva Quickstop 2140 |
| AEG | 91028793400 | A Viva Quickstop 2138 |
| AEG | 91028793100 | AVQ2136               |
| AEG | 91028786100 | ATC8270               |
| AEG | 90025847300 | LX7-2-SW-P            |
| AEG | 90027427100 | LX7-2-SW-P            |
| AEG | 90025860600 | AB61C1OG              |
| AEG | 90025860700 | AB61C1OKO             |
| AEG | 90025860900 | AB61C2OKO             |

|            |             |                      |
|------------|-------------|----------------------|
| AEG        | 90025860800 | AB61C2DB             |
| AEG        | 90025861000 | AB61C2ECO            |
| AEG        | 90025861300 | AB61A5UG             |
| AEG        | 90025861600 | AB61C2DB             |
| AEG        | 90025861500 | AB61H6SW             |
| AEG        | 90025863800 | AB61C3GG             |
| AEG        | 90025864000 | AB61A5UGT            |
| AEG        | 90025863900 | AB61C3CR             |
| AEG        | 90025864100 | AB61A4DB             |
| AEG        | 90027435400 | APF6140              |
| AEG        | 90025871500 | AB61C2DBS            |
| Electrolux | 90730200400 | Z5835 EURO           |
| Electrolux | 90737180400 | Z5642 ANIMAL LOVER   |
| Electrolux | 90740040500 | Z5925                |
| Electrolux | 90737170400 | Z5637                |
| Electrolux | 90727810100 | Z5561 SCARAB GREEN   |
| Electrolux | 90740040300 | Z5925                |
| Electrolux | 90730200200 | Z5835                |
| Electrolux | 90727180103 | Z5530M RUBY RED      |
| Electrolux | 90727780100 | Z5529M SILK RED      |
| Electrolux | 90730150100 | Z5810 EURO           |
| Electrolux | 91028841400 | AO7320               |
| Electrolux | 90737090400 | Z5635                |
| Electrolux | 90740040301 | Z5925                |
| Electrolux | 90315210100 | UCALLFLOOR           |
| Electrolux | 90727790100 | Z5542 SILK BLUE      |
| Electrolux | 90730200100 | Z5835                |
| Electrolux | 90730260200 | Z5836                |
| Electrolux | 91028841500 | AO7335               |
| Electrolux | 90742220100 | Z5944                |
| Electrolux | 90730200300 | Z5835                |
| Electrolux | 90739580101 | Z3354                |
| Electrolux | 90739580100 | Z3354                |
| Electrolux | 90730260100 | Z5836                |
| Electrolux | 90727800100 | Z5554 TYS SILKSILVER |
| Electrolux | 90730110200 | Z5830T               |
| Electrolux | 90739040300 | Z3340                |
| Electrolux | 90739031200 | Z3330                |
| Electrolux | 90737080200 | Z5650                |
| Electrolux | 91028680300 | Z5915                |
| Electrolux | 90740100300 | Z5950                |
| Electrolux | 90727790100 | Z5542M SILK BLUE     |
| Electrolux | 90730260300 | Z5836                |
| Electrolux | 90737040200 | Z5622                |
| Electrolux | 90737160400 | Z5634 DUO CLEAN      |
| Electrolux | 90737090200 | Z5635                |
| Electrolux | 90730150200 | Z5810                |
| Electrolux | 90315145000 | ZUS3922B             |

|            |             |                   |
|------------|-------------|-------------------|
| Electrolux | 90315145001 | ZUS3922B          |
| Electrolux | 91028800700 | XXL 42            |
| Electrolux | 91028803300 | XXL 60            |
| Electrolux | 90315108901 | ZE346EB           |
| Electrolux | 91028611200 | XXLBOX4 F         |
| Electrolux | 91028679700 | ZUS3359           |
| Electrolux | 90315147000 | ZUSG3901          |
| Electrolux | 91028679500 | ZUS3366           |
| Electrolux | 90727580100 | Z5551 PETROL BLUE |
| Electrolux | 90315106501 | ZE341B            |
| Electrolux | 90315137600 | ZUA3860           |
| Electrolux | 90094032500 | ZUSG4062          |
| Electrolux | 91028811300 | XXLBOX16          |
| Electrolux | 90315144700 | ZUSG3901          |
| Electrolux | 90027410400 | ZJG6810           |
| Electrolux | 90739770100 | Z 3335 SCH        |
| Electrolux | 91028884000 | ZCS2000           |
| Electrolux | 90315108900 | ZE346EB           |
| Electrolux | 91028877101 | ZAM 6230          |
| Electrolux | 90315162004 | ZSC6940           |
| Electrolux | 90721500100 | Z 1945            |
| Electrolux | 91028674400 | Z3366M            |
| Electrolux | 91028781501 | Z8225             |
| Electrolux | 90315152500 | ZJM6840           |
| Electrolux | 91028481100 | XXL 60            |
| Electrolux | 90027366500 | ZUS3945WR         |
| Electrolux | 90315144500 | ZUSG3901          |
| Electrolux | 90027403000 | ZE349             |
| Electrolux | 91028663601 | ZAM6107           |
| Electrolux | 90315138800 | ZUP3820B          |
| Electrolux | 91028660901 | ZCX6201           |
| Electrolux | 91028773700 | ZV1020            |
| Electrolux | 91028807100 | XXL160            |
| Electrolux | 91028786600 | Z8268             |
| Electrolux | 91028888500 | ZCS2000           |
| Electrolux | 91028640300 | Z 7520            |
| Electrolux | 90315163400 | ZSC6911BRA        |
| Electrolux | 91028881900 | ZUS3340           |
| Electrolux | 90315105902 | ZE325R            |
| Electrolux | 90027360300 | USGREEN           |
| Electrolux | 91028889600 | ZCS2000           |
| Electrolux | 90027362900 | ZUS4061EN         |
| Electrolux | 90008199200 | ZCV 750 Etage     |
| Electrolux | 90730070102 | Z5810T            |
| Electrolux | 90315164001 | ZSC6940CNM        |
| Electrolux | 90315138801 | ZUP3820B          |
| Electrolux | 91028878300 | ZCX 6450          |
| Electrolux | 90315191100 | SUP11             |

|            |             |                      |
|------------|-------------|----------------------|
| Electrolux | 90315165301 | ZSC6920              |
| Electrolux | 90315107401 | ZE360WP              |
| Electrolux | 91028806400 | XXL160               |
| Electrolux | 90315108401 | ZE346DB              |
| Electrolux | 91028667300 | ZAM 6103 FB          |
| Electrolux | 90723051100 | Z 5240               |
| Electrolux | 91028785300 | Z8268                |
| Electrolux | 91028701800 | ZXM7020              |
| Electrolux | 90315121500 | ZAM6216              |
| Electrolux | 91028850200 | XXLTT12              |
| Electrolux | 91028880200 | ZUS3376              |
| Electrolux | 90027391800 | ZUF4204REM           |
| Electrolux | 90739700100 | Z 3361               |
| Electrolux | 91028662900 | ZAM 6104             |
| Electrolux | 90727850100 | Z 5561 Scarabe Green |
| Electrolux | 90315105903 | ZE325R               |
| Electrolux | 91028877100 | ZAM 6230             |
| Electrolux | 90727020100 | Z 5530               |
| Electrolux | 91028832501 | ZAC 6717             |
| Electrolux | 90315164800 | ZSC6935CH            |
| Electrolux | 90315145602 | ZUS3932B             |
| Electrolux | 90315108800 | ZE331AP              |
| Electrolux | 90315131900 | ZUA3810              |
| Electrolux | 90315220800 | ZUA3822P             |
| Electrolux | 90315104000 | ZEG301               |
| Electrolux | 90315122400 | ZAM 6280             |
| Electrolux | 91028675600 | Z 3365               |
| Electrolux | 91028886400 | ZCS2220B             |
| Electrolux | 90027401201 | ZE357                |
| Electrolux | 90315145600 | ZUS3932B             |
| Electrolux | 91028679000 | ZUS3374              |
| Electrolux | 91028702000 | ZXM7015              |
| Electrolux | 91028677500 | Z3372                |
| Electrolux | 91028660900 | ZCX 6201             |
| Electrolux | 90727030100 | Z 5540               |
| Electrolux | 90315108200 | ZE305SPC             |
| Electrolux | 90315139200 | ZUA3841              |
| Electrolux | 91028806200 | XXL152               |
| Electrolux | 91028675700 | Z3332                |
| Electrolux | 90315158900 | JMTURBO              |
| Electrolux | 90727200100 | Z5550                |
| Electrolux | 90027360200 | USGREEN              |
| Electrolux | 90723431100 | Z 5229               |
| Electrolux | 90315137700 | ZUA3860              |
| Electrolux | 90315190801 | ZSC69FD2             |
| Electrolux | 90315148500 | USR21                |
| Electrolux | 90315164701 | SUPER                |
| Electrolux | 90315132300 | ZUAG3800             |

|            |             |                     |
|------------|-------------|---------------------|
| Electrolux | 90315109600 | ZE357               |
| Electrolux | 90315135601 | ZUP3820B            |
| Electrolux | 90315162001 | ZSC6940             |
| Electrolux | 90315103200 | EL4101A             |
| Electrolux | 90727180100 | Z5530 RUBY RED      |
| Electrolux | 91028781700 | Z8245               |
| Electrolux | 90721540100 | Z 1955              |
| Electrolux | 90315165402 | ZSC6941             |
| Electrolux | 91028673700 | Z 3324              |
| Electrolux | 90315222000 | UPGREEN             |
| Electrolux | 90315140900 | ZUS3930             |
| Electrolux | 90027391600 | ZUF4202OR           |
| Electrolux | 90315170602 | ZJM6820KRH          |
| Electrolux | 90027364800 | ZUSGREEN            |
| Electrolux | 91028611400 | ZE2430              |
| Electrolux | 91028751800 | Z7520               |
| Electrolux | 90027396900 | ZUF4301OR           |
| Electrolux | 90315191400 | ZSC2200FD           |
| Electrolux | 90315154200 | ZJM6810BRA          |
| Electrolux | 91028678000 | ZUS3383             |
| Electrolux | 90727510100 | Z5561 SCARAB GREEN  |
| Electrolux | 91028665200 | ZAM 6109            |
| Electrolux | 90315156900 | ZJM6835             |
| Electrolux | 91028796900 | ZVQ2105             |
| Electrolux | 90315147300 | ZUSG3901            |
| Electrolux | 91028679800 | ZUS3383             |
| Electrolux | 9102868500  | Z5920CP             |
| Electrolux | 90027366303 | ZUS3925DB           |
| Electrolux | 90727590100 | Z5558A SCARAB GREEN |
| Electrolux | 90315141600 | ZUSG3900            |
| Electrolux | 91028661500 | ZAM 6102            |
| Electrolux | 90027401200 | ZE357               |
| Electrolux | 91028882800 | AUS4090EX           |
| Electrolux | 90315131400 | ZUA3820P            |
| Electrolux | 90727500100 | Z5551 PETROL BLUE   |
| Electrolux | 91028884500 | ZCS2001             |
| Electrolux | 90315163500 | ZSC6912 CVM         |
| Electrolux | 90315191000 | SUP11               |
| Electrolux | 91028781500 | Z8225               |
| Electrolux | 90727050100 | Z 5560              |
| Electrolux | 90315145601 | ZUS3932B            |
| Electrolux | 90315136700 | ZUP3860C            |
| Electrolux | 91028885800 | ZCS2100W            |
| Electrolux | 90315155301 | EL4040A             |
| Electrolux | 91028806100 | XXL160              |
| Electrolux | 90315156201 | ZJM68SP             |
| Electrolux | 90315155300 | EL4040A             |
| Electrolux | 91028787200 | Z8280               |

|            |             |            |
|------------|-------------|------------|
| Electrolux | 90315103901 | ZEG301     |
| Electrolux | 90027364700 | ZUSENERGY  |
| Electrolux | 90315135200 | ZUA3821P   |
| Electrolux | 90315135600 | ZUP3820B   |
| Electrolux | 90315135700 | ZUP3820BP  |
| Electrolux | 90315136000 | ZUP3820GP  |
| Electrolux | 91028663201 | ZAM6106    |
| Electrolux | 91028679300 | ZUS3388    |
| Electrolux | 90315101601 | ZE341      |
| Electrolux | 91028782500 | Z8228      |
| Electrolux | 91028782400 | Z8215      |
| Electrolux | 90315101101 | ZE355      |
| Electrolux | 90315101001 | ZE350      |
| Electrolux | 91028782000 | Z8245      |
| Electrolux | 91028781600 | Z8235      |
| Electrolux | 91028780400 | Z8215      |
| Electrolux | 90315104300 | ZEG301     |
| Electrolux | 90315133900 | ZUAG3800   |
| Electrolux | 90315134100 | ZUAG3801   |
| Electrolux | 91028773800 | ZV1040     |
| Electrolux | 90315134000 | ZUAG3801   |
| Electrolux | 90315139300 | ZUA3841    |
| Electrolux | 90315139301 | ZUA3841    |
| Electrolux | 90315139700 | ZUP3830    |
| Electrolux | 91028677100 | Z3380TED   |
| Electrolux | 91028660902 | ZCX6201    |
| Electrolux | 91028661001 | ZCX6202    |
| Electrolux | 91028695800 | ZG8800     |
| Electrolux | 90315137900 | ZUA3840CKR |
| Electrolux | 90315138000 | ZUA3840P   |
| Electrolux | 90315138100 | ZUPG3801   |
| Electrolux | 90315138500 | ZUA3822    |
| Electrolux | 91028800300 | XXL60      |
| Electrolux | 91028802100 | XXL60      |
| Electrolux | 91028802200 | XXL73      |
| Electrolux | 90315105701 | ZE340B     |
| Electrolux | 90315105801 | ZE346B     |
| Electrolux | 90027411100 | JMFLOORPRO |
| Electrolux | 90027411000 | JMGREEN    |
| Electrolux | 90027402700 | ESANIMAL+  |
| Electrolux | 90027410201 | JMALLFLR+  |
| Electrolux | 90027403100 | ZE360PT    |
| Electrolux | 90027410200 | JMALLFLR+  |
| Electrolux | 90027401500 | ZE358      |
| Electrolux | 90027401100 | ZE337      |
| Electrolux | 90027401400 | ZE338      |
| Electrolux | 90027400300 | ESPARKETTO |
| Electrolux | 90027429000 | ZSP4302PP  |

|            |             |            |
|------------|-------------|------------|
| Electrolux | 90027401101 | ZE337      |
| Electrolux | 90027396300 | ZUF4206IW  |
| Electrolux | 90027424800 | ZSP4302S   |
| Electrolux | 90027424700 | ZSP4301OR  |
| Electrolux | 90027424000 | ZSP4304PP  |
| Electrolux | 90027423900 | ZSP4303AF  |
| Electrolux | 90027423600 | ZSP4304PP  |
| Electrolux | 90027423500 | ZSP4303PET |
| Electrolux | 90027424900 | ZSP4303AF  |
| Electrolux | 90027422700 | CYC01      |
| Electrolux | 90027423800 | ZSP4303AF  |
| Electrolux | 90027422900 | CYC01      |
| Electrolux | 90027422800 | CYC01      |
| Electrolux | 90027423400 | ZSP4304PP  |
| Electrolux | 91028881500 | ZUS3385AUS |
| Electrolux | 90315163901 | ZSC6930    |
| Electrolux | 91028881600 | ZU3386AUS  |
| Electrolux | 91028881800 | ZUS3390T   |
| Electrolux | 90315165201 | ZSC6910    |
| Electrolux | 91028880100 | ZUS3394    |
| Electrolux | 90315163401 | SUPER      |
| Electrolux | 90315163501 | SUPER      |
| Electrolux | 90315152503 | ZJM6840    |
| Electrolux | 90315152504 | ZJM6840    |
| Electrolux | 90315162005 | ZSC6940    |
| Electrolux | 90315152501 | ZJM6840    |
| Electrolux | 91028882500 | ZUS3385JPN |
| Electrolux | 90315165401 | ZSC6941    |
| Electrolux | 91028883200 | EL6984A    |
| Electrolux | 90315162003 | ZSC6940    |
| Electrolux | 91028881100 | Z3363      |
| Electrolux | 91028881200 | Z3371      |
| Electrolux | 90027366503 | ZUS3945WR  |
| Electrolux | 90027366504 | ZUS3945WR  |
| Electrolux | 90315157700 | ZJM68CUP   |
| Electrolux | 90315157701 | ZJM68CUP   |
| Electrolux | 90027366401 | ZUS3935CB  |
| Electrolux | 91028751400 | Z 7520     |
| Electrolux | 90027366300 | ZUS3925DB  |
| Electrolux | 90315157000 | ZJM6810BRA |
| Electrolux | 90027366501 | ZUS3945WR  |
| Electrolux | 90027366502 | ZUS3945WR  |
| Electrolux | 90315156902 | ZJM6835    |
| Electrolux | 90315156000 | EL4040AZ   |
| Electrolux | 90027366400 | ZUS3935CB  |
| Electrolux | 90315155900 | ZJG6800    |
| Electrolux | 90027365100 | ZUSORIGINB |
| Electrolux | 90315156901 | ZJM6835    |

|            |             |            |
|------------|-------------|------------|
| Electrolux | 90027365103 | ZUSORIGINB |
| Electrolux | 90027365600 | ZUSORIGINR |
| Electrolux | 90315156200 | ZJM68SP    |
| Electrolux | 90027365500 | ZUSORIGINT |
| Electrolux | 90315155200 | ZJG6800    |
| Electrolux | 90315154300 | ZJM6810    |
| Electrolux | 91028673600 | Z 3362     |
| Electrolux | 90315170101 | ZJM68FD1   |
| Electrolux | 90315170600 | ZJM6820KRH |
| Electrolux | 91028674000 | Z 3375     |
| Electrolux | 90315105901 | ZE325R     |
| Electrolux | 91028674300 | Z 3366 P   |
| Electrolux | 91028673800 | Z 3366     |
| Electrolux | 91028673900 | Z 3373 TED |
| Electrolux | 90315165400 | ZSC6941    |
| Electrolux | 90315165700 | ZSC6940    |
| Electrolux | 90315165200 | ZSC6910    |
| Electrolux | 90740130101 | Z 5920     |
| Electrolux | 90315165300 | ZSC6920    |
| Electrolux | 90315164700 | ZSC6911BRA |
| Electrolux | 91028693000 | EL7070     |
| Electrolux | 90315164000 | ZSC6940CNM |
| Electrolux | 90739270101 | Z 3347     |
| Electrolux | 90315162002 | ZSC6940    |
| Electrolux | 90315190800 | ZSC69FD2   |
| Electrolux | 90315190700 | ZSC69FD2   |
| Electrolux | 90315171600 | ZJM2200FD  |
| Electrolux | 90315171500 | ZJM68FD1   |
| Electrolux | 90315171300 | ZJM6820KRH |
| Electrolux | 90739660100 | Z 3351 CA  |
| Electrolux | 90739810100 | Z 3363 ES  |
| Electrolux | 90739790100 | Z 3379     |
| Electrolux | 90739830100 | Z 3371     |
| Electrolux | 90739840100 | Z 3368     |
| Electrolux | 90739750100 | Z 3372     |
| Electrolux | 90739780100 | Z 3366 SCH |
| Electrolux | 91028675800 | Z3332      |
| Electrolux | 90742320100 | Z 5935 CP  |
| Electrolux | 90742260100 | Z5942CT    |
| Electrolux | 90315109000 | ZE346DB    |
| Electrolux | 90315108400 | ZE346DB    |
| Electrolux | 90315108700 | ZE346A     |
| Electrolux | 91028773900 | ZV1030     |
| Electrolux | 90315108100 | ZE351SSC   |
| Electrolux | 90315108300 | ZE331A     |
| Electrolux | 90315107800 | ZE347 DUST |
| Electrolux | 90315107600 | EL4101A    |
| Electrolux | 91028751200 | Z7525      |

|            |             |                     |
|------------|-------------|---------------------|
| Electrolux | 91028752300 | Z7525               |
| Electrolux | 91028752000 | Z7520               |
| Electrolux | 90315106500 | ZE341B              |
| Electrolux | 90315107400 | ZE360WP             |
| Electrolux | 90315106600 | ZE351S              |
| Electrolux | 91028684600 | Z5942CT             |
| Electrolux | 91028676100 | Z3381               |
| Electrolux | 91028676000 | Z3371               |
| Electrolux | 91028677300 | Z3372               |
| Electrolux | 91028676700 | Z3369P              |
| Electrolux | 91028676600 | Z3347               |
| Electrolux | 91028674700 | Z3362               |
| Electrolux | 91028674100 | Z3380               |
| Electrolux | 90315168700 | ESC63EBK            |
| Electrolux | 91028675900 | Z3363               |
| Electrolux | 91028675100 | Z3366P              |
| Electrolux | 91028674800 | Z3367               |
| Electrolux | 91028675500 | Z3371W              |
| Electrolux | 91028676500 | Z3347               |
| Electrolux | 91028676200 | Z3378               |
| Electrolux | 90315163900 | ZSC6930             |
| Electrolux | 91028603500 | ZV 1030             |
| Electrolux | 90315162000 | ZSC6940             |
| Electrolux | 90315154600 | ZJM6840             |
| Electrolux | 91028810600 | XXLBOX4F            |
| Electrolux | 91028810500 | XXLBOX1F            |
| Electrolux | 91028810900 | XXLBOX1S            |
| Electrolux | 91028702900 | ZXM7025             |
| Electrolux | 91028701900 | ZXM7030             |
| Electrolux | 91028701700 | ZXM7010             |
| Electrolux | 91028702100 | ZXM7025             |
| Electrolux | 91028702200 | ZXM7035             |
| Electrolux | 90727530100 | Z5561 SCARAB GREEN  |
| Electrolux | 90727470100 | Z5558A SCARAB GREEN |
| Electrolux | 90727520100 | Z5551PETROL BLUE    |
| Electrolux | 90727460100 | Z5550PETROL BLUE    |
| Electrolux | 90727280100 | Z5558 SCARAB GREEN  |
| Electrolux | 90742290100 | Z5915CT             |
| Electrolux | 90727840100 | Z 5551 Petrol Blue  |
| Electrolux | 90727610100 | Z5551 PETROL BLUE   |
| Electrolux | 90727570100 | Z5561 SCARABE GREEN |
| Electrolux | 90727550100 | Z5561 SCARAB GREEN  |
| Electrolux | 90727540100 | Z5551 PETROL BLUE   |
| Electrolux | 90315148400 | ZUS3932WP           |
| Electrolux | 90315148300 | ZUS3932WP           |
| Electrolux | 90315152502 | ZJM6840             |
| Electrolux | 90315145100 | ZUS3922R            |
| Electrolux | 90315145400 | ZUS3932B            |

|            |             |            |
|------------|-------------|------------|
| Electrolux | 90315144900 | ZUS3922B   |
| Electrolux | 90315145200 | ZUS3922G   |
| Electrolux | 90315146400 | ZUS3922R   |
| Electrolux | 90315146500 | ZUS3926    |
| Electrolux | 90315146900 | ZUSG3901   |
| Electrolux | 90315147100 | ZUSG3901   |
| Electrolux | 91028611100 | XXLBOX1    |
| Electrolux | 90315106001 | ZE355R     |
| Electrolux | 90315106101 | ZE360WP    |
| Electrolux | 91028652000 | Z8225      |
| Electrolux | 90027428700 | ZSPG4301   |
| Electrolux | 91028652700 | Z8240      |
| Electrolux | 90027397300 | ZUFG4301OR |
| Electrolux | 91028652200 | Z8245      |
| Electrolux | 91028652100 | Z8235      |
| Electrolux | 91028650500 | Z8230      |
| Electrolux | 91028650700 | Z8215      |
| Electrolux | 91028650600 | Z8240      |
| Electrolux | 90315155901 | ZJG6800    |
| Electrolux | 90315220000 | ZUAG3802KR |
| Electrolux | 90315220200 | EL4307A    |
| Electrolux | 90315155201 | ZJG6800    |
| Electrolux | 90315220700 | ULA10      |
| Electrolux | 90315220300 | ZUA3822R   |
| Electrolux | 90027366302 | ZUS3925DB  |
| Electrolux | 90315221300 | ZUP3862P   |
| Electrolux | 90315154601 | ZJM6840    |
| Electrolux | 90315221800 | UPALLFLOOR |
| Electrolux | 90315148700 | APORIGIN   |
| Electrolux | 90315148501 | USR21      |
| Electrolux | 90315221700 | UPORIGIN   |
| Electrolux | 90315148600 | APORIGIN   |
| Electrolux | 90315221400 | ZUPG3802   |
| Electrolux | 90315156202 | ZJM68SP    |
| Electrolux | 90315221600 | UPCLASSIC  |
| Electrolux | 90315156001 | EL4040AZ   |
| Electrolux | 90315190600 | ZSC69FD2CH |
| Electrolux | 90027399500 | ZUF4302BED |
| Electrolux | 90315191300 | ZSC69FD3   |
| Electrolux | 90315109001 | ZE346DB    |
| Electrolux | 90027398000 | ZUF4303REM |
| Electrolux | 90315146502 | ZUS3926    |
| Electrolux | 90027425700 | ZSPG4301   |
| Electrolux | 90315146501 | ZUS3926    |
| Electrolux | 90315191200 | SUP11      |
| Electrolux | 90315108101 | ZE361SSC   |
| Electrolux | 90315108701 | ZE346A     |
| Electrolux | 90315108201 | ZE305SPC   |

|            |             |            |
|------------|-------------|------------|
| Electrolux | 90315109602 | ZE357      |
| Electrolux | 90315171602 | ZJM2200FD  |
| Electrolux | 90315171601 | ZJM2200FD  |
| Electrolux | 90315171301 | ZJM6820KRH |
| Electrolux | 90315171700 | JMORIGINFD |
| Electrolux | 90027363000 | ZUS4065OR  |
| Electrolux | 90315171701 | JMORIGINFD |
| Electrolux | 90315170102 | ZJM68FD1   |
| Electrolux | 90027363600 | USG30      |
| Electrolux | 90027364200 | ZUS3935CB  |
| Electrolux | 90315166400 | SCPARKETTO |
| Electrolux | 90315106100 | ZE360WP    |
| Electrolux | 90315106000 | ZE355R     |
| Electrolux | 90315105900 | ZE325R     |
| Electrolux | 90315105800 | ZE346B     |
| Electrolux | 90315105700 | ZE340B     |
| Electrolux | 90315158400 | JMFOOTBALL |
| Electrolux | 90315103900 | ZEG301     |
| Electrolux | 90315158600 | JMALLFLOOR |
| Electrolux | 90315158700 | JMANIMAL   |
| Electrolux | 90315159100 | JMANIMAL   |
| Electrolux | 90315154201 | ZJM6810BRA |
| Electrolux | 90027360500 | USORIGINDB |
| Electrolux | 90315153801 | ZJG6800    |
| Electrolux | 90315154301 | ZJM6810    |
| Electrolux | 90027360900 | USORIGINWR |
| Electrolux | 91028889500 | ZCS2400    |
| Electrolux | 91028887100 | ZCS2000EL  |
| Electrolux | 91028885301 | ZCS2100B   |
| Electrolux | 91028887800 | ZCS2220BEL |
| Electrolux | 91028889100 | ZCS2100WEL |
| Electrolux | 90315191800 | ZSC2200FD  |
| Electrolux | 90315191700 | ZSC69FDE   |
| Electrolux | 90315191402 | ZSC2200FD  |
| Electrolux | 90315191001 | SUP11      |
| Electrolux | 90315191401 | ZSC2200FD  |
| Electrolux | 90315191301 | ZSC69FD3   |
| Electrolux | 90315191500 | ZSC69FDT   |
| Electrolux | 91028640900 | Z 7520     |
| Electrolux | 91028641600 | Z 7525     |
| Electrolux | 90739270100 | Z 3347     |
| Electrolux | 91028850000 | XXLTT11    |
| Electrolux | 91028850100 | XXLTT14    |
| Electrolux | 91028662800 | ZAM 6103   |
| Electrolux | 91028663200 | ZAM 6106   |
| Electrolux | 91028641800 | Z 7520     |
| Electrolux | 91028665100 | ZAM 6108   |
| Electrolux | 91028666300 | ZAM 6104   |

|            |             |                 |
|------------|-------------|-----------------|
| Electrolux | 91028666200 | ZAM 6103        |
| Electrolux | 91028666700 | ZAM 6103        |
| Electrolux | 91028666600 | ZAM 6103        |
| Electrolux | 91028663600 | ZAM 6107        |
| Electrolux | 91028493300 | ZVQ 2104        |
| Electrolux | 90739810200 | Z3363           |
| Electrolux | 90727070100 | Z 5525          |
| Electrolux | 90727060100 | Z 5520          |
| Electrolux | 91028881400 | Z3375           |
| Electrolux | 90727230100 | Z 5530          |
| Electrolux | 90723061200 | Excellio Z 5245 |
| Electrolux | 90027360100 | USENERGY        |
| Electrolux | 90315143900 | ZUS3930         |
| Electrolux | 90315143200 | EL7066A         |
| Electrolux | 90315142100 | ZUS3930         |
| Electrolux | 90315140600 | ZUS3920         |
| Electrolux | 90315153800 | ZJG6800         |
| Electrolux | 91028771800 | ZV1040          |
| Electrolux | 90027366301 | ZUS3925DB       |
| Electrolux | 90315140100 | ZUS3920         |
| Electrolux | 90315132800 | ZUA3821         |
| Electrolux | 90315132700 | ZUA3820         |
| Electrolux | 90315134200 | ZUAG3801        |
| Electrolux | 91028771700 | ZV 1020         |
| Electrolux | 90315133700 | ZUA3815         |
| Electrolux | 90727220100 | Z5535 SILKRED   |
| Electrolux | 90727040100 | Z 5550          |
| Electrolux | 90730070100 | Z5810T          |
| Electrolux | 91028674500 | Z3376M          |
| Electrolux | 91028674900 | Z3372M          |
| Electrolux | 91028678700 | ZUS3388         |
| Electrolux | 91028678200 | ZUS3386P        |
| Electrolux | 91028481500 | XXL 42          |
| Electrolux | 91028677900 | ZUS3359P        |
| Electrolux | 91028678300 | ZUS3385P        |
| Electrolux | 91028678400 | ZUS3391         |
| Electrolux | 91028676800 | Z3372           |
| Electrolux | 91028677400 | Z3377           |
| Electrolux | 91028677000 | Z3361           |
| Electrolux | 91028488400 | XXL 73          |
| Electrolux | 90315102200 | ZEG300          |
| Electrolux | 91028488300 | XXL 60          |
| Electrolux | 90315103000 | ZEG300          |
| Electrolux | 90315102100 | ZE320           |
| Electrolux | 90315102000 | ZE340           |
| Electrolux | 90315101800 | ZE350           |
| Electrolux | 90315101900 | ZE G300         |
| Electrolux | 90315101500 | ZE351           |

|            |             |                 |
|------------|-------------|-----------------|
| Electrolux | 90315101700 | ZE340           |
| Electrolux | 91028677700 | ZUS 3336        |
| Electrolux | 91028679400 | ZUS 3336        |
| Electrolux | 90315130900 | ZUA3810P        |
| Electrolux | 90315110700 | ZCX6317         |
| Electrolux | 90723031100 | Z 5225          |
| Electrolux | 90027391900 | ZUF4204REM      |
| Electrolux | 90027390400 | UFFLEX          |
| Electrolux | 90027391300 | ZUF4201OR       |
| Electrolux | 90027390000 | UFORIGIN        |
| Electrolux | 90027390200 | UFANIMAL        |
| Electrolux | 90027390001 | UFORIGIN        |
| Electrolux | 90027390300 | UFFLEXA         |
| Electrolux | 90315101600 | ZE341           |
| Electrolux | 90315101100 | ZE355           |
| Electrolux | 90315100900 | ZE345           |
| Electrolux | 90315101000 | ZE350           |
| Electrolux | 91028877200 | ZAM 6240        |
| Electrolux | 91028877201 | ZAM 6240        |
| Electrolux | 91028877601 | ZAM 6250        |
| Electrolux | 91028877500 | ZAM 6270        |
| Electrolux | 91028877600 | ZAM 6250        |
| Electrolux | 91028877400 | ZAM 6260        |
| Electrolux | 91028877401 | ZAM 6260        |
| Electrolux | 91028877900 | ZCX 6420        |
| Electrolux | 91028877901 | ZCX 6420        |
| Electrolux | 91028878400 | ZCX 6470        |
| Electrolux | 90315221601 | UPCLASSIC       |
| Electrolux | 90027394900 | ZUFG4201OR      |
| Electrolux | 90027394400 | ZUF4202EU       |
| Electrolux | 90739760100 | Z3376           |
| Electrolux | 90027393500 | ZUF4202OR       |
| Electrolux | 90027391700 | ZUF4202OR       |
| Electrolux | 90315130500 | ZUA3830P        |
| Electrolux | 91028871400 | ZAM 6105 BB     |
| Electrolux | 91028871500 | ZCX 6207        |
| Electrolux | 91028872800 | ZCX 6202        |
| Electrolux | 91028873700 | ZAM 6102 T      |
| Electrolux | 91028873500 | ZAM 6103        |
| Electrolux | 91028684300 | Z5942CT         |
| Electrolux | 91028875200 | ZAM 6103 EC     |
| Electrolux | 91028679600 | ZUS3396         |
| Electrolux | 91028678500 | ZUS3359P        |
| Electrolux | 91028679200 | ZUS3385P        |
| Electrolux | 91028678900 | ZUS3383         |
| Electrolux | 91028691000 | Z8860           |
| Electrolux | 91028832500 | ZAC 6717 AUS    |
| Electrolux | 91028750700 | Z 7520 Parketto |

|            |             |                  |
|------------|-------------|------------------|
| Electrolux | 91028750200 | Z 7520           |
| Electrolux | 90727160100 | Z5520 PIST.GREEN |
| Electrolux | 91028661000 | ZCX 6202         |
| Electrolux | 91028661100 | ZCX 6203         |
| Electrolux | 91028661200 | ZCX 6204         |
| Electrolux | 91028666400 | ZCX 6201         |
| Electrolux | 91028666500 | ZCX 6201         |
| Electrolux | 91028886800 | ZCS2540CS        |
| Electrolux | 91028669200 | ZAM 6103 B B     |
| Electrolux | 91028669300 | ZAM 6103 CV      |
| Electrolux | 91028669100 | ZAM 6103 BRA     |
| Electrolux | 91028886100 | ZCS2000DS        |
| Electrolux | 91028886500 | ZCS2240CS        |
| Electrolux | 90315133500 | ZUA3840P         |
| Electrolux | 90315132400 | ZUA3860P         |
| Electrolux | 91028887000 | ZCS2014PNK       |
| Electrolux | 90315132500 | ZUA3840          |
| Electrolux | 90315132200 | ZUA3860          |
| Electrolux | 90315132000 | ZUA3830P         |
| Electrolux | 90315132100 | ZUA3840          |
| Electrolux | 90315132600 | ZUA3840          |
| Electrolux | 90315131000 | ZUAG3800         |
| Electrolux | 90315131800 | ZUA3830P         |
| Electrolux | 90315110701 | ZCX 6317         |
| Electrolux | 91028811400 | XXLBOX12         |
| Electrolux | 91028886700 | ZCS2520B         |
| Electrolux | 90315120700 | ZAMG 6200        |
| Electrolux | 90315120200 | ZAM 6271         |
| Electrolux | 91028883700 | ZCS2100          |
| Electrolux | 91028880500 | ZUS3359P         |
| Electrolux | 90315120100 | ZAM 6221         |
| Electrolux | 91028883600 | ZCS2000          |
| Electrolux | 91028811200 | XXLBOX14         |
| Electrolux | 91028884200 | ZCS2000P         |
| Electrolux | 91028882900 | ZUSG3000         |
| Electrolux | 91028806700 | XXL160           |
| Electrolux | 91028806300 | XXL170           |
| Electrolux | 90315131600 | ZUAG3800         |
| Electrolux | 91028850002 | XXLTT11          |
| Electrolux | 90315131700 | ZUA3810          |
| Electrolux | 90315122500 | ZAM 6290         |
| Electrolux | 91028850001 | XXLTT11          |
| Electrolux | 90315131500 | ZUA3830PT        |
| Electrolux | 90315130200 | ZUA3810          |
| Electrolux | 91028885000 | ZCS2100          |
| Electrolux | 91028884900 | ZCS2000          |
| Electrolux | 91028885500 | ZCS2100FB        |
| Electrolux | 91028885900 | ZCS2000CS        |

|            |             |                    |
|------------|-------------|--------------------|
| Electrolux | 91028811500 | XXLBOX17           |
| Electrolux | 91028885300 | ZCS2100B           |
| Electrolux | 91028811600 | XXLBOX16           |
| Electrolux | 91028811800 | XXLBOX12L          |
| Electrolux | 90742310100 | Z 5920 C           |
| Electrolux | 90742240100 | Z 5920 CP          |
| Electrolux | 91028785700 | Z8254              |
| Electrolux | 91028787100 | EL7057A            |
| Electrolux | 91028786900 | Z8277              |
| Electrolux | 91028786500 | Z8268              |
| Electrolux | 90742330100 | Z 5942 CT          |
| Electrolux | 91028785200 | Z8265              |
| Electrolux | 91028805300 | XXL141             |
| Electrolux | 91028804800 | XXL160             |
| Electrolux | 91028804700 | XXL150             |
| Electrolux | 90727330100 | Z5515 WHEAT YELLOW |
| Electrolux | 91028684100 | Z 5920 C           |
| Electrolux | 91028684700 | Z 5922 CP          |
| Electrolux | 91028682400 | Z 5920 CP          |
| Electrolux | 91028785400 | Z8270              |
| Electrolux | 91028785000 | Z8255              |
| Electrolux | 91028785600 | Z8280              |
| Electrolux | 91028784800 | Z8280              |
| Electrolux | 91028784600 | Z8266              |
| Electrolux | 91028784700 | Z8273              |
| Electrolux | 91028803700 | XXL 43 T           |
| Electrolux | 90025863200 | EB61A5UG           |
| Electrolux | 90025863300 | EB61A5UG           |
| Electrolux | 90025863400 | EB61A6UG           |
| Electrolux | 90025863500 | EB61H6SW           |
| Electrolux | 90025863600 | EB61H6SW           |
| Electrolux | 90025864500 | EB61A4UG           |
| Essentielb | 91028888700 | EAT1251            |
| Essentielb | 91028888600 | EAT1802            |
| MioStar    | 90315165101 | VAC200             |
| MioStar    | 90315157300 | VAC100SB           |
| MioStar    | 90315155801 | VAC200             |
| MioStar    | 91028602000 | VAC 8700           |
| MioStar    | 90315171200 | VAC125             |
| MioStar    | 91028663700 | VAC 5500           |
| MioStar    | 91028873200 | VAC 4900           |
| MioStar    | 90315157102 | VAC200SP           |
| MioStar    | 91028870800 | VAC 4800 BB        |
| MioStar    | 91028669701 | VAC5600            |
| MioStar    | 90315155700 | VAC100             |
| MioStar    | 90315165102 | VAC200             |
| MioStar    | 90315157100 | VAC200SP           |
| MioStar    | 90315155800 | VAC200             |

|         |             |              |
|---------|-------------|--------------|
| MioStar | 90315165100 | VAC200       |
| MioStar | 91028602100 | VAC 8900     |
| MioStar | 90315155802 | VAC200       |
| MioStar | 90315155701 | VAC100       |
| MioStar | 90315155702 | VAC100       |
| MioStar | 90315157302 | VAC100SB     |
| MioStar | 91028877700 | VAC White    |
| MioStar | 91028701500 | VAC8800      |
| MioStar | 91028661800 | VAC 4800     |
| MioStar | 91028669700 | VAC 5600     |
| MioStar | 91028773500 | VAC 8700     |
| MioStar | 90315110800 | VAC 5550     |
| MioStar | 90315121100 | VAC 3000 Eco |
| MioStar | 90315120500 | VAC 4810     |
| PHILIPS | FC9150/01   | Performer    |
| PHILIPS | FC9202/03   | Marathon     |
| PHILIPS | FC9154/01   | Performer    |
| PHILIPS | FC9176/01   | Performer    |
| PHILIPS | FC8764/11   | PowerPro     |
| PHILIPS | FC9206/01   | Marathon     |
| PHILIPS | FC8763/01   | PowerPro     |
| PHILIPS | FC9172/02   | Performer    |
| PHILIPS | FC9219/01   | Marathon     |
| PHILIPS | FC9204/01   | Marathon     |
| PHILIPS | FC8761/72   | PowerPro     |
| PHILIPS | FC9312/01   | SilentStar   |
| PHILIPS | FC9062/01   | Jewel        |
| PHILIPS | FC9200/01   | Marathon     |
| PHILIPS | FC8767/02   | PowerPro     |
| PHILIPS | FC9177/01   | Performer    |
| PHILIPS | FC9226/01   | Marathon     |
| PHILIPS | FC9178/01   | Performer    |
| PHILIPS | FC9170/07   | Performer    |
| PHILIPS | FC9208/01   | Marathon     |
| PHILIPS | FC9153/11   | Performer    |
| PHILIPS | FC9179/03   | Performer    |
| PHILIPS | FC9226/02   | Marathon     |
| PHILIPS | FC9172/01   | Performer    |
| PHILIPS | FC9216/01   | Marathon     |
| PHILIPS | FC9216/04   | Marathon     |
| PHILIPS | FC8766/01   | PowerPro     |
| PHILIPS | FC9218/03   | Marathon     |
| PHILIPS | FC9060/02   | Jewel        |
| PHILIPS | FC9236/03   | Marathon     |
| PHILIPS | FC9170/08   | Performer    |
| PHILIPS | FC9064/02   | Jewel        |
| PHILIPS | FC9150/09   | Performer    |
| PHILIPS | FC8764/01   | PowerPro     |

|         |           |                  |
|---------|-----------|------------------|
| PHILIPS | FC9153/01 | Performer        |
| PHILIPS | FC9176/02 | Performer        |
| PHILIPS | FC9222/02 | Marathon         |
| PHILIPS | FC8724/09 | Performer Expert |
| PHILIPS | FC9306/01 | SilentStar       |
| PHILIPS | FC9170/03 | Performer        |
| PHILIPS | FC9202/01 | Marathon         |
| PHILIPS | FC9172/67 | Performer        |
| PHILIPS | FC9218/01 | Marathon         |
| PHILIPS | FC9173/01 | Performer        |
| PHILIPS | FC9304/01 | SilentStar       |
| PHILIPS | FC9212/01 | Marathon         |
| PHILIPS | FC9208/02 | Marathon         |
| PHILIPS | FC8952/01 | AquaAction       |
| PHILIPS | FC9175/03 | Performer        |
| PHILIPS | FC8764/61 | PowerPro         |
| PHILIPS | FC9153/08 | Performer        |
| PHILIPS | FC8769/91 | PowerPro         |
| PHILIPS | FC9150/02 | Performer        |
| PHILIPS | FC9206/04 | Marathon         |
| PHILIPS | FC8761/01 | PowerPro         |
| PHILIPS | FC9179/01 | Performer        |
| PHILIPS | FC9175/02 | Performer        |
| PHILIPS | FC9172/07 | Performer        |
| PHILIPS | FC9232/01 | Marathon         |
| PHILIPS | FC8768/01 | PowerPro         |
| PHILIPS | FC9204/02 | Marathon         |
| PHILIPS | FC9170/01 | Performer        |
| PHILIPS | FC9210/01 | Marathon         |
| PHILIPS | FC9064/03 | Jewel            |
| PHILIPS | FC9206/02 | Marathon         |
| PHILIPS | FC9236/01 | Marathon         |
| PHILIPS | FC9206/03 | Marathon         |
| PHILIPS | FC9174/08 | Performer        |
| PHILIPS | FC9171/01 | Performer        |
| PHILIPS | FC9214/01 | Marathon         |
| PHILIPS | FC9222/01 | Marathon         |
| PHILIPS | FC8769/01 | PowerPro         |
| PHILIPS | FC9061/01 | Jewel            |
| PHILIPS | FC9202/02 | Marathon         |
| PHILIPS | FC9172/03 | Performer        |
| PHILIPS | FC9060/01 | Jewel            |
| PHILIPS | FC9209/01 | Marathon         |
| PHILIPS | FC9170/09 | Performer        |
| PHILIPS | FC9218/02 | Marathon         |
| PHILIPS | FC9302/02 | SilentStar       |
| PHILIPS | FC9175/01 | Performer        |
| PHILIPS | FC9062/04 | Jewel            |

|         |           |            |
|---------|-----------|------------|
| PHILIPS | FC9310/02 | SilentStar |
| PHILIPS | FC9236/02 | Marathon   |
| PHILIPS | FC9174/02 | Performer  |
| PHILIPS | FC8950/61 | AquaAction |
| PHILIPS | FC8760/01 | PowerPro   |
| PHILIPS | FC8950/01 | AquaAction |
| PHILIPS | FC9178/03 | Performer  |
| PHILIPS | FC9160/01 | Performer  |
| PHILIPS | FC9174/01 | Performer  |
| PHILIPS | FC9170/02 | Performer  |
| PHILIPS | FC9302/01 | SilentStar |
| PHILIPS | FC9064/01 | Jewel      |
| PHILIPS | FC9179/91 | Performer  |
| PHILIPS | FC8767/01 | PowerPro   |
| PHILIPS | FC9310/01 | SilentStar |
| PHILIPS | FC9176/08 | Performer  |
| PHILIPS | FC9225/01 | Marathon   |
| PHILIPS | FC9175/91 | Performer  |
| PHILIPS | FC9205/01 | Marathon   |
| PHILIPS | FC9089/01 | Studio     |
| PHILIPS | FC9088/01 | Studio     |
| PHILIPS | FC9088/03 | Studio     |
| PHILIPS | FC9088/02 | Studio     |
| PHILIPS | FC9087/01 | Studio     |
| PHILIPS | FC9086/01 | Studio     |
| PHILIPS | FC9085/01 | Studio     |
| PHILIPS | FC9084/02 | Studio     |
| PHILIPS | FC9084/01 | Studio     |
| PHILIPS | FC9083/01 | Studio     |
| PHILIPS | FC9082/02 | Studio     |
| PHILIPS | FC9082/01 | Studio     |
| PHILIPS | FC9081/01 | Studio     |
| PHILIPS | FC9080/01 | Studio     |
| PHILIPS | FC9078/01 | Jewel      |
| PHILIPS | FC9076/02 | Jewel      |
| PHILIPS | FC9076/01 | Jewel      |
| PHILIPS | FC9074/01 | Jewel      |
| PHILIPS | FC9073/01 | Jewel      |
| PHILIPS | FC9072/01 | Jewel      |
| PHILIPS | FC9071/03 | Jewel      |
| PHILIPS | FC9071/02 | Jewel      |
| PHILIPS | FC9071/01 | Jewel      |
| PHILIPS | FC9070/01 | Jewel      |
| PHILIPS | FC9067/02 | Jewel      |
| PHILIPS | FC9067/01 | Jewel      |
| PHILIPS | FC9066/99 | Jewel      |
| PHILIPS | FC9066/04 | Jewel      |
| PHILIPS | FC9066/03 | Jewel      |

|         |           |           |
|---------|-----------|-----------|
| PHILIPS | FC9066/02 | Jewel     |
| PHILIPS | FC9066/01 | Jewel     |
| PHILIPS | FC9062/03 | Jewel     |
| PHILIPS | FC9060/99 | Jewel     |
| PHILIPS | FC9057/01 | Jewel     |
| PHILIPS | FC9056/02 | Jewel     |
| PHILIPS | FC9056/01 | Jewel     |
| PHILIPS | FC9054/01 | Jewel     |
| PHILIPS | FC9052/01 | Jewel     |
| PHILIPS | FC9050/01 | Jewel     |
| PHILIPS | FC9027/18 | Universe  |
| PHILIPS | FC9027/09 | Universe  |
| PHILIPS | FC9026/01 | Universe  |
| PHILIPS | FC9025/18 | Universe  |
| PHILIPS | FC9025/09 | Universe  |
| PHILIPS | FC9024/01 | Universe  |
| PHILIPS | FC9023/19 | Universe  |
| PHILIPS | FC9023/18 | Universe  |
| PHILIPS | FC9023/09 | Universe  |
| PHILIPS | FC9022/18 | Universe  |
| PHILIPS | FC9022/01 | Universe  |
| PHILIPS | FC9020/01 | Universe  |
| PHILIPS | FC9019/09 | Universe  |
| PHILIPS | FC9018/18 | Universe  |
| PHILIPS | FC9018/10 | Universe  |
| PHILIPS | FC9018/01 | Universe  |
| PHILIPS | FC9017/30 | Universe  |
| PHILIPS | FC9017/18 | Universe  |
| PHILIPS | FC9017/09 | Universe  |
| PHILIPS | FC9016/01 | Universe  |
| PHILIPS | FC9015/18 | Universe  |
| PHILIPS | FC9015/09 | Universe  |
| PHILIPS | FC9014/18 | Universe  |
| PHILIPS | FC9014/01 | Universe  |
| PHILIPS | FC9012/03 | Universe  |
| PHILIPS | FC9012/01 | Universe  |
| PHILIPS | FC9011/29 | Universe  |
| PHILIPS | FC9011/09 | Universe  |
| PHILIPS | FC9010/09 | Universe  |
| PHILIPS | FC9010/01 | Universe  |
| PHILIPS | FC9180/01 | Performer |
| PHILIPS | FC8734/71 | EasyClean |
| PHILIPS | FC9188/01 | Performer |
| PHILIPS | FC9193/91 | Performer |
| PHILIPS | FC9190/01 | Performer |
| PHILIPS | FC9192/61 | Performer |
| PHILIPS | FC8734/04 | EasyClean |
| PHILIPS | FC9199/02 | Performer |

|         |           |                      |
|---------|-----------|----------------------|
| PHILIPS | FC9199/01 | Performer            |
| PHILIPS | FC8734/03 | EasyClean            |
| PHILIPS | FC8734/01 | EasyClean            |
| PHILIPS | FC9184/01 | Performer            |
| PHILIPS | FC9194/01 | Performer            |
| PHILIPS | FC9192/11 | Performer            |
| PHILIPS | FC9182/01 | Performer            |
| PHILIPS | FC9186/01 | Performer            |
| PHILIPS | FC9185/01 | Performer            |
| PHILIPS | FC9187/01 | Performer            |
| PHILIPS | FC8734/02 | EasyClean            |
| PHILIPS | FC9195/01 | Performer            |
| PHILIPS | FC9196/01 | Performer            |
| PHILIPS | FC9191/91 | Performer            |
| PHILIPS | FC9193/01 | Performer            |
| PHILIPS | FC9192/01 | Performer            |
| PHILIPS | FC9920/09 | PowerPro Ultimate    |
| PHILIPS | FC9920/19 | PowerPro Ultimate    |
| PHILIPS | FC9920/69 | PowerPro Ultimate    |
| PHILIPS | FC9921/09 | PowerPro Ultimate    |
| PHILIPS | FC9922/09 | PowerPro Ultimate    |
| PHILIPS | FC9002/01 | Universe             |
| PHILIPS | FC9006/01 | Universe             |
| PHILIPS | FC9003/17 | Universe             |
| PHILIPS | FC9319    | SilentStar           |
| PHILIPS | FC9000    | Universe             |
| PHILIPS | FC9005    | Universe             |
| PHILIPS | FC9008/01 | Universe             |
| PHILIPS | FC9250    | ErgoFit              |
| PHILIPS | FC9004/03 | Universe             |
| PHILIPS | FC9079/01 | Jewel                |
| PHILIPS | FC9009/18 | Universe             |
| PHILIPS | FC9009/01 | Universe             |
| PHILIPS | FC9007/01 | Universe             |
| PHILIPS | FC9009/09 | Universe             |
| PHILIPS | FC9300    | SilentStar           |
| PHILIPS | FC9239/01 | Marathon (AutoClean) |
| PHILIPS | FC8729    | Performer Expert     |
| PHILIPS | FC9269    | ErgoFit              |
| PHILIPS | FC9001    | Universe             |
| PHILIPS | FC9720/09 | PowerPro Expert      |
| PHILIPS | FC9003/01 | Universe             |
| PHILIPS | FC9004/01 | Universe             |
| PHILIPS | FC9929/09 | PowerPro Ultimate    |
| PHILIPS | FC9729/09 | PowerPro Expert      |
| PHILIPS | FC9911/01 | PowerPro Ultimate    |
| PHILIPS | FC9009/10 | Universe             |
| PHILIPS | FC9008/03 | Universe             |

|          |             |                  |
|----------|-------------|------------------|
| PHILIPS  | FC8724/01   | Performer Expert |
| PHILIPS  | FC8724/19   | Performer Expert |
| PHILIPS  | FC8720/09   | Performer Expert |
| PHILIPS  | FC9729/69   | PowerPro Expert  |
| PHILIPS  | FC9728/01   | PowerPro Expert  |
| PHILIPS  | FC9728/61   | PowerPro Expert  |
| PHILIPS  | FC9732/01   | PowerPro Expert  |
| PHILIPS  | FC9733/01   | PowerPro Expert  |
| PHILIPS  | FC9734/01   | PowerPro Expert  |
| PHILIPS  | FC9721/09   | PowerPro Expert  |
| PHILIPS  | FC9722/09   | PowerPro Expert  |
| PHILIPS  | FC9723/09   | PowerPro Expert  |
| PHILIPS  | FC9724/09   | PowerPro Expert  |
| PHILIPS  | FC9725/09   | PowerPro Expert  |
| PHILIPS  | FC9197/91   | Performer        |
| PHILIPS  | FC8769/19   | PowerPro         |
| PHILIPS  | FC9197/19   | Performer        |
| PHILIPS  | FC9722/19   | PowerPro Expert  |
| PHILIPS  | FC9724/69   | PowerPro Expert  |
| PHILIPS  | FC8766/11   | PowerPro         |
| PHILIPS  | FC9200/11   | Marathon         |
| PHILIPS  | FC9228/01   | Marathon         |
| PHILIPS  | FC9160/02   | Performer        |
| PHILIPS  | FC9171/02   | Performer        |
| PHILIPS  | FC9154/03   | Performer        |
| PROGRESS | 90025753100 | PC1810           |
| PROGRESS | 90025753200 | PC1840           |
| Tornado  | 91028795200 | TO 6630          |
| Tornado  | 90315153700 | TO6830           |
| Tornado  | 90315158000 | TO6840           |
| Tornado  | 91028873800 | TO 6261          |
| Tornado  | 90315122100 | TO 6449          |
| Tornado  | 91028603700 | TO 4625          |
| Tornado  | 90315158001 | TO6840           |
| Tornado  | 90315156502 | TO6830SP         |
| Tornado  | 90315170301 | TO68FD1          |
| Tornado  | 90315123000 | TO6453FB         |
| Tornado  | 90315156500 | TO6830SP         |
| Tornado  | 90315153601 | TO6820           |
| Tornado  | 90315170300 | TO68FD1          |
| Tornado  | 90315190300 | TO69FD2          |
| Tornado  | 90315153702 | TO6830           |
| Tornado  | 90315153602 | TO6820           |
| Tornado  | 90315170302 | TO68FD1          |
| Tornado  | 90315153701 | TO6830           |
| Tornado  | 91028664100 | TO 6440          |
| Tornado  | 91028604300 | TO 4625          |
| Tornado  | 91028496500 | TO 6530          |

|         |             |            |
|---------|-------------|------------|
| Tornado | 91028703100 | TO7010     |
| Tornado | 90315153600 | TO6820     |
| Tornado | 90315171900 | TO68FDEL   |
| Tornado | 91028874300 | TO 6441    |
| Tornado | 91028874400 | TO 6451 CC |
| Tornado | 91028873900 | TO 6271    |
| Tornado | 91028832000 | TO 6725    |
| Tornado | 91028832001 | TO 6725    |
| Tornado | 91028832900 | TO 6726    |
| Tornado | 91028669900 | TO 6450    |
| Tornado | 91028876700 | TO6430CA   |
| Tornado | 90315122300 | TO 6452    |
| Tornado | 91028660200 | TO 6270    |
| Tornado | 91028660201 | TO 6270    |
| Tornado | 91028660100 | TO 6260    |
| Tornado | 91028660101 | TO 6260    |
| Tornado | 91028793900 | TO 6530 N  |
| Tornado | 91028795100 | TO 6620    |
| Tornado | 91028795000 | TO 6610    |
| Volta   | 91028667600 | U 6425 FB  |
| Volta   | 91028875300 | U 6420 CD  |
| Volta   | 91028773400 | U 4630     |
| Volta   | 91028601800 | U 4640     |
| Volta   | 91028700700 | W6030      |
| Volta   | 91028795500 | U 4445     |
| Volta   | 91028796100 | U4450      |
| Volta   | 91028700500 | U7530      |
| Volta   | 91028700400 | U7520      |
| Volta   | 90315157200 | U6830      |
| Volta   | 90315156600 | U6815SP    |
| Volta   | 91028700600 | U7540      |
| Volta   | 90315170800 | U68FD1D    |
| Volta   | 90315157900 | U6810PS    |
| Volta   | 90315170401 | U68FD1     |
| Volta   | 90315170400 | U68FD1     |
| Volta   | 91028494000 | U 4440     |
| Volta   | 90315154800 | U6820R     |
| Volta   | 90315154400 | U6820W     |
| Volta   | 90315162900 | U6920      |
| Volta   | 91028702500 | U7520      |
| Volta   | 91028702600 | U7530FB    |
| Volta   | 91028702800 | U7540      |
| Volta   | 90315154802 | U6820R     |
| Volta   | 90315154801 | U6820R     |
| Volta   | 90315190400 | U69FD2     |
| Volta   | 90315170402 | U68FD1     |
| Volta   | 90315156602 | U6815SP    |
| Volta   | 90315157901 | U6810PS    |

|          |             |           |
|----------|-------------|-----------|
| Volta    | 90315157202 | U6830     |
| Volta    | 90315154402 | U6820W    |
| Volta    | 90315154401 | U6820W    |
| Volta    | 91028771000 | U 4630    |
| Volta    | 91028664400 | U 6430    |
| Volta    | 91028493900 | U 4430    |
| Volta    | 91028496100 | U 4441    |
| Volta    | 91028771100 | U4640     |
| Volta    | 91028879500 | U 6621    |
| Volta    | 90720340100 | 2815      |
| Volta    | 90720370100 | 2835      |
| Volta    | 90720390100 | 2880      |
| Volta    | 91028875400 | U 6640 CD |
| Volta    | 91028875401 | U 6640 CD |
| Volta    | 91028876800 | U 6426    |
| Volta    | 91028876801 | U 6426    |
| Volta    | 91028664800 | U 6630    |
| Volta    | 91028664600 | U 6620    |
| Volta    | 91028667500 | U 6425    |
| Volta    | 91028668400 | U 6620 FB |
| Volta    | 91028792000 | U 4430    |
| Volta    | 91028793500 | U 4441    |
| Volta    | 91028794800 | U 4446    |
| Volta    | 91028794900 | U 4460    |
| Volta    | 91028796000 | U 4461    |
| Werthiem | 91028703700 | W6035     |