

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
Krups	KP1500317Z0	Dolce Gusto Genio
Krups	KP1506E17Z0	Dolce Gusto Genio
Krups	KP1506E27Z0	Dolce Gusto Genio
Krups	KP1506TH7Z0	Dolce Gusto Genio
Krups	KP1508107Z0	Dolce Gusto Genio
Krups	KP1508E27Z0	Dolce Gusto Genio
Krups	KP1509107Z0	Dolce Gusto Genio
Krups	KP1509317Z0	Dolce Gusto Genio
Krups	KP1509CH7Z0	Dolce Gusto Genio
Krups	KP1509E17Z0	Dolce Gusto Genio
Krups	KP1509E27Z0	Dolce Gusto Genio
Krups	KP1500407Z0	Dolce Gusto Genio
Krups	KP1500657Z0	Dolce Gusto Genio
Krups	KP1500TH7Z0	Dolce Gusto Genio
Krups	KP1502317Z0	Dolce Gusto Genio
Krups	KP1502657Z0	Dolce Gusto Genio
Krups	KP1506107Z0	Dolce Gusto Genio
Krups	KP1506317Z0	Dolce Gusto Genio
Krups	KP1506657Z0	Dolce Gusto Genio
Moulinex	PV1509587Z0	Dolce Gusto Genio
Moulinex	PV1500597Z0	Dolce Gusto Genio
Moulinex	PV1506AR7Z0	Dolce Gusto Genio