


MALU 1237

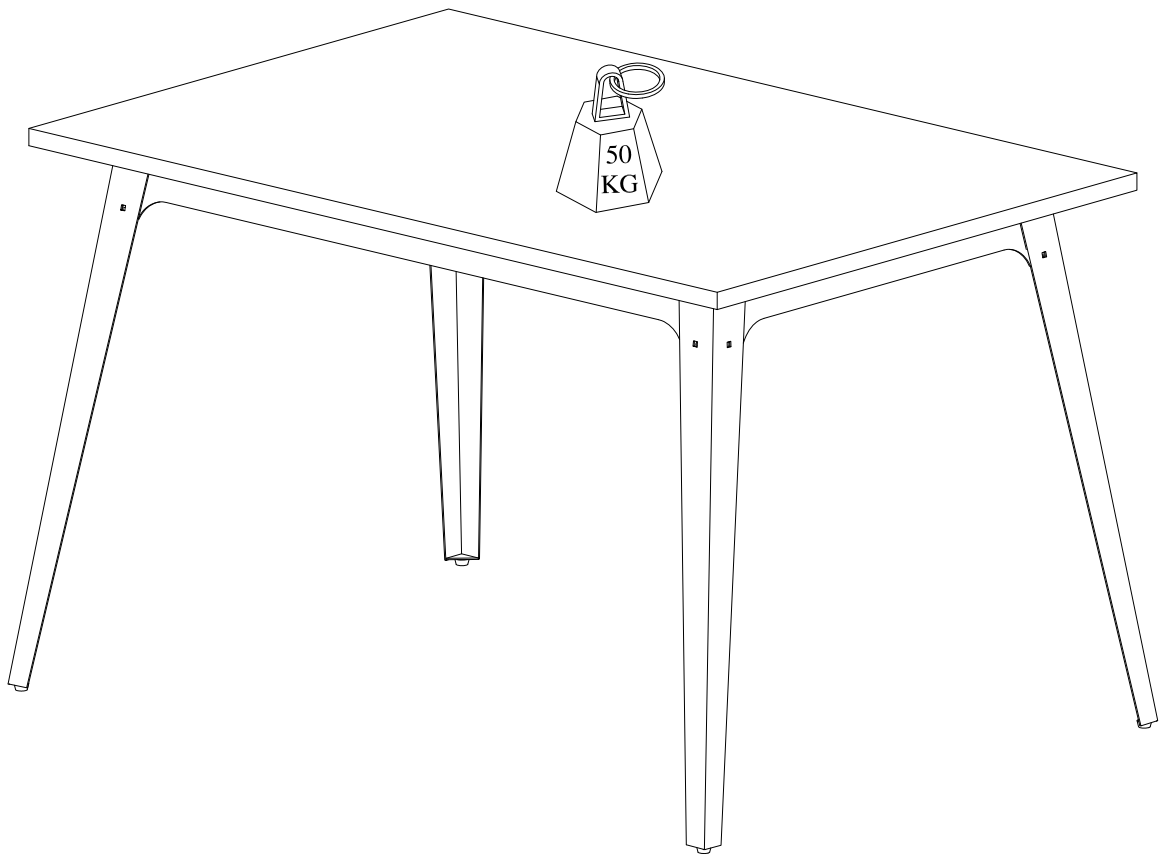




- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) Инструкция по монтажу |

**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**


Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denimire • Ísim • Название

Nr. • No. • N° • Номер • Č • Sz

Tur • Type • Tip • Típus • Тиро
Тип

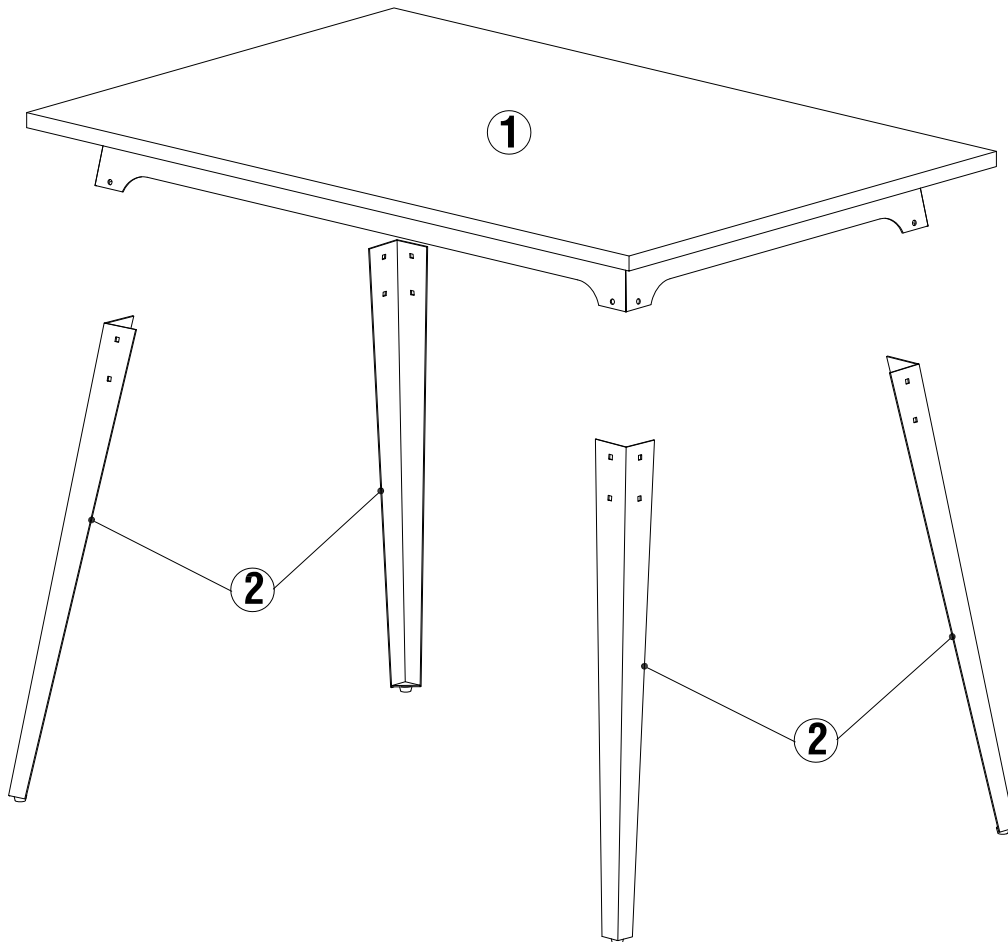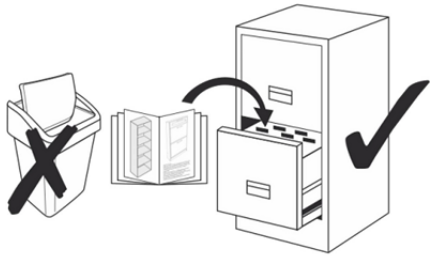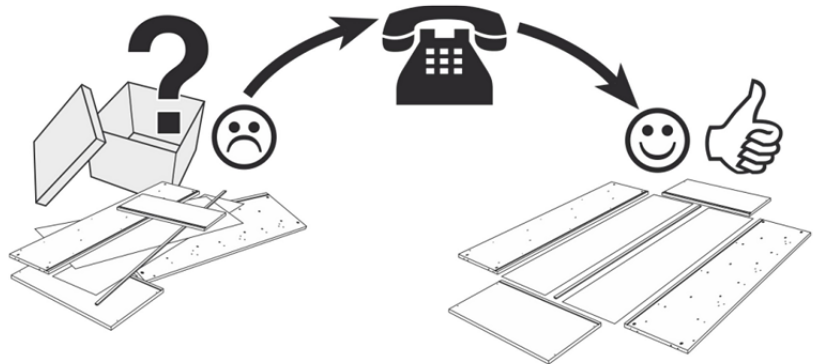

A Ø10: 01 PC

 

B Ø6: 16 PCS



C Ø6: 16 PCS



D Ø6/ Ø13 :16 PCS




 
 


 

E Ø6x15(mm): 16 PCS



F 04 PCS

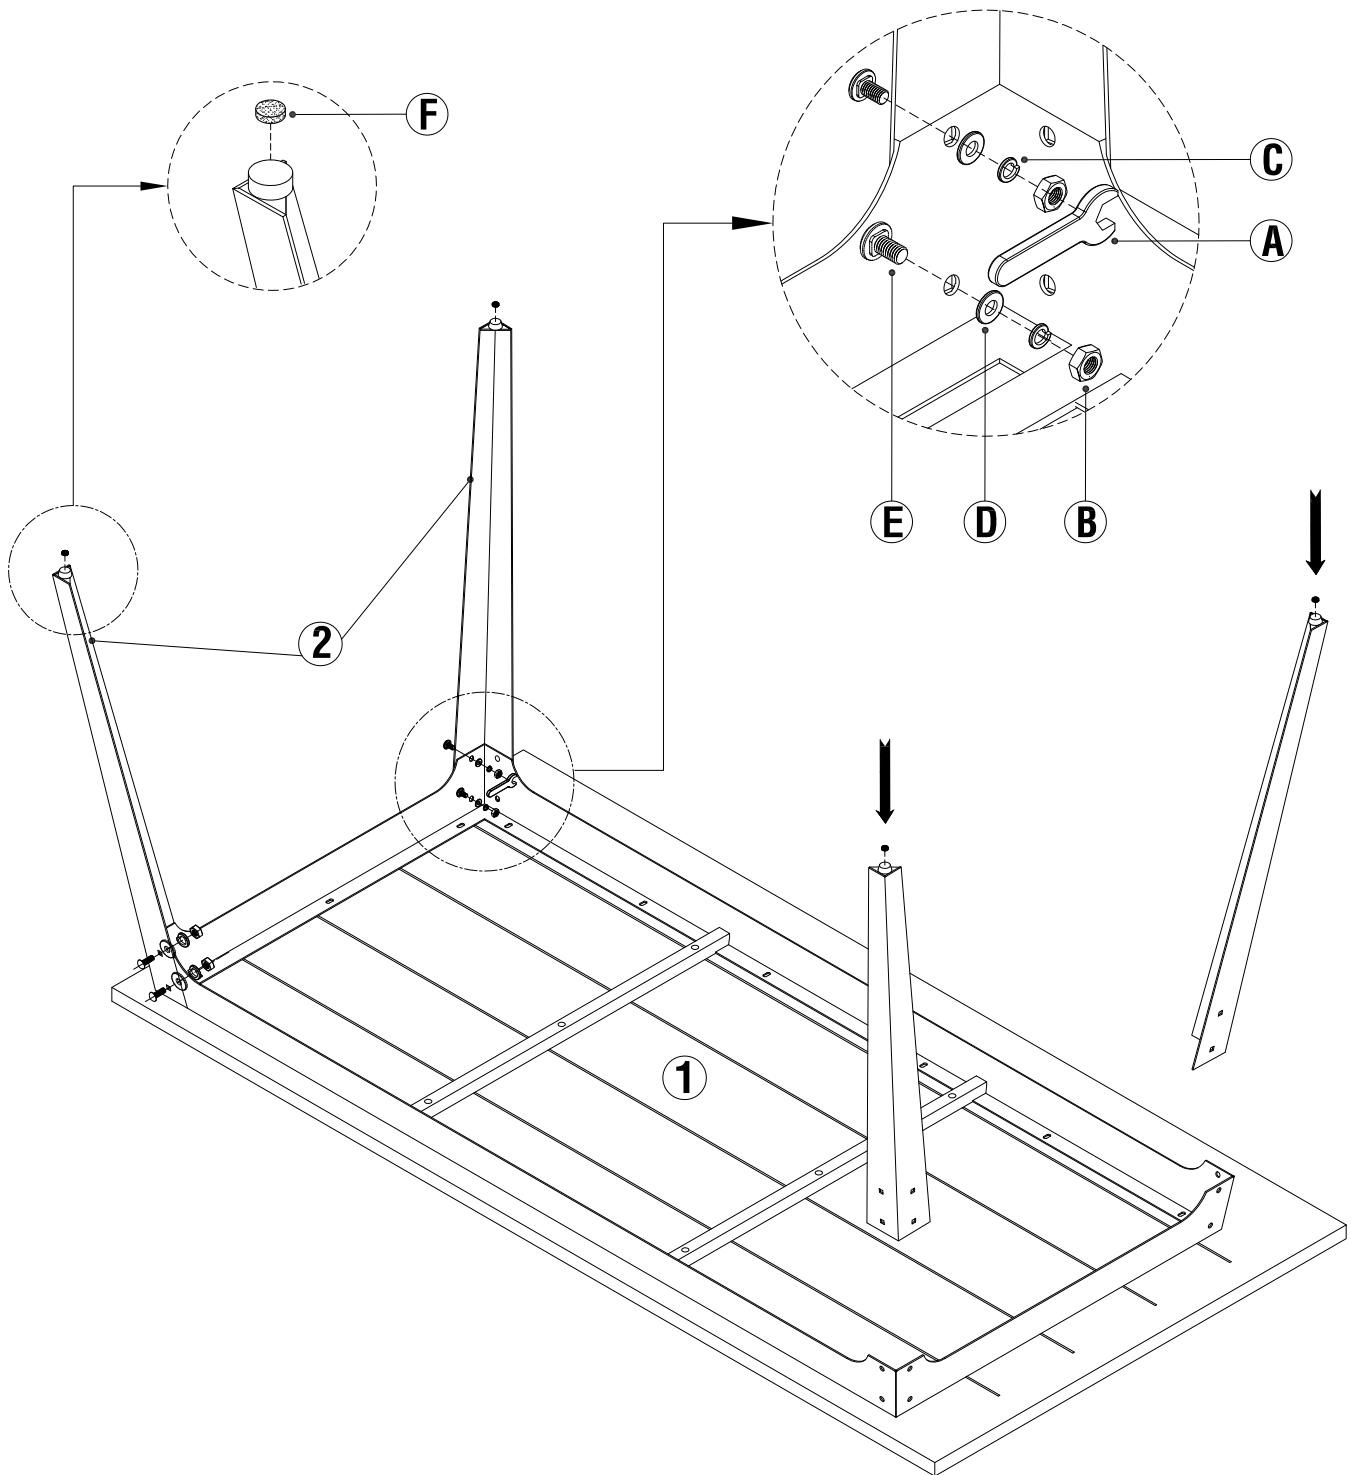



A	Ø10	B	Ø6	C	Ø6	D	Ø6/ Ø13	E	Ø6x15mm	F	
											
01x		16x		16x		16x		16x		04x	

