

USER'S INSTRUCTION MANUAL



3-in-1 desk heating panel

220-240V~ 50/60Hz 120W

Model: Heidenfeld Tischheizung HF-TH120

READ INSTRUCTIONS CAREFULLY: Read and follow all instructions. Place instructions in a safe place for future reference. Do not allow anyone who has not read these instructions to assemble, light,

adjust or operate the heater.

WARNING: In order to avoid overheating, do not cover the heater.

CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. **Extreme caution:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
4. Always unplug heater when not in use.
5. Do not operate the heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return it to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Indoor use only.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into bathtub or other water container.
8. Do not run cord under material. Do not cover cord with throw rugs, runners, or similar coverings.
9. To prevent a possible fire, do not block the space between the heater and the wall which is for air intake or exhaust in any manner.
10. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
11. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
12. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be rated not less than 800 watts (under 220-240V).
13. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working. Do not install the heater under the wall socket.
14. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
15. The output of this heater may vary and its temperature may become intense enough to burn exposed

skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.

16. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

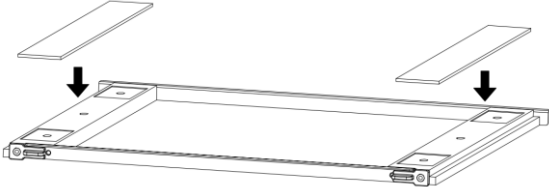 
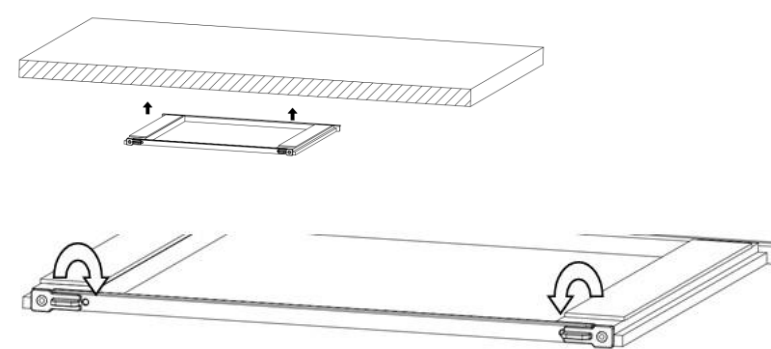 
17. Children of less than 3 years should be kept away unless continuously supervised.

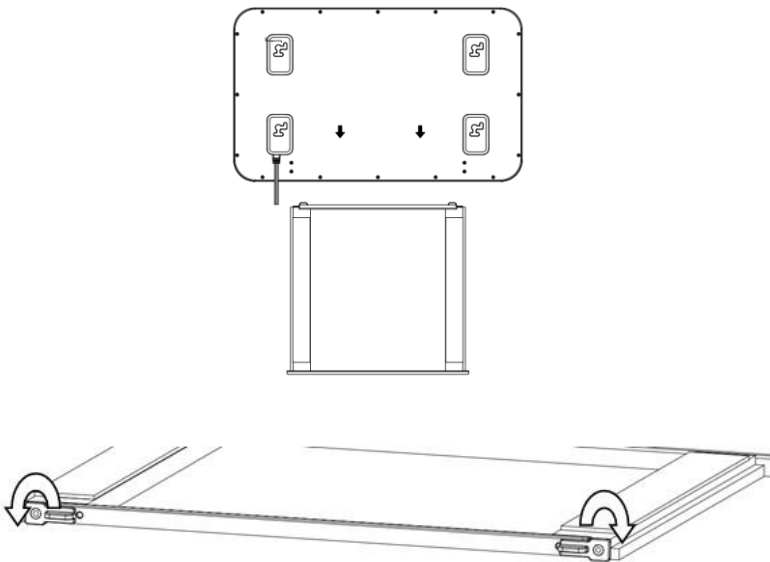 
18. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

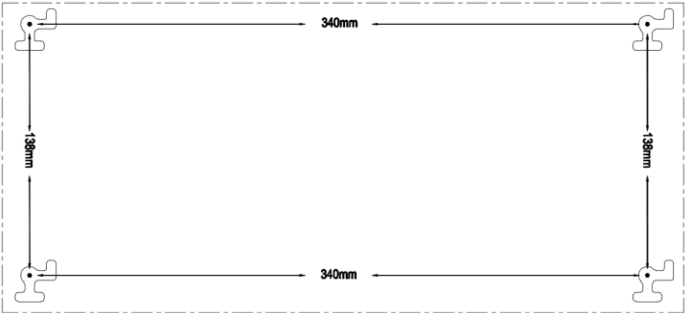 
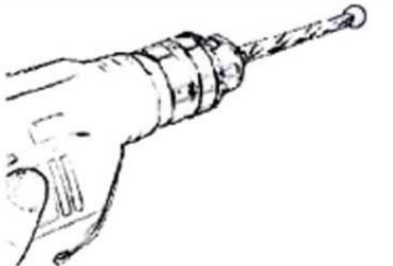 
20. "SAVE THIS INSTRUCTIONS"



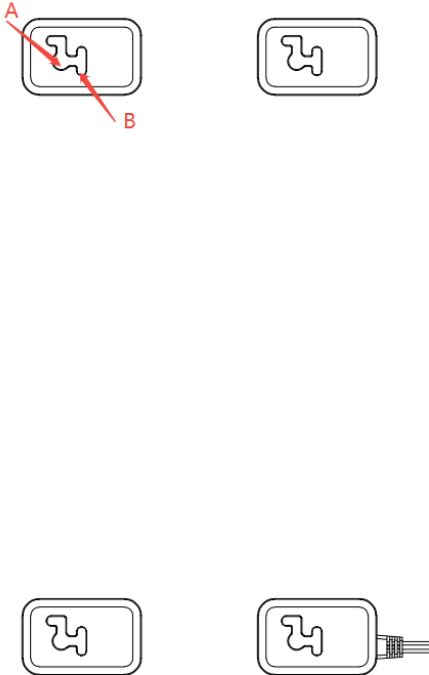 
DESK UNDER MOUNTING INSTRUCTIONS

	1. Please stick two pieces of tape on the back of the bracket.
	2-1. Stick the entire bracket firmly under the tabletop. please ensure it is positioned correctly. 2-2. Rotate the latch inward.

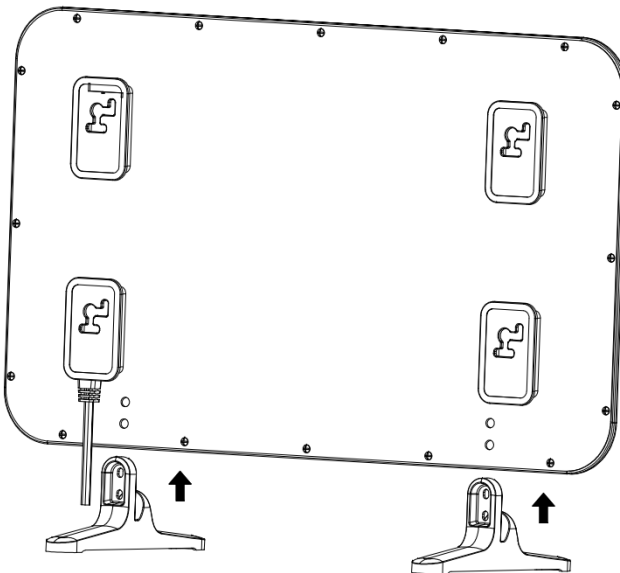 
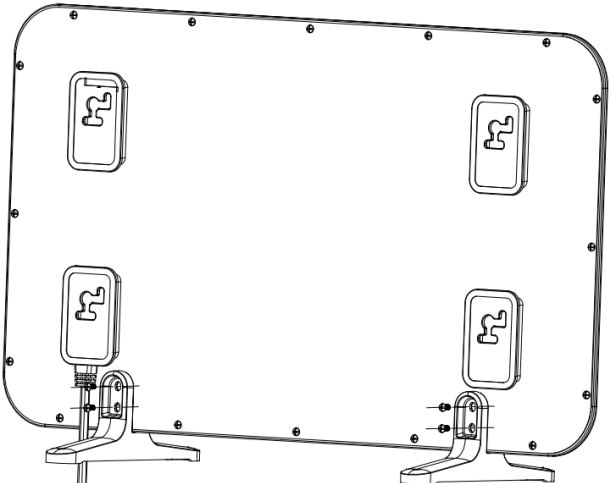 
 <p>The top diagram shows a rectangular heater unit with four mounting tabs. Arrows indicate it should be pushed onto a slide rail. The bottom diagram shows the unit from a side perspective, with arrows indicating the latch on each end should be rotated outward.</p>	<p>3-1. Please push the heater along the slide rail until it is in place.</p> <p>3-2. Rotate the latch outward.</p>
---	---

WALL MOUNTED INSTRUCTIONS

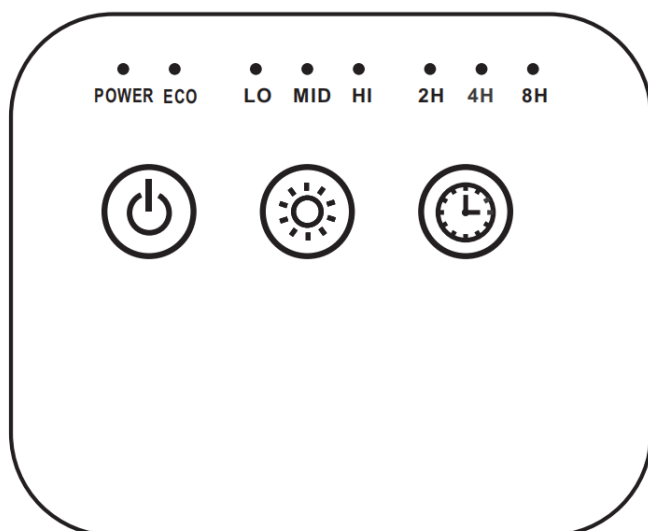 
 <p>The diagram shows a rectangular outline representing the wall mounting footprint. The width is marked as 340mm and the height as 138mm. Four mounting brackets are shown at the corners, with dots indicating the positions for drilling holes.</p>	<p>1. Mark the positions of the 4 holes to be drilled on the wall.</p>
 <p>A detailed line drawing of a cordless power drill with a standard twist drill bit attached.</p>	<p>2. Drill the holes with the drill bit.</p>




	<p>3.Insert the plastic rails fitting into the holes</p>
	<p>4.Insert the 3 x metal screws for wall mounting into the plastic rails.</p>
	<p>5.Lift the heater and aim the three round holes on the brackets at back of the heater to the 4 screws on the wall, and slide the screw from Position A to Position B by moving the heater slightly.</p>

FREE STANDING INSTRUCTIONS

	<p>Place the free standing feet on the ground, align the grooves on feet to the holes on the bottom of the heater.</p>
	<p>screw the 4 x bolts into the holes.</p>

CONTROL PANEL:



	Power button: Press this button for on/off function.
	Temperature setting button: Press this button for Low/Middle/High function. The low is 50-60°C, the middle is 60-70°C, the high is 70-80°C.
	Timer button: Press this button for timer choice: 2H 4H and 8H. Pls noticed that considering energy saving, this heater has automatic 8H countdown function.
ECO MODE	When the NTC detects that the temperature has dropped by more than 5 degrees within 10 minutes, the product will automatically shut down.