

Fuse disconnecter EFD 10

INSTALLATION INSTRUCTION


LV-fuse-switch disconnecter

Dimensions [mm]



Installation



CAUTION!
Installation by electricians only!


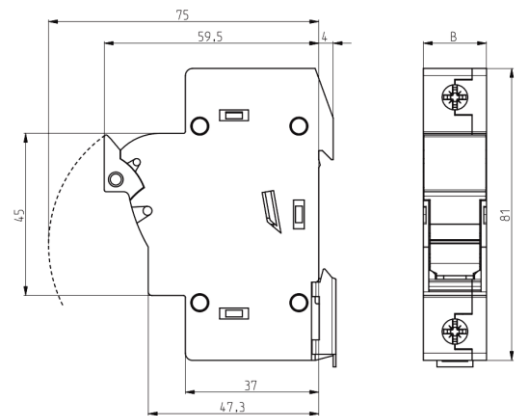


TYPE	1p	1p+N	2p	3p	3p+N
B [mm]	17,5	35	35	52,5	70

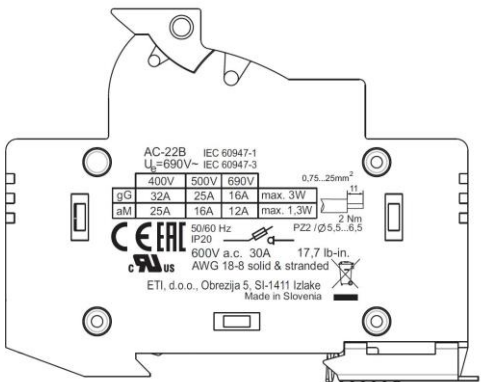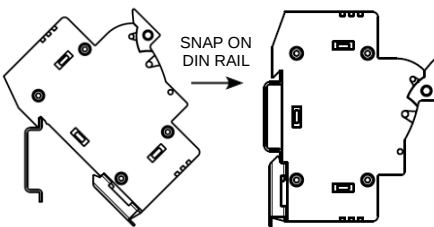

Fuse link replace

Disassembly

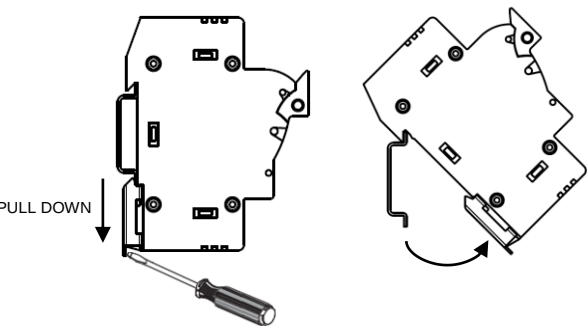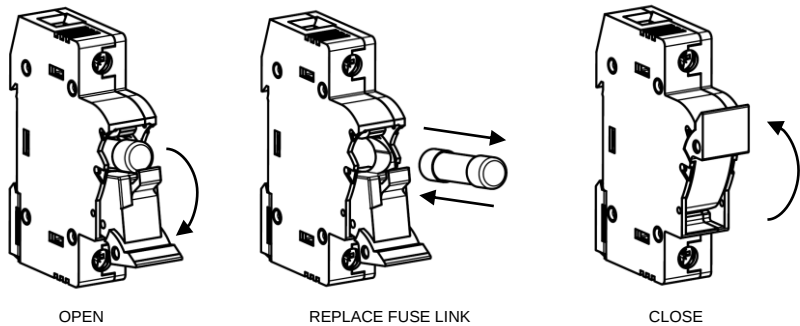

Fuse holder EFD 22 3p




INSTALLATION INSTRUCTION

Fuse holder EFD 22 3p


LV-fuse-switch disconnecter

Dimensions [mm]

Installation

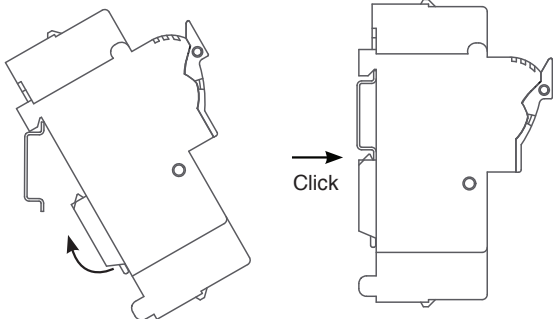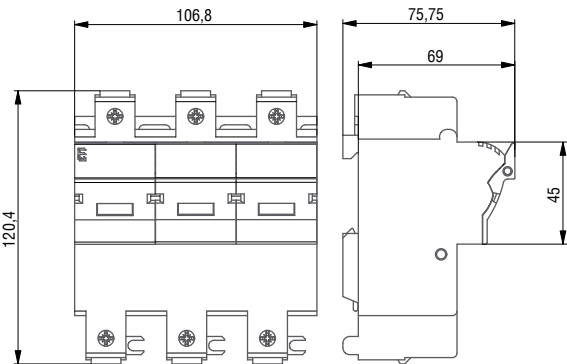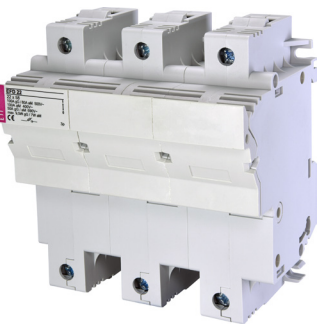

CAUTION!
Installation by electricians only!

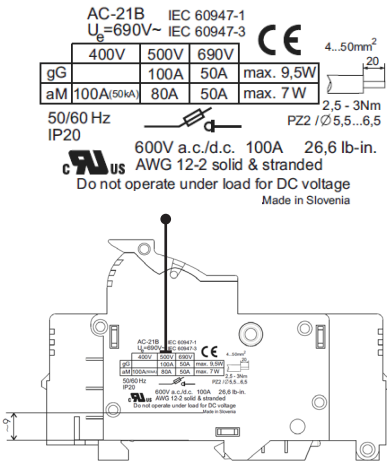

Fuse replace

Disassembly

