 
 


Bedienungsanleitung WF295729


①x1

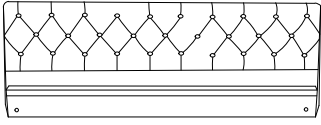


②x1

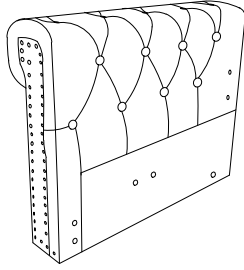

 
③x1

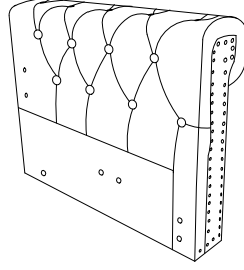

④x3

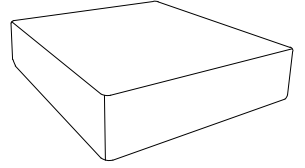 

⑤x3

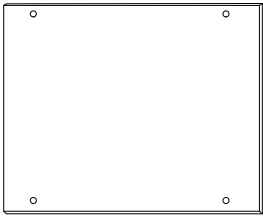 


⑥x4




⑦x1



 
⑧x1




⑨x2

 


⑩x2

 


⑪x2

 

⑫x1

 


Ⓐx22

 


Ⓑx12



 
Ⓒx4



Ⓓx1

 


 (1)

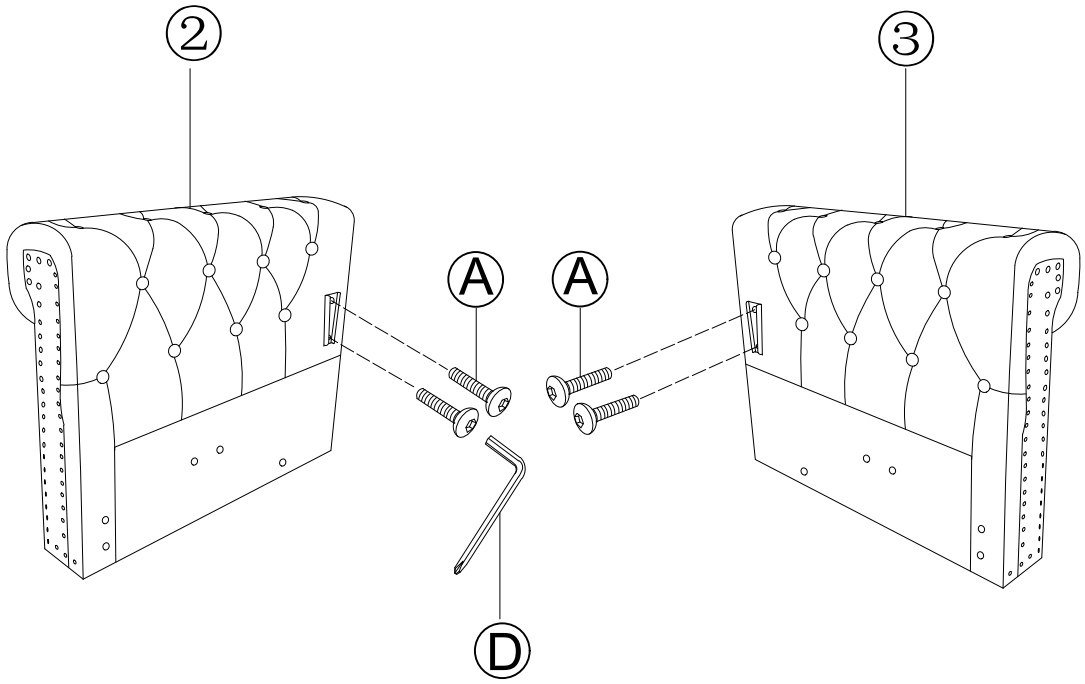


(A)	4
-----	---

 (2)

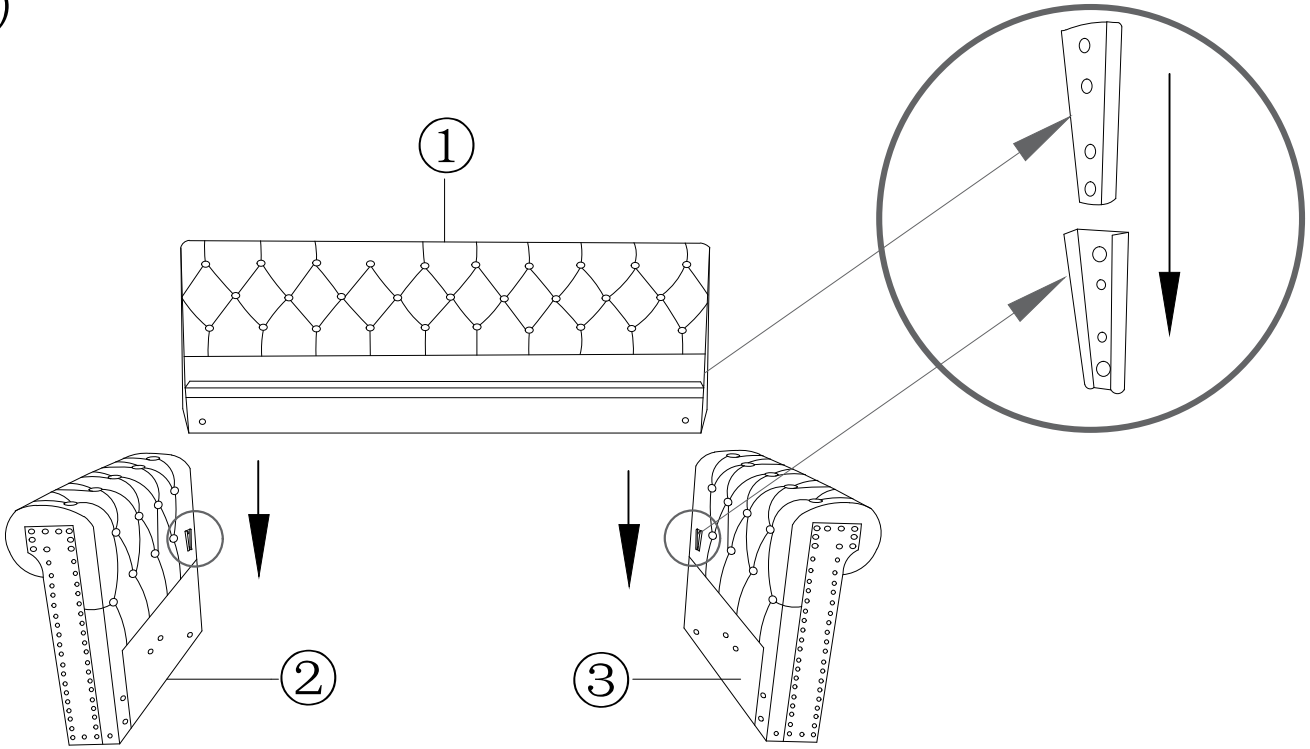


 (3)

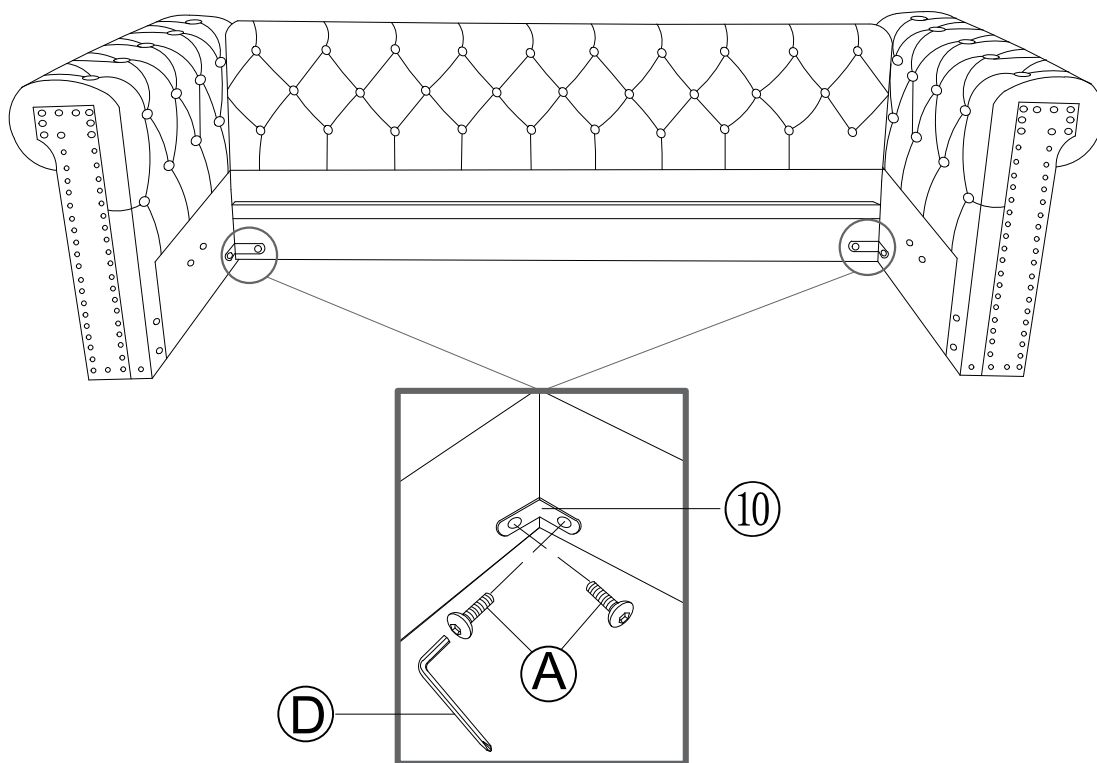



(A)	4
-----	---

 (4)

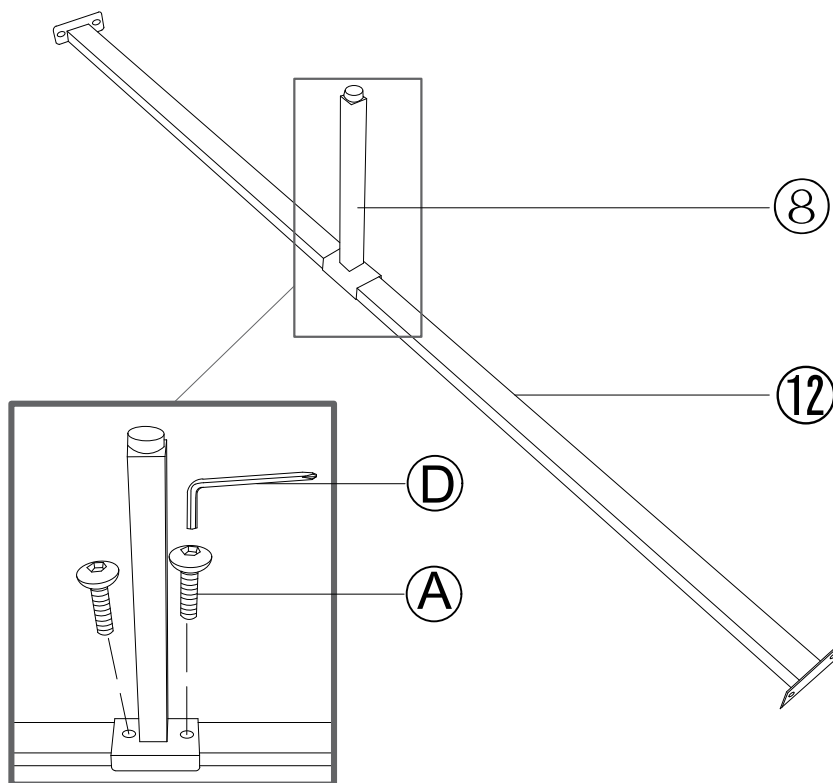


(A)	2
-----	---

  (5)

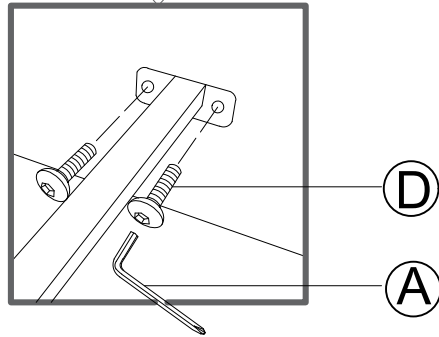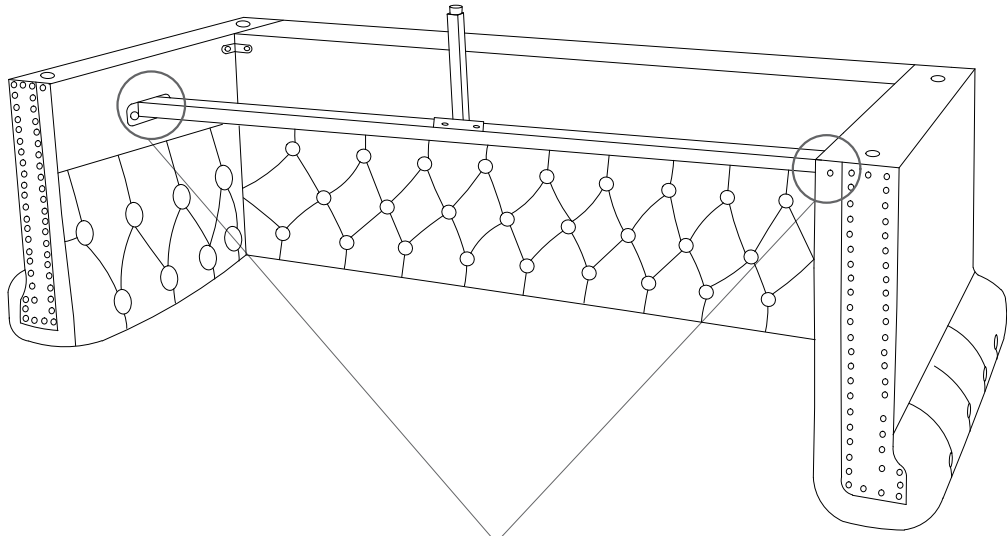




(A)	4
-----	---

 (6)

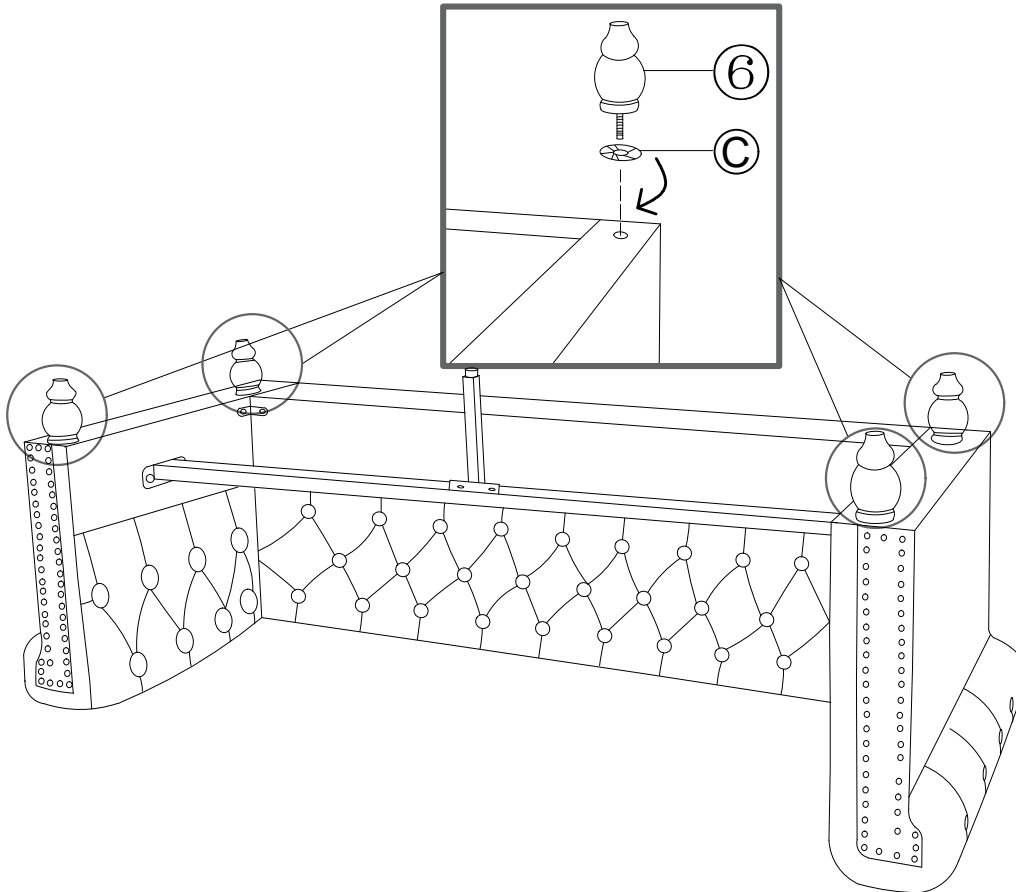


(C)	4
-----	---

   (7)

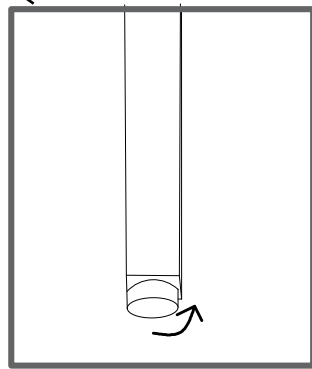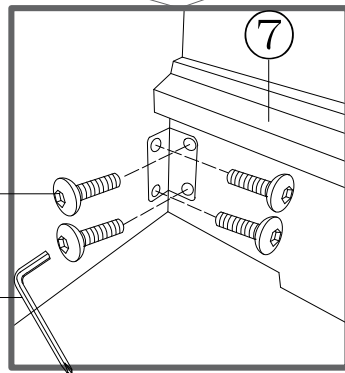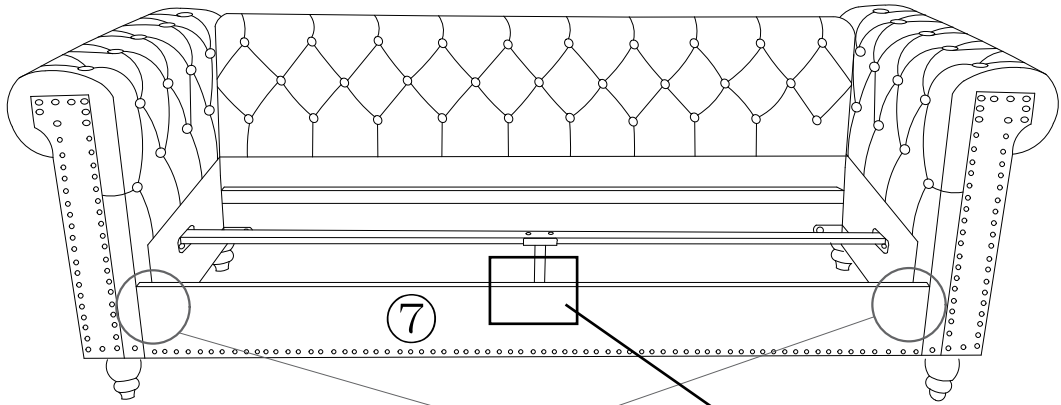


(A) 8

 (8)

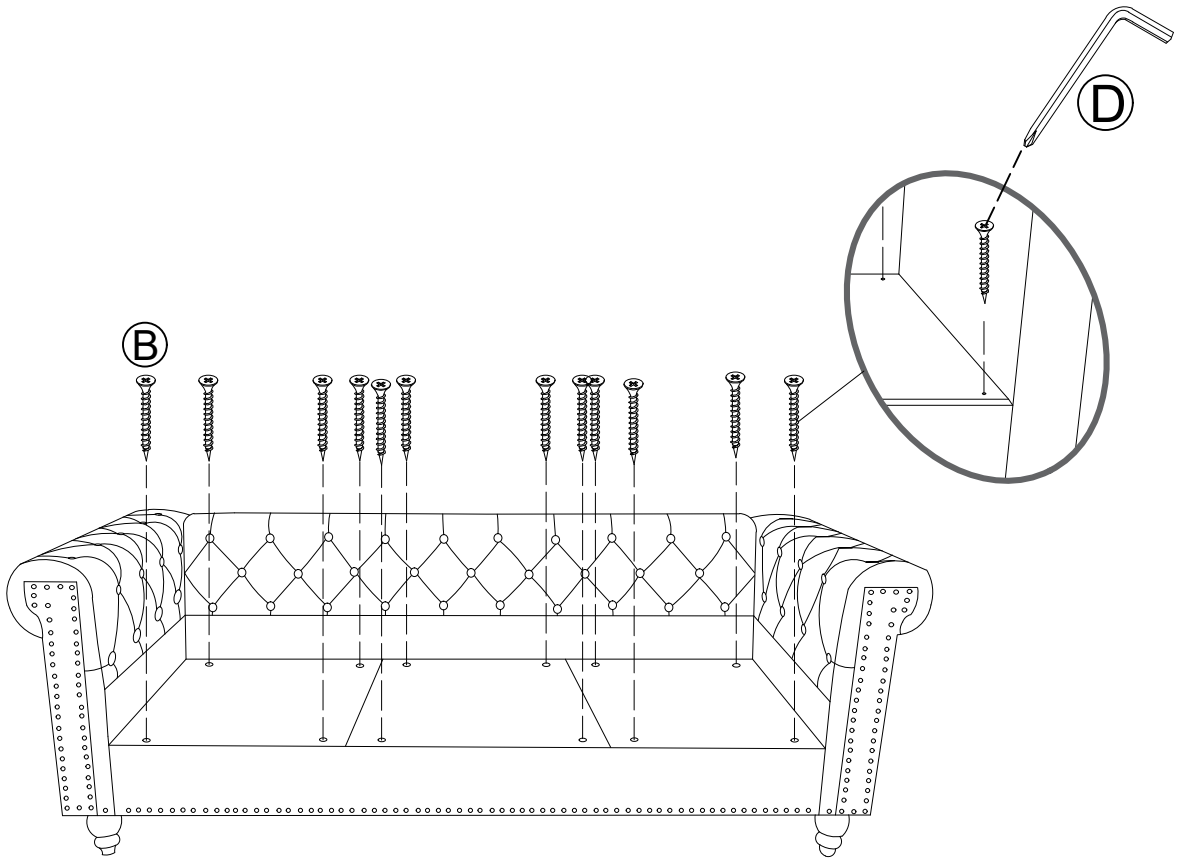

(B) 12

 (9)

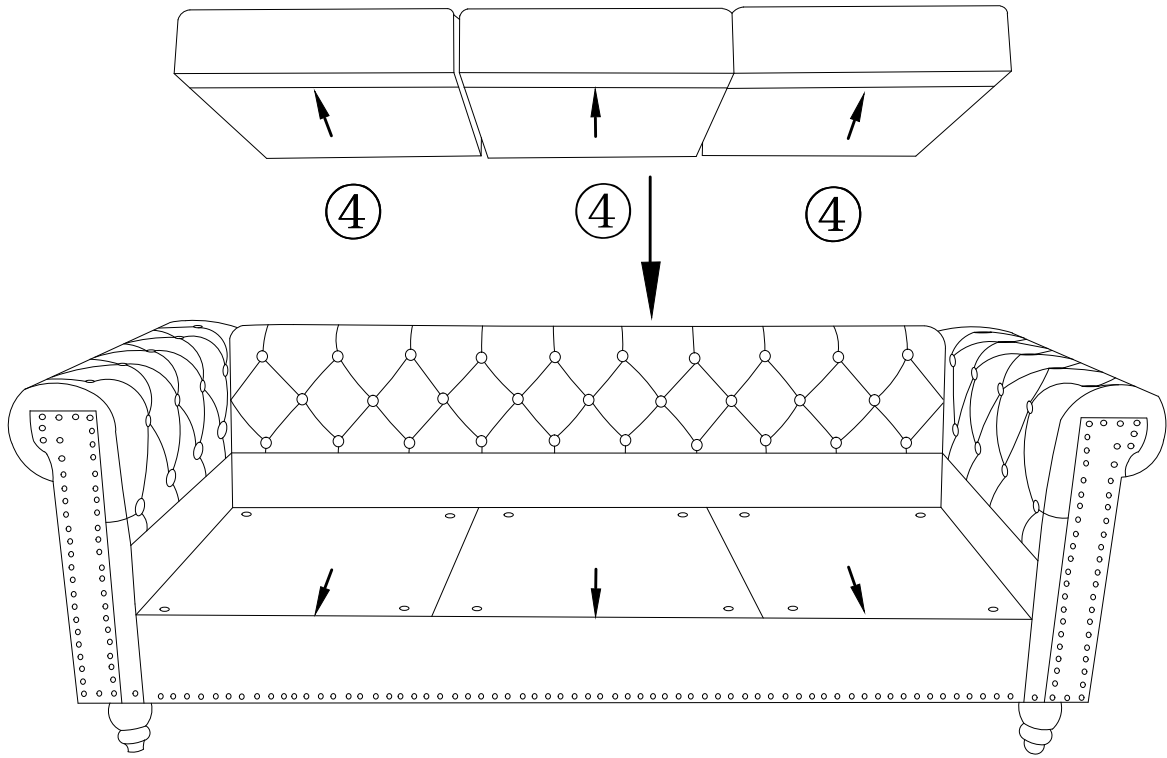

(10)

