



Operating instructions

celexon Electric Expert and Expert XL



Thank you for purchasing this product.

For optimum performance and safety, please read these instructions carefully before connecting or operating this product. Please retain these instructions for future reference.

WARNINGS

The purpose of these operating instructions is to familiarise you with the operation of this product. Therefore, keep these instructions in a safe place so that you can refer to it at any time.

- Before installation, please refer to the enclosed data sheet for further safety and use instructions.
- Do not begin installation until you have read and understood the complete operating instructions.
- Carry out the installation with another person to ensure safe installation.
- Remove the product from its packaging and remove all packaging material. Make sure that there is no packaging material on or in the product. If you notice any damage to the packaging, also check whether there is any damage to the product. If you notice any external damage to the unit or any unexpected or unusual functioning, the product must not be used any further. Immediately contact the dealer from whom you purchased the product or celexon directly (Web: www.celexon.co.uk, Mail: info@celexon.co.uk) for further information.
- To ensure trouble-free operation, the product may only be used indoors. It is NOT suitable for outdoor use.
- The use of the appliance and accessories is forbidden to children under 16 years of age.
- Ensure that no children play with the appliance or are in the vicinity without supervision.
- Conversion or modification of the product impairs product safety.
- Caution: Risk of injury! Never open the product without authorisation. Never carry out repair yourself!
- Do not use the product near gas or water appliances or in a dusty environment.
- Handle the product with care. It can be damaged by knocks, blows or falling from even a small height.
- Keep the product away from moisture and heat.
- Never immerse the product in water or other liquids.
- Use the product only in its intended manner. Use for any other purpose may damage the product or its surroundings.
- Tighten the screws, but do not overtighten them. Overtightening the screws (e.g. by using a cordless screwdriver) can cause damage and affect the secure hold of the screen.

- Suspended loads must be checked for strength and load-bearing capacity at least twice a year.
- Children should not use the screen or play under it unsupervised.
- Caution: Risk of injury! The unit closes flush and firmly in its retracted state, keep fingers, hands or other small parts away from the opening.
- All supply lines and cables must not be subjected to additional loads and must be laid in such a way that they are not damaged or crushed.
- Failure to observe the above instructions may result in personal injury and damage to the product or equipment connected to it. Incorrect installation or use may also invalidate the warranty.
- If you are unsure about the use of the product, please contact specialist personnel, your dealer or celexon directly (Web: www.celexon.co.uk, Mail: info@celexon.co.uk).
- Technical changes and errors expected.

The manufacturer accepts no responsibility for damage to property or personal injury, if the screen is used outside the recommended specifications, or in the event of improper installation. **Do not use this screen in the vicinity of heaters or air conditioners. Also, do not mount the product in direct sunlight or in front of a window.** Due to the temperature-sensitive PVC surface, the projection screen fabric may be permanently damaged.

We recommend that you wait approx. 2 hours after delivery before installing the projection screen. This way you will allow the screen to acclimatise, especially when moving from a cold to a warm environment (or vice versa).

Please **avoid any stains on the surface of the screen.** These may not be able to be removed.

The **positions of the end points are already optimally set** at the factory and should not be changed. Especially with electric screens, the entire length of the fabric should always be used in order to achieve the best flatness. An adjustment of a few cm of the end points should only be made by persons with specialist knowledge and in consultation with the manufacturer. Incorrect adjustment can result in damage to the projection surface.

DISCLAIMER

The information in this document is subject to change without notice by the manufacturer. Changes will be added to subsequent versions of this manual. Errors expected.

 
CARE INSTRUCTIONS

NEVER clean the screen with alcohol or other cleaning agents containing solvents. Use only a soft and clean cloth. If necessary, dirt can be removed from the surface with a mild soap solution (max. 5%). It is essential to avoid contact with pointed or sharp objects. These could permanently damage the projection screen fabric. Further instructions can be found in the enclosed projection screen instructions.

TECHNICAL DATA

Voltage: 100 V ~120 V, 60 Hz
220 V ~ 240 V, 50 Hz


Consumption: 156 W (MAX)
0,4 W (Standby)

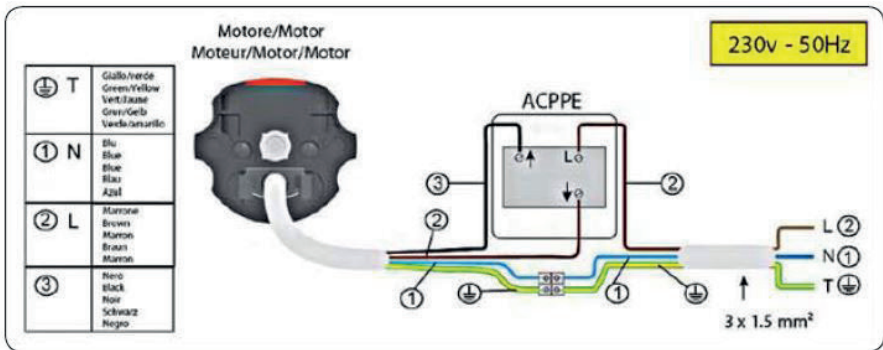

IN THE BOX



 1x Screen

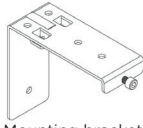

Mounting bracket
Motor Expert (2x)
Motor Expert XL (4x)



1 x Wall switch

INSTALLATION NOTES

Install the screen in a position that is fully visible to all viewers! The optimum installation height corresponds to the position of the viewers in the centre of the screen with the screen fabric extended: eye level = lower third of the screen surface.

 
The screen can be installed on the wall or ceiling. Obtain suitable mounting material for your installation surface.

MOUNTING ON THE CEILING / WALL

STEP 1

Measure the distance between the mounting brackets. The brackets should each be installed evenly along the housing.


Transfer the measurement to the mounting surface. Ensure that the holes are parallel. Pre-drill the holes at the markings in the appropriate diameter for the mounting material, insert them and screw on the brackets.

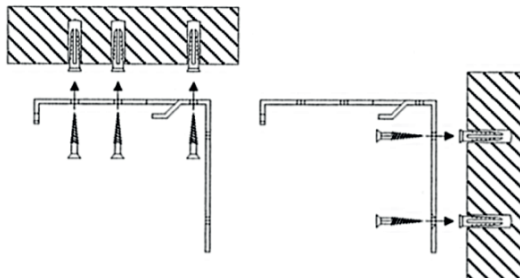

STEP 2

Lift the screen (with 2 people) and hook the casing firstly into the rear guide of the bracket with a slight turn and then fix the casing to the bracket from the front with the locking screws. Do not release the housing until the locking screw has connected the housing and the bracket together.

 Remove the transport protection between the weighted rod and the housing. Finally, check the screws on the screen and tighten them if necessary. In the event of damage to the brackets or the safety screws, please contact your dealer. The screen may only be used after the defective components have been replaced.

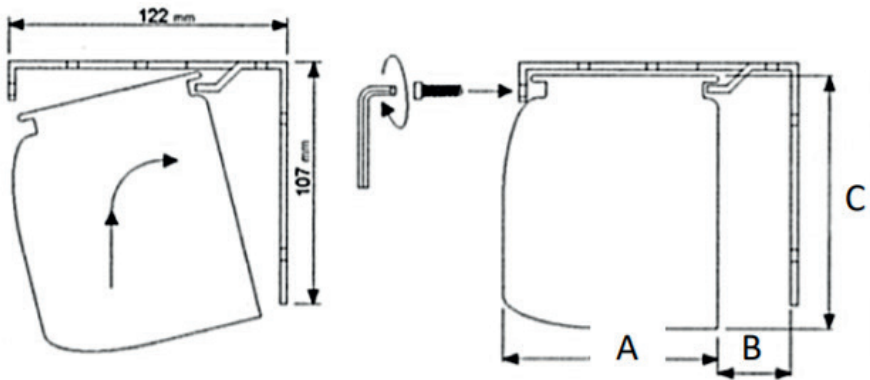

- A = Expert 9,5cm | Expert XL 12,4cm
- B = Expert 2,7cm | Expert XL 1,6cm
- C = Expert 11,5cm | Expert XL 13,3cm

OPERATION

 
STEP 1: SECURITY CHECK & CONNECTION

The electrical connection of the screen must be carried out by qualified personnel according to the technical data (see above). Mount the wall switch near the screen so that the user always has the screen in view when extending and retracting it.

The cable must not be laid on hot surfaces or stretched. Never connect the wall switch to more than one device. Disconnect the screen during maintenance work.


STEP 2: EXTEND THE SCREEN (FIG. 2)

Press and hold the button marked with the down arrow. The screen extends and stops automatically at the set end point. Make sure that no objects or persons obstruct the extension of the screen.

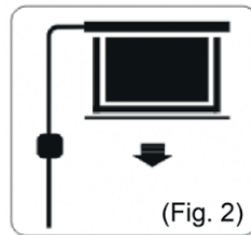

STEP 3: RETRACT THE SCREEN (FIG. 3)

 Press and hold the button marked with the up arrow. The screen retracts and stops automatically at the housing or the set upper end point. Make sure that no objects or persons obstruct the retraction.

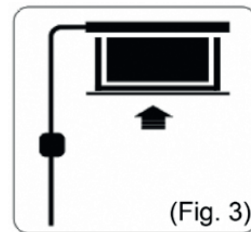

STEP 4: STOP THE SCREEN

To stop the projection screen manually, release the pressed button - the screen stops immediately.

It is possible to set the stop points. Please request the instructions for this procedure from your specialist dealer or directly via www.celexon.com

INFORMATION ON EU CONFORMITY

Manufacturer: celexon Europe GmbH
Address: Gutenbergstraße 2, 48282 Emsdetten, DE
Product name: celexon Electric Expert and Expert XL

Products that are marked with the CE mark meet all requirements of the relevant EU directives. The EU declaration of conformity can be downloaded from the following address: www.celexon.de/zertifikate



The symbol indicates the separate collection of electrical and electronic devices in EU countries. Please do not throw the device into household waste. Find out about the return system applicable in your country and contact your local authority or your local waste and pollutant collection point if you have any questions about the disposal process.

INFORMATION ON UK CONFORMITY

Manufacturer: celexon Europe GmbH
Address: Gutenbergstraße 2, 48282 Emsdetten, DE
Product name: celexon Electric Expert and Expert XL

Products that are marked with the UKCA mark meet all requirements of the relevant UK directives. The UK declaration of conformity can be downloaded from the following address: www.celexon.de/zertifikate



The symbol indicates the separate collection of electrical and electronic devices in EU countries. Please do not throw the device into household waste. Find out about the return system applicable in your country and contact your local authority or your local waste and pollutant collection point if you have any questions about the disposal process.