

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
Moulinex	DJ755G10/35A	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ755G11/350	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ755G27/350	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ755G27/35A	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ755G32/350	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ755G32/35A	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ755GAR/350	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ755GAR/35A	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ756G15/35A	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ756G35/350	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ756G35/35A	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	MB755D40/350	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	MB755G60/350	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	MB755GTR/350	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	MB755GTR/35A	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	MB756G31/35A	MAK/SNY APPARAAT FRESH EXPRESS +
Moulinex	DJ753E58/35A	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ753315/35A	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ753510/35A	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ753E10/35A	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ753500/35A	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ753500/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ750G45/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ750G32/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ753E10/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ7535MX/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ753315/350	MAK/SNY APPARAAT FRESH EXPRESS

Moulinex	DJ800G34/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ752G35/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ750G37/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ750G60/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ750G63/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ751G33/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	DJ750G61/350	MAK/SNY APPARAAT FRESH EXPRESS
Imusa	DJ753ECO/350	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB7535AU/35A	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB753540/35A	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB753E38/350	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB753E38/35A	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB7533TR/350	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB753340/350	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB754540/350	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB754B40/350	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	ME203140/350	MAK/SNY APPARAAT HV2
Tefal	MB750G36/350	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB750G50/350	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	ME452800/35A	MAK/SNY APPARAAT HV4
Moulinex	ME452839/35A	MAK/SNY APPARAAT HV4
Moulinex	ME421039/35A	MAK/SNY APPARAAT HV4
Moulinex	ME452825/35A	MAK/SNY APPARAAT HV4
Moulinex	ME452827/35A	MAK/SNY APPARAAT HV4
Moulinex	ME440139/35A	MAK/SNY APPARAAT HV4
Moulinex	ME442139/35A	MAK/SNY APPARAAT HV4
Moulinex	ME454139/35A	MAK/SNY APPARAAT HV4
Moulinex	ME456139/35A	MAK/SNY APPARAAT HV4
Moulinex	ME458139/35A	MAK/SNY APPARAAT HV4

Moulinex	ME406185/35A	MAK/SNY APPARAAT HV4
Moulinex	ME415132/35A	MAK/SNY APPARAAT HV4
Moulinex	ME41513E/35A	MAK/SNY APPARAAT HV4
Moulinex	ME415165/35A	MAK/SNY APPARAAT HV4
Moulinex	ME416138/35A	MAK/SNY APPARAAT HV4
Moulinex	ME420139/35A	MAK/SNY APPARAAT HV4
Moulinex	ME428139/35A	MAK/SNY APPARAAT HV4
Moulinex	ME430139/35A	MAK/SNY APPARAAT HV4
Moulinex	ME428139/350	MAK/SNY APPARAAT HV4
Moulinex	ME420139/350	MAK/SNY APPARAAT HV4
Moulinex	ME430139/350	MAK/SNY APPARAAT HV4
Moulinex	ME415132/350	MAK/SNY APPARAAT HV4
Moulinex	ME416138/350	MAK/SNY APPARAAT HV4
Moulinex	ME401130/35	MAK/SNY APPARAAT HV4
Moulinex	ME400141/35	MAK/SNY APPARAAT HV4
Moulinex	ME401141/35	MAK/SNY APPARAAT HV4
Moulinex	ME406185/350	MAK/SNY APPARAAT HV4
Moulinex	ME41313E/350	MAK/SNY APPARAAT HV4
Moulinex	ME41513E/350	MAK/SNY APPARAAT HV4
Moulinex	ME415165/350	MAK/SNY APPARAAT HV4
Moulinex	ME405B3E/350	MAK/SNY APPARAAT HV4
Moulinex	ME40613E/350	MAK/SNY APPARAAT HV4
Moulinex	ME41113E/350	MAK/SNY APPARAAT HV4
Moulinex	ME41013E/350	MAK/SNY APPARAAT HV4
Moulinex	ME411131/350	MAK/SNY APPARAAT HV4
Moulinex	ME411162/350	MAK/SNY APPARAAT HV4
Moulinex	ME401160/35	MAK/SNY APPARAAT HV4
Moulinex	ME400130/35	MAK/SNY APPARAAT HV4
Moulinex	ME403189/35	MAK/SNY APPARAAT HV4

Moulinex	ME400113/35	MAK/SNY APPARAAT HV4
Moulinex	ME400188/35	MAK/SNY APPARAAT HV4
Moulinex	ME401161/35	MAK/SNY APPARAAT HV4
Moulinex	ME401188/35	MAK/SNY APPARAAT HV4
Arno	MB753E55/350	MAK/SNY APPARAAT FRESH EXPRESS
Arno	MB753E54/350	MAK/SNY APPARAAT FRESH EXPRESS
Arno	MB750G58/350	MAK/SNY APPARAAT FRESH EXPRESS
Arno	MB750G59/350	MAK/SNY APPARAAT FRESH EXPRESS
Imusa	MB750G46/350	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	NE411137/35A	MAK/SNY APPARAAT HV4
Tefal	NE458137/35A	MAK/SNY APPARAAT HV4
Tefal	NE448838/35A	MAK/SNY APPARAAT HV4
Tefal	NE410838/35A	MAK/SNY APPARAAT HV4
Tefal	NE445138/35A	MAK/SNY APPARAAT HV4
Tefal	NE205138/35A	MAK/SNY APPARAAT HV2
Tefal	NE210138/350	MAK/SNY APPARAAT HV2
Tefal	NE210138/35A	MAK/SNY APPARAAT HV2
Tefal	NE210140/350	MAK/SNY APPARAAT HV2
Tefal	NE210140/35A	MAK/SNY APPARAAT HV2
Moulinex	DJ753E32/35A	MAK/SNY APPARAAT FRESH EXPRESS
Tefal	MB753538/35A	MAK/SNY APPARAAT FRESH EXPRESS
Moulinex	ME410131/350	MAK/SNY APPARAAT HV4
Tefal	NE411837/35A	MAK/SNY APPARAAT HV4