

 
 
**Service•Assistenza•Dienstverlening•Serwis  
Servis•Serviz•Сервисная служба**

Name• Nom • Nome • Naam •  
Nazwa•Jméno• Názov•Név•  
Denumire•Ísim •Название

Nr. • No. • N° •Номер•C•Sz




756574, 757021

Typ• Type• Тип•  
Tipus• Tipo•Тип•

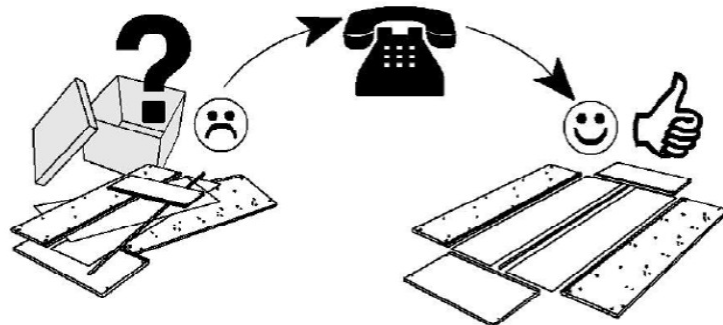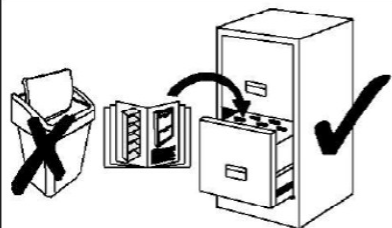


- (D) Montageanleitung
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (CZ) Montážní návod
- (HU) Szerelési útmutató
- (TR) Montaj talimatı

 
 
 
- (GB) Assembly instructions
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (SK) Návod na montáž
- (RO) Instrucțiuni de montaj
- (RU) Инструкция по монтажу
- (HR) Shema montaže

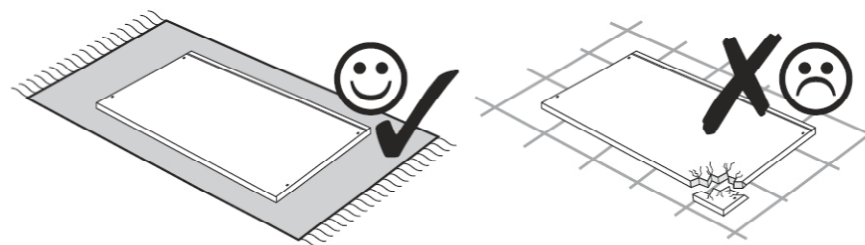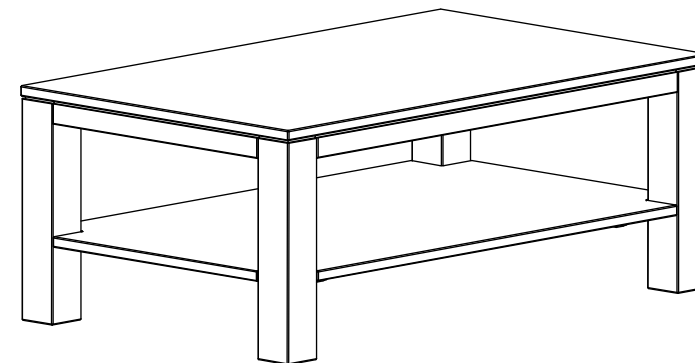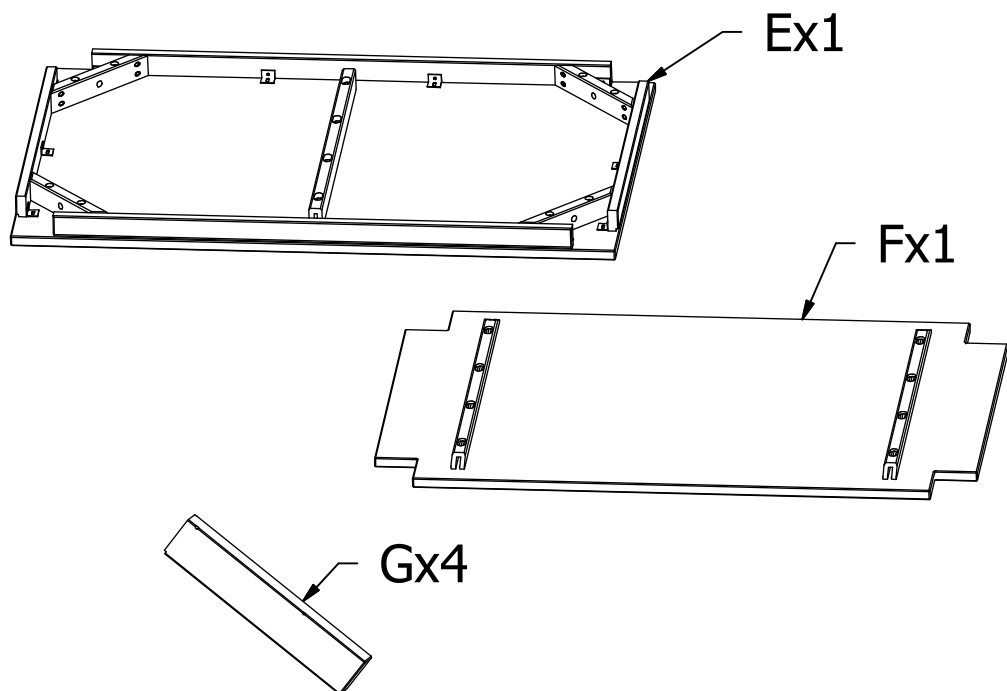



Art.Nr. 756574, 757021  
LKZ 40827

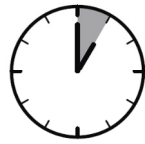 

30 min

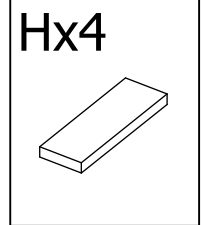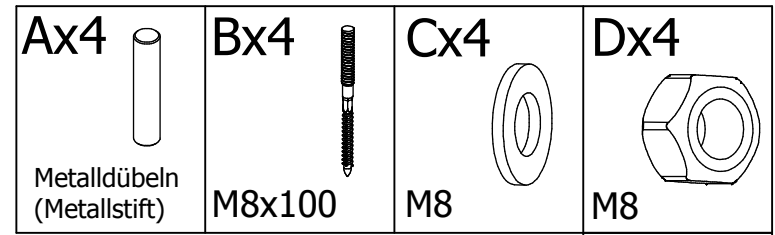  
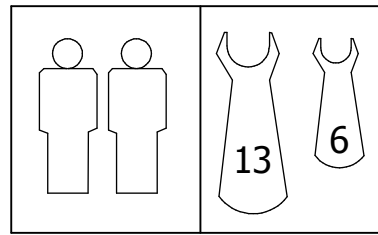 


  1.

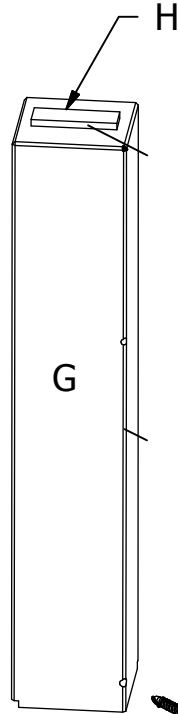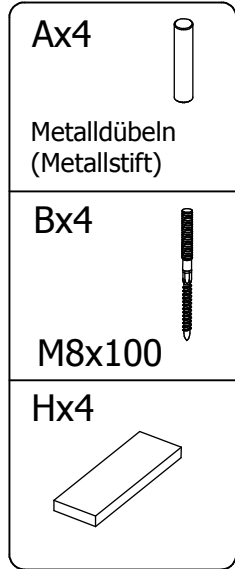


A Metalldübeln (der Metallstift) in den Fuß einsetzen

  2.

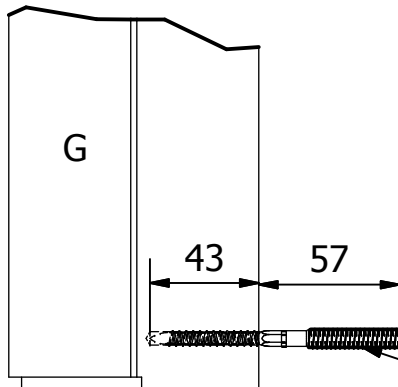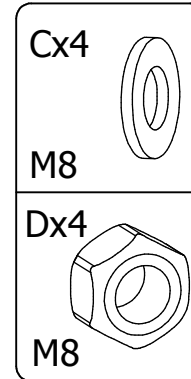


x4

 GEWINDESCHRAUBE MUSS VÖLLIG EINGESCHRAUBT WERDEN!

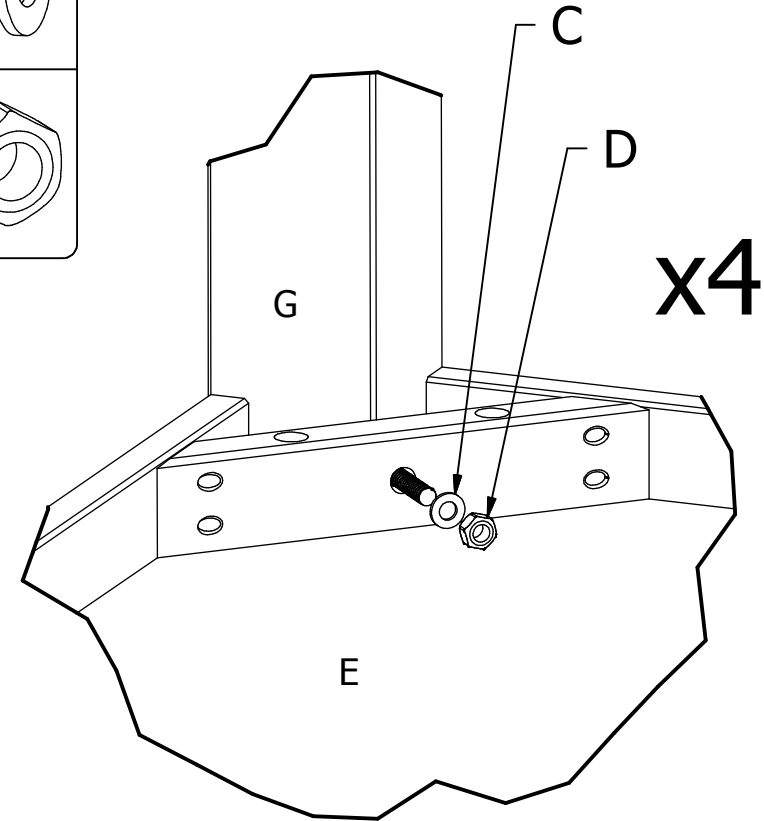

x4

 3.

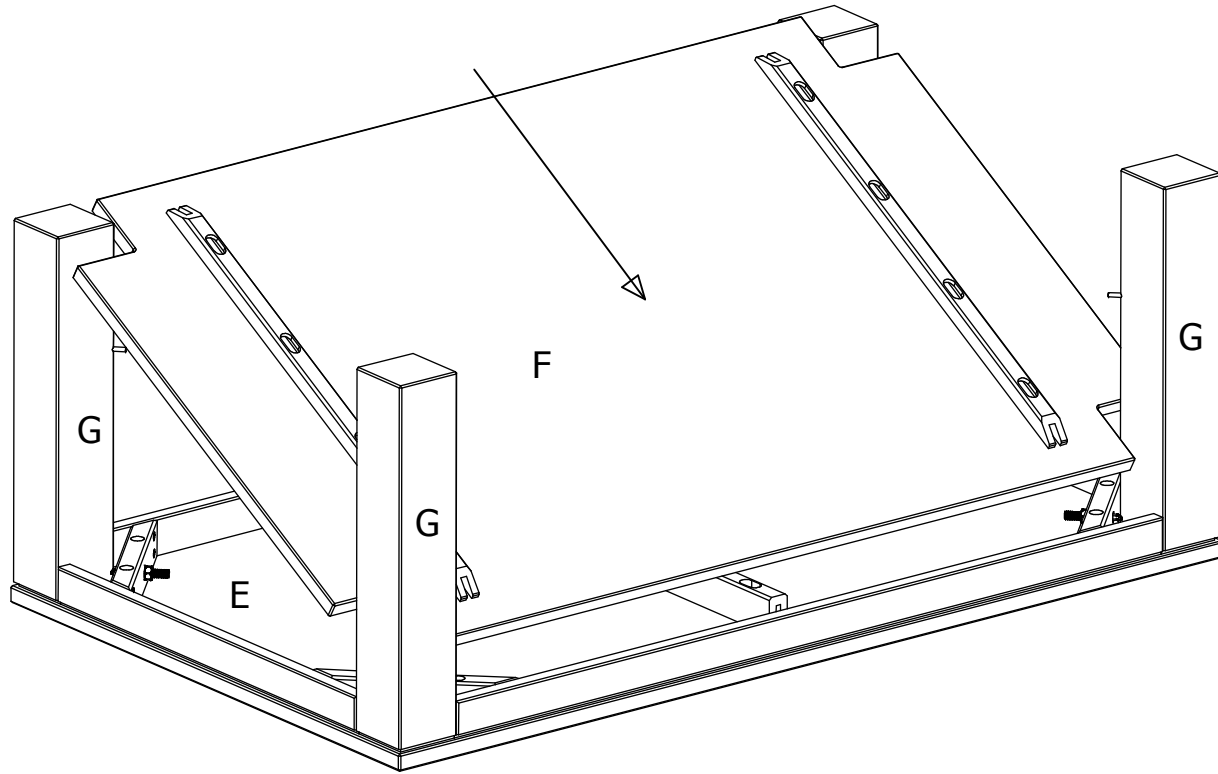

4.

