### JZH-RF 1688 Fishing Bite Alarm Spec

### Bite alarm units

8 tones settings 8 volume settings 5 sensitivity settings 20 sec latching LED 8 magnet rollers Colorful running LED (12 colors) Push button LED dimmer Black satin smooth finish 200-220 meters Change Lights Colors with the 9V \* 1 battery 2.5mm jack socket Memory function in bite alarm Toggle switch Removable storm ears Low battery function

### 报警器使用说明书

### **Inserting battery**

slide down battery cover ----- insert 9V \*1 battery

To complete the procedure, gently push back the battery cover. Power on/off switch

Power ON: push the toggle switch to right.

Power OFF: push the toggle switch back left position

## Volume adjustment

Press the volume control "V"to step through the 8 volume settings, ranging from low to high and silent mode.

## Tone adjustment

Press the tone adjustment button"T" to step through the 8 settings.

## Sensitivity adjustment

Press the sensitivity adjustment buttonS" to step the 5 sensitivity settings, ranging from Minimum to Maximum mode.1 beep equals maximum sensitivity to 5 beeps minimum sensitivity **Run indication/ Low battery indication** 

When magnet roller wheel is activated. The latching LED willilluminate for 20 seconds and the run LED illumination stops when the roller wheel finishes rotating. / Running LED on bite alarm will flash /blink once every 5 seconds when battery is low.

### **Technical Specification**

Transmitter :	Receiver :
Power Voltage :9V*1	Power voltage : 1.5V *2
Standby Current:0.15mA	Standby Current:2.6mA
Working current:75mA	Working current:40mA

Shut down current : 0mAShut Down Current:0mAWorking Power :9VReceiving Sensitivity: -95dbFrequency:433MHzFrequency:433MHzCoverage range:200~220mCoverage Range:200~220mWorking Temperature :-10 ~70 °CWorking Temperature :-10~70 °C

# 接收器参数:

Receiver units 接收器组成部分 8 volume settings 6 colors clear LED choices Vibration mode/Silent mode 6 LED dimmer 200-220 meters Memory function in receiver Low battery function Flashlight function Toggle switch Operate with 1.5V\*2 batteries

# 接收器使用说明书

Receiver User instructions Inserting battery Slide down battery cover --- insert 1.5V \*2 battery To complete the procedure, gently push back the battery cover Power on/off switch Power ON:push the switch to right.

Power OFF:push the switch back left pasition.

# Volume adjustment

Press the volume control "V"to step through the 8 volume settings. ranging from low to high and silent mode.

# Vibration adjustment

Press the vibration button to choose vibration mode on or off.

## **Flashlight function**

Press the fashlight button.theEDight on the top of the receiver will light up when pressed. and then go out when released

## Low battery indication

TherightmostlatchLEDonremotereceiver willfash/blink once every 5 seconds when battery is low Learning method

1Pressthe M button and hold downM button, sounds one time, then enter the learning, the receiver receive a signal while rotate the roller wheel of bite alarm, it will sounds again, that

means learning successfully , when you need to learn other bite alarm , repeat the above operation

2.Press the M button and hold downM button, sounds one time, then enter the learning , press M button to choose receiverLED light while rotate the roller wheel of bitealarm, it will sounds again, that means learning successfully , when you need to learn other bite alarm , repeat the above operation.

# Erase method

PresstheMbuttonandhod downMbuttonsounds6secondsalllights on, sounds two tims again, erasing successfully and all code of bite alarm which had been stored are erased