


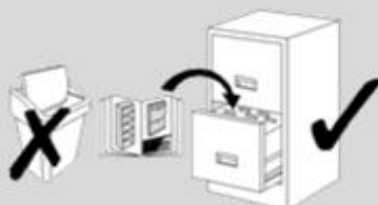
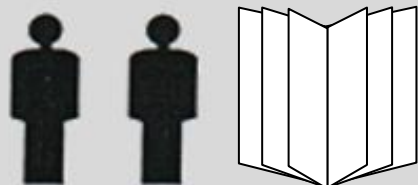
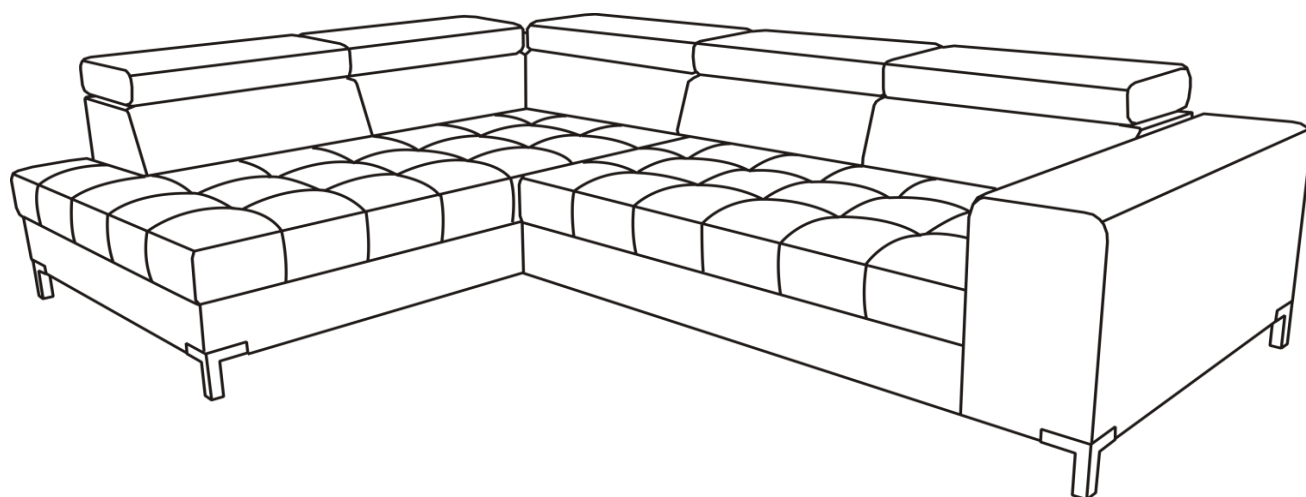
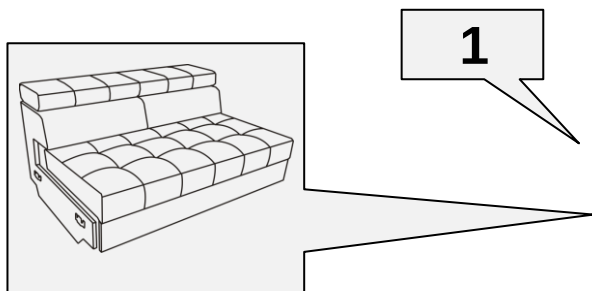
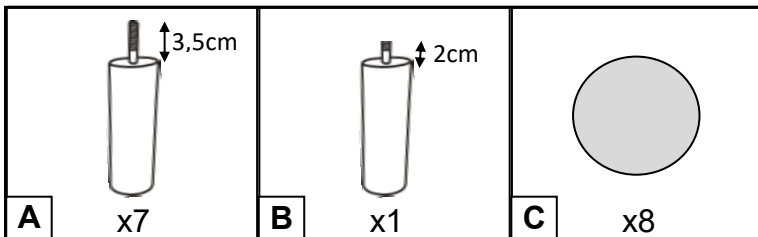


BOCCO 1BKL-E-2FR


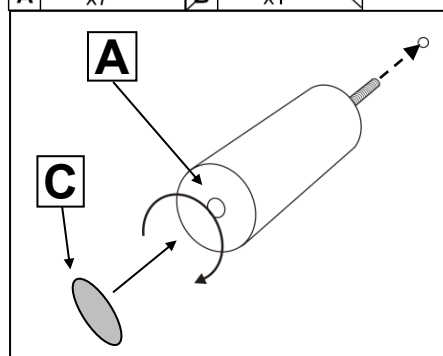


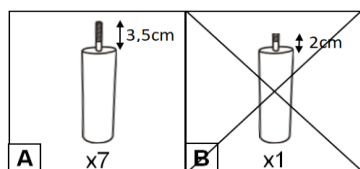


1






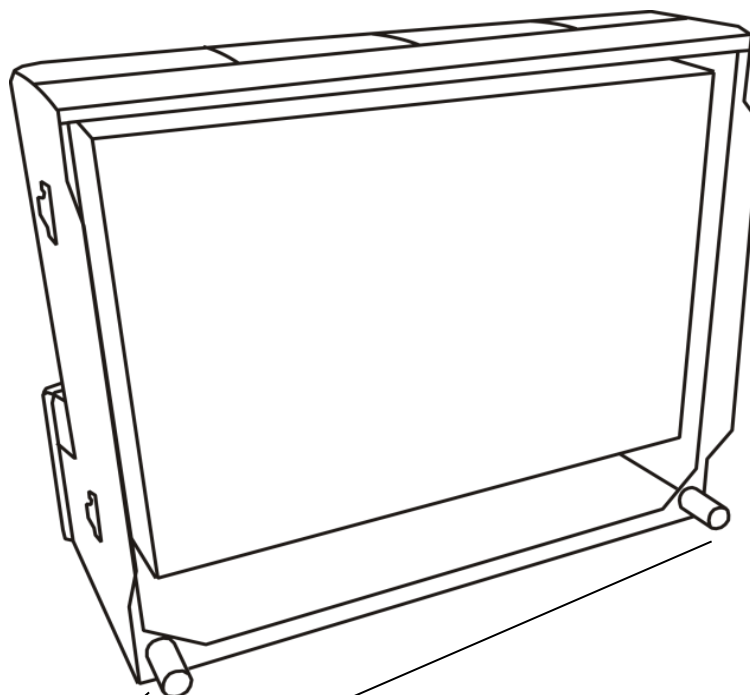


2

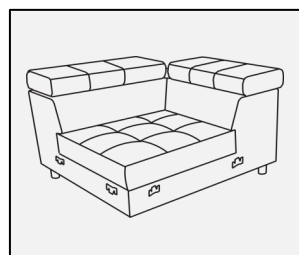
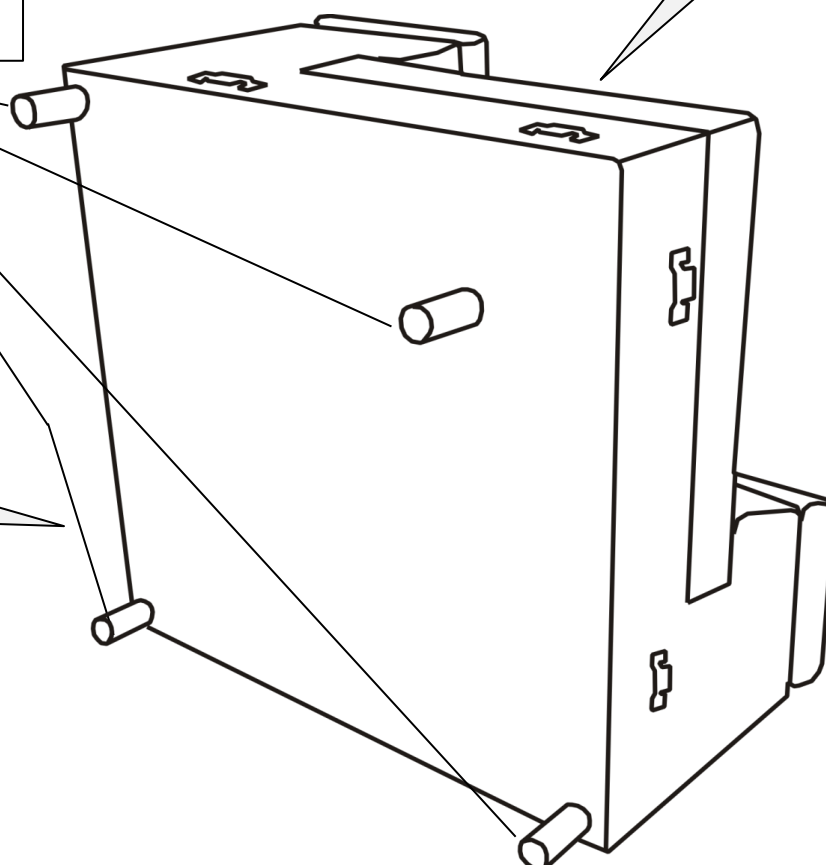








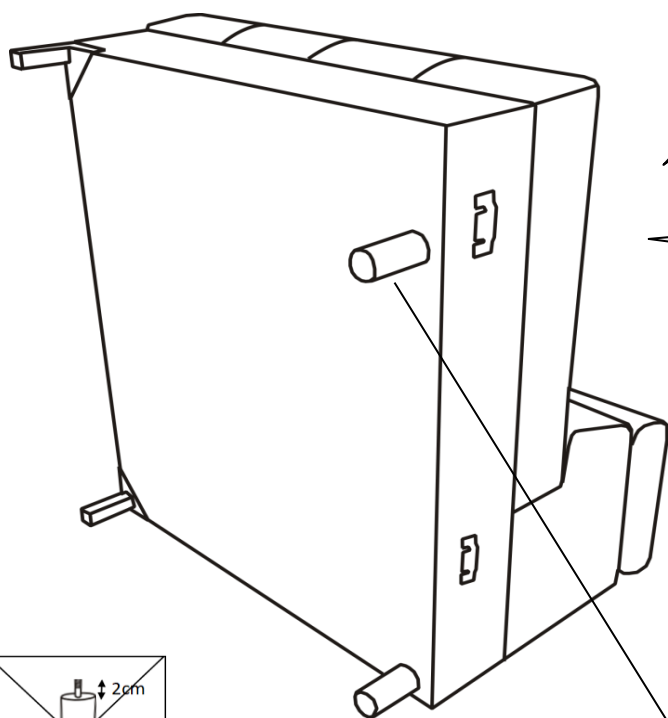




3

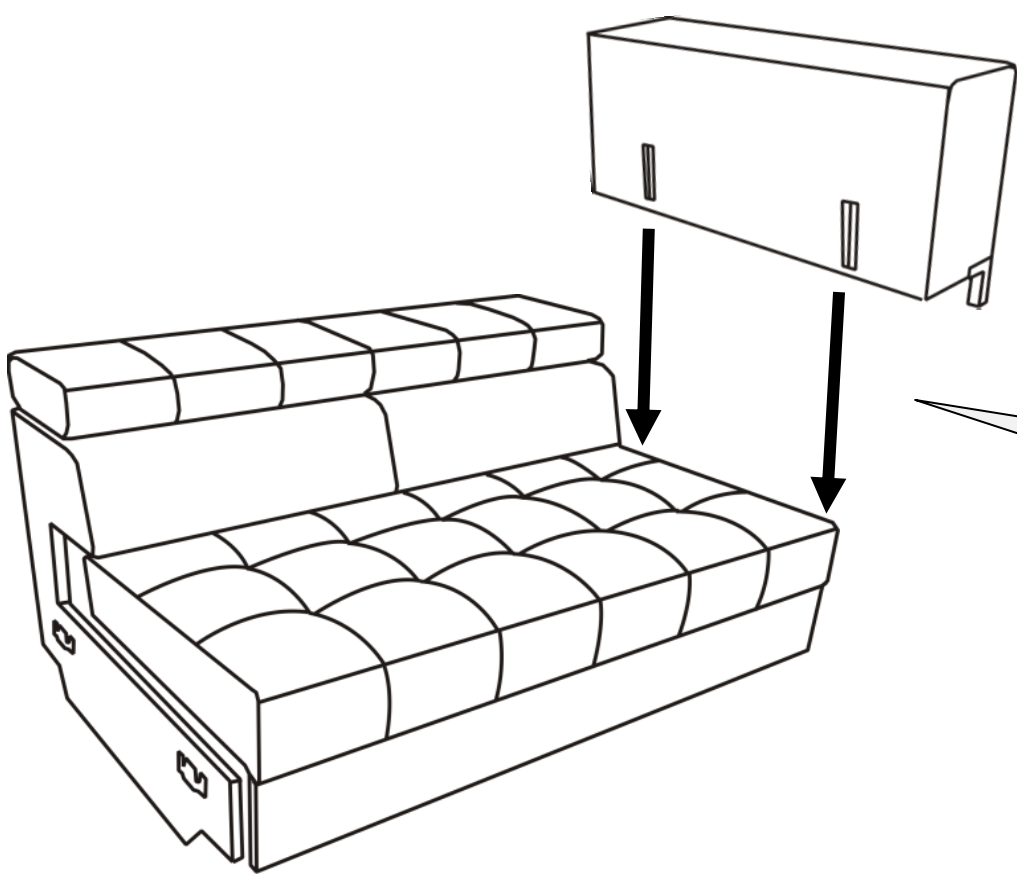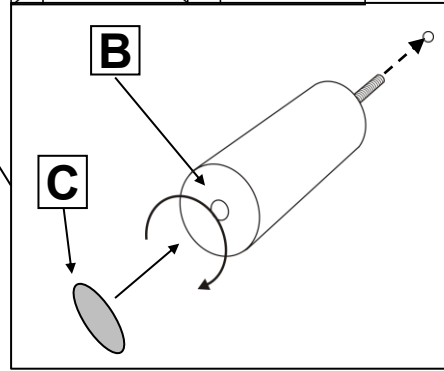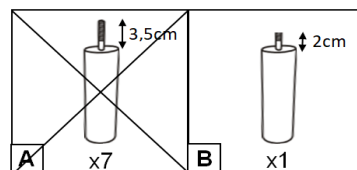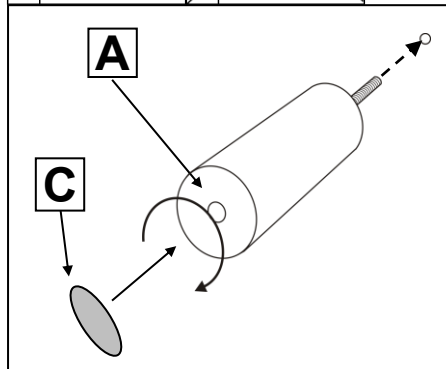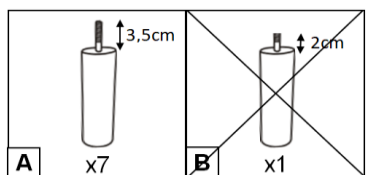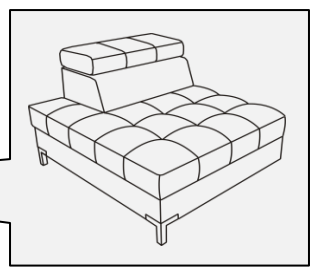

4

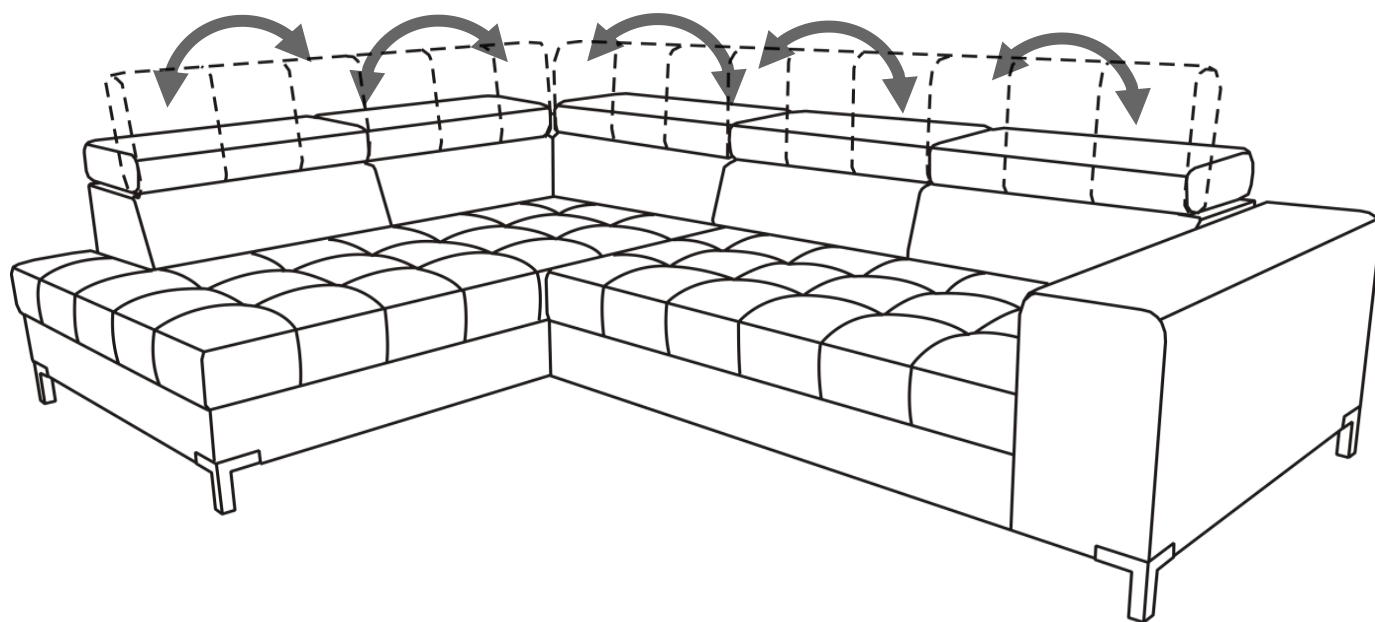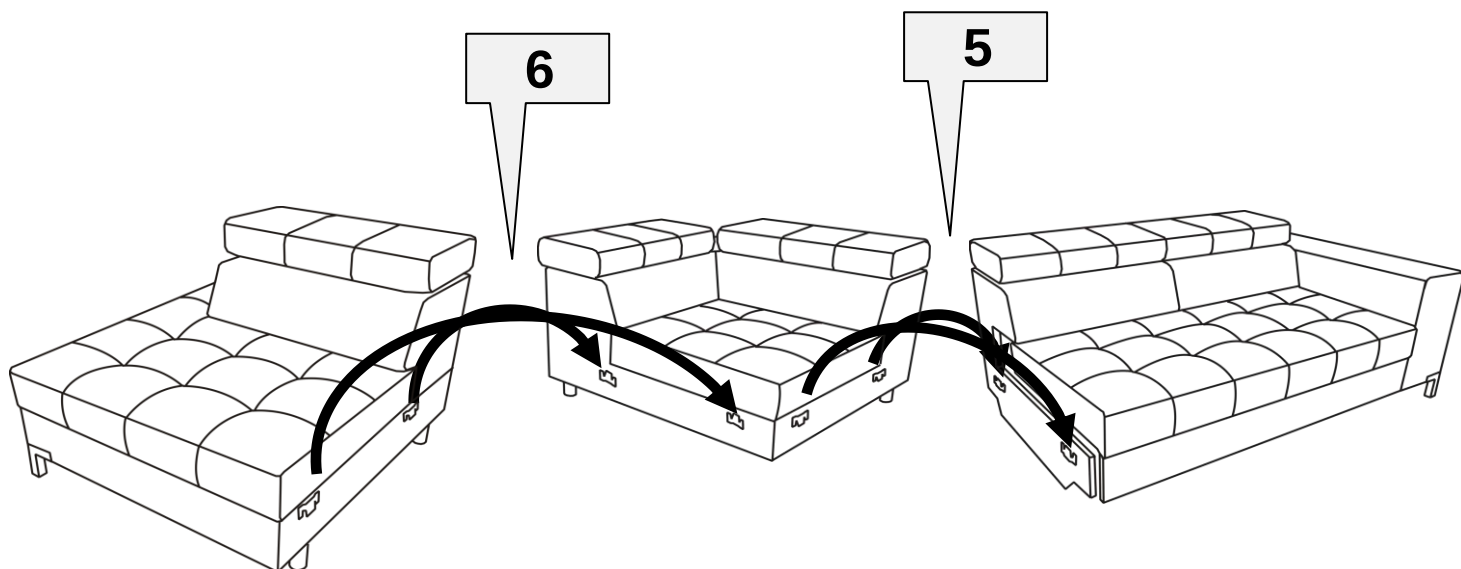

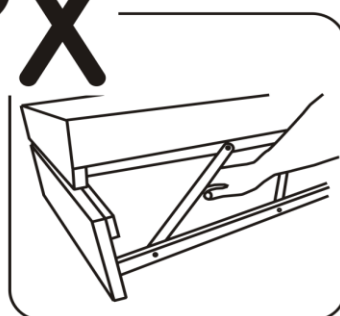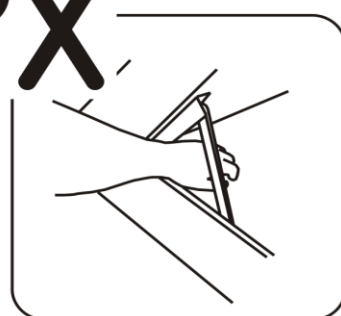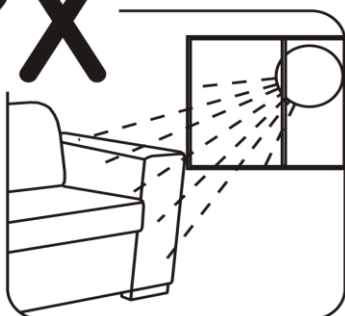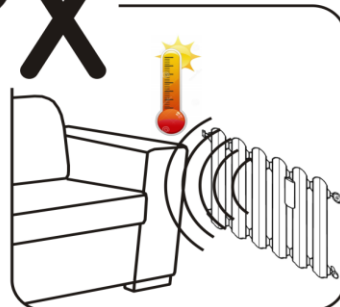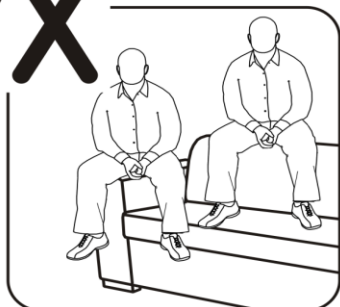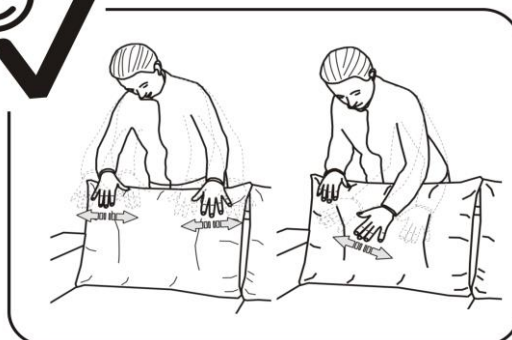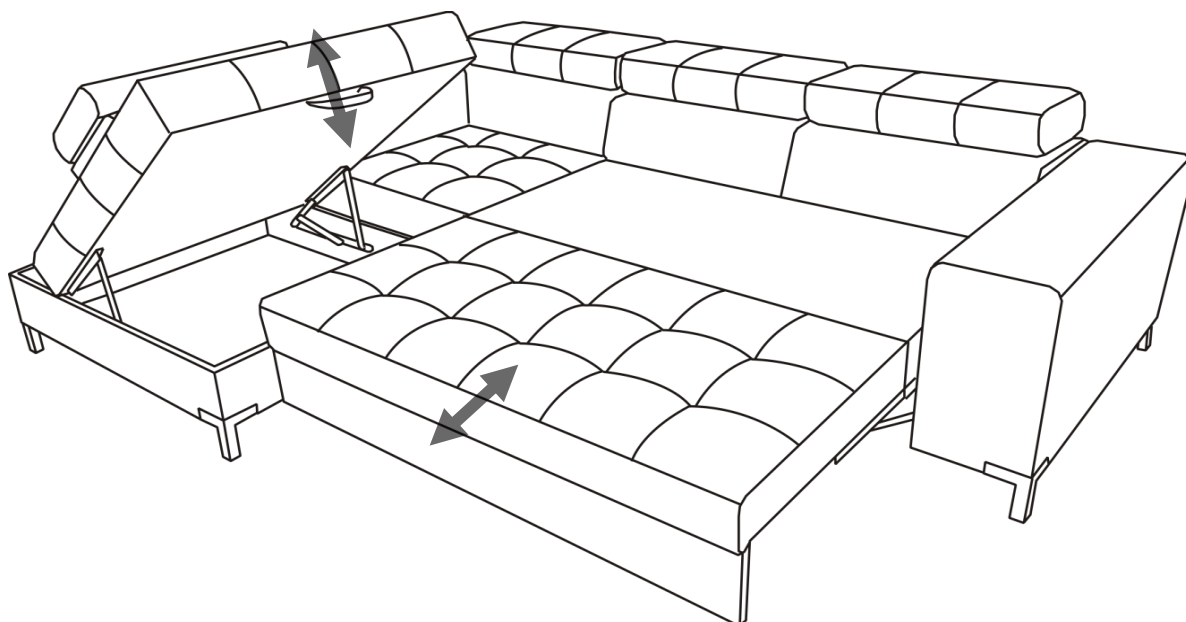

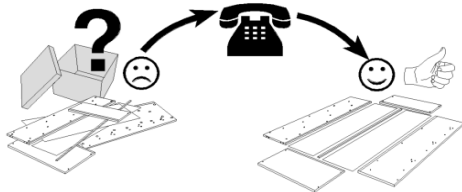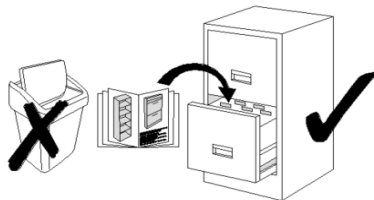

A ...	B ...	C ...
--	--	--

Service – Dienstverlening – Serwis – Servis – Сервисная служба – Assistenza - Szerviz	
Typ – Type – Tip – Тип – Тірүс - Tipo	
A	
B	
C	