

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
Bosch	BSS61CARP/04	Unlimited
Bosch	BCS611AM/04	Unlimited
Bosch	BCS612KA2/04	Unlimited
Bosch	BCS611AM/05	Unlimited
Bosch	BSS61CARP/03	Unlimited
Bosch	BCS612KA2/01	Unlimited
Bosch	BCS611AM/01	Unlimited
Bosch	BCS612KA2/03	Unlimited
Bosch	BCS611AM/03	Unlimited
Bosch	BSS61CARP/02	Unlimited
Bosch	BCS612KA2/02	Unlimited
Bosch	BCS611AM/02	Unlimited
Bosch	BCS61113/02	Unlimited
Bosch	BBS612PCK/02	Unlimited
Bosch	BCS61BAT2/02	Unlimited
Bosch	BCS612W/02	Unlimited
Bosch	BKS611MTB/01	Unlimited
Bosch	BKS611MTB/02	Unlimited
Bosch	BCS61BAT2/03	Unlimited
Bosch	BCS61113/03	Unlimited
Bosch	BCS612W/03	Unlimited
Bosch	BCS61113/01	Unlimited
Bosch	BBS612PCK/01	Unlimited
Bosch	BBS612PCK/03	Unlimited
Bosch	BCS61BAT2/01	Unlimited
Bosch	BKS611MTB/03	Unlimited
Bosch	BCS61BAT2/04	Unlimited

Bosch	BCS611AM/06	Unlimited
Bosch	BCS612W/04	Unlimited
Bosch	BBS612PCK/04	Unlimited
Bosch	BCS612W/01	Unlimited
Bosch	BCS61113/04	Unlimited
Bosch	BKS611MTB/04	Unlimited
Bosch	BCS61113/07	
Bosch	BCS611AM/07	
Bosch	BBS612PCK/07	
Bosch	BKS611MTB/07	