 


Assembly Instruction

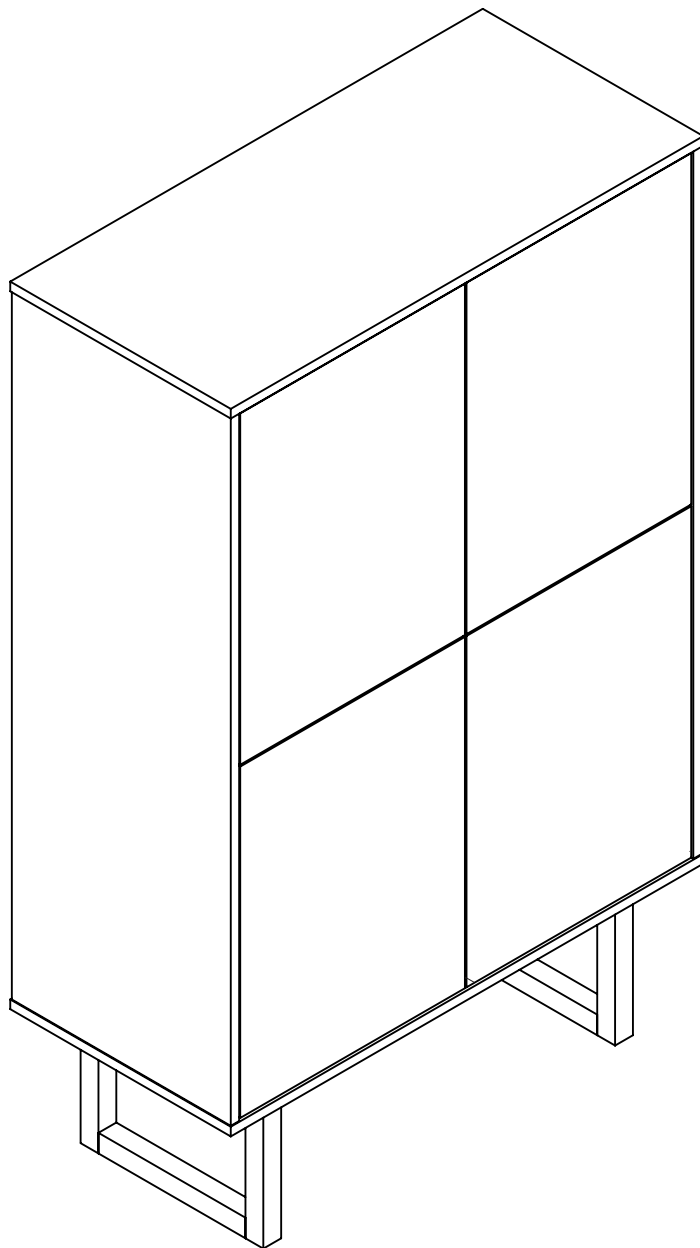

900x420xh1452



Batch code:



Woodman OÜ

Made in Estonia
Mäo, Järvamaa
www.woodman.ee
support@woodman.ee

Dear Customer

Congratulations on your new purchase. Follow this advice and get the best result when assembling the product.

 
Read the instruction carefully before you start
Get help, If two persons are required for assembly
Make sure, you have all parts on the total material list
Work on a soft, flat surface to avoid any damage to the finish

Follow the assembly instruction
Tighten the furniture joints after a month
Keep the assembly instruction



Allocate time

Some furniture can be assembled in minutes. Others - e.g. products in several parts - can take more than an hour to finish. Make sure to allocate good time or divide up the work.


Tools needed

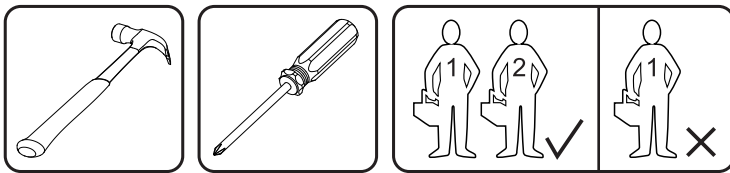


Don't use!!!

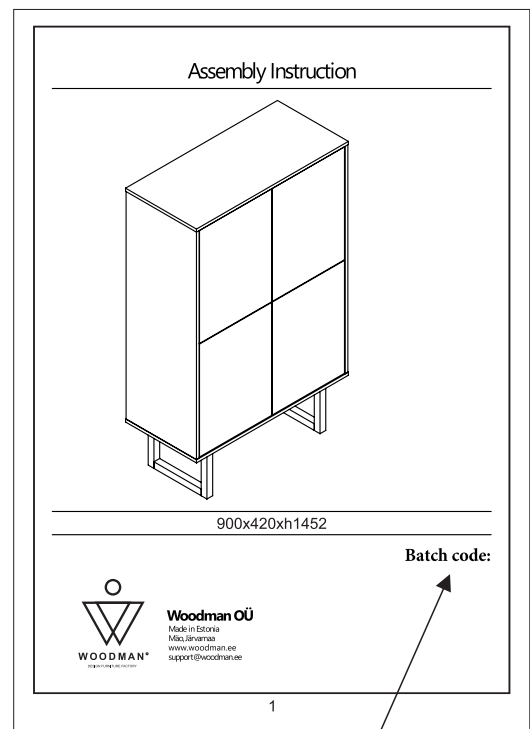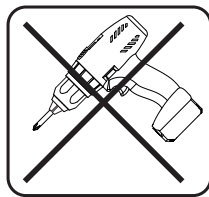  


ENG - In case of any quality issues, contact your local dealer and always mention item Batch code.
FR - En cas de problèmes de qualité, contactez votre revendeur local et mentionnez toujours la référence de l'article / Batch code.
IT - In caso di eventuali problemi di qualità, contattare il rivenditore locale e citare sempre punto di riferimento No / Batch code.
ES - En caso de problemas de calidad, póngase en contacto con su distribuidor local y mencione siempre la referencia del artículo / Batch code.
DE - Wenn Sie Qualitätsprobleme haben wenden Sie sich bitte an ihren örtlichen Händler und erwähnen Sie immer die Artikelnummer / Batch code.

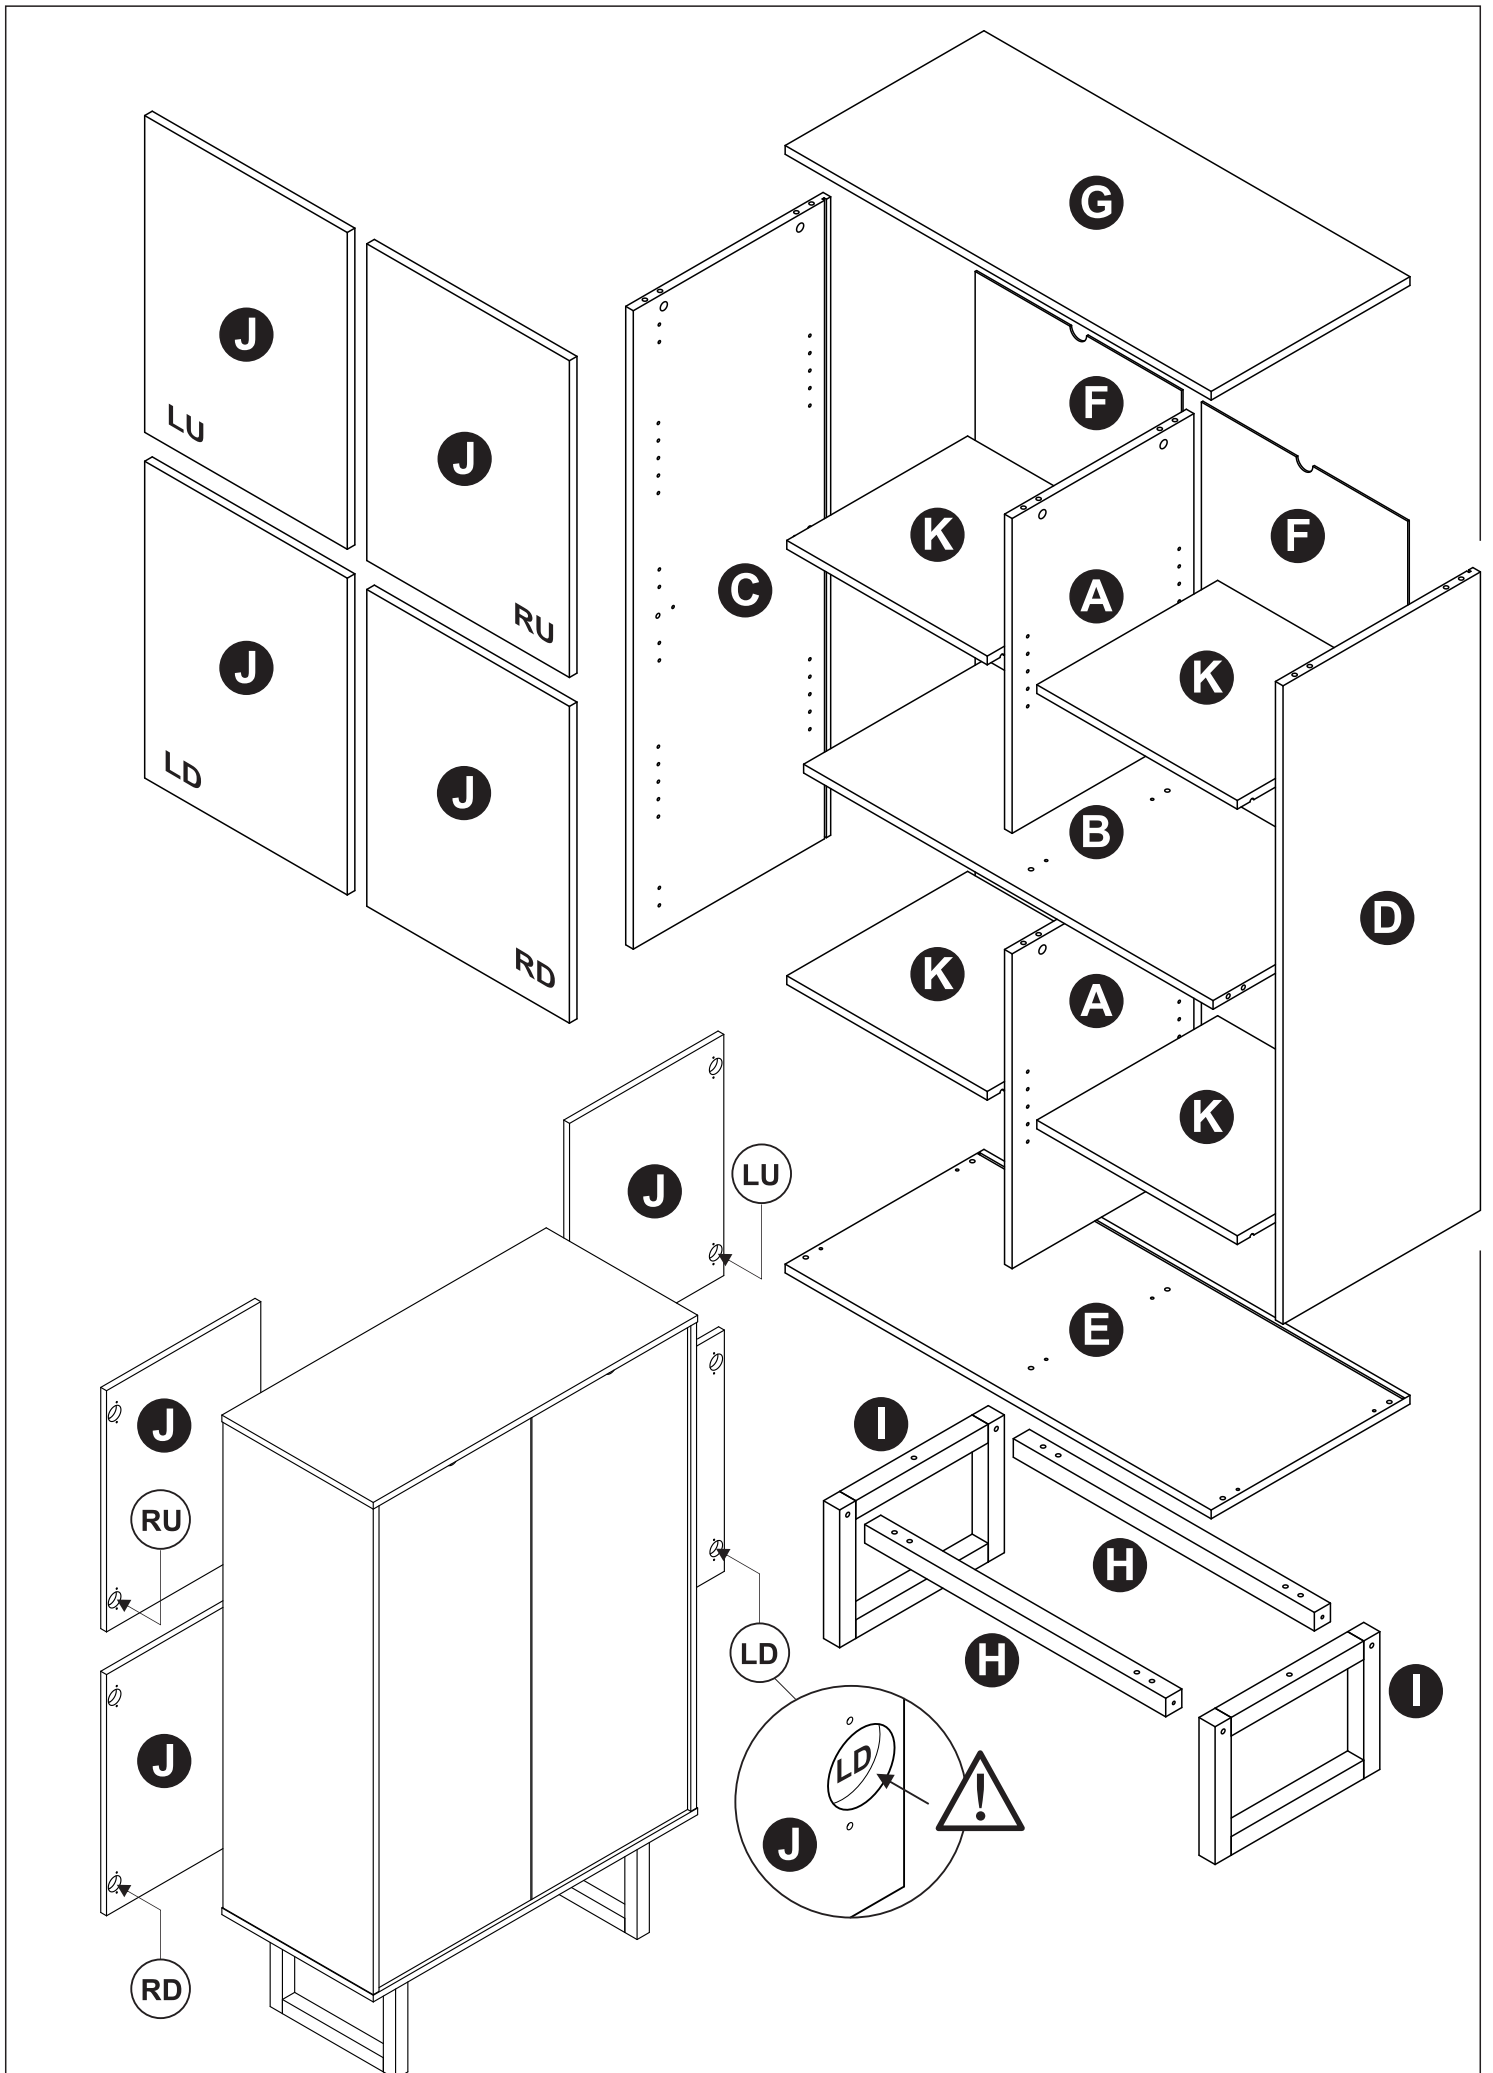 


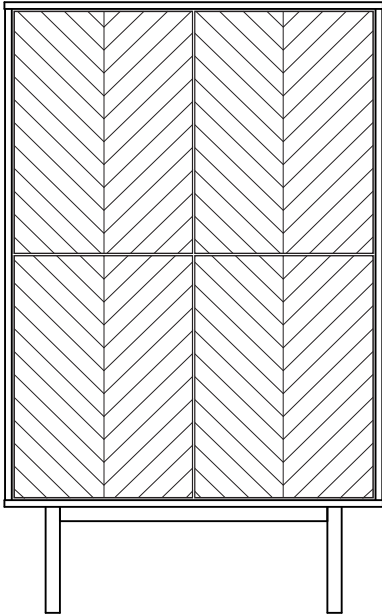 

A10 x4

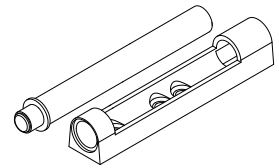 


A11 x28

 


3,5x15 mm

 A1 x24

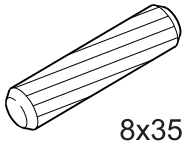






8x35

 A2 x12

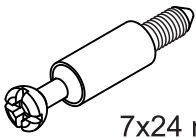


7x24 mm

     A3 x12

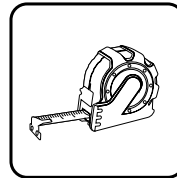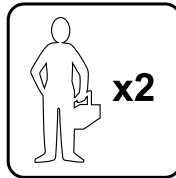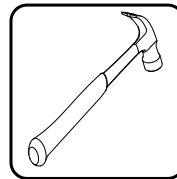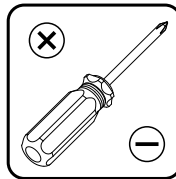


A12 x8

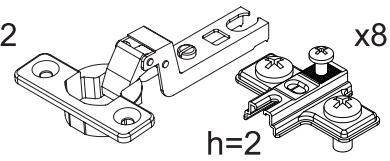 

h=2

 A13 x2

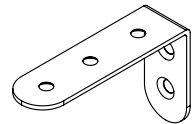


A14 x16



A4 x8



 A7 x1




4 mm

A15 x4




 A5 x8

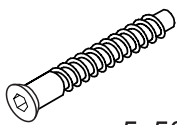


5x50 mm

 A8 x1




3 mm

 A16 x12




Ø3x20

 A6 x4

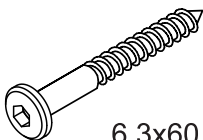


6,3x60 mm

 A9 x6

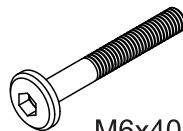




M6x40

 A17 x5






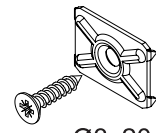


Ø3x20




 
 
 
1

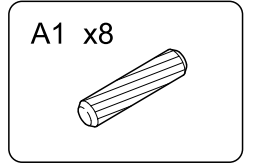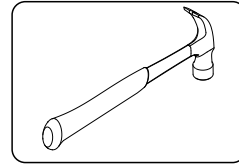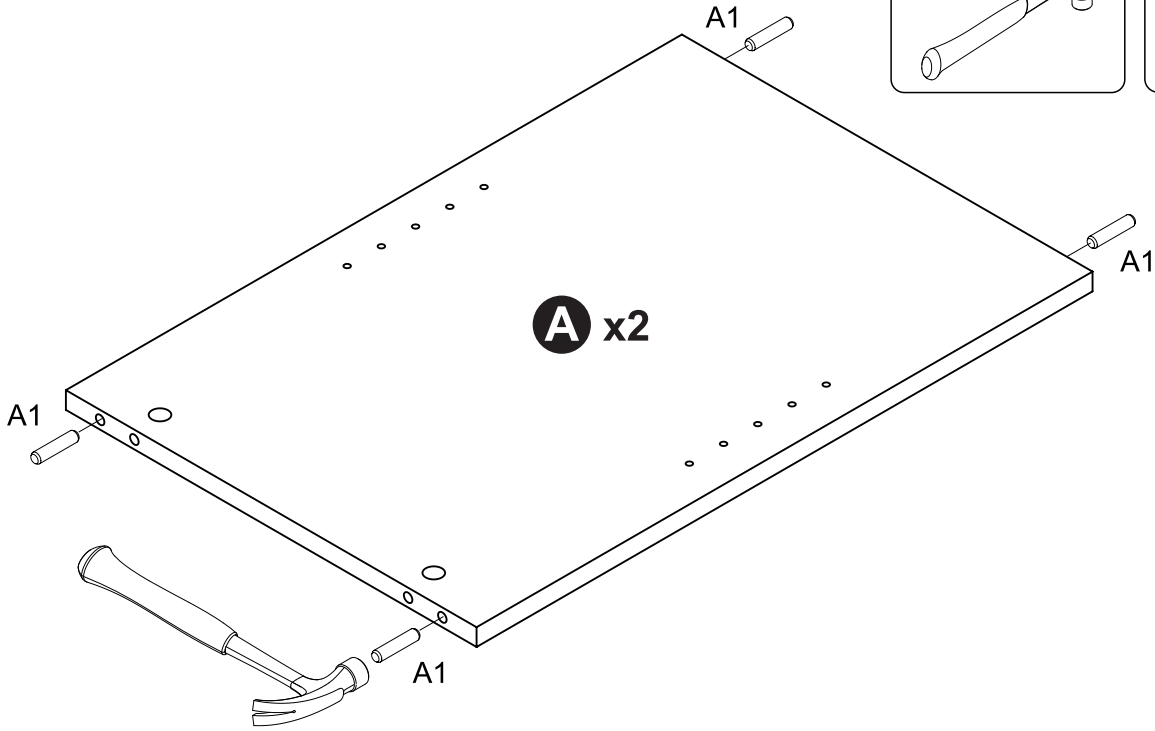




2

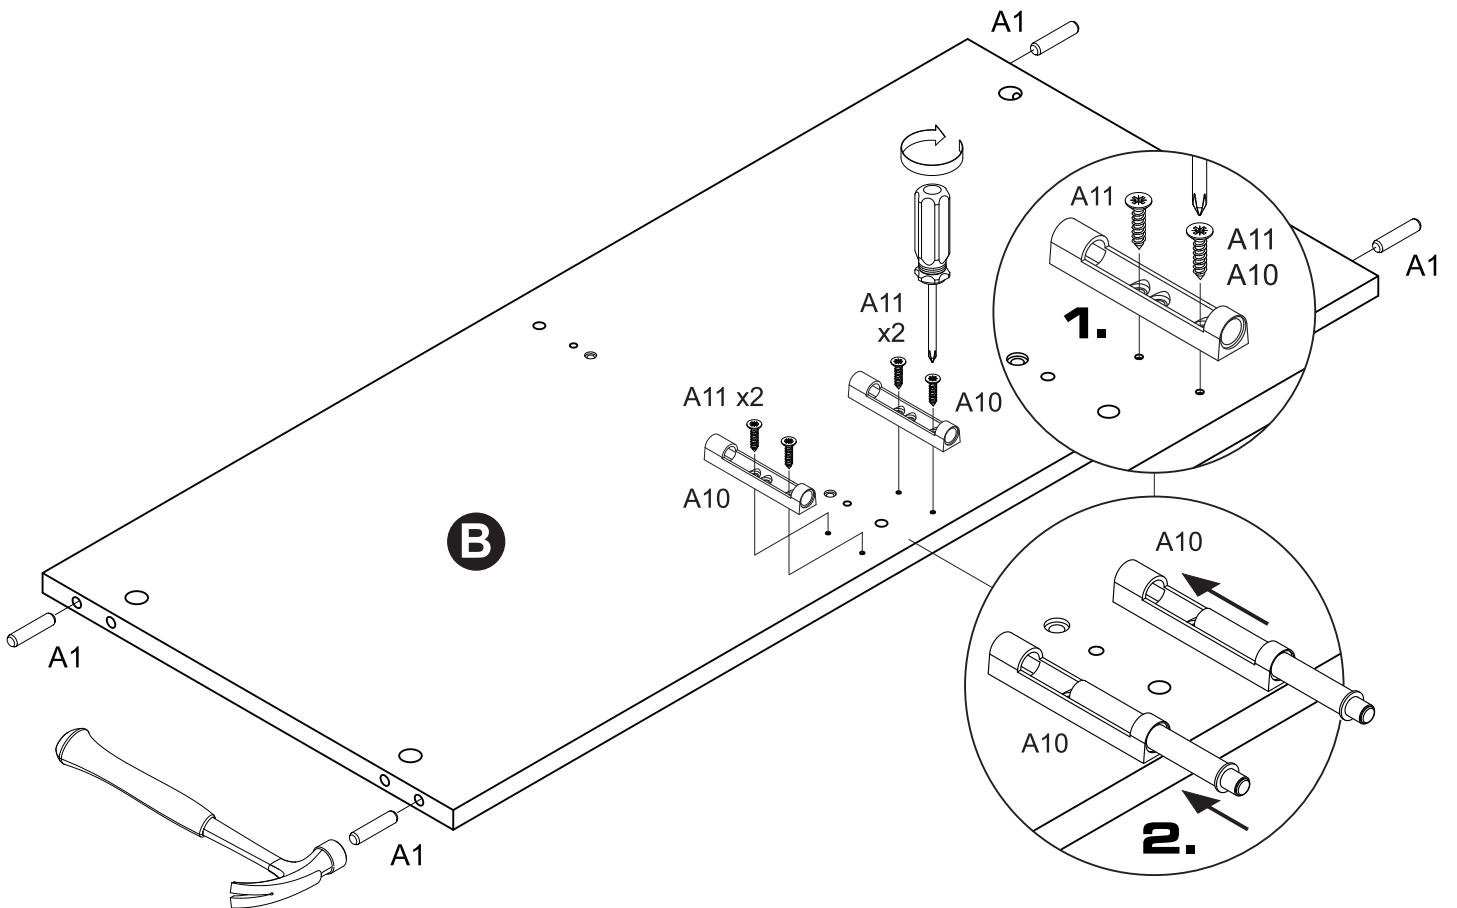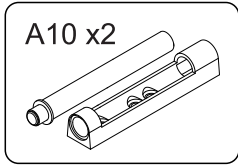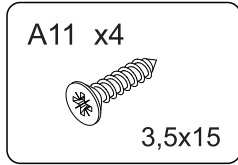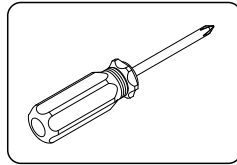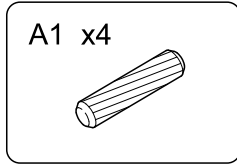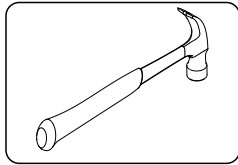      








3

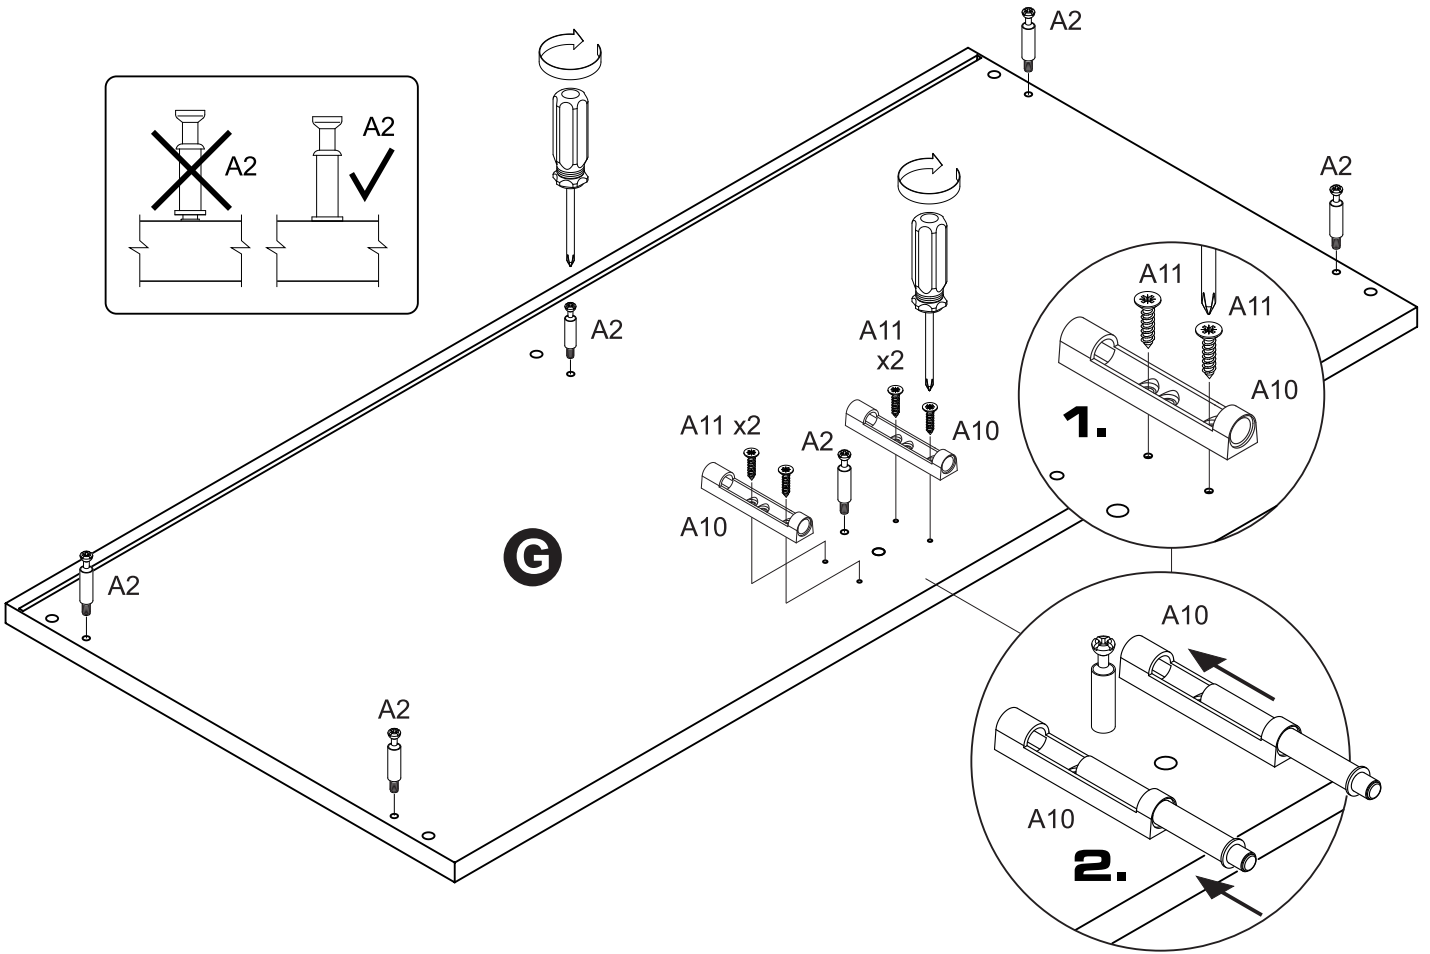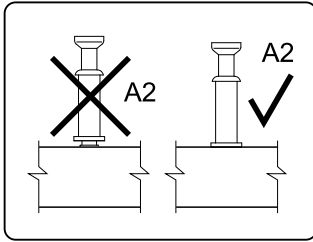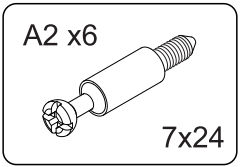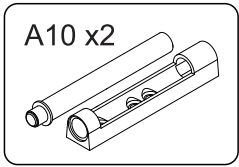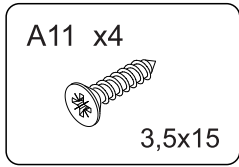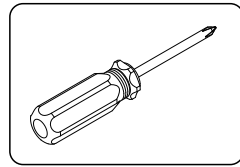      






4

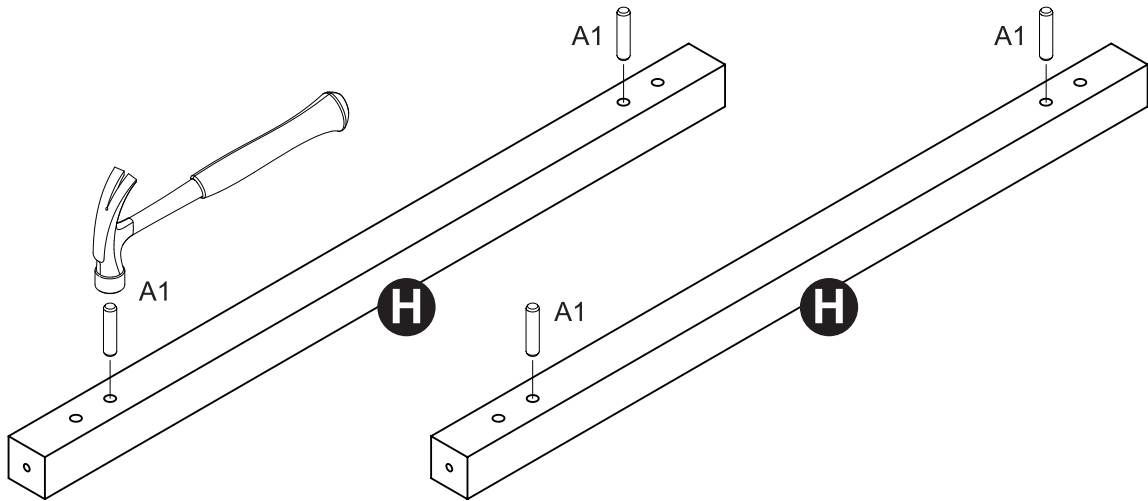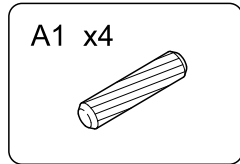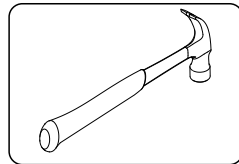   


5

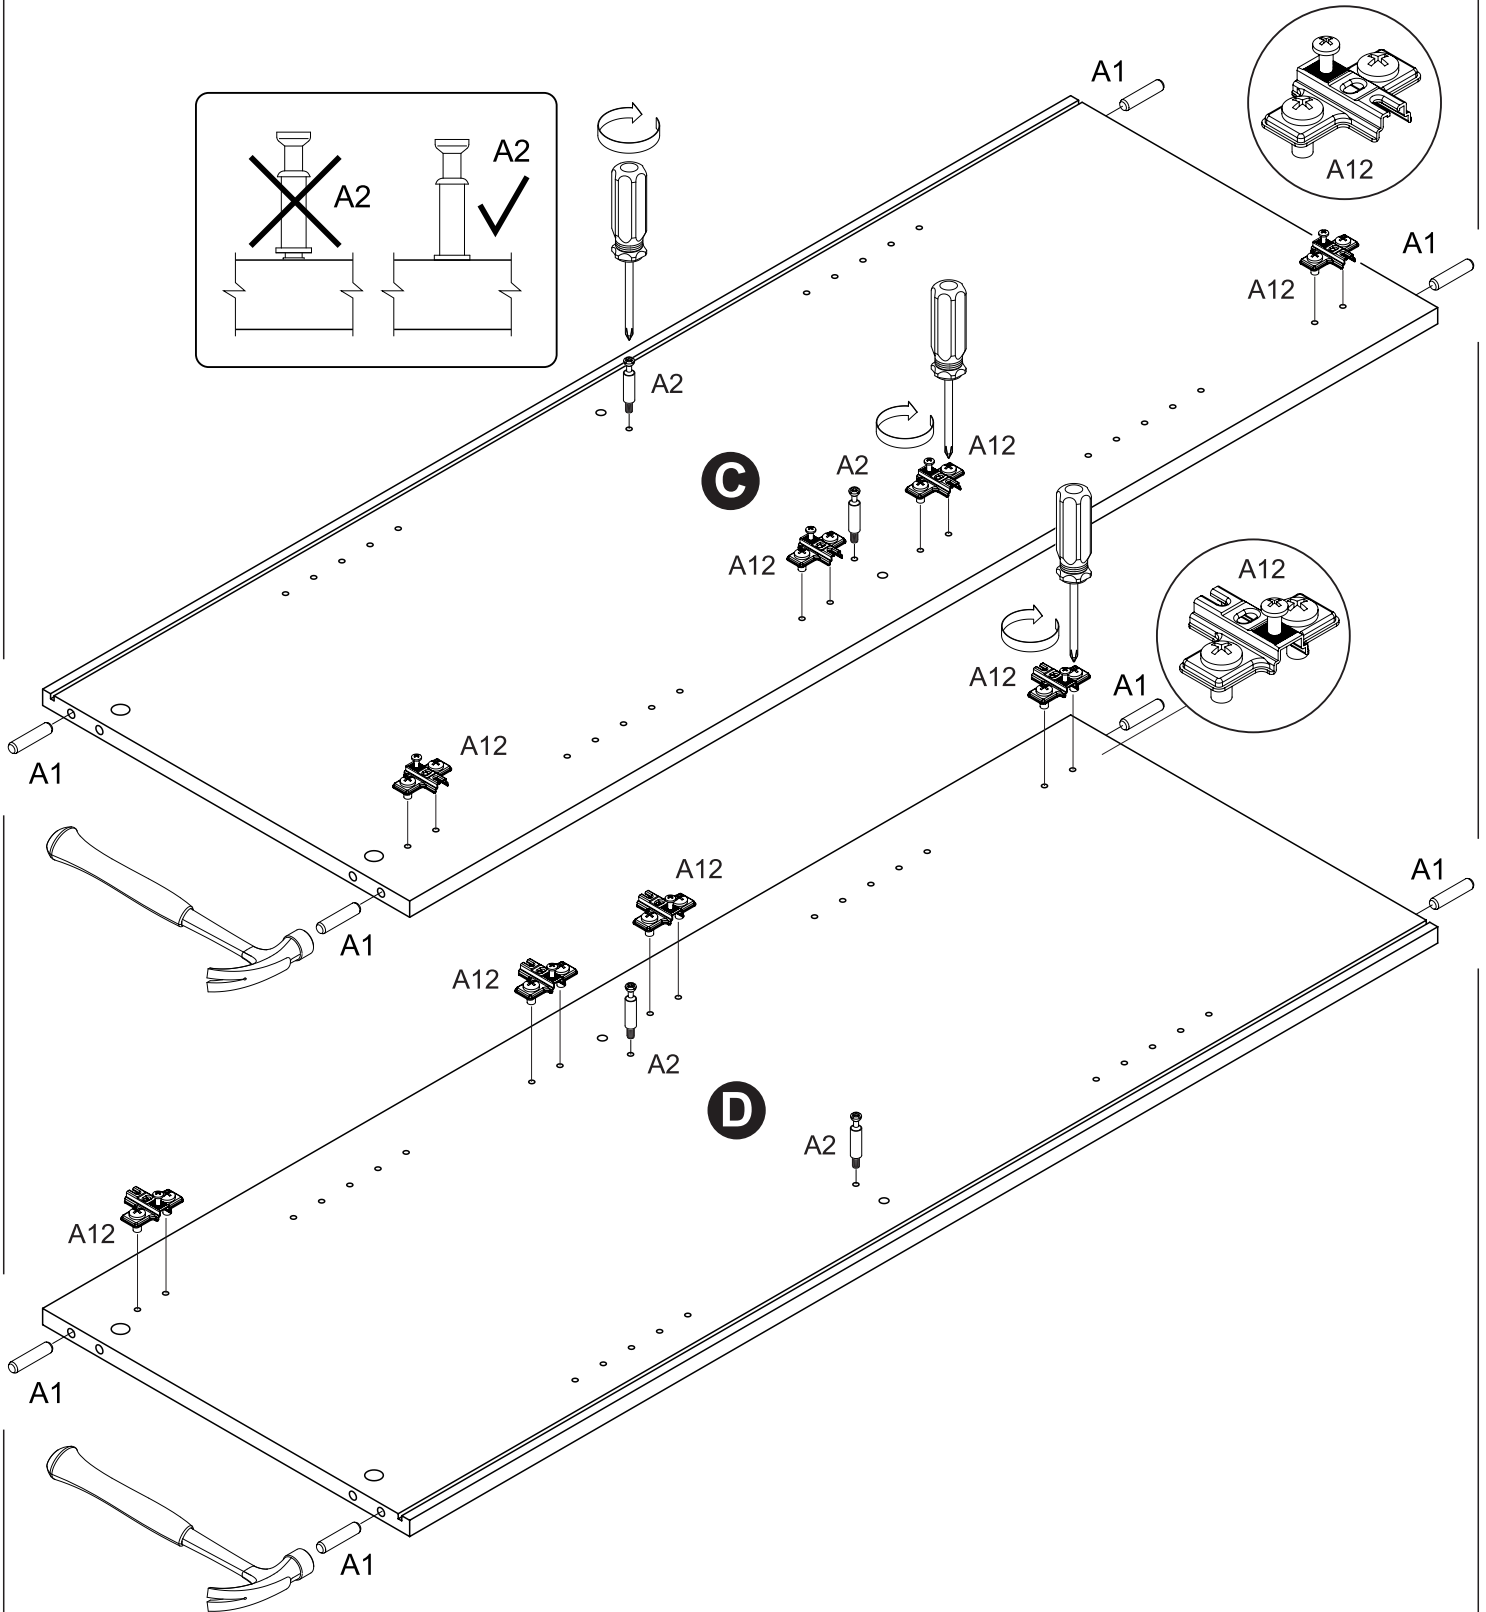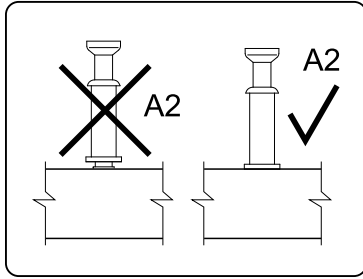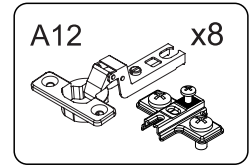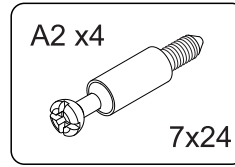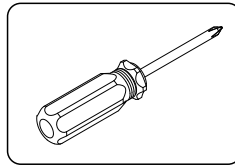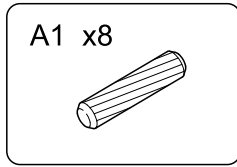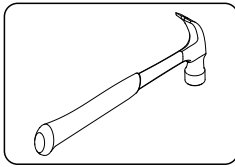       



6

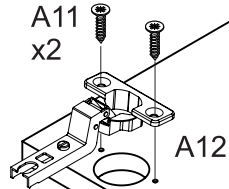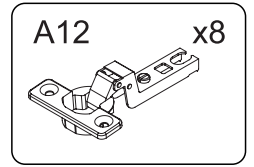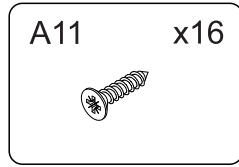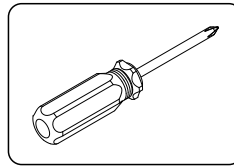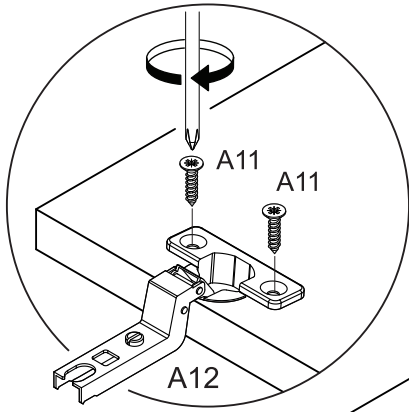     

J x4




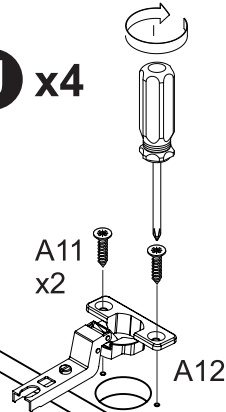 






7


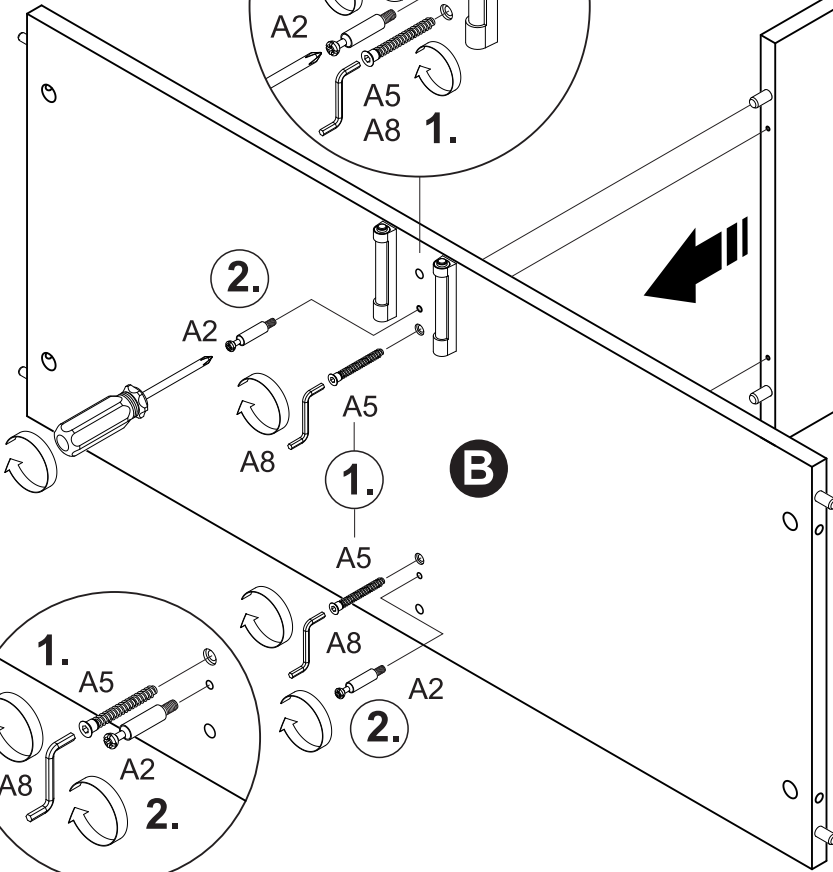 
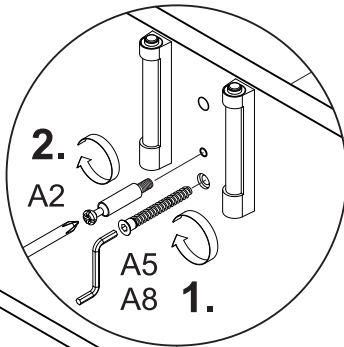 





A

               
 
 
 
 
B

 
 
 
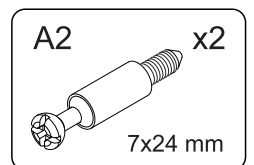 
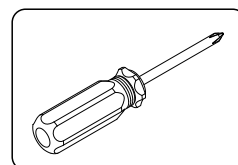 
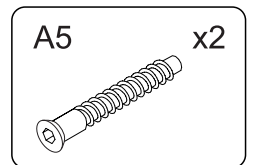 
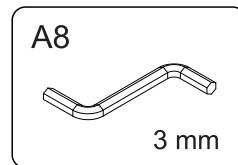 


 
 
 
 
 
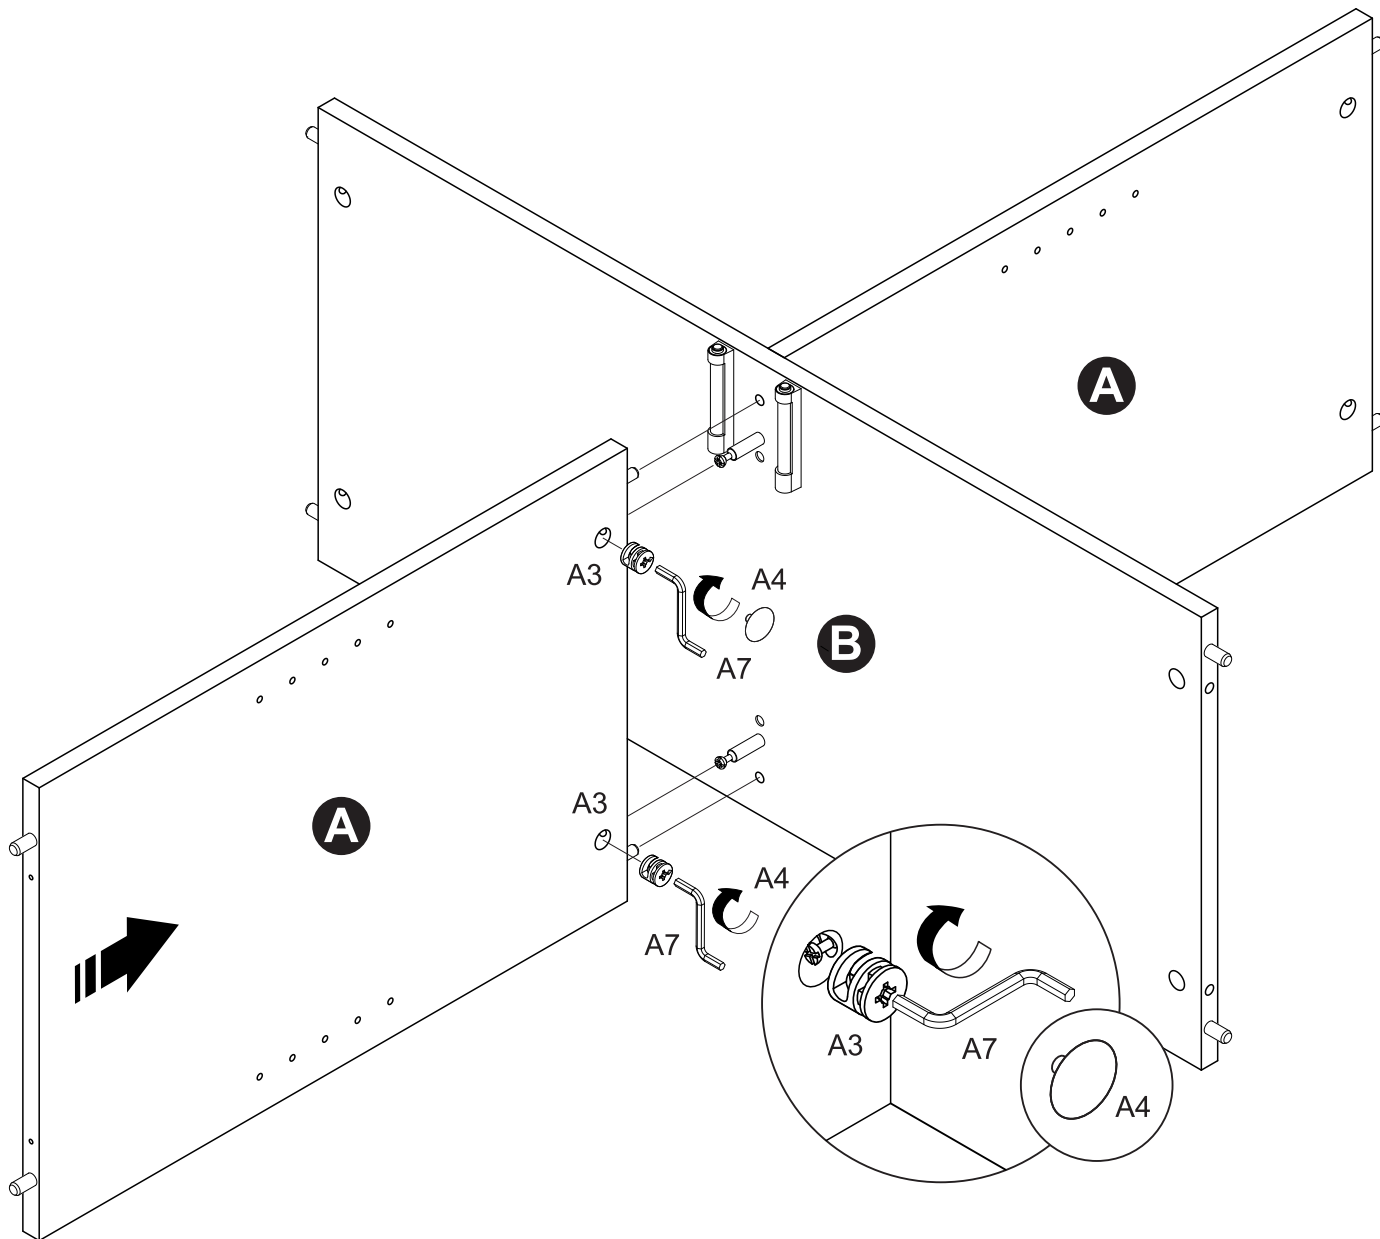 
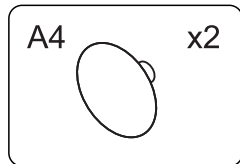 
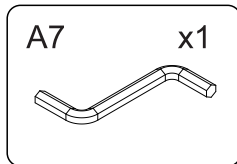 
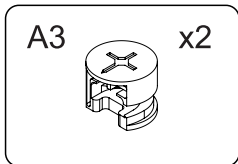 


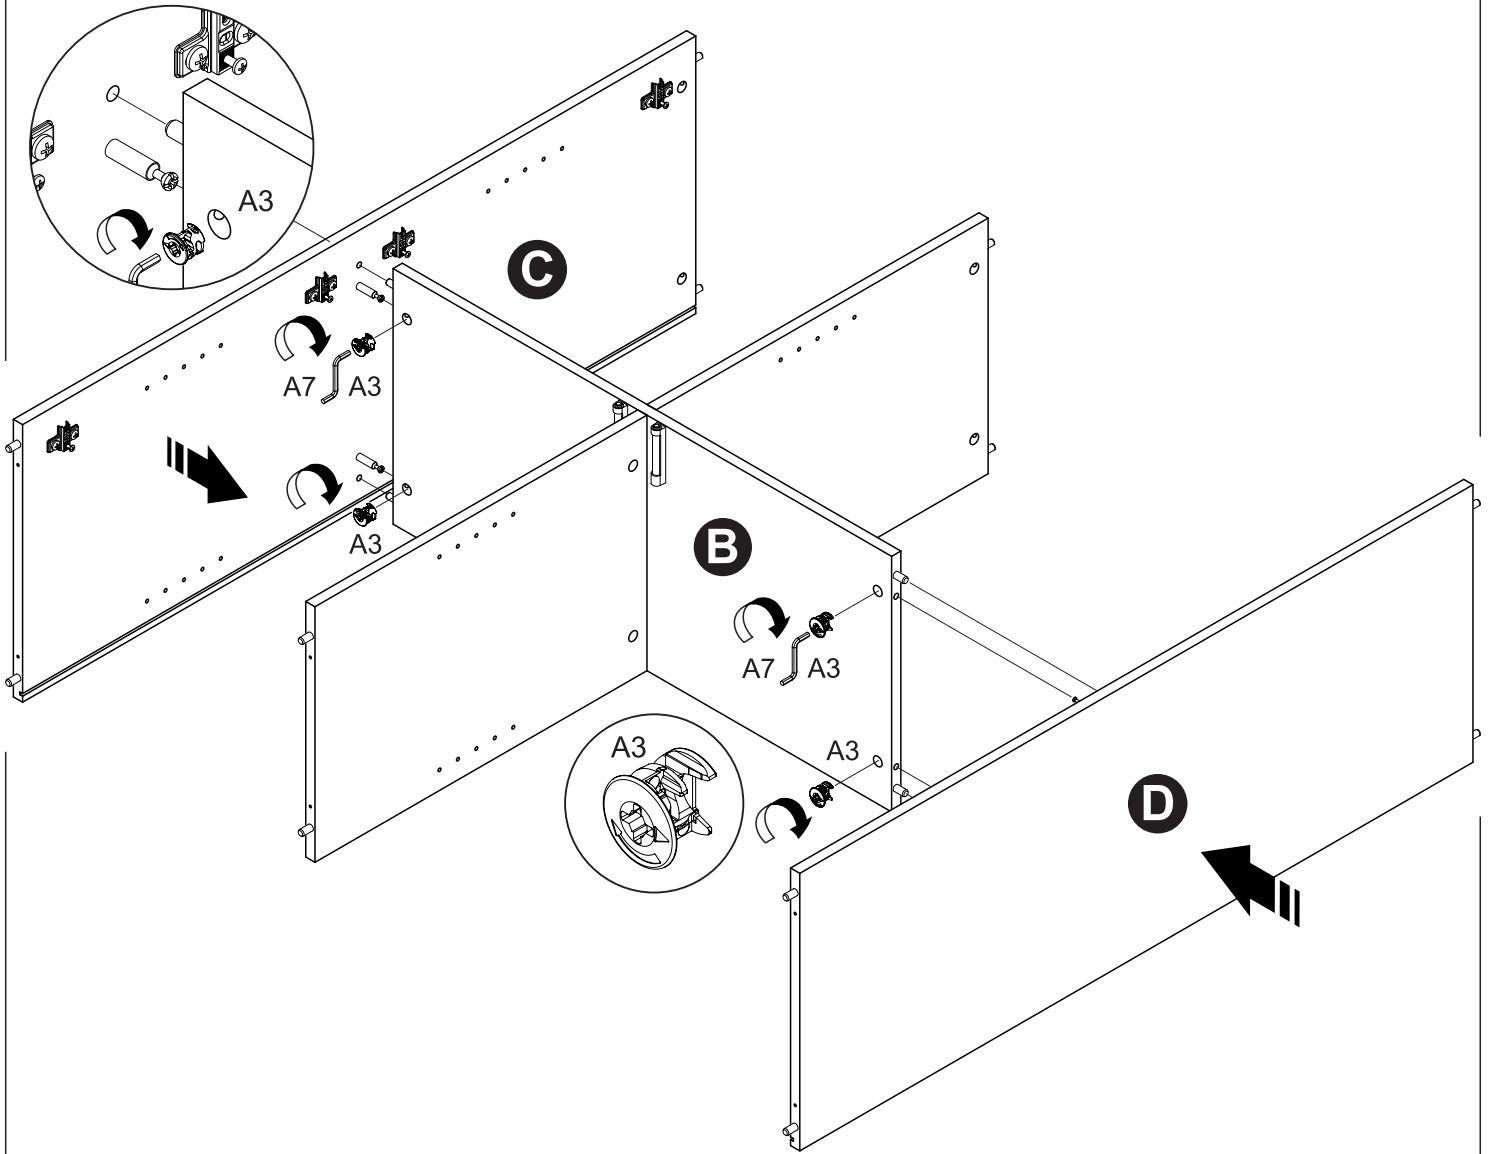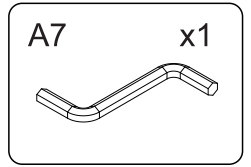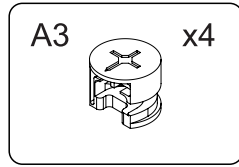 


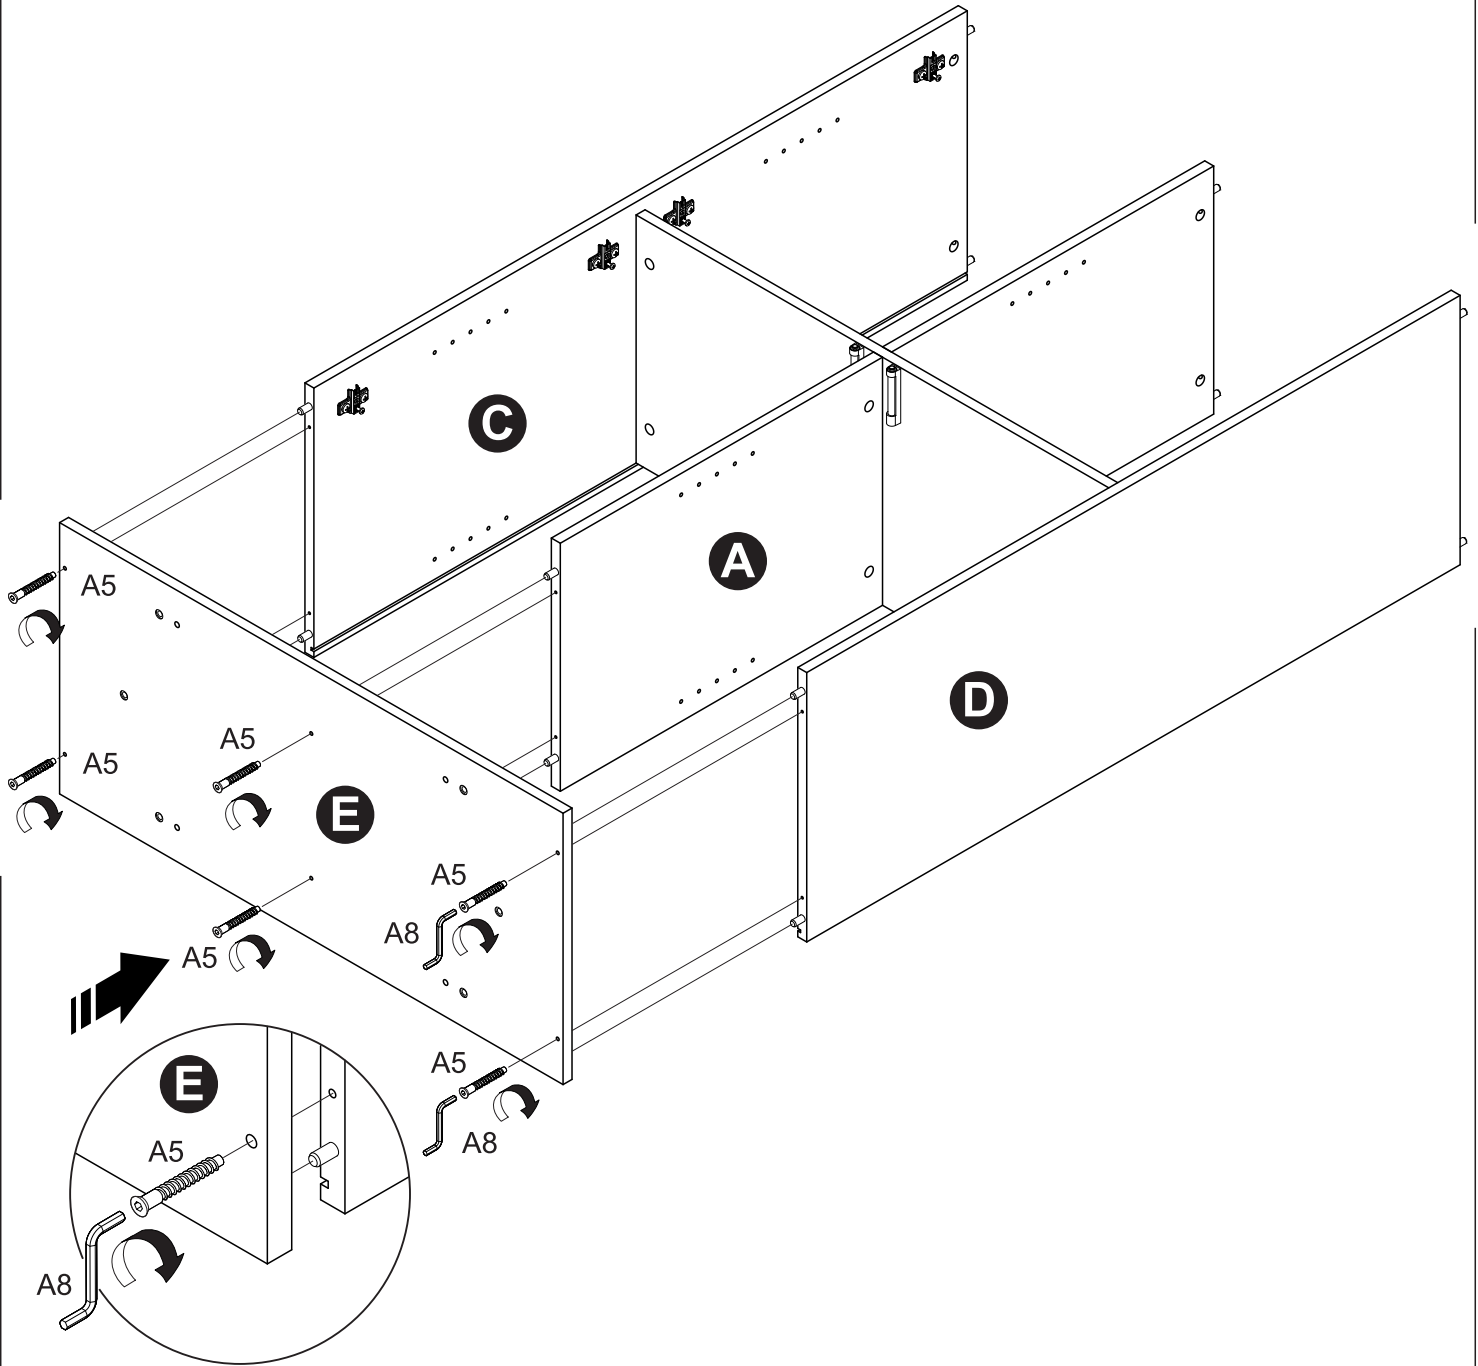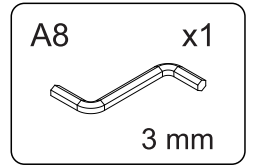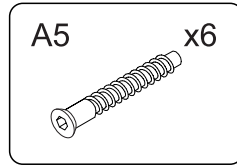

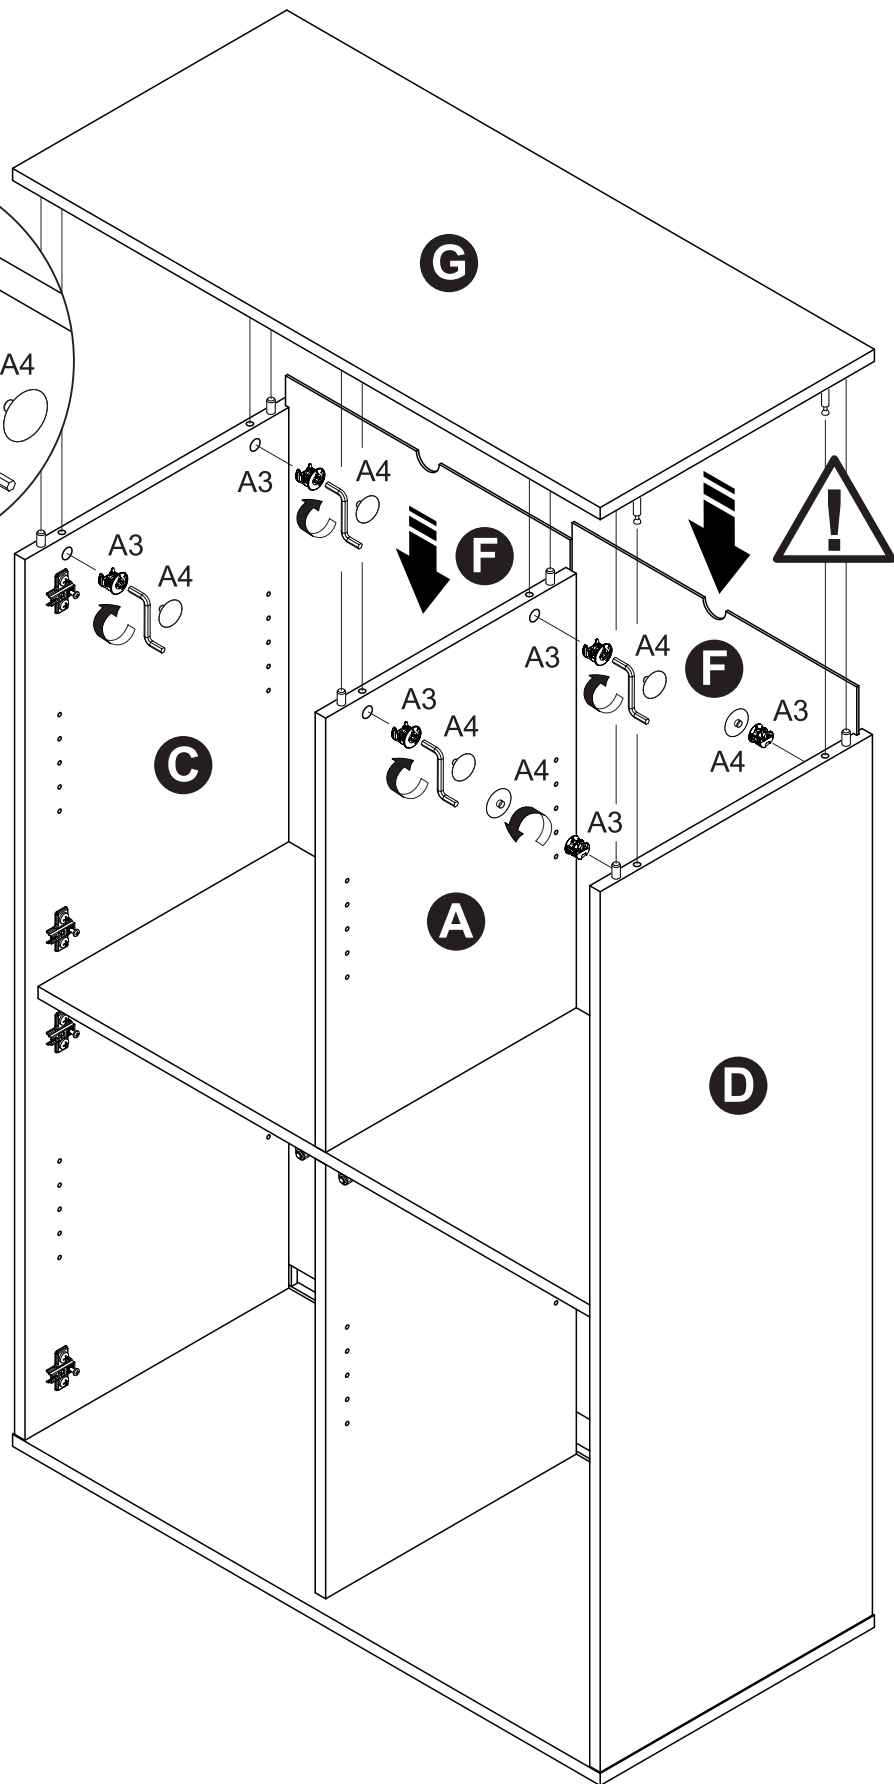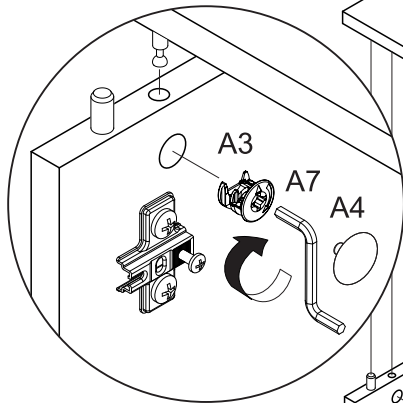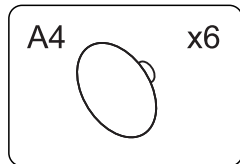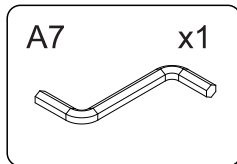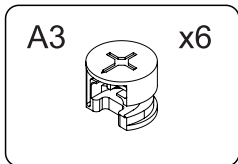

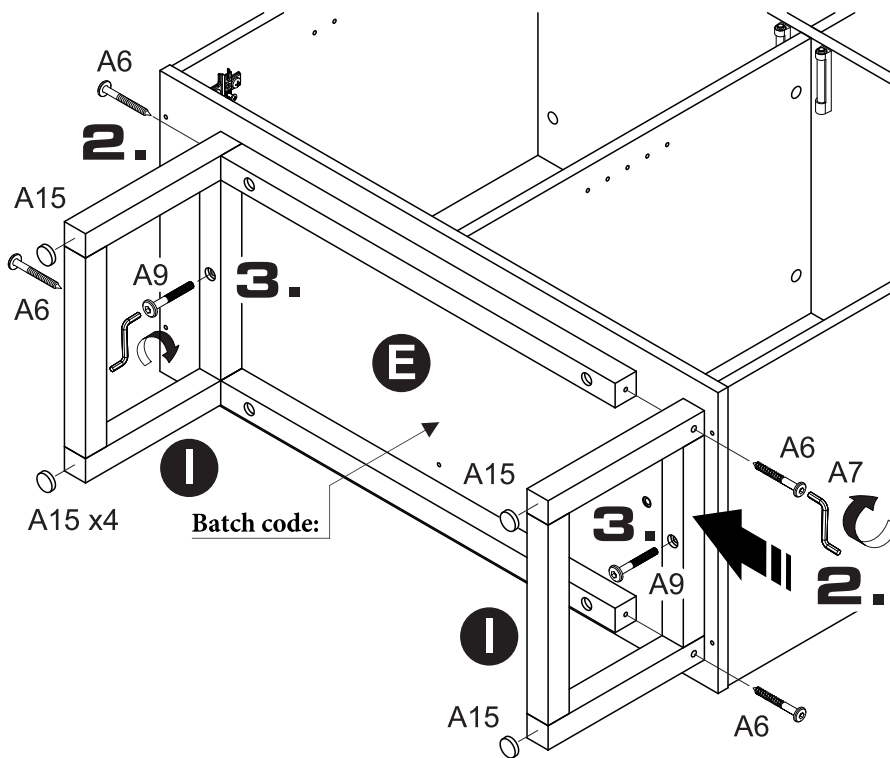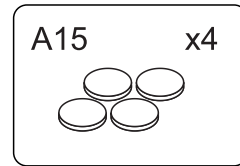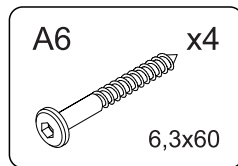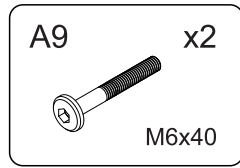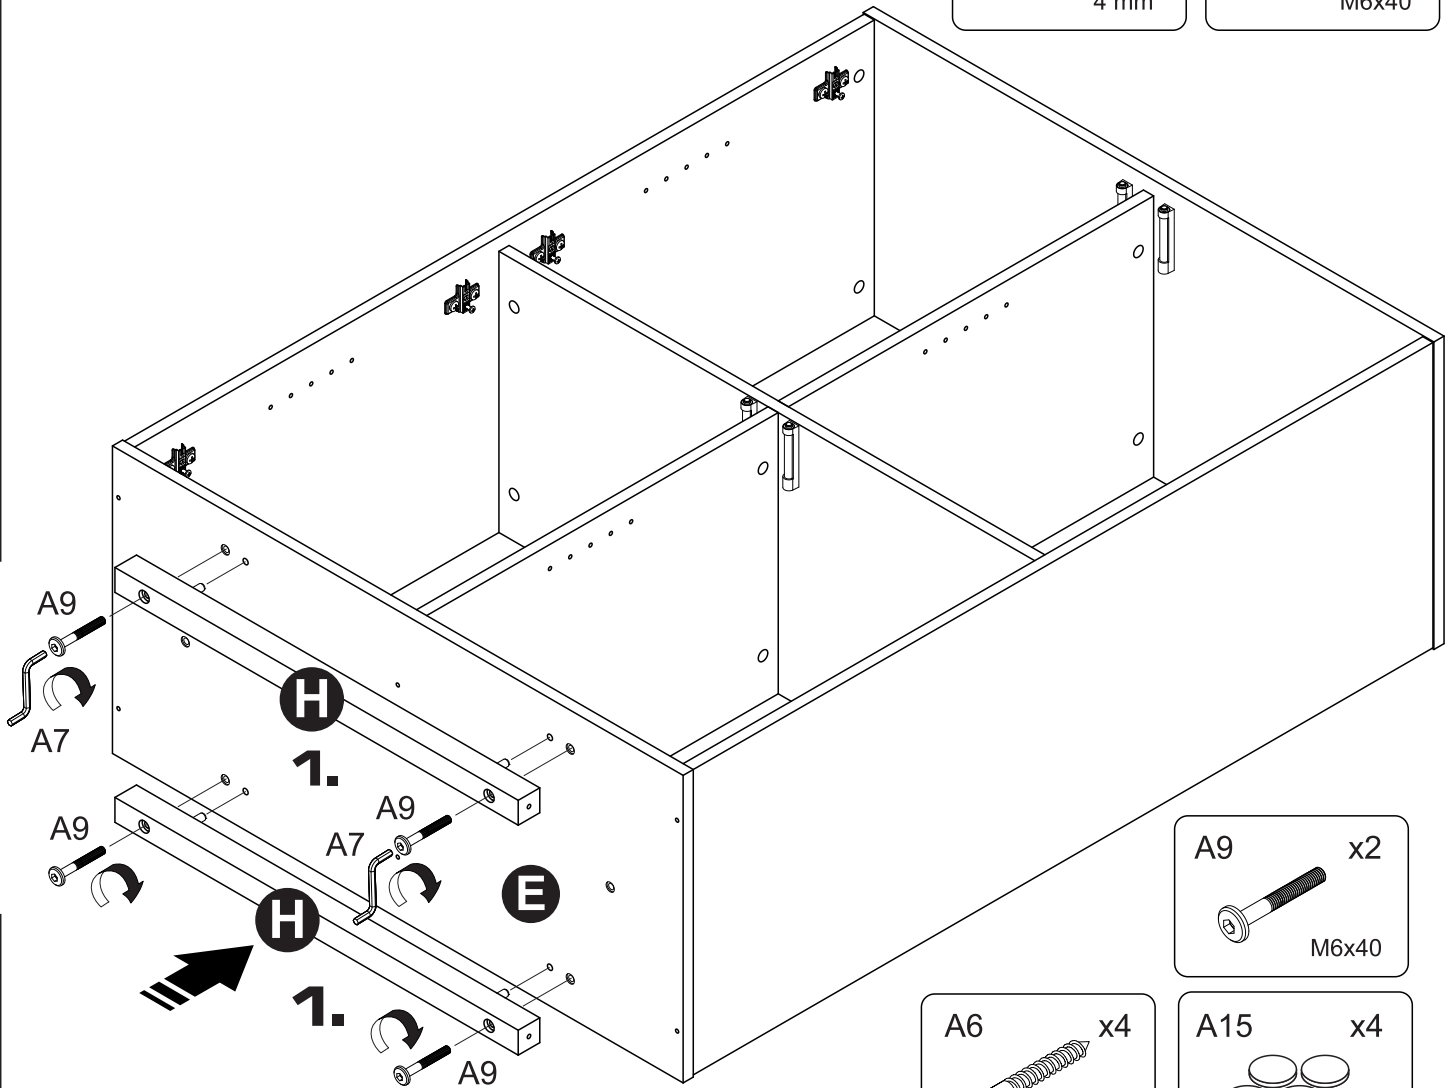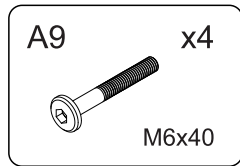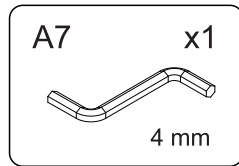

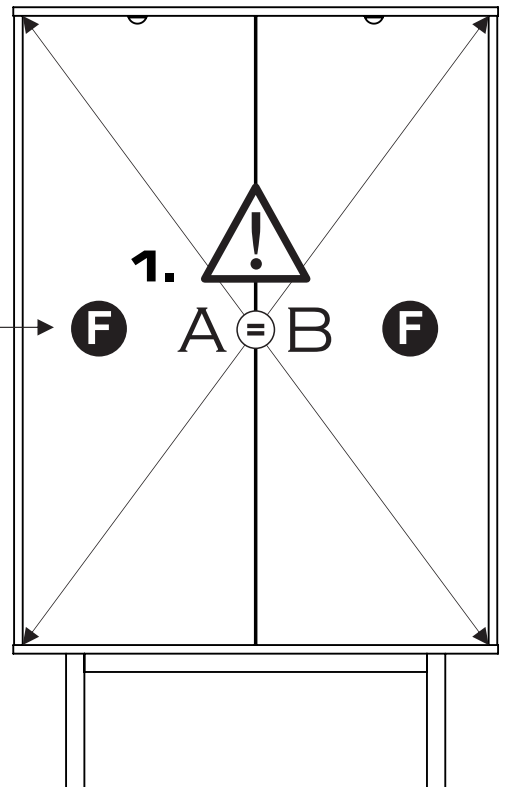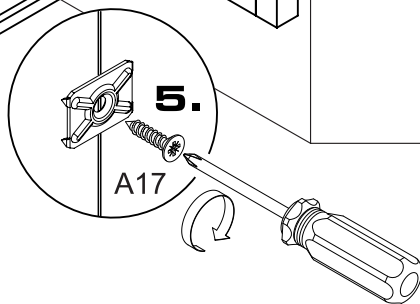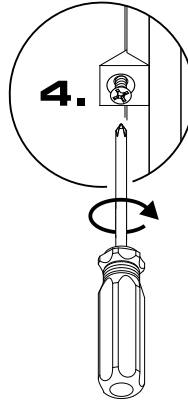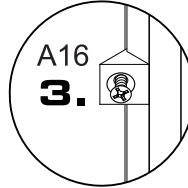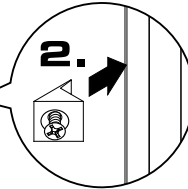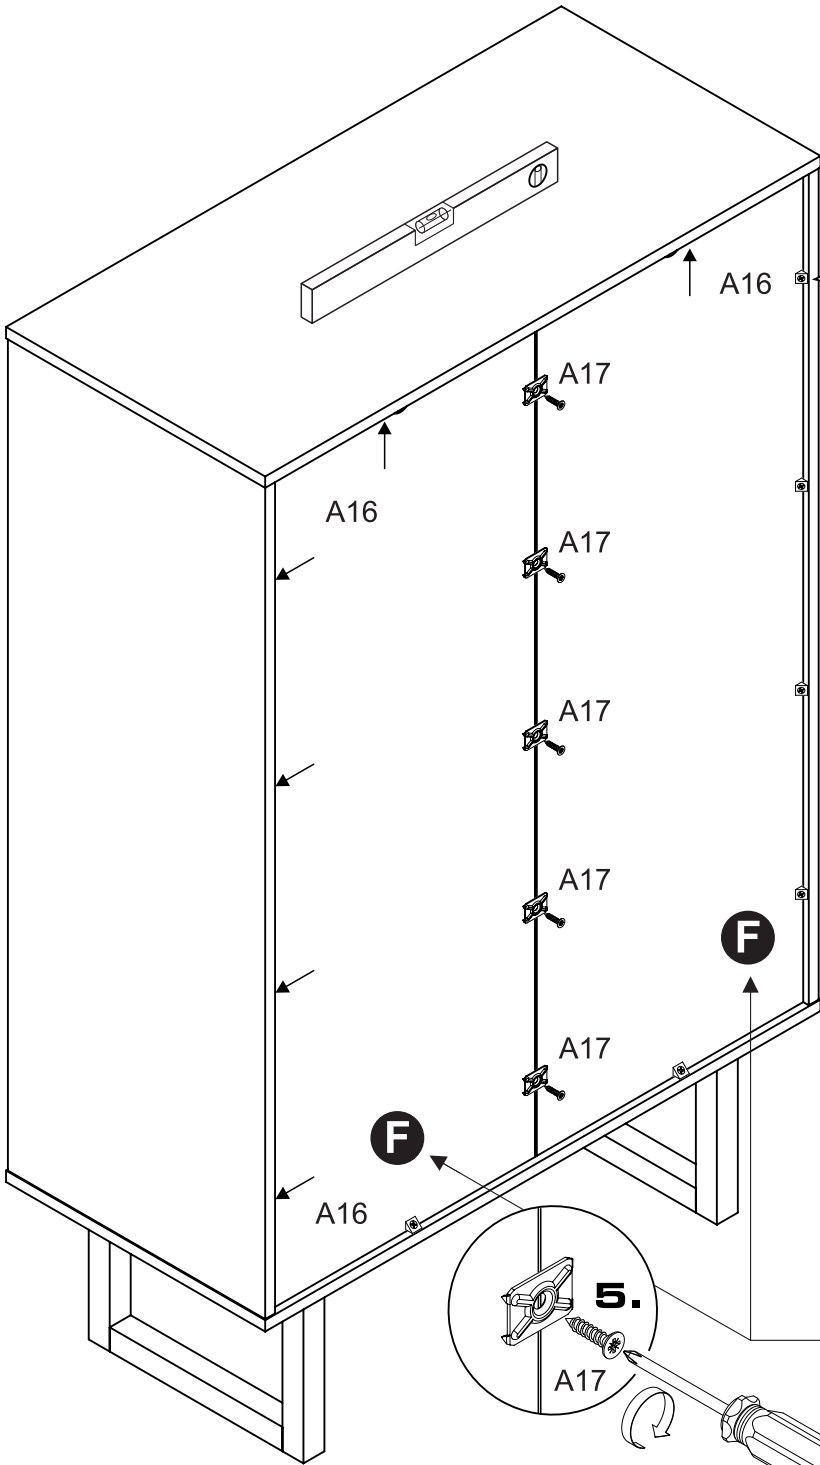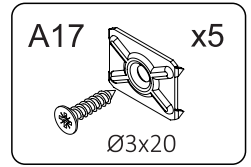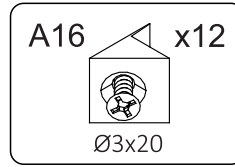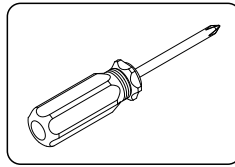

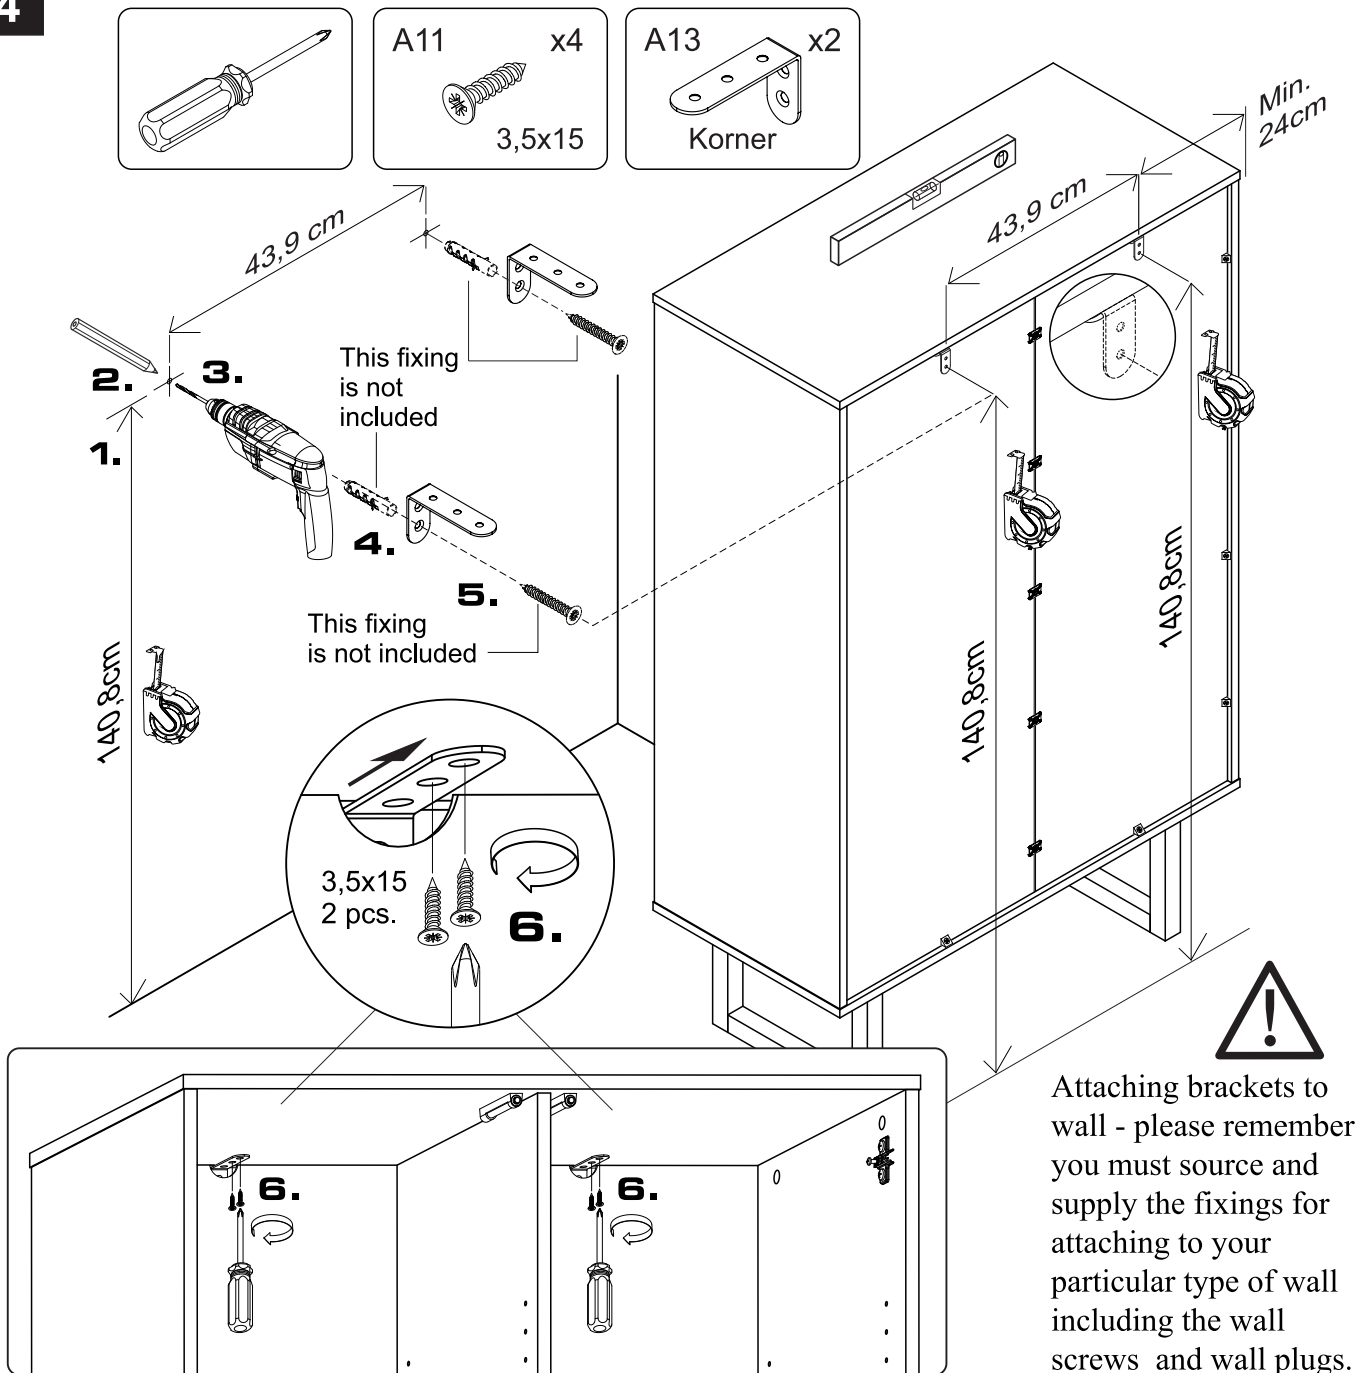

Warning : This Piece of Furniture Must Be Attached To The Wall Using The Wall Brackets Provided

In order to prevent overturning this product must be attached to an adjacent wall with the metal wall brackets provided.

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent topple over :-

 
 
- Use the wall brackets provided
- Never allow children to climb or hang on furniture
- Unless specifically designed to accommodate, do not set TV's or other heavy objects on top of this product.

Due to the different types of wall you might have in your home Woodman cannot provide you with the exact fixings for your wall. We supply you with the fixings for attaching the brackets to the furniture. You must assess the type of wall you want to fix the furniture to and provide the appropriate type of wall fixings. If you are in any doubt about which type of wall fixings to use please seek professional help or ask your local hardware store.




Always ensure that wall to be drilled into is free from hidden electrical wires, water and gas pipes.


For more information about wall fixings please refer to the Wall Mounting and Fixings Guide at the back of this instruction.

If necessary door closing can be adjusted by adjusting the push-to-open pushers !

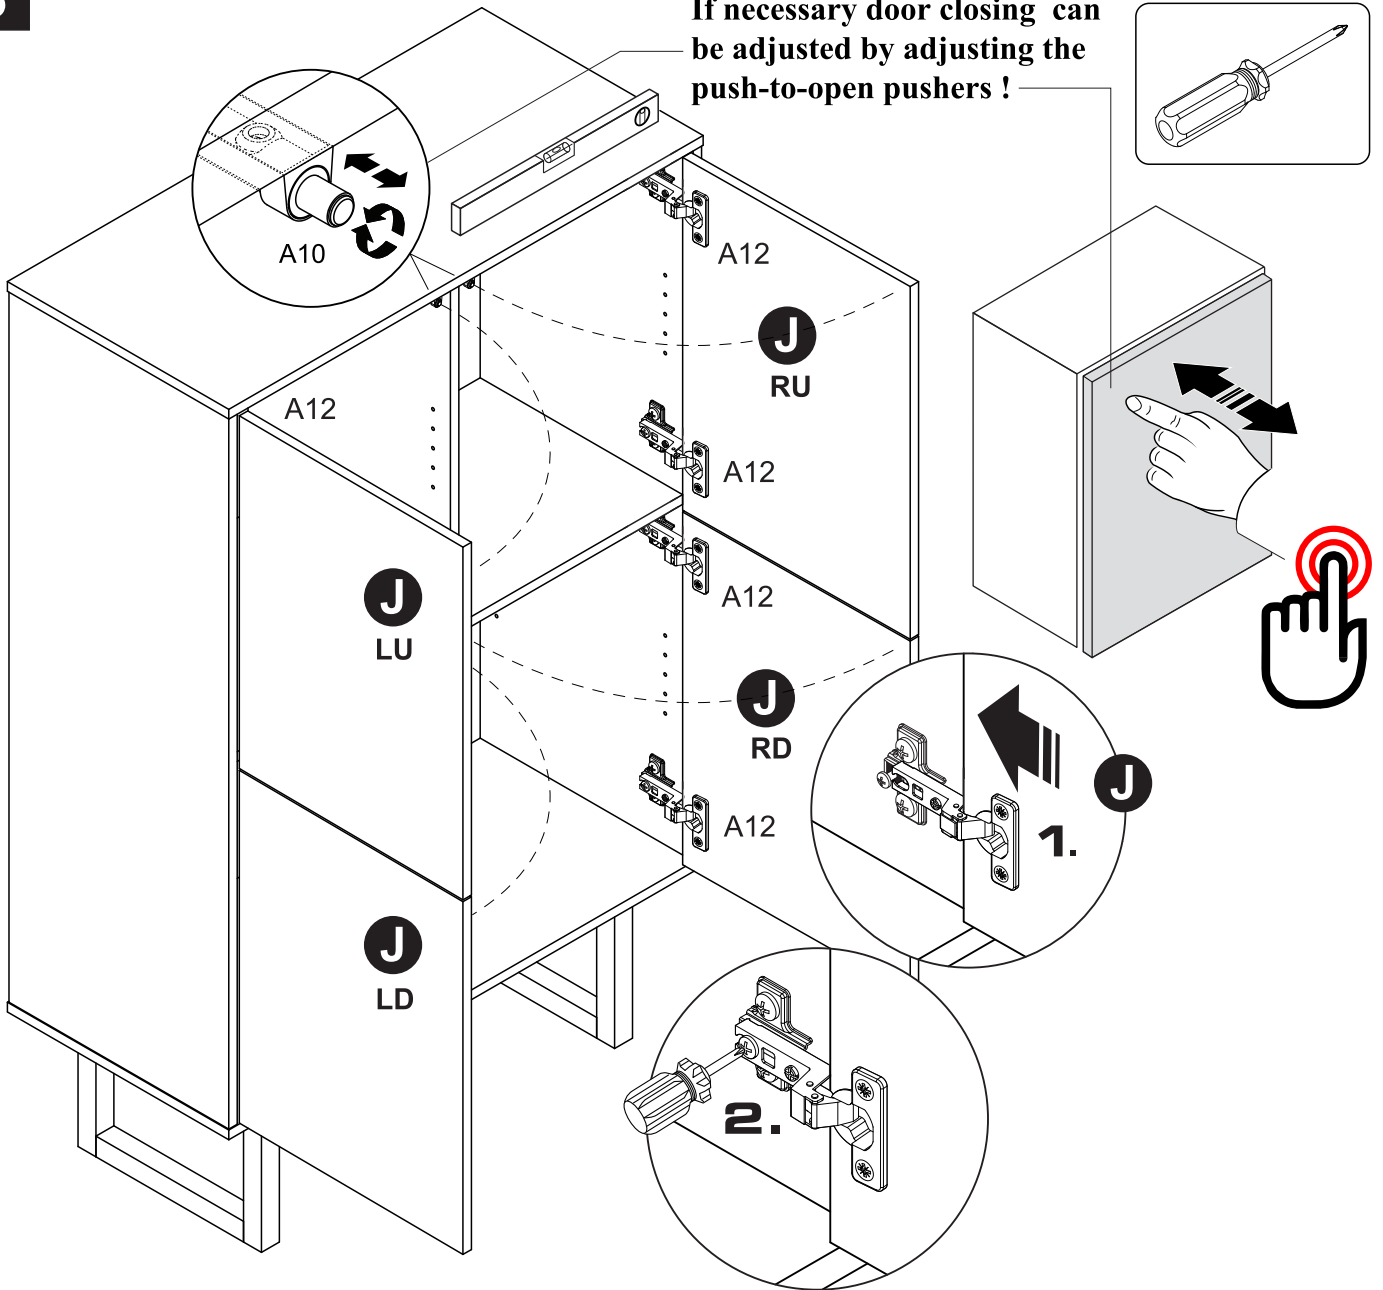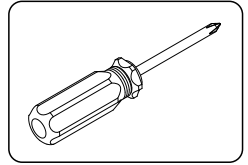

    If necessary door position and line can be adjusted by adjusting the hinges

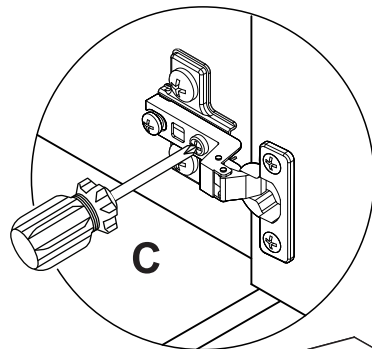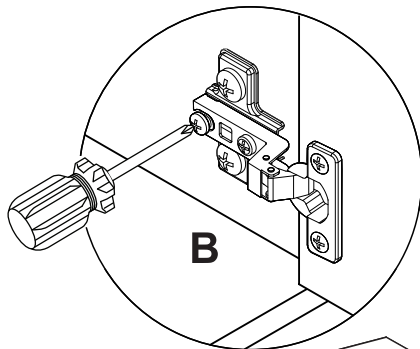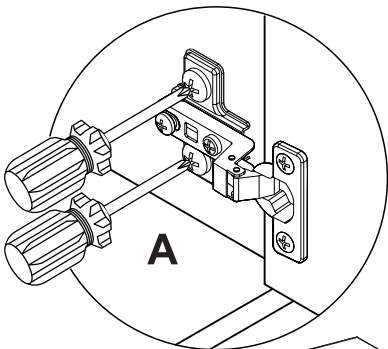

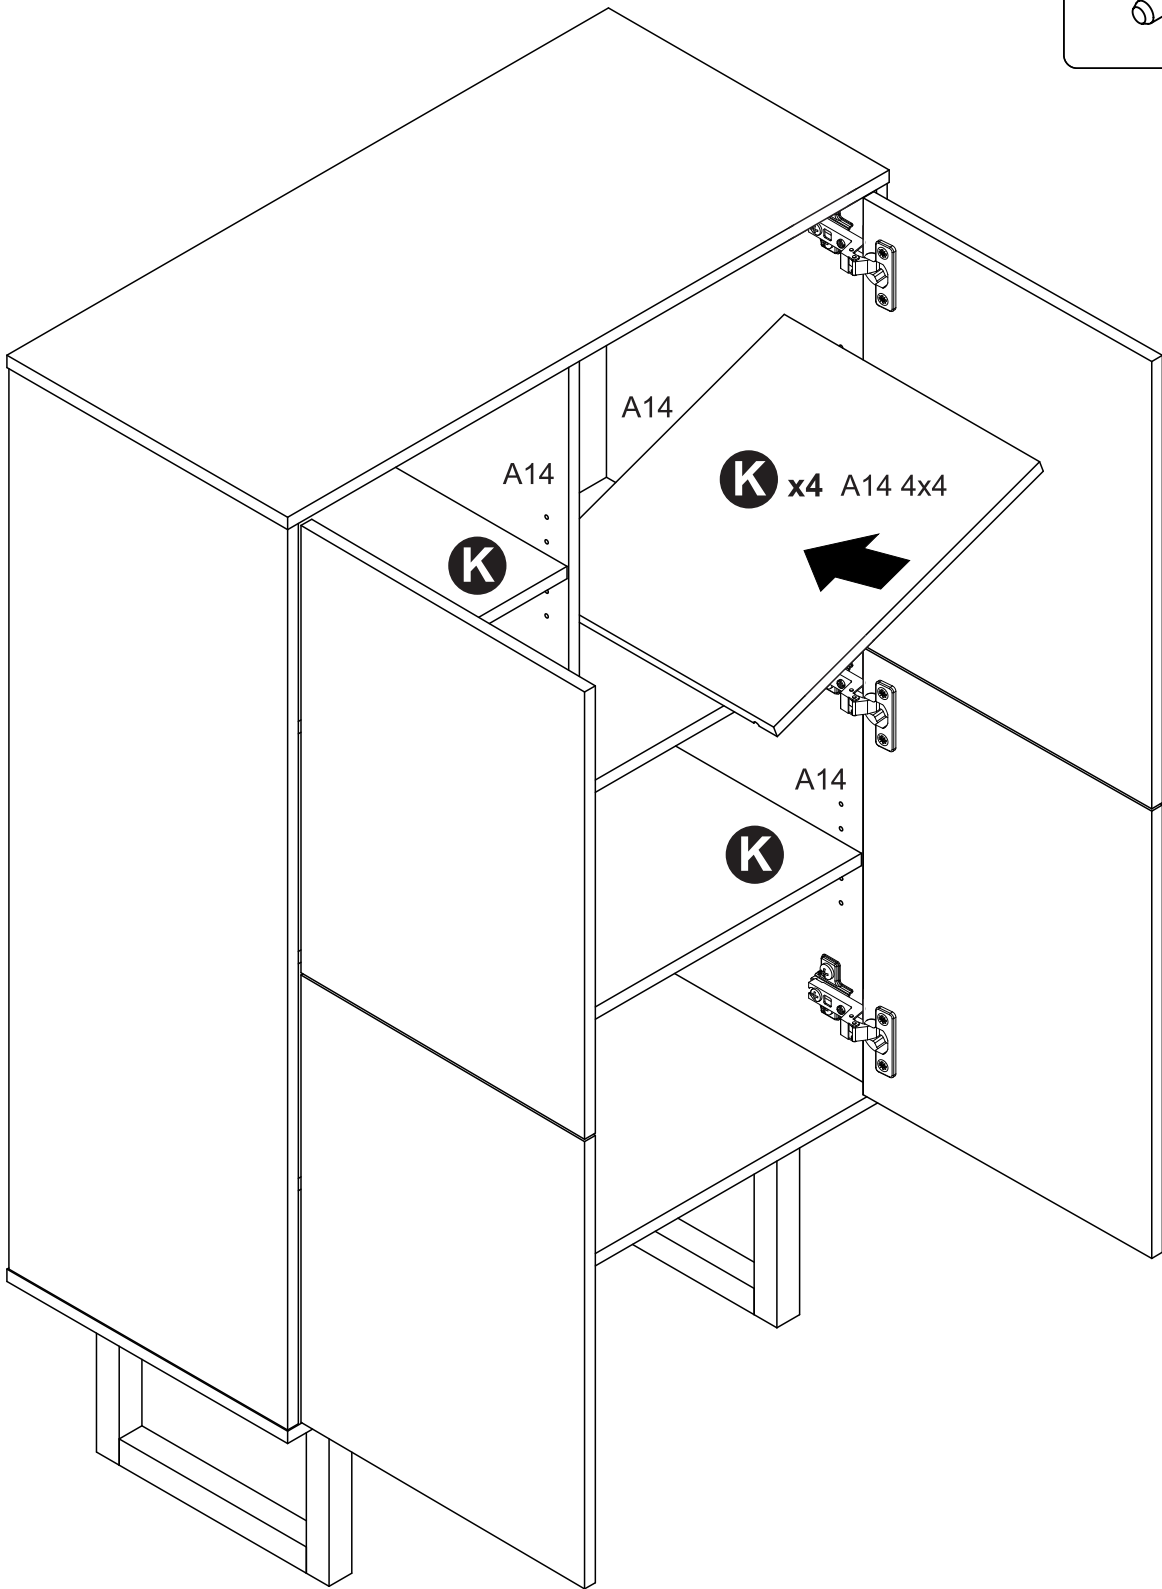

Safety and Care Advice

General care and maintenance

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

From time to time check that there are no loose screws on this unit.

This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Cleaning and care of lacquered surfaces

Regular dusting with a dry cloth will keep your units clean.

Clean marks with a damp cloth.

Do not use abrasive cleaners.

Do not clean with products containing following:

 
Acetone (e.g nail varnish remover). Ammonia (e.g.bleach) or Sodium hydroxid (e.g. Caustic soda, drain and oven cleaners) .

To remove stubborn stain, wipe over with damp cloth and washing up liquid.

In the event of accidental contact with aggressive cleaners, rinse thoroughly with water. Use place mats to protect the surface from moisture and heat.

Maximum weight limit

Important: Recommended maximum load for each shelf is shown below.

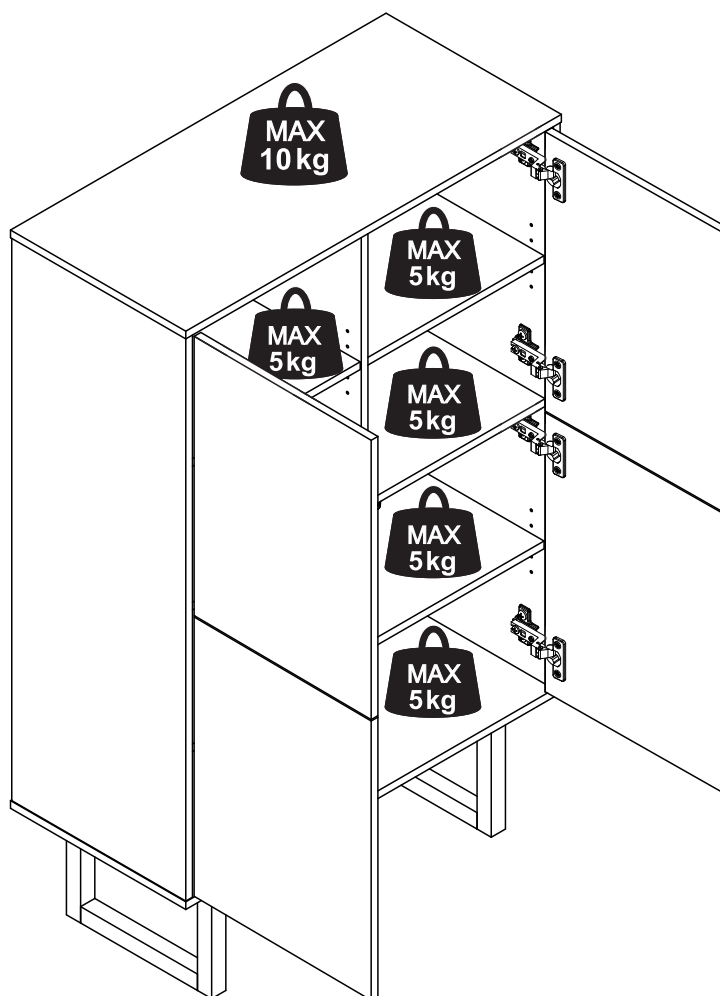

Care and maintenance

Safety: Periodically check all fittings to ensure they have not come loose and retighten as necessary

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

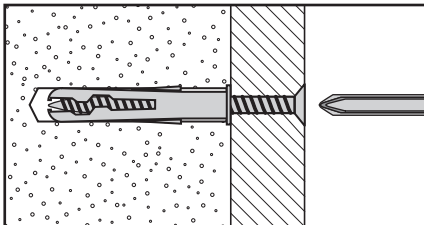


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

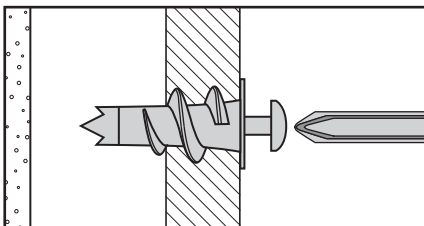


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug

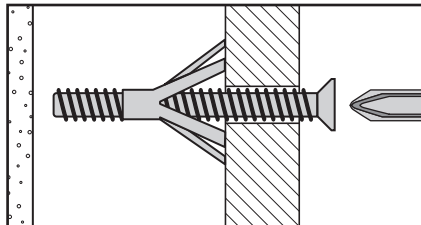


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug

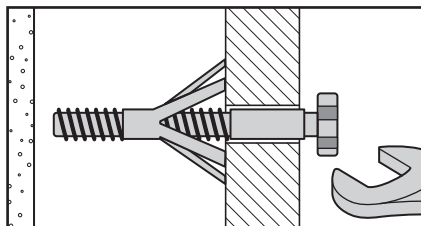


For use when fitting or supporting heavy loads such as shelving, wall cabinets and

 No.5 "Hammer Fixing" wall plug

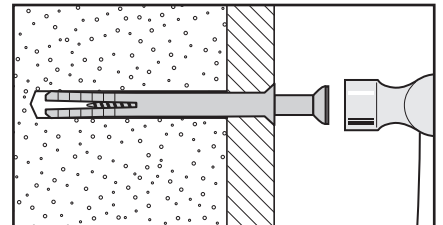

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads

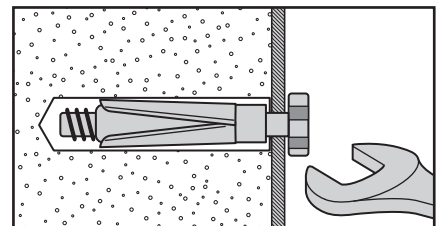

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.