

Passend fuer die folgenden Modelle:

<b>Marke</b>	<b>Typennummer</b>	<b>Modell</b>
Samsung	J1471GW/XEG	
Samsung	P1481GW/XEG	
Samsung	WD0804W8E/YLE	
Samsung	WF0704W7V1/YLE	
Samsung	WF0704W7W/XEU	
Samsung	WF0704Y7E/XEN	
Samsung	WF0704Y7E1/XEN	
Samsung	WF0704Y8E/XEE	
Samsung	WF0714F7V/XEN	
Samsung	WF0714F7V1/XEN	
Samsung	WF0714F7W/XEN	
Samsung	WF0714F7W1/XEN	
Samsung	WF0714Y7E/XEN	
Samsung	WD0804Y8E/XEN	
Samsung	WF0714Y7E1/XEN	
Samsung	WF0800NCE/XEC	
Samsung	WF0800NCE/YLV	
Samsung	WF0802LWV/XET	
Samsung	WF0802LWW/XET	
Samsung	WF0802NCE/XEC	
Samsung	WF0802NCE/XEF	
Samsung	WF0802NCE/YLE	
Samsung	WF0804W8E/XEP	
Samsung	WF0804W8E/XEU	
Samsung	WD0804Y8E1/XEN	
Samsung	WF0804W8N/XEU	
Samsung	WF0804W8W/XEE	

Samsung	WF0804X8E/XEU	
Samsung	WF0804Y8E/XEC	
Samsung	WF0804Y8E/XEE	
Samsung	WF0804Y8E/XEF	
Samsung	WF0804Y8E/XEN	
Samsung	WF0804Y8E1/XEN	
Samsung	WF0804Y8E1/YLP	
Samsung	WF0804Y8E1/XEO	
Samsung	WD0814Y8E/XEN	
Samsung	WF0804Y8E/XET	
Samsung	WF0804Y8E/YLE	
Samsung	WF0804Y8E1/YLE	
Samsung	WF0804Y8N1/YLP	
Samsung	WF0806X8E/XEU	
Samsung	WF0806X8N/XEU	
Samsung	WF0806Z8C/XEN	
Samsung	WF0806Z8C3/XEN	
Samsung	WF0806Z8E/XEE	
Samsung	WF0806Z8E/SWS	
Samsung	WD0814Y8E1/XEN	
Samsung	WF0806Z8E/XEN	
Samsung	WF0806Z8E3/SWS	
Samsung	WF0806Z8W/XEN	
Samsung	WF0806Z8W3/XEN	
Samsung	WF0814Y8E/XEN	
Samsung	WF0814Y8E1/XEN	
Samsung	WF0816Z8E/XEN	
Samsung	WF0816Z8W/XEN	
Samsung	WF0816Z8W3/XEN	

Samsung	WF10614YKE/XEG	
Samsung	WD12F9C9U4W/EF	
Samsung	WF10624YJV/XEG	
Samsung	WF10634YJV/XEG	
Samsung	WF10654YJV/XEG	
Samsung	WF10664YJW/XEG	
Samsung	WF10684YJE/XEG	
Samsung	WF10694YJV/XEG	
Samsung	WF10724Y8E/XEG	
Samsung	WF10724Y8E1XEG	
Samsung	WF10734Y8E/XEG	
Samsung	WF10764Y8E/XEG	
Samsung	WD12F9C9U4W/EU	
Samsung	WF10784Y8E/XEG	
Samsung	WF10794Y8E/XEG	
Samsung	WF10824Z8V/XEG	
Samsung	WF10824Z8V3/XEG	
Samsung	WF10826Z8E/XEG	
Samsung	WF10884Z8V/XEG	
Samsung	WF10894Z8V/XEG	
Samsung	WF1124XAC/YAH	
Samsung	WF1124XAC/YLE	
Samsung	WF1124ZAC/SWS	
Samsung	WD1704RJE2/XEU	
Samsung	WF1124ZAC/XEE	
Samsung	WF1124ZAC/XEN	
Samsung	WF1124ZAC/XEO	
Samsung	WF1124ZAC/XET	
Samsung	WF1124ZAC/YLP	

Samsung	WF12F9E6P4W/EG	
Samsung	WF12F9E6P4W/EU	
Samsung	WF1590NFU/YLP	
Samsung	WF1600NHW/XEO	
Samsung	WF1600NHW/YLE	
Samsung	WD2804Y8E/XEG	
Samsung	WF1600WCC/XEO	
Samsung	WF1600WCW/YLP	
Samsung	WF1600WCW/YLE	
Samsung	WF1600WRW/YLP	
Samsung	WF1602NHV/XEO	
Samsung	WF1602NHW/XEO	
Samsung	WF1602NHW/YLE	
Samsung	WF1602NHWG/YLE	
Samsung	WF1602W5C/XEH	
Samsung	WF1602W5C/YLE	
Samsung	WD2804Y8E3/XEG	
Samsung	WF1602W5V/XEO	
Samsung	WF1602WCC/YLP	
Samsung	WF1602WCC/XEO	
Samsung	WF1602WCC/YLE	
Samsung	WF1602WRK/YLP	
Samsung	WF1602YQQ/YLP	
Samsung	WF1602YQR/YLP	
Samsung	WF1602YQY/YLP	
Samsung	WF1604YKE/XEN	
Samsung	WF1614ABW/XEG	
Samsung	P1491GW/XEG	
Samsung	WD806P4SAWQ/EE	

Samsung	WF1614YKE/XEN	
Samsung	WF1700NHW/XEO	
Samsung	WF1700NHW/YLE	
Samsung	WF1700W5V/YKJ	
Samsung	WF1700WCC/XEO	
Samsung	WF1700WCW/YLP	
Samsung	WF1702NHV/XEO	
Samsung	WF1702NHW/XEO	
Samsung	WF1702NHW/YLE	
Samsung	WF1702NHWG/YLE	
Samsung	WD806P4SAWQ/EG	
Samsung	WF1702W5V/XEO	
Samsung	WF1702W5V/YKJ	
Samsung	WF1702W5V/YLE	
Samsung	WF1702WCC/YLP	
Samsung	WF1702WCC/XEO	
Samsung	WF1702WEC/YKJ	
Samsung	WF1702WFVS/XET	
Samsung	WF1702WPV2/YLV	
Samsung	WF1702WPV2/XEO	
Samsung	WF1702WPW2/XEC	
Samsung	WD806P4SAWQ/WS	
Samsung	WF1702WSV2/XET	
Samsung	WF1702WSV2/XEO	
Samsung	WF1702WSW/YLE	
Samsung	WF1702WSW2/XEP	
Samsung	WF1702WSW2/YLE	
Samsung	WF1702WSW2/XEO	
Samsung	WF1702WSW2/YLV	

Samsung	WF1702YQB/YLP	
Samsung	WF1702YQQ/YLP	
Samsung	WF1702YQR/YLP	
Samsung	WD806P4SAWQ/EN	
Samsung	WF1704WPC2/YLE	
Samsung	WF1704WPC2/XEF	
Samsung	WF1704WPU2/XEF	
Samsung	WF1704WSE2/XEU	
Samsung	WF1704WSV/YLE	
Samsung	WF1704WSV2/XEE	
Samsung	WF1704WSV2/XEF	
Samsung	WF1704WSV2/YLE	
Samsung	WF1704WSW2/XEE	
Samsung	WF1704YPC/XEN	
Samsung	WD806U2GAWQ/WS	
Samsung	WF1704YPC2/XEE	
Samsung	WF1704YPC2/XEN	
Samsung	WF1704YPV/XEN	
Samsung	WF1704YPV2/XEN	
Samsung	WF1704YSW/XEN	
Samsung	WF1704YSW2/XEN	
Samsung	WF1714YPC/XEN	
Samsung	WF1714YPC2/XEN	
Samsung	WF1714YPV/XEN	
Samsung	WF1714YPV2/XEN	
Samsung	WD816P4SAWQ/EN	
Samsung	WF1714YSW/XEN	
Samsung	WF1714YSW2/XEN	
Samsung	WF1800WSV/YKJ	

Samsung	WF1802LSW2/XET	
Samsung	WF1802LSW2/XEU	
Samsung	WF1802LSW2/XEO	
Samsung	WF1802LSW2/YLV	
Samsung	WF1802WECS/YLP	
Samsung	WF1802WFVS/XEO	
Samsung	WF1802WFVS/YLE	
Samsung	WD8704CJF/YAS	
Samsung	WF1802WFVS/YLP	
Samsung	WF1802WFWS/XEO	
Samsung	WF1802WPC/YLP	
Samsung	WF1802WPC/YKJ	
Samsung	WF1802WPC2/XEC	
Samsung	WF1802WPC2/XEP	
Samsung	WF1802WPC2/XET	
Samsung	WF1802WPV2/YLV	
Samsung	WF1802WSV2/XEO	
Samsung	WF1802WSW/YKJ	
Samsung	WD8704EJF/XAG	
Samsung	WF1802WSW2/XEF	
Samsung	WF1802WSW2/XEO	
Samsung	WF1802XEC/YLP	
Samsung	WF1802XEC/XEO	
Samsung	WF1802XEC/YLE	
Samsung	WF1802XEY/YLP	
Samsung	WF1804WPC/YLP	
Samsung	WF1804WPC2/XEF	
Samsung	WF1804WPC2/XEU	
Samsung	WF1804WPC2/YLE	

Samsung	WD8704EJF/XEN	
Samsung	WF1804WPN2/XEU	
Samsung	WF1804WPU2/XEU	
Samsung	WF1804WPVH2/XEO	
Samsung	WF1804WSV2/XEF	
Samsung	WF1804YPC/SWS	
Samsung	WF1804YPC2/SWS	
Samsung	WF1804YPC2/XEE	
Samsung	WF1804YPC2/XEN	
Samsung	WF1804YPV2/XEE	
Samsung	WF1804YPW2/XEE	
Samsung	WD8704EJF1/XEN	
Samsung	WF1814YPC/XEN	
Samsung	WF1814YPC2/XEN	
Samsung	WF3704YSW/XEG	
Samsung	WF3704YSW2/XEG	
Samsung	WF3714YSW2/XEG	
Samsung	WF3724YSV2/XEG	
Samsung	WF3734YPW2/XEG	
Samsung	WF3784YPV/XEG	
Samsung	WF3784YPV2/XEG	
Samsung	WF3804YSW2/XEG	
Samsung	EU/XSG WD0704REU/XSG	
Samsung	WD8714EJF/XEN	
Samsung	WF3854YSV2/XEG	
Samsung	WF3884YPV2/XEG	
Samsung	WF57846P5/XEG	
Samsung	WF57846P53XEG	
Samsung	WF600B0BKWQ/EO	



Samsung	WF602B2BKWQ/EO	
Samsung	WF602B2BKWQ/LE	
Samsung	WF60F1R0F2WDLP	
Samsung	WF60F1R1F2WDLA	
Samsung	WF60F1R2F2WDLA	
Samsung	WD8714EJF1/XEN	
Samsung	WF60F4E0N0W/LE	
Samsung	WF60F4E0N2W/EN	
Samsung	WF60F4E0N2W/EO	
Samsung	WF60F4E0N2W/LE	
Samsung	WF60F4E0W0W/EO	
Samsung	WF60F4E0W0W/LE	
Samsung	WF60F4E0W2W/EO	
Samsung	WF60F4E0W2W/LE	
Samsung	WF60F4E1N2W/EO	
Samsung	WF60F4E1W2W/EO	
Samsung	WD906P4SAWQ/EG	
Samsung	WF60F4E2W0W/LE	
Samsung	WF60F4E2W2W/EO	
Samsung	WF60F4E2W2W/LE	
Samsung	WF60F4E2W2W/LP	
Samsung	WF60F4E2W2X/EO	
Samsung	WF60F4E2W2X/LE	
Samsung	WF60F4E3W2W/EO	
Samsung	WF60F4E4W2W/EO	
Samsung	WF60F4E5W2W/EO	
Samsung	WF60F4E5W2W/LE	
Samsung	WF0400N1NE/YLP	
Samsung	WF60F4E5W2W/LP	

Samsung	WF60F4E5W2X/LE	
Samsung	WF60F4ECW2W/EO	
Samsung	WF60F4EFW0W/LE	
Samsung	WF60F4EFW2W/WS	
Samsung	WF61F4E0N2W/EN	
Samsung	WF6450N7W/YLP	
Samsung	WF6450N7W/YLR	
Samsung	WF6450N7W/YLW	
Samsung	WF6450S7W/YLP	
Samsung	WF0400N2N/YLP	
Samsung	WF6450S7W/YLR	
Samsung	WF6450S7W/YLW	
Samsung	WF6458N7W/YLP	
Samsung	WF6458N7W/YLR	
Samsung	WF6458N7W/YLW	
Samsung	WF6458S7W/YLP	
Samsung	WF6458S7W/YLR	
Samsung	WF6458S7W/YLW	
Samsung	WF6520N7W/YLP	
Samsung	WF6520N7W/YLR	
Samsung	WF0400S1V/YLP	
Samsung	WF6520N7W/YLW	
Samsung	WF6520S7W/YLP	
Samsung	WF6520S7W/YLR	
Samsung	WF6520S7W/YLW	
Samsung	WF6520S9C/YLP	
Samsung	WF6520S9C/YLW	
Samsung	WF6520S9R/YLP	
Samsung	WF6520S9R/YLW	

Samsung	WF6522N7W/YLW	
Samsung	WF6522S7W/YLW	
Samsung	WF0408N1NE/YLP	
Samsung	WF6522S7W/YLR	
Samsung	WF6528N7W/YLP	
Samsung	WF6528N7W/YLR	
Samsung	WF6528N7W/YLW	
Samsung	WF6528S7W/YLP	
Samsung	WF6604NHWG/XEG	
Samsung	WF6612NHWG/XEG	
Samsung	WF6614NHWG/XEG	
Samsung	WF6AF4E0W2W/EG	
Samsung	WF700B4BKWQ ./.	
Samsung	WF0408N2N/YLP	
Samsung	WF700Y4BKWQ/EN	
Samsung	WF700Y4BKWQ/WS	
Samsung	WF702B2BKWQ/LE	
Samsung	WF702B4BKWQ/LE	
Samsung	WF702U2SAWQ/LE	
Samsung	WF702Y4BKWQ/EN	
Samsung	WF705P4SAWQ/EN	
Samsung	WF706P4SAWQ/EE	
Samsung	WF706P4SAWQ/EN	
Samsung	WF706P4SAWQ/WS	
Samsung	WF0408N2N/YLD	
Samsung	WF706U4SAWQ/LE	
Samsung	WF70F5E0N2W/LE	
Samsung	WF70F5E0N4W/EU	
Samsung	WF70F5E0Q4W/EG	

Samsung	WF70F5E0Q4W/EN	
Samsung	WF70F5E0Q4W/WS	
Samsung	WF70F5E0R4W/EG	
Samsung	WF70F5E0W2W/EO	
Samsung	WF70F5E0W2W/EU	
Samsung	WF70F5E0W2W/LE	
Samsung	WF0408S1V/YLP	
Samsung	WF70F5E0W4W/EF	
Samsung	WF70F5E0W4W/WS	
Samsung	WF70F5E0W4W/EU	
Samsung	WF70F5E0W4W/LE	
Samsung	WF70F5E0Z4W/EN	
Samsung	WF70F5E1Q4W/WS	
Samsung	WF70F5E1Q4W/EN	
Samsung	WF70F5E2Q4W/WS	
Samsung	WF70F5E2Q4W/EG	
Samsung	WF70F5E2Q4W/EN	
Samsung	WD0704REV/XEO	
Samsung	WF0500NYW/YLP	
Samsung	WF70F5E2W2W/EO	
Samsung	WF70F5E2W2W/EU	
Samsung	WF70F5E2W2W/KJ	
Samsung	WF70F5E2W2W/LE	
Samsung	WF70F5E2W2X/EU	
Samsung	WF70F5E2W4W/EU	
Samsung	WF70F5E2W4X/EU	
Samsung	WF70F5E3P4W/EN	
Samsung	WF70F5E3U4W/EF	
Samsung	WF70F5E3W2W/EO	

Samsung	WF0500NZW/YLD	
Samsung	WF70F5E3W2W/LE	
Samsung	WF70F5E3W4W/EU	
Samsung	WF70F5E4P4W/EN	
Samsung	WF70F5E4Q4W/EN	
Samsung	WF70F5E4W2W/EO	
Samsung	WF70F5E5P4W/EG	
Samsung	WF70F5E5P4W/EN	
Samsung	WF70F5E5Q4W/EG	
Samsung	WF70F5E5Q4W/EN	
Samsung	WF70F5E5U4W/EO	
Samsung	WF0500NZW/YLP	
Samsung	WF70F5E5U4W/LE	
Samsung	WF70F5E5U4X/LE	
Samsung	WF70F5E5W2W/EO	
Samsung	WF70F5E5W2W/LE	
Samsung	WF70F5E5W2X/EO	
Samsung	WF70F5E5W4W/EO	
Samsung	WF70F5E5W4W/LE	
Samsung	WF70F5EBP4W/EG	
Samsung	WF70F5EBP4W/EN	
Samsung	WF70F5EBU2W/LE	
Samsung	WF0500SYV/YLP	
Samsung	WF70F5EBW2W/LE	
Samsung	WF70F5ECQ4W/EN	
Samsung	WF70F5ECQ4W/WS	
Samsung	WF70F5EDQ4W/EN	
Samsung	WF70F5EDW4X/EU	
Samsung	WF710Y4BKWQ/EN	

Samsung	WF71184ZBD/XEG	
Samsung	WF71284ZAC/XEG	
Samsung	WF712Y4BKWQ/EN	
Samsung	WF715P4SAWQ/EN	
Samsung	WF0502SYV/YLP	
Samsung	WF716P4SAWQ/EN	
Samsung	WF71F5E0Q4W/EN	
Samsung	WF71F5E0Z4W/EN	
Samsung	WF71F5E2Q4W/EN	
Samsung	WF71F5E2Q4X/EN	
Samsung	WF71F5E3P4W/EN	
Samsung	WF71F5E4Q4W/EG	
Samsung	WF71F5E5P4W/EG	
Samsung	WF71F5E5P4W/EN	
Samsung	WF71F5E5Q4W/EN	
Samsung	WF0508NYW/YLP	
Samsung	WF71F5ECW4W/EN	
Samsung	WF72F5E5P4W/EG	
Samsung	WF7350N7W/YLR	
Samsung	WF7350N7W/YLW	
Samsung	WF7350S7V/YLP	
Samsung	WF7350S7V/YLR	
Samsung	WF7350S7V/YLW	
Samsung	WF7358N7W/YLR	
Samsung	WF7358N7W/YLW	
Samsung	WF7358S7V/YLP	
Samsung	WF0508NYW/YLD	
Samsung	WF7358S7V/YLW	
Samsung	WF743P4SAWQ3EG	

Samsung	WF7450NAW/YLW	
Samsung	WF7450S9C/YLP	
Samsung	WF7450S9C/YLW	
Samsung	WF7450S9R/YLP	
Samsung	WF7450SAV/YLP	
Samsung	WF7450SAV/YLW	
Samsung	WF7452S9C/YLR	
Samsung	WF7452S9C/YLW	
Samsung	WF0508NZW/YLP	
Samsung	WF7452S9R/YLP	
Samsung	WF7452S9R/YLR	
Samsung	WF7452S9R/YLW	
Samsung	WF7520S9C/YLW	
Samsung	WF7520S9R/YLP	
Samsung	WF7520SAV/YLP	
Samsung	WF7522S9C/YLR	
Samsung	WF7522S9C/YLW	
Samsung	WF7522S9R/YLR	
Samsung	WF7522S9R/YLW	
Samsung	WF0508NZW/YLD	
Samsung	WF7600NAW/YLW	
Samsung	WF7600S9C/YLP	
Samsung	WF7600SAV/YLP	
Samsung	WF7602NAW/XEN	
Samsung	WF7602SAV/YLP	
Samsung	WF7602SAV/YLW	
Samsung	WF7604NAW/XEN	
Samsung	WF7802XEC/XAG	
Samsung	WF7802XEC/XEG	

Samsung	WF79846PH/XEG	
Samsung	WF0508SYV/YLP	
Samsung	WF7AF5E0Q4W/EG	
Samsung	WF7AF5E1Q4W/EG	
Samsung	WF7AF5E3P4W/EG	
Samsung	WF7AF5E4P4W/EG	
Samsung	WF7AF5E5P4W/EG	
Samsung	WF7AF5EBP4W/EG	
Samsung	WF7AF5ECQ4W/EG	
Samsung	WF802B2SAGD/EP	
Samsung	WF802B2SAWQ/EC	
Samsung	WF802B2SAWQ/EP	
Samsung	WD0704REW/XSG	
Samsung	WF0590NRW/YLP	
Samsung	WF805P4SAWQ/EN	
Samsung	WF805P4SAWQ3EN	
Samsung	WF806P4SAWQ/EE	
Samsung	WF806P4SAWQ/EN	
Samsung	WF806P4SAWQ3EN	
Samsung	F806U4SAWQ/EC	
Samsung	WF806U4SAWQ/EF	
Samsung	WF806U4SAWQ/EO	
Samsung	WF806U4SAWQ/ET	
Samsung	WF806U4SAWQ/LE	
Samsung	WF0592SRK/YLP	
Samsung	WF80F5E0N2W/LE	
Samsung	WF80F5E0Q4W/EN	
Samsung	WF80F5E0W2W/EO	
Samsung	WF80F5E0W2W/EU	



Samsung	WF80F5E0W2W/LE	
Samsung	WF80F5E0W4W/EU	
Samsung	WF80F5E0W4W/LE	
Samsung	WF80F5E1Q4W/EG	
Samsung	WF80F5E2Q4W/EG	
Samsung	WF80F5E2Q4X/EG	
Samsung	WF0600NBE/YLV	
Samsung	WF80F5E2W4W/EU	
Samsung	WF80F5E2W4W/LP	
Samsung	WF80F5E2W4X/EU	
Samsung	WF80F5E3P4W/EN	
Samsung	WF80F5E3W2W/EO	
Samsung	WF80F5E4P4W/WS	
Samsung	WF80F5E4P4W/EN	
Samsung	WF80F5E4Q4W/EN	
Samsung	WF80F5E4W4W/EO	
Samsung	WF80F5E5P4W/EG	
Samsung	WF0600NBX/YLP	
Samsung	WF80F5E5P4W/WS	
Samsung	WF80F5E5P4W/EN	
Samsung	WF80F5E5Q4W/EG	
Samsung	WF80F5E5Q4W/EN	
Samsung	WF80F5E5U2W/EO	
Samsung	WF80F5E5U4W/EO	
Samsung	WF80F5E5U4W/EU	
Samsung	WF80F5E5U4W/KJ	
Samsung	WF80F5E5U4W/LE	
Samsung	WF80F5E5U4W/LP	
Samsung	WF0600NBX/YLD	

Samsung	WF80F5E5U4X/EU	
Samsung	WF80F5E5W4W/LE	
Samsung	WF80F5E5W4W/WS	
Samsung	WF80F5E5W4X/LE	
Samsung	WF80F5EBP4W/EG	
Samsung	WF80F5EBP4W/EN	
Samsung	WF80F5EBP4W/WS	
Samsung	WF80F5ECQ4W/EN	
Samsung	WF80F7E3P6W3EN	
Samsung	WF80F7E6P6W/EN	
Samsung	WF0600NCE/XEH	
Samsung	WF80F7E6P6W3EN	
Samsung	WF80F7E6U6X/EU	
Samsung	WF8100LSW ./.	
Samsung	WF815P4SAWQ/EN	
Samsung	WF816P4SAWQ/EN	
Samsung	WF816P4SAWQ3EN	
Samsung	WF81F5E0Q4W/EN	
Samsung	WF81F5E3P4W/EN	
Samsung	WF81F5E5P4W/EG	
Samsung	WF81F5E5P4W/EN	
Samsung	WF0600NCE/YLE	
Samsung	WF81F5E5Q4W/EN	
Samsung	WF81F5ECW4W/EN	
Samsung	WF81F7E6P6W/EN	
Samsung	WF81F7E6P6W3EN	
Samsung	WF8452S9P/YLP	
Samsung	WF8452S9P/YLR	
Samsung	WF8500NGC/YLP	

Samsung	WF8500NGV/YLW	
Samsung	WF8500NGW/YLP	
Samsung	WF8500NGY/YLP	
Samsung	WF0600NCW/YKJ	
Samsung	WF8500NHV/YLP	
Samsung	WF8500NHW/YLP	
Samsung	WF8500NMW/XEH	
Samsung	WF8500NMW8/XEH	
Samsung	WF8500NMW8/YLE	
Samsung	WF8500NMW9/YLP	
Samsung	WF8500SFV/XEH	
Samsung	WF8502NGV/XEH	
Samsung	WF8502NGW/XEH	
Samsung	WF8502NGW/YLE	
Samsung	WF0600NCY/YLP	
Samsung	WF8502NMW/XEH	
Samsung	WF8502SFV/XEH	
Samsung	WF8508NGW/YLP	
Samsung	WF8AF5EBP4W/EG	
Samsung	WF8EF5E0W4W/EU	
Samsung	WF8EF5E0W4W/LE	
Samsung	WF902B2SAWQ/EC	
Samsung	WF906P4SAWQ/EN	
Samsung	WF906P4SAWQ/ET	
Samsung	WF906P4SAWQ/WS	
Samsung	WF0602NBE/YLD	
Samsung	WF906P4SAWQ3EN	
Samsung	WF906U4SAWQ/EC	
Samsung	WF906U4SAWQ/EF	

Samsung	WF906U4SAWQ/EO	
Samsung	WF906U4SAWQ/EP	
Samsung	WF906U4SAWQ/EU	
Samsung	WF906U4SAWQ/LE	
Samsung	WF90F5E0W2W/KJ	
Samsung	WF90F5E3U4W/EU	
Samsung	WF90F5E5P4W/EG	
Samsung	WD0804W8E/XEC	
Samsung	WF0602NBE/YLP	
Samsung	WF90F5E5P4W/EN	
Samsung	WF90F5E5U4W/EU	
Samsung	WF90F5E5U4W/WS	
Samsung	WF90F5E5U4X/EU	
Samsung	WF90F7E6P6W/WS	
Samsung	WF90F7E6P6W/EN	
Samsung	WF90F7E6P6W3EN	
Samsung	WF916P4SAWQ/EN	
Samsung	WF916P4SAWQ3EN	
Samsung	WF91F5EBP4W/EN	
Samsung	WF0602NCW/XEH	
Samsung	WF91F7E6P6W/EN	
Samsung	WF9590NFJ/YLP	
Samsung	WF0602NCW/YKJ	
Samsung	WF0602WJC/YLE	
Samsung	WF0602WJV/XEO	
Samsung	WF0602WJW/YLP	
Samsung	WF0602WKE/YLP	
Samsung	WF0602WKE/XEO	
Samsung	WF0602WKN/YLP	

Samsung	WF0602WKV/YLP	
Samsung	WD0804W8E/XEF	
Samsung	WF0604ABW/XEN	
Samsung	WF0604YJW/XEG	
Samsung	WF0614ABW/XEN	
Samsung	WF0690NRW/YLP	
Samsung	WF0692NRY/YLP	
Samsung	WF0700NBX1/YLP	
Samsung	WF0700NBX/YLD	
Samsung	WF0700NBX/YLP	
Samsung	WF0700NCE/XEH	
Samsung	WF0700NCE/YLE	
Samsung	WD0804W8E/XEU	
Samsung	WF0702L7V/XET	
Samsung	WF0702L7W/XEO	
Samsung	WF0702NBF/YLD	
Samsung	WF0702NBF/YLP	
Samsung	WF0702NCE/XEH	
Samsung	WF0702NCW/XEH	
Samsung	WF0702W7W/XEC	
Samsung	WF0702WJV/XEO	
Samsung	WF0702WJW/YLP	
Samsung	WF0702WKE/YLP	
Samsung	WD0804W8E/XEO	
Samsung	WF0702WKN/XEO	
Samsung	WF0702WKV/YLP	
Samsung	WF0704F7V/XEN	
Samsung	WF0704F7V1/XEN	
Samsung	WF0704F7W/XEN	

Samsung	WF0704F7W1/XEN	
Samsung	WF0704L7W/XEF	
Samsung	WF0704W7V/XEF	
Samsung	WF0704W7V/XET	
Samsung	WF0704W7V/YLE	