

# NINJA

## DETECT

POWER BLENDER PRO

# TB201EU

**INSTRUCTIONS  
NOTICE D'UTILISATION  
ET GARANTIE NINJA  
GEBRAUCHSANWEISUNG  
BRUGERVEJLEDNING  
INSTRUCCIONES  
ISTRUZIONI  
INSTRUCTIES  
INSTRUKSJONER  
OHJEET  
INSTRUKTIONER**





## REGISTER YOUR PURCHASE

 [www.ninjakitchen.eu/register-guarantee](http://www.ninjakitchen.eu/register-guarantee)

 Scan QR code using mobile device

## RECORD THIS INFORMATION

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_  
(Keep receipt)

Store of Purchase: \_\_\_\_\_

## TECHNICAL SPECIFICATIONS



 
Voltage: 220V-240V 50-60Hz

Power: 1200 Watts

# IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

ENGLISH

	<b>Read and review instructions for operation and use.</b>
	<b>Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.</b>
	<b>For indoor and household use only.</b>
<b>When using electrical appliances, basic safety precautions should always be followed, including the following:</b>	

**⚠WARNING:** To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. **DO NOT** use appliance for other than intended use.

- 1 Read all instructions prior to using the appliance and its accessories.
- 2 This product is provided with Ninja Detect Total Crushing® & Chopping Blades (Stacked Blade Assembly). **ALWAYS** exercise care when handling blade assemblies. The blade assemblies are loose and sharp and are **NOT** locked in place in their containers. The blade assemblies are designed to be removable to facilitate cleaning and replacement if needed. **ONLY** grasp the blade assembly by the top of the shaft. Failure to use care when handling the blade assemblies will result in a risk of laceration.
- 3 Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- 4 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 5 **ALWAYS** take your time and exercise care during unpacking and appliance setup. Blades are loose and sharp. **ALWAYS** exercise care when handling blade assemblies. This appliance contains sharp, loose blades that can cause laceration if mishandled. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- 6 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 7 Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- 8 Before each use, inspect blade assembly for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- 9 Upon completion of processing, ensure the blade assembly is removed **BEFORE** emptying container's contents. Remove the blade assembly by carefully grasping the top of the shaft and lifting it from the container. Failure to remove the blade assembly before emptying the container results in a risk of laceration.
- 10 If using the pitcher's pour spout, hold the cover in place on the container or ensure lid lock is engaged when pouring to avoid risk of laceration.
- 11 **DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- 12 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for servicing.
- 13 This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact SharkNinja for service.
- 14 Extension cords should **NOT** be used with this appliance.
- 15 To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.

# IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

- 16 **DO NOT** allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- 17 **DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- 18 **ALWAYS** use the appliance on a dry and level surface.
- 19 **DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children. Keep the appliance and its cord out of reach of children.
- 20 This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 21 **ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 22 **NEVER** place a blade assembly on the motor base without it first being attached to the pitcher with the lid also in place.
- 23 Keep hands, hair, and clothing out of the container when loading and operating.
- 24 During operation and handling of the appliance, avoid contact with moving parts.
- 25 **DO NOT** fill container past the **MAX FILL** or **MAX LIQUID** lines.
- 26 **DO NOT** operate the appliance with an empty container.
- 27 **DO NOT** microwave any container or accessories provided with the appliance.
- 28 **NEVER** leave the appliance unattended while in use.
- 29 **DO NOT** process dry ingredients with the pitcher and Stacked Blade Assembly.
- 30 **DO NOT** perform grinding operations with the pitcher and Stacked Blade Assembly.
- 31 **NEVER** operate the appliance without lid in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
- 32 Keep hands and utensils out of container while chopping to reduce the risk of severe personal injury or damage to the blender. A scraper may be used **ONLY** when the blender is not running.
- 33 **DO NOT** open the pitcher's pour spout cap while blender is operating.
- 34 If you find unmixed ingredients sticking to the sides of the pitcher, stop the appliance, remove the lid, and use a spatula to dislodge ingredients. **NEVER** insert your hands into the pitcher, as you may contact one of the blades and experience a laceration.
- 35 **DO NOT** attempt to remove the container or lid from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lid and container.
- 36 If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 30 minutes before using again.
- 37 **DO NOT** expose the container and accessories to extreme temperature changes. They may experience damage.
- 38 **DO NOT** submerge the motor base or control panel in water or other liquids. **DO NOT** spray motor base or control panel with any liquid.
- 39 **DO NOT** attempt to sharpen blades.
- 40 Turn off the appliance and unplug the motor base before cleaning.
- 41 **DO NOT** misuse the appliance to avoid potential injury

## SAVE THESE INSTRUCTIONS

## PARTS

- A Pitcher Lid With Pour Spout
- B Ninja Detect Total Crushing® & Chopping Blades (Stacked Blade Assembly)
- C 2.1L Full-Size Pitcher
- D Motor Base (attached power cord not shown)

\*1.9L max liquid capacity.



## BEFORE FIRST USE


**IMPORTANT:** Review all warnings at the beginning of this Owner's Guide before proceeding.

**WARNING:** The Stacked Blade Assembly is **NOT** locked in place in the pitcher. Handle the Stacked Blade Assembly by grasping the top of the shaft.

- 1 Remove all packaging materials from the unit. Exercise care when unpacking the Stacked Blade Assembly, as the blades are loose and sharp.
- 2 Wash pitcher, lid, and blade assembly in warm, soapy, water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assembly, as the blades are loose and sharp.
- 3 Thoroughly rinse and air-dry all parts.
- 4 Wipe control panel with a soft cloth. Allow it to dry completely before using.

**NOTE:** All attachments are BPA free. Accessories are top-rack dishwasher safe and should **NOT** be cleaned with a heated dry cycle. Ensure blade assembly and lid are removed from the container before placing in the dishwasher. Exercise care when handling blade assembly.

## BLENDSENSE TECHNOLOGY

Intelligent BlendSense program revolutionizes traditional blending by sensing ingredients and blending to perfection every time. The BlendSense program will be active by default. Press  button, then START/STOP. Once the program begins, it will automatically stop when blending is complete. To stop blending before the end of the program, press the dial again.

Simply press the dial to start the BlendSense program.

1

### SENSE

Starts blending to sense your ingredients.



2

### BLEND

Automatically chooses the blending speed, time, and pulses.



3

### ENJOY

Blends to perfection, no matter the portion size.



BlendSense is best used for smooth blends such as smoothies, drinks, smoothie bowls, dips, purées, and sauces.

### INITIAL BLENDING



### SENSING

In the first 15 seconds, actively adjusts speed and time based on ingredients and recipe size.

### BLENDING POSSIBILITIES



### BLENDING

Blends continuously without pulsing.



### CRUSH AND MAX-CRUSH

Detects tougher and frozen ingredients, then adjusts the pulsing pattern for a smooth blend.



### THICK MODE

Creates thick spoonable results.

**NOTE:** Once blending possibility is selected, runtime will count up on the display in seconds. Total time varies from seconds up to almost two minutes.

### ERROR DETECTION

 


### INSTALL

Illuminates if no vessel is installed or if a vessel is installed incorrectly. To resolve, reinstall the vessel.

## USING THE CONTROL PANEL

**NOTE:** Press the dial to START or STOP any program. Turn to select.

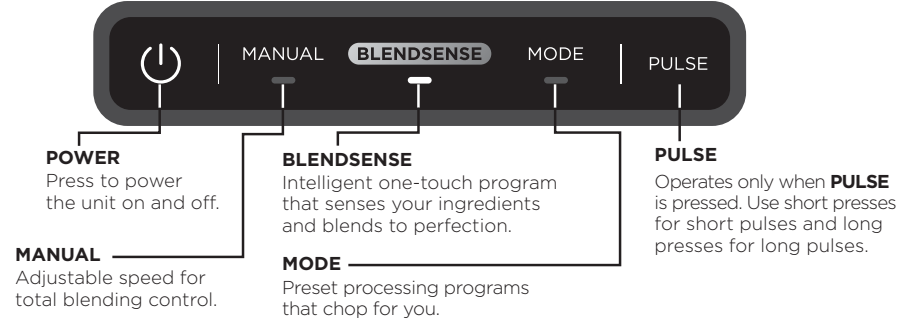

## PROCESSING MODE PROGRAMS



### CHOP FUNCTIONS:

**TB201: LARGE CHOP, SMALL CHOP, and MINCE**  
**TB200: CHOP**

Smart preset programs combine unique pausing patterns that chop for you. Press **MODE**, turn the dial to select your desired program, then press **START/STOP**. The program will automatically stop when complete. Press the dial again to stop the program sooner. They do not work in conjunction with the BlendSense program or Manual programs.

### NOTE:

- Number of seconds is displayed for each program runtime.
- Functions vary by model. Refer to your Quick Start Guide for your model's specific configuration.

## MANUAL PROGRAMS



Go manual for total control of your blending speed and textures. Press **MANUAL**, turn the dial to select your desired speed, then press **START/STOP**. When selected, each speed runs continuously for 60 seconds. Press the dial again to stop the program sooner. Manual programs do not work in conjunction with the BlendSense program or Processing Mode programs.

### TB201: VARIABLE SPEED CONTROL (Speeds 1-10):

**START SLOW (Speeds 1-3):** Always start at low speed to better incorporate ingredients and prevent them from sticking to the sides of the vessel.

**DIAL UP THE SPEED (Speeds 4-7):** Smoother blends call for higher speeds. Low speeds are great for chopping veggies, but you'll need to ramp up for purées and dressings.

**HIGH-SPEED BLENDING (Speeds 8-10):** Blend until your desired consistency is reached. The longer you blend, the better the breakdown and smoother the outcome will be.

### TB200: LOW, MEDIUM, HIGH Speeds

### NOTE:

- Once speed is selected, runtime will count up on the display in seconds.
- Functions vary by model. Refer to your Quick Start Guide for your model's specific configuration.

## USING THE PITCHER

### IMPORTANT:

 
 
- Review all warnings at the beginning of this Owner's Guide before proceeding.
- As a safety feature, if the pitcher and lid are not properly installed, the timer will display **INSTALL** and the motor will be disabled. If this happens, repeat **step 5** on this page.

**⚠WARNING:** Ninja Detect Total Crushing® & Chopping Blades (Stacked Blade Assembly) are loose and sharp and **NOT** locked in place. If using the pour spout, ensure the lid is fully locked onto the blender pitcher. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first, holding it by the shaft. Failure to do so will result in a risk of laceration.

### NOTE:


- **DO NOT** add ingredients before completing installation of the Stacked Blade Assembly.
- If the Stacked Blade Assembly is not fully seated, you will not be able to install and lock the lid.
- The pitcher lid handle will not fold down unless it is attached to the pitcher.
- **DO NOT** process or grind dry ingredients.

- 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.
- 2 Lower the pitcher onto the motor base. The handle should be aligned slightly to the right and the pitcher should be oriented so the **LOCK** symbols are visible on the motor base. Rotate the pitcher clockwise until it clicks into place.
- 3 Exercising care, grasp the Stacked Blade Assembly by the top of the shaft and place it onto the drive gear inside the pitcher. Note that the blade assembly will fit loosely onto the drive gear.

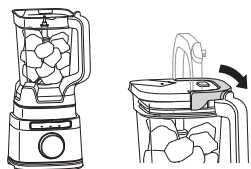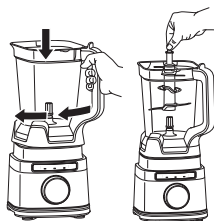


- 4 Add ingredients to the pitcher. **DO NOT** add ingredients past the **MAX LIQUID** line.
- 5 Place the lid on the pitcher. Press down on the handle until it clicks into place. Once the lid is locked in place, press the Power button to turn unit on. The BlendSense program will illuminate.

 - 6a If using the BlendSense program, simply press the dial. The program will automatically stop once complete. To stop the unit at any time, press the dial again.
  - 6b If using a Processing Mode program, select **MODE**, then use the dial to select your desired program. To start, press the dial. The program will automatically stop once complete. To stop the unit at any time, press the dial again.
  - 6c If using a Manual program, select **MANUAL**, then use the dial to select your desired speed (varies by model). To start, press the dial. Once the ingredients have reached your desired consistency, press the dial again or wait 60 seconds for the unit to come to a complete stop on its own.
- 7 To remove the pitcher from the motor base, turn the pitcher counterclockwise and then lift up.

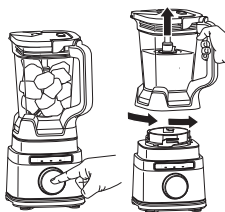

- 8a To pour out thinner mixtures, ensure the lid is locked in place, then open the pour spout cap.

 - 8b For thicker mixtures that cannot be emptied through the pour spout, remove the lid and Stacked Blade Assembly before pouring. To remove the lid, press the **RELEASE** button and lift the handle. To remove the blade assembly, carefully grasp it by the top of the shaft and pull straight up. The pitcher can then be emptied.
- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

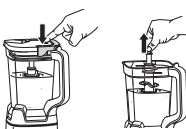

## CARE & MAINTENANCE

### CLEANING

Separate all parts. Wash container in warm, soapy water with a soft cloth.

#### • Hand-Washing

Wash blade assembly in warm, soapy water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assembly, as the blades are sharp. Thoroughly rinse and air-dry all parts.

#### • Dishwasher

Accessories are top-rack dishwasher safe but should **NOT** be cleaned with a heated dry cycle. Ensure the blade assembly and lid are removed from the pitcher before placing in the dishwasher. Exercise care when handling blade assembly.

#### • Motor Base

Turn off the unit and unplug the motor base before cleaning. Wipe motor base with a clean, damp cloth. **DO NOT** use abrasive cloths, pads, or brushes to clean the base.

### STORING

For cord storage, wrap cord with hook-and-loop fastener near the back of the motor base. **DO NOT** wrap the cord around the bottom of the base for storage. Store the unit upright and store blade assembly inside or attached to the pitcher with the lid locked in place.

**DO NOT** stack items on top of the pitcher. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

### RESETTING THE MOTOR

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload the it. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

- 1 Unplug the unit from the electrical outlet.

- 2 Allow the unit to cool for approximately 15 minutes.

- 3 Remove the container's lid and blade assembly. Empty the container and ensure no ingredients are jamming the blade assembly.

**IMPORTANT:** Ensure that maximum capacity is not exceeded. This is the most typical cause of appliance overload.


If your unit needs servicing, please call Customer Service at 0800 862 0453. So we may better assist you, please register your product online at [www.ninjakitchen.co.uk/register-guarantee](http://www.ninjakitchen.co.uk/register-guarantee) and have the product on hand when you call.

## ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit [ninjakitchen.co.uk](http://ninjakitchen.co.uk)

**⚠WARNING:** To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.

**Display will show “INSTALL” once connected to power.**

- Place container on base and rotate it clockwise until container clicks into place. Press the Power button  to turn unit on, and the BlendSense program will illuminate, indicating the unit is ready for use.

**Display reads “Er”.**

- If the display reads “Er,” unplug the unit from the electrical outlet and allow it to cool for 15 minutes. Remove the container’s lid and blade assembly and empty the contents to ensure no ingredients are jamming the blade assembly.

**Unit doesn’t mix well; ingredients get stuck.**

- Using the BlendSense program is the easiest way to achieve great results. The pulses and pauses allow the ingredients to settle toward the blade assembly. If ingredients are routinely getting stuck, adding some liquid will usually help.

**Motor base won’t stick to counter or tabletop.**

- Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces.
- Suction feet will not stick on some surfaces such as wood, tile, and non-polished finishes.
- **DO NOT** attempt to use unit when the motor base is stuck to a surface that is not secure (cutting board, platter, plate, etc.).

**Unit is difficult to remove from counter for storage.**

- Place your hands underneath both sides of the motor base and gently pull the unit up and toward you.

**Food is not evenly chopped.**

- For best results when chopping, cut pieces of ingredients in a uniform size and don’t overfill the vessel.

**The pitcher lid handle will not fold down.**

- The handle will not fold down if the lid isn’t attached to the pitcher. For storage, place the lid on the pitcher and press down on the handle until it clicks into place.

## PRODUCT REGISTRATION

Please visit [www.ninjakitchen.co.uk/register-guarantee](http://www.ninjakitchen.co.uk/register-guarantee) to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

## TWO (2) YEAR LIMITED GUARANTEE

When a consumer buys a product in Europe, they get the benefit of legal rights relating to the quality of the product (your statutory rights). You can enforce these rights against your retailer. We give you an additional manufacturer’s guarantee of two years. These terms and conditions relate to our manufacturer’s guarantee only – your statutory rights are unaffected.

The conditions below describe the prerequisites and scope of our guarantee. They do not affect your statutory rights or the obligations of your retailer and your contract with them.

### Ninja® Guarantees

Every Ninja machine comes with a free parts and labour guarantee. You’ll also find online support at [www.ninjakitchen.eu](http://www.ninjakitchen.eu)

### How do I register my Ninja guarantee?

You can register your guarantee online within 28 days of purchase. To save time, you’ll need the following information about your fan

- Date you purchased the unit (receipt or delivery note).
- To register online, please visit [www.ninjakitchen.eu](http://www.ninjakitchen.eu)

### IMPORTANT:

- The guarantee will only cover your product from the date of purchase.
- Please keep your receipt at all times. Should you need to use your guarantee we will need your receipt to verify the information you have supplied to us is correct. The inability to produce a valid receipt may invalidate your guarantee.

### What are the benefits of registering my free Ninja guarantee?

When you register your guarantee we’ll have your details to hand if we ever need to get in touch. You can also receive tips and advice on how to get the best out of your Ninja unit and hear the latest news about new Ninja® technology and launches. If you register your guarantee online, you’ll get instant confirmation that we’ve received your details.

### What is covered by the free Ninja guarantee?

Repair or replacement of your Ninja machine (at Ninja’s discretion), including all parts and labour. A Ninja guarantee is in addition to your legal rights as a consumer.

### What is not covered by the free Ninja guarantee?

1. Normal wear and tear of wearable parts (such as accessories). Replacement parts are available for purchase at [www.ninjakitchen.eu](http://www.ninjakitchen.eu)
2. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance or damage due to mishandling in transit.
3. Damage caused by maintenance not authorised by Ninja.

### Where can I buy genuine Ninja spares and accessories?

You’ll find a full range of Ninja spares and replacement parts/accessories for all Ninja machines at [www.ninjakitchen.eu](http://www.ninjakitchen.eu)

Please remember that damage caused by the use of non-Ninja spares may not be covered under your guarantee.



### DANSK

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### DEUTSCH

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### ENGLISH

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### ESPAÑOL

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### FRANÇAIS

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### ITALIANO

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### NEDERLANDS

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### NORSK

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### PORTUGUÊS

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### SUOMI

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA

### SVENSKA

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TOTAL CRUSHING is a registered trademark of SharkNinja Operating LLC. BlendSense and NINJA DETECT are trademarks of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See [sharkninja.com/patents](http://sharkninja.com/patents) for more information.

© 2024 SharkNinja Operating LLC. PRINTED IN CHINA



@ninjakitchen

**SharkNinja Germany GmbH,  
Rotfeder-Ring 9,  
60327 Frankfurt am Main, Germany**  
[ninjakitchen.eu](http://ninjakitchen.eu)

**SharkNinja Europe Ltd,  
1st/2nd Floor Building 3150,  
Thorpe Park, Century Way,  
Leeds, England, LS15 8ZB**  
[ninjakitchen.eu](http://ninjakitchen.eu)