

## Safety instructions:


1. Carefully read the instructions before using your appliance.
2. Switch off the appliance before fitting and removing the attachment.
3. Keep your fingers away from moving parts and the opening on the attachment.
4. Only use the appliance for its intended domestic use, the manufacture will not accept any liability if the appliance is subject to improper use or failure to comply with these instructions.
5. Never leave the appliance to run unsupervised, especially when young children or handicapped persons are present.
6. Check that the voltage rating of the appliance does in fact match that of your electrical system. Any connection error will nullify the guarantee.
7. If you have to use an electrical extension lead, it must be earthed and you should make sure that no-one can trip over it.
8. Unplug the appliance as soon as you have finished using it and when you clean it.
9. Don't use your attachment and/or appliance if it has been damaged. You should contact an approved service centre.
10. Any work on the appliance other than normal care and cleaning by the customer must be carried out by an approved service centre.
11. Do not immerse the appliance, the power cord or the plug in water or in any other liquid.
12. Do not allow the power cord to hang within the reach of children, to come close to or into contact with the hot parts of your appliance, any other source of heat or any sharp edge.
13. If the power cord or the plug are damaged, don't use your appliance. To avoid any risk, these must be replaced by an approved service centre.
14. Do not put any accessories containing metal in a microwave oven.
15. Switch off the appliance and disconnected from supply before changing accessories or approaching parts which move in use.
16. Do not touch the whisk, mixer blade or kneading hook while the appliance is in operation.
17. Only use one attachment at a time.
18. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
19. Children shall not play with the appliance.
20. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
21. There is a potential injury from misuse. Please handle it with care.
22. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or

cleaning.

23. Be careful if hot liquid is poured into the food processor as it can be ejected out of the appliance due to a sudden steaming.

24. This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other similar working environments;
- in agricultural working environments;
- by customers in hotels, motels etc. and similar establishments;
- in bed-and breakfast type environments.

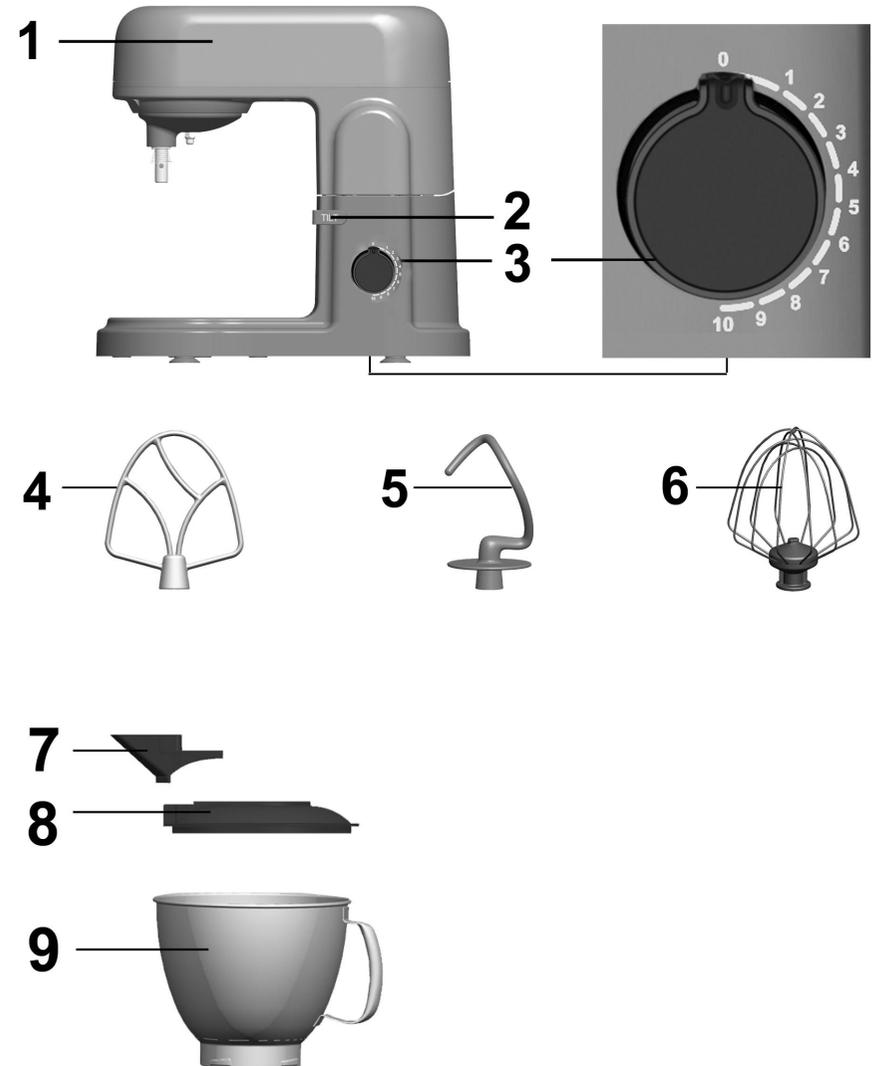


## Description:

1. Multifunction head
2. Release button for multifunction head

3. Speed control switch
4. Mixer blade
5. Dough hook
6. Whisk
7. Small bowl cover
8. Bowl cover
9. Stainless steel bowl (Max. capacity: 5L )

## Using your appliance:

### ◆ Kneading/Beating/Whisking

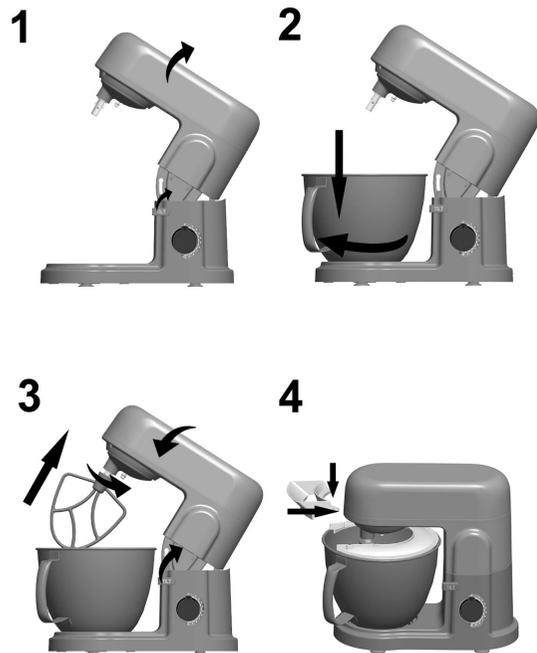

Depending on the nature of the ingredients, the bowl (9) with its cover can be used to prepare up to 2.1kg of dough.

1. Before using for the first time, clean all parts of the accessories with soapy water .rinse and dry.
2. Press button (2) to the release the multifunction head (1) and raise it to a vertical position.
3. Fit the bowl (9) onto the appliance by turning until it locks in position and place the ingredients in it.
4. Fit the desired accessory (4), (5) or (6) in the power outlet, pushing the shaft of the accessory home and turn it a quarter turn towards you to lock it in position.
5. Lower the multifunction head of the appliance to horizontal position and press button again (a click should be heard).
6. Position the cover on the bowl with the filling opening at the front of the appliance. During preparation, you can add ingredients through the opening the cover.

### Caution:

1. To stop the appliance, turn the knob (3) back to 0.
2. Place the appliance on a flat, clean and dry surface and then plug in your appliance.

## Cleaning:

1. Unplug the appliance.
2. Never immerse the motor until in water or put it under running water wipe it with a soft dry or slight damp cloth.
3. For easier cleaning, quickly rinse the accessories after use. Completely dismantle the mixer attachment.
4. Wash, rinse and wipe the accessories or the can be put in the dishwasher.
5. If your accessories are discolored by food (carrots, oranges etc), rub them gently with kitchen towel dipped in cooking oil and then clean in the usual way.

## Processing Guide

Accessory	Food	Maximum	Operation time	Speeds	Preparation
whisk	Cream(include 38%fat)	500ml	3-5 minutes	5-Max	/
	Egg white	12pcs	3minutes	5-Max	/
Dough hook	Flour	1000g	5minutes	1-2	
	Water	500g			
Remarks: For making best effect dough, we recommend choosing the middle and low speed to operate the appliance.					
Mixer blade	Flour	100g	5minutes	Min-4	/
	Castor sugar	100g			
	Margarine	100g			
	Egg	2pcs			



The device complies with the European Directives 2014/35/EU, 2014/30/EU and 2009/125/EC.



At the end of its service life, this product may not be disposed of in the normal household waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their labelling. You make an important contribution to protecting our environment by reusing, recycling or utilising old devices in other ways. Please ask the municipal administration where the appropriate disposal facility is located.



## MULTIFUNCTIONAL KITCHEN MACHINE

**Model No.: LW-6849G1**

**220-240V~ 50/60Hz 1000W**



Company: Liantek Electrical Appliances (Shenzhen) Co.,Ltd.  
Address: 1 Building 101(1-3) of No.23 Heping Road, Qinghua  
Community, Longhua Street, Longhua District, Shenzhen,Guangdong,  
China  
Tel: 86-755-8170 8000  
Website: [www.liantek.com](http://www.liantek.com)