

Passend für die folgenden Modelle:

<b>Marke</b>	<b>Typennummer</b>	<b>Modell</b>
Tefal	FE90C160/702	KEUKENMACHINE i Companion XL CONNECT
Tefal	FE80B837/702	KEUKENMACHINE COMPANION XL
Tefal	FE90B137/702	KEUKENMACHINE i Companion XL CONNECT
Tefal	FE800A38/701	KEUKENMACHINE COMPANION
Tefal	FE800A38/702	KEUKENMACHINE COMPANION
Tefal	FE800A40/701	KEUKENMACHINE COMPANION
Tefal	FE800A40/702	KEUKENMACHINE COMPANION
Tefal	FE800A60/701	KEUKENMACHINE COMPANION
Tefal	FE800A60/702	KEUKENMACHINE COMPANION
Tefal	FE900138/701	KEUKENMACHINE i Companion
Tefal	FE900138/702	KEUKENMACHINE i Companion
Moulinex	HF900110/702	KEUKENMACHINE i Companion
Moulinex	HF935E10/702	KEUKENMACHINE i Companion XL Touch
Moulinex	HF90E700/702	KEUKENMACHINE i Companion XL
Moulinex	HF936E00/702	KEUKENMACHINE i Companion XL Touch
Moulinex	HF938E00/702	KEUKENMACHINE i Companion XL Touch
Moulinex	HF934510/702	KEUKENMACHINE i Companion XL Touch
Moulinex	HF80CB10/702	KEUKENMACHINE COMPANION XL
Moulinex	HF80C800/702	KEUKENMACHINE COMPANION XL
Moulinex	HF908500/702	KEUKENMACHINE i Companion XL
Moulinex	HF908100/702	KEUKENMACHINE i Companion XL GOURMET
Moulinex	HF806E10/702	KEUKENMACHINE COMPANION XL
Moulinex	HF808800/702	KEUKENMACHINE COMPANION XL
Moulinex	HF800A10/700	KEUKENMACHINE COMPANION
Moulinex	HF800A10/701	KEUKENMACHINE COMPANION
Moulinex	HF800A10/702	KEUKENMACHINE COMPANION
Moulinex	HF800A12/700	KEUKENMACHINE COMPANION

Moulinex	HF800A12/701	KEUKENMACHINE COMPANION
Moulinex	HF800A12/702	KEUKENMACHINE COMPANION
Moulinex	HF800A13/700	KEUKENMACHINE COMPANION
Moulinex	HF800A13/701	KEUKENMACHINE COMPANION
Moulinex	HF800A13/702	KEUKENMACHINE COMPANION
Moulinex	HF800A27/701	KEUKENMACHINE COMPANION
Moulinex	HF800A28/701	KEUKENMACHINE COMPANION
Moulinex	HF800A28/702	KEUKENMACHINE COMPANION
Moulinex	HF805810/702	KEUKENMACHINE COMPANION XL
Moulinex	HF805813/702	KEUKENMACHINE COMPANION XL
Moulinex	HF805820/702	KEUKENMACHINE COMPANION XL
Moulinex	HF806E13/702	KEUKENMACHINE COMPANION XL
Moulinex	HF806E20/702	KEUKENMACHINE COMPANION XL
Moulinex	HF807E10/702	KEUKENMACHINE COMPANION XL GOURMET
Moulinex	HF807E20/702	KEUKENMACHINE COMPANION XL GOURMET
Moulinex	HF809820/702	KEUKENMACHINE COMPANION XL GOURMET
Moulinex	HF900110/701	KEUKENMACHINE i Companion
Moulinex	HF900999/70X	KEUKENMACHINE COMPANION UPGRADE
Moulinex	HF902110/701	KEUKENMACHINE i Companion
Moulinex	HF902110/702	KEUKENMACHINE i Companion
Moulinex	HF905110/701	KEUKENMACHINE i Companion
Moulinex	HF906B10/702	KEUKENMACHINE i Companion XL GOURMET
Moulinex	HF908120/702	KEUKENMACHINE i Companion XL GOURMET
Krups	HP5098MX/702	KEUKENMACHINE PREP & COOK XL
Krups	HP503180/703	KEUKENMACHINE PREP & COOK
Krups	HP60A115/702	KEUKENMACHINE I PREP&COOK XL
Krups	HP50A815/702	KEUKENMACHINE PREP & COOK XL
Krups	HP503117/701	KEUKENMACHINE PREP & COOK
Krups	HP503117/702	KEUKENMACHINE PREP & COOK

Krups	HP503180/701	KEUKENMACHINE PREP & COOK
Krups	HP503180/702	KEUKENMACHINE PREP & COOK
Krups	HP508815/702	KEUKENMACHINE PREP & COOK XL
Krups	HP605117/702	KEUKENMACHINE I PREP&COOK GOURMET
All-Clad	HP503152/701	KEUKENMACHINE PREP & COOK
All-Clad	HP503152/702	KEUKENMACHINE PREP & COOK