
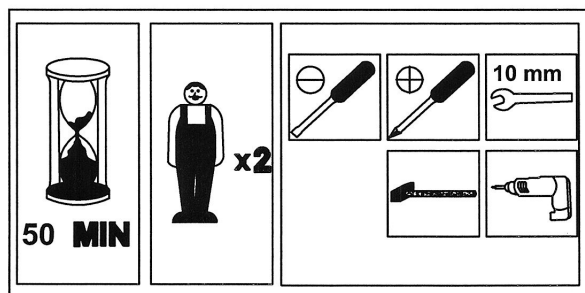
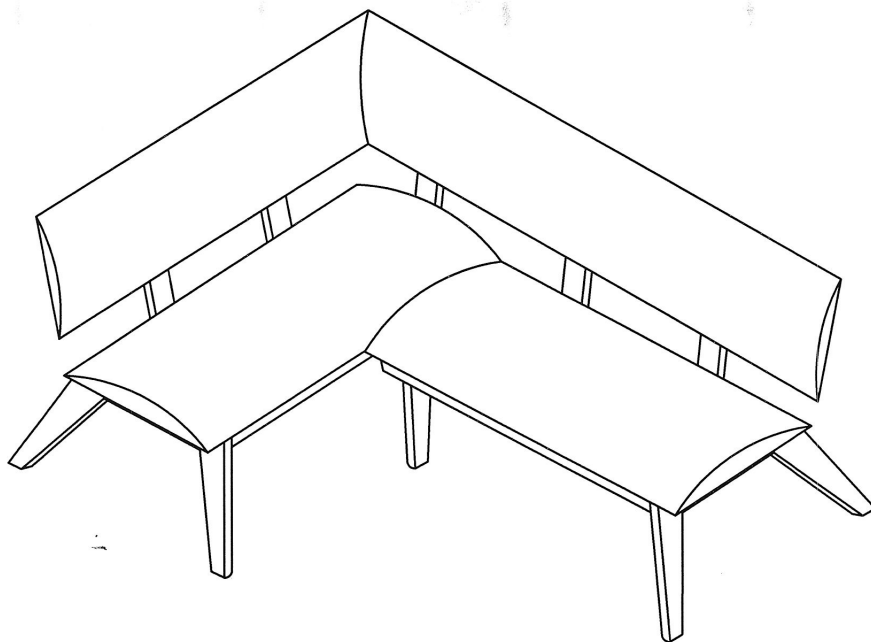
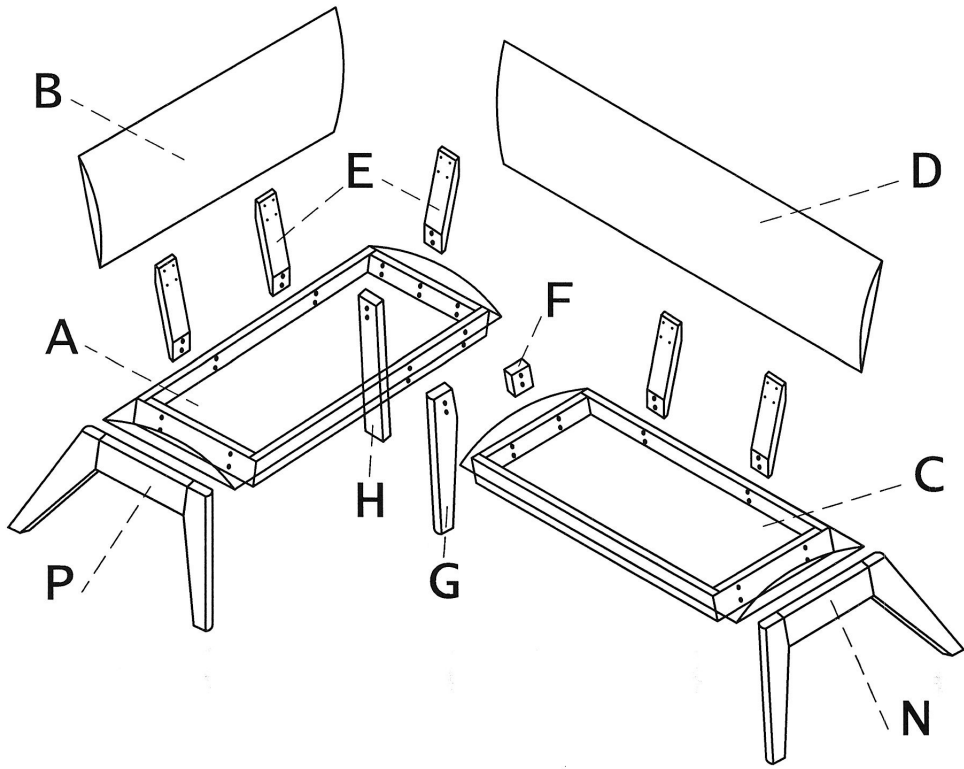


ZELLE - R

- | | | | |
|-----------|---|-----------|---|
| D | Montageanleitung
<< ZELLE >> | GB | Assembly instructions
<< ZELLE >> |
| FR | Notice de montage
<< ZELLE >> | IT | Istruzioni di montaggio
<< ZELLE >> |
| NL | Handleiding voor de montage
<< ZELLE >> | PL | Instrukcja montażu
<< ZELLE >> |
| CZ | Montážní návod
<< ZELLE >> | SK | Návod na montáž
<< ZELLE >> |
| HU | Szerelési útmutató
<< ZELLE >> | RO | Instructiuni de montaj
<< ZELLE >> |
| TR | Montaj talimati
<< ZELLE >> | RU | Инструкция по монтажу
<< ZELLE >> |

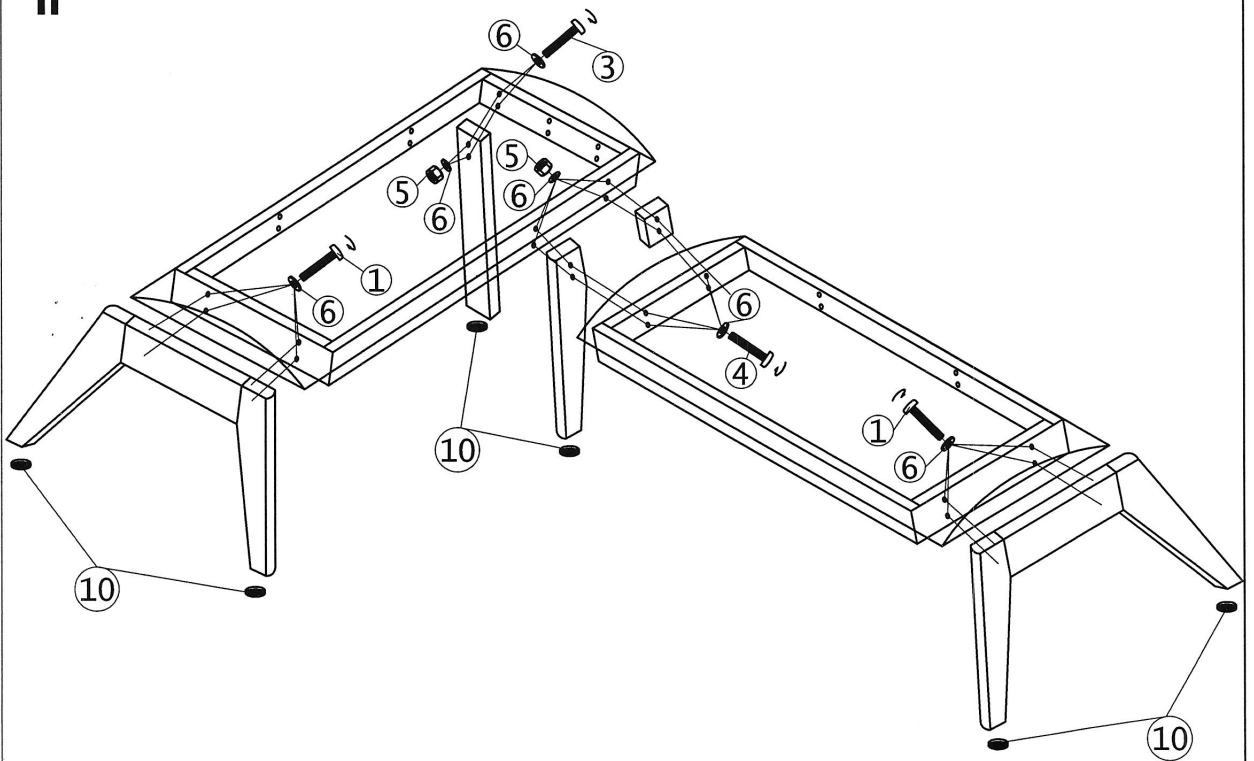


1/5


I**II**

2/5


III

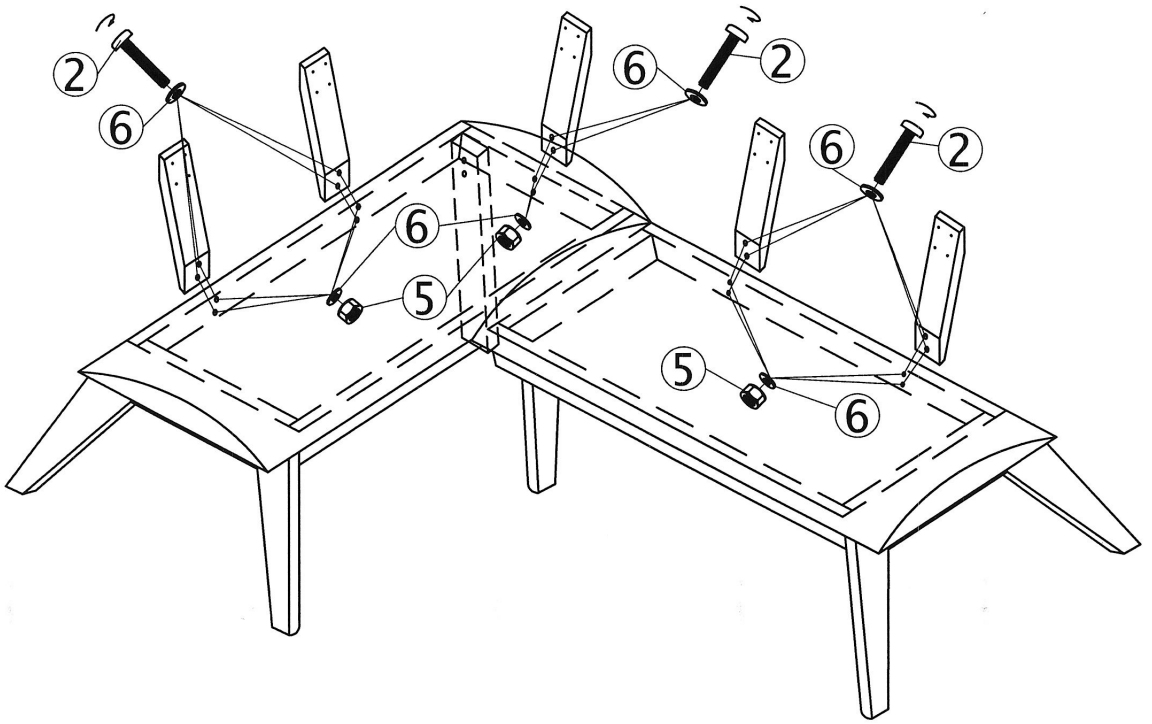


IV

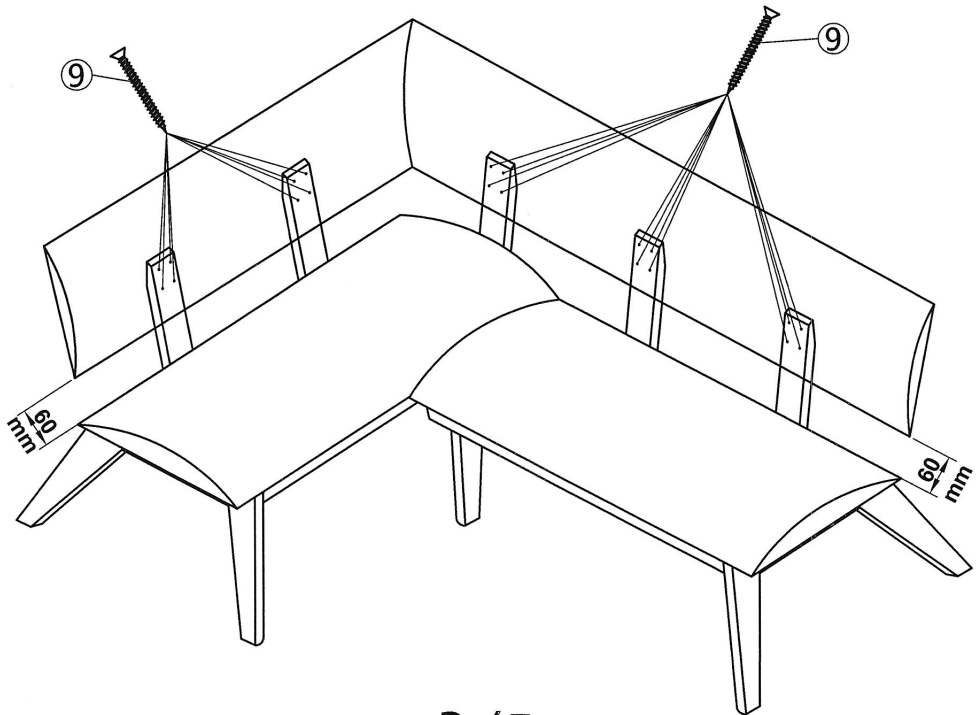

V

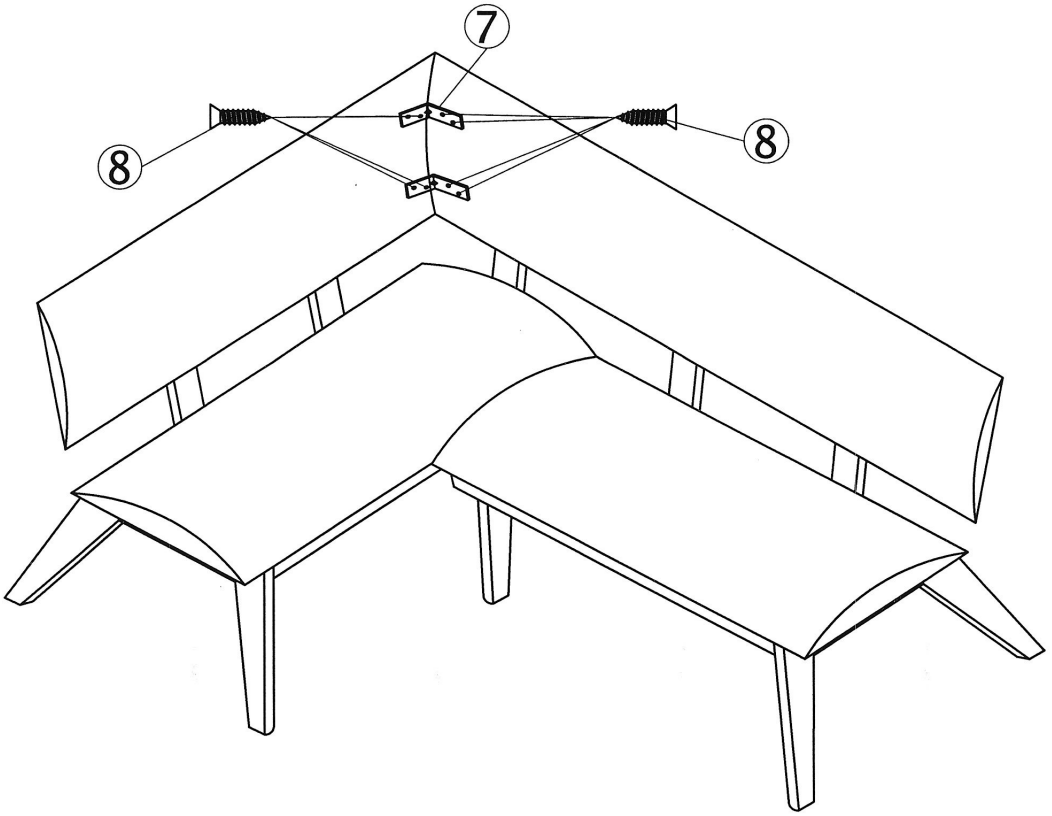

VI

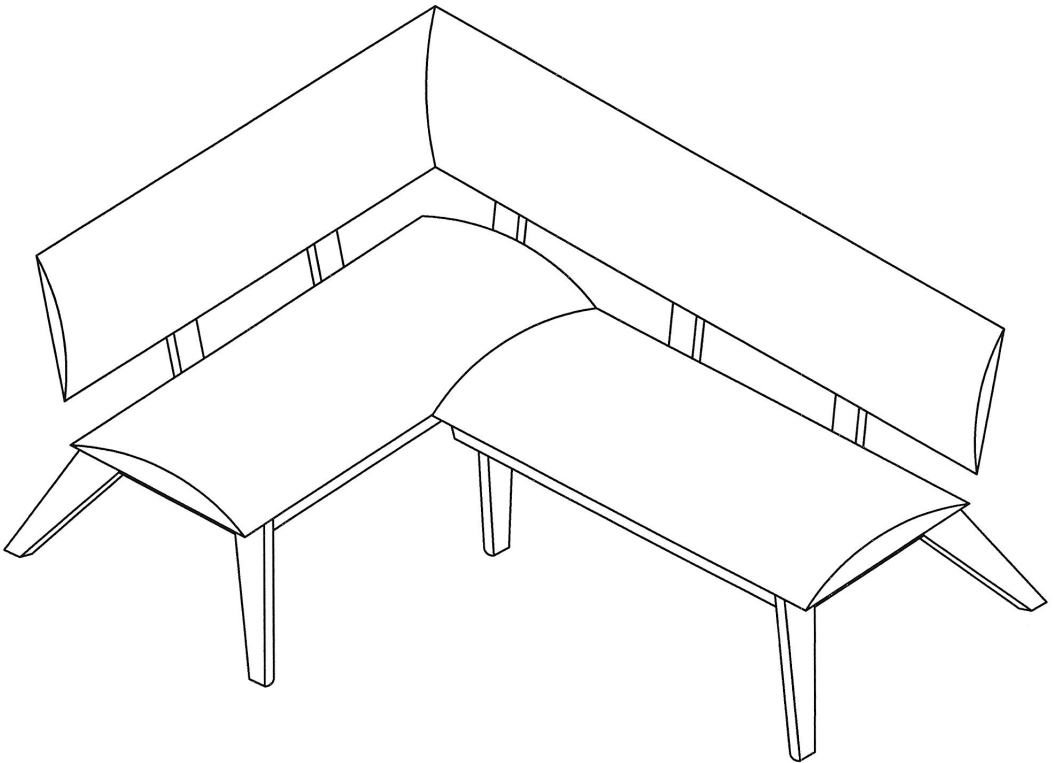

4/5

Ax1	Bx1	Cx1	Dx1	Ex5	Fx1	Gx1	Hx1	Ix1	Nx1	Px1
①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	
8	10	2	4	16	40	2	8	20	6	
M6x35	M6x50	M6x70	M6x80	M6	φ 6	50x50	3,5x16	3,5x35	φ 22	
