

USER MANUAL Bidet Seat

Contents

- Thank you for your purchase of the product.
- Be sure to read this Instruction Manual before using your product and keep it in a safe place for future reference.

Cleaning and maintenance 8


Product technical specification 9

Faults and solutions 9


Warranty Card 10

Safety notes

Read the safety instructions carefully before use so as to properly use the product. Note the following warnings relevant to the safety.

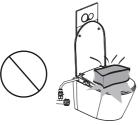


Do not place heavy objects on the toilet seat or the toilet cover

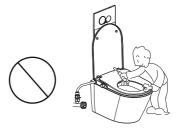

Do not disassemble, repair and modify products by without authorization.



 Do not place this product in direct sunlight.




Do not bend or twist the water supply hose.



Do not lean against the toilet lid when in use



 
The room temperature of toilet shall be above 0°C.




Do not connect to the substandard water pipe.



Please clean with the diluted kitchen cleaning agent and do not use the following items:Benzene, paint thinner, detergent powder, nylon brush, etc.

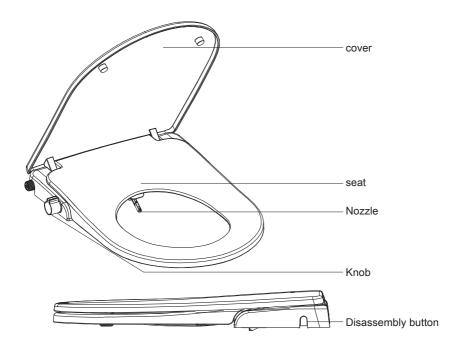


• Product dimension drawing

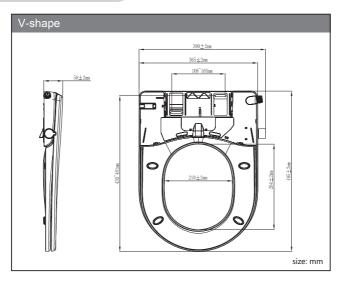


1.Cover plate



 2. Installation template



 3.Fixation part



Fixing plate









Nuts

4.Adapter



5.tube



6. User manual



Installation tools




Attention before installation

- 1.Water pressure range: 0.07-0.8MPa, please follow the instructions.
- Corner valves shall be located close to the location where this product is installed and disassembled.
- 3. Please use the braided hose that comes with the product to prevent water leakage.
- 4. When installing braided hose, be careful to prevent the black gasket falling out.


• Installation Procedure

1. Loosen the nut connecting and remove the old cover.




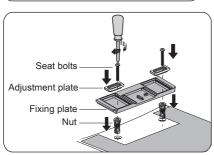

 
Place the installation template on the ceramic as shown. Align it with the rim of toilet.



 
- 3. ①Insert the nuts into ceramic hole;
 - ②Place fixing plate in notch part of template;
 - 3 Place adjusting plate in fixing plate;
 - Align seat bolts hole , and tighten up;



Position the template onto the bowl and use it as a guide to align the mounting plate

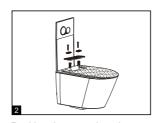

 
Position the mounting plate over the bowl holes, insert the adjustment plates into themounting plate to align with the bowl holes, install the seat bolts and nuts fosecure the mounting plate fo the bowl




Position the seat over the mounting plate [the back of the seat needs to allgn with theback notch),then slide the seat backwards.



 There will be an audible click when engaged correctly.



To remove the seat, press the release button on the side of the seat and slide ltforwards as far as possible, then lift off.

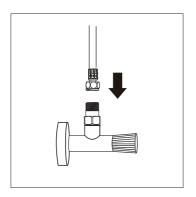

Instal the adapter onto the stop valve. Instal the tube and existing pipe onto the adapter



Turn on the stop valve and turn on the bidet. Check all joints for leaks.

 
Konb function



Posterior Cleaning



Feminine Cleaning




OPERATION


To activate the bidet, turn the control knob forwards or backwards until it dicks, Turn further toincrease the pressure, Return to the upright position to turn off.

• Manual cleaning of spray tube

- Gently pull out the nozzle and dip the neutral detergent with a soft cloth, sponge or small brush.
- Gently support the nozzle, wipe the spray tube and nozzle.

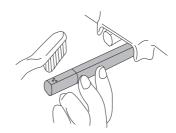

Clean filter screen

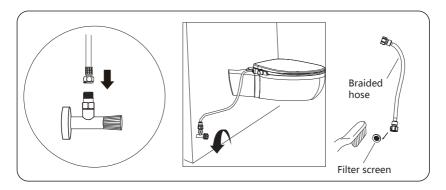

Tips:

- Make sure that the corner valve close off before you clean the filter screen;
- Clean the filter screen when the water flow is less than normal hours.
- During cleaning process, the product must be thoroughly separated from the water inlet hose:
- Reinstall the filter screen in reverse order after cleaning.

Product surface cleaning

- Wipe the product surface with a sponge or soft cloth dampened with room temperature water or a neutral detergent.
- Lift the upper cover and the seat ring when cleaning other parts with cleaning agents.
- Do not put cover on before the cleaning agent in the ceramic toilet is completely washed, otherwise the surface may be corroded by the evaporation of cleaning agent.

Product technical specification

| It | ems | Description | |
|--------------------------|-------------------------|---------------------------|--|
| Water supply pressure | | 0.07-0.8 MPa | |
| Water supply temperature | | Water at room temperature | |
| Ambient temperature | | 0 ~ 40℃ | |
| Net weight | | About 2.8kg | |
| Cleaning device | Water amount regulation | Stepless regulation | |
| | Protective device | Anti-backflow valve | |
| Others | Antibacterial material | Nozzle | |
| | Control operation | Knob | |

Faults and solutions

| Phenomenon | Possible cause | Solution | |
|---|--|---|--|
| | Knob is not completely turned on. | Increase knob regulating angle. | |
| Low flushing | Water pressure too low | Contact relevant departments to solve water pressure problems | |
| | Valve is off | Open the vavle | |
| Turn on knob and no the water comes out | The filter of the water inlet pipe is blocked | Clean the filter of the water inlet pipe | |
| | Nozzle clogging | Remove the nozzle and clean | |
| Spray rod cannot reset | Water quality is too bad to blocking the spray rod | Clean spray rod | |
| Base leaking | Water pressure too high | Contact relevant departments to solve water pressure problems | |

Warranty Card

To dear customers:

Thank you for choosing our E-bidet! If any problem occurs during use, please simply remove and check the problems pursuant to the user's manual. When you cannot remove such problems, contact your local supplier or call the service hotline.

I. Information:

| Customer information | Custome | er nan | ne | | |
|-----------------------|---------|--------|----|-----------------------|--|
| | Address | | | | |
| | TEL | | | | |
| Dealer information | Name | | | | |
| | TEL | | | | |
| Model | | | | Product series number | |
| Purchase date | Υ | М | D | Warranty period | One-year free warranty since the purchase date |

II. Notes to warranty card:

- 1. Please complete the warranty card.
- 2. Warranty cards and invoices are important for the warranty service. If the product failure occurs during warranty period, please show the warranty card and the invoice when the dealer or after-sales service personnel of the Company provide on-site maintenance and repair.
- 3. The warranty card cannot be reissued, please keep it properly.

III. Rules on free maintenance

During the warranty period, the Company will provide repair free of charge according to the use instructions, precautions for normal use.

IV. Paid maintenance is required in the following circumstances that do not fall within the scope of free maintenance:

- 1. Out of warranty.
- 2. The valid invoice and warranty card cannot be provided during the warranty period.
- 3. Failure or damage caused by transportation, collision after purchase.
- Product damage during abnormal use, failure and damage during the warranty period caused by human factors or natural disasters, such as fire, earthquake, flood, lightning or environmental pollution, etc.
- 5. Failure or damage caused by unauthorized disassembly, modification or maintenance due to user's cause or responsibility.
- Failure or damage caused by violation of maintenance regulations in use, such as improper use of cleaning agent or wiping and maintenance methods not compliant with maintenance requirements.
- 7. The consumable items (such as sealing rings, etc.) or products have failed or damaged due to sand and impurities.
- 8. Conduct the secondary transfer according to the customer's requirements.

