

Ⓓ Aufbauanleitung

Ⓕ Notice de montage

Ⓖ Handleiding voor de montage

Ⓒ Montážní návod

Ⓗ Szerelési útmutató

Ⓓ Montaj talimatları

Ⓖ Assembly instruction

Ⓙ Istruzioni di montaggio







Ⓟ Instrukcja montażu

Ⓒ Navod na montaž

Ⓙ Instrucțiuni de montaj

Ⓙ Инструкция по монтажу

36-1053-82-000

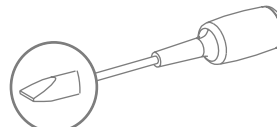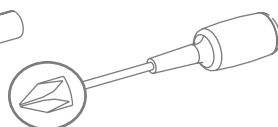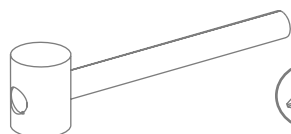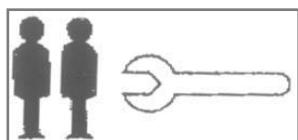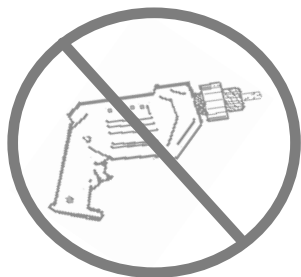
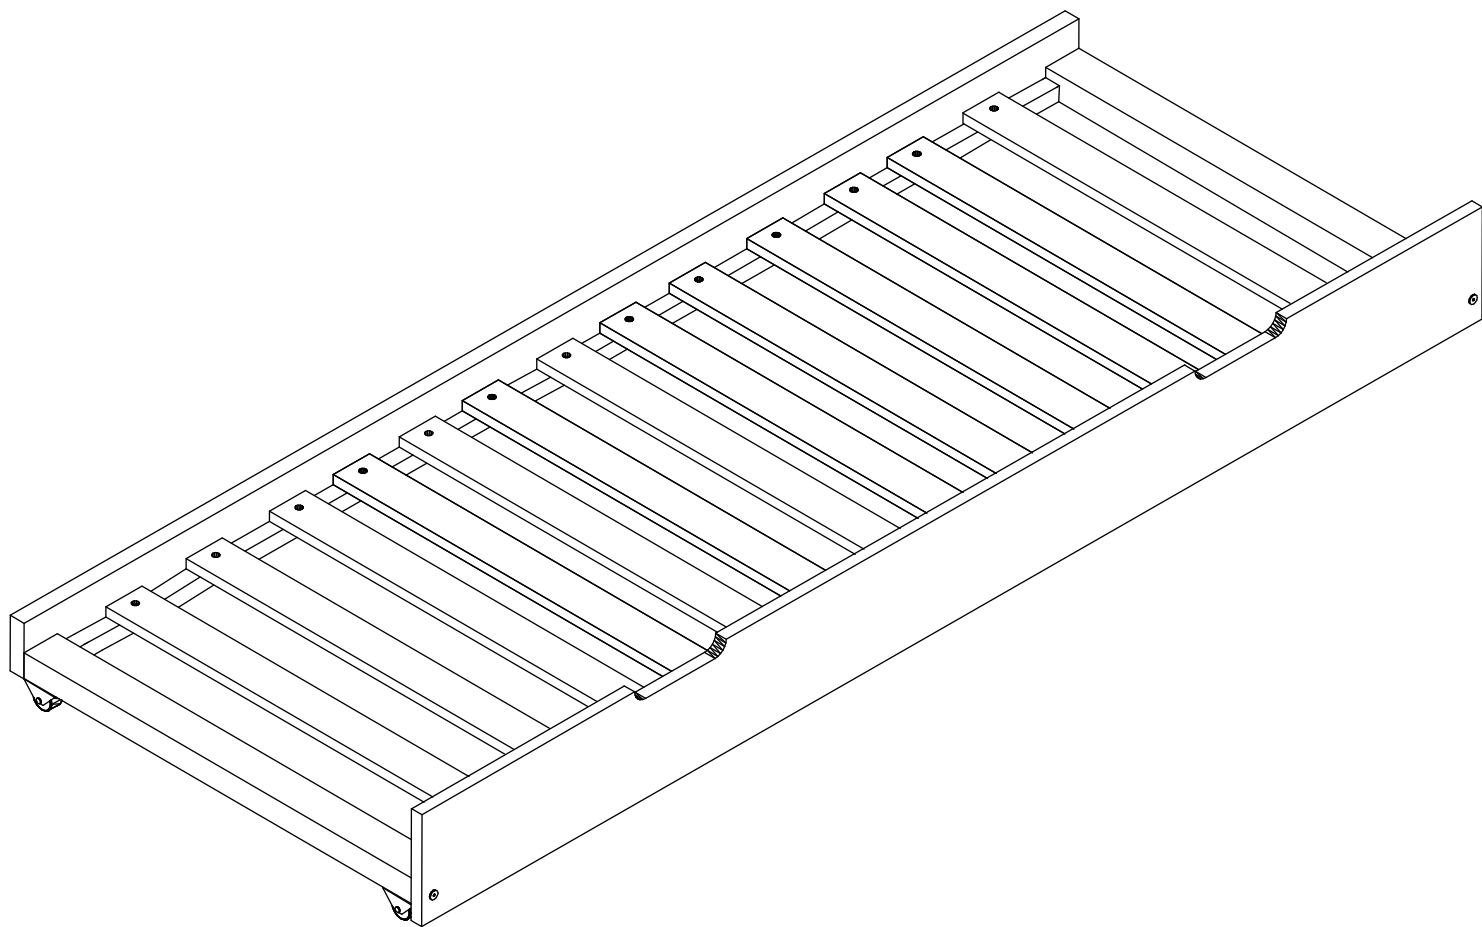


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба




Name • Nom • Nome • Naam • Nazwa • Jméno • Názov
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

Typ • Type • Tip • Tipus • Druh • Тиро • Тип

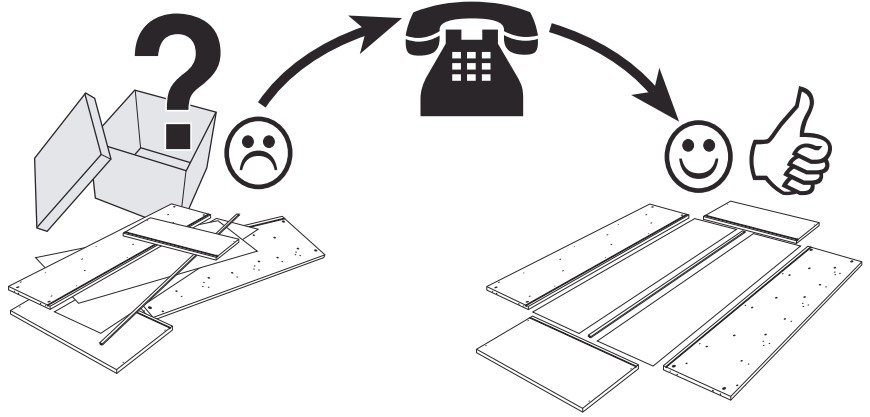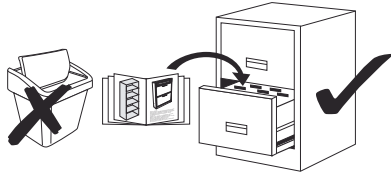


A	013105-82	x1
B	013100-32	x1
C	013101-32	x2
D	004810-00	x13

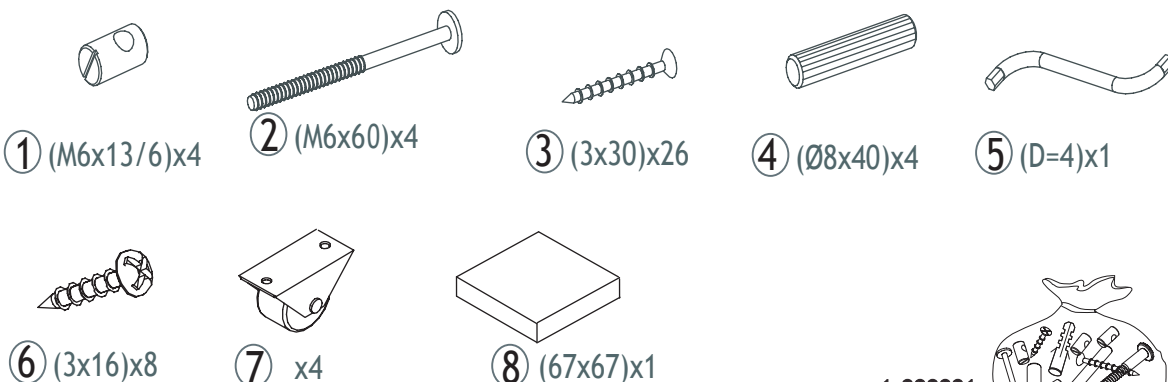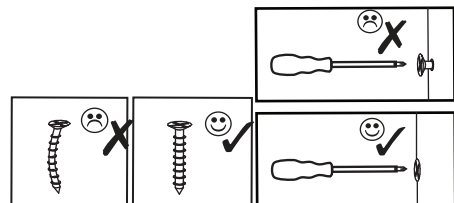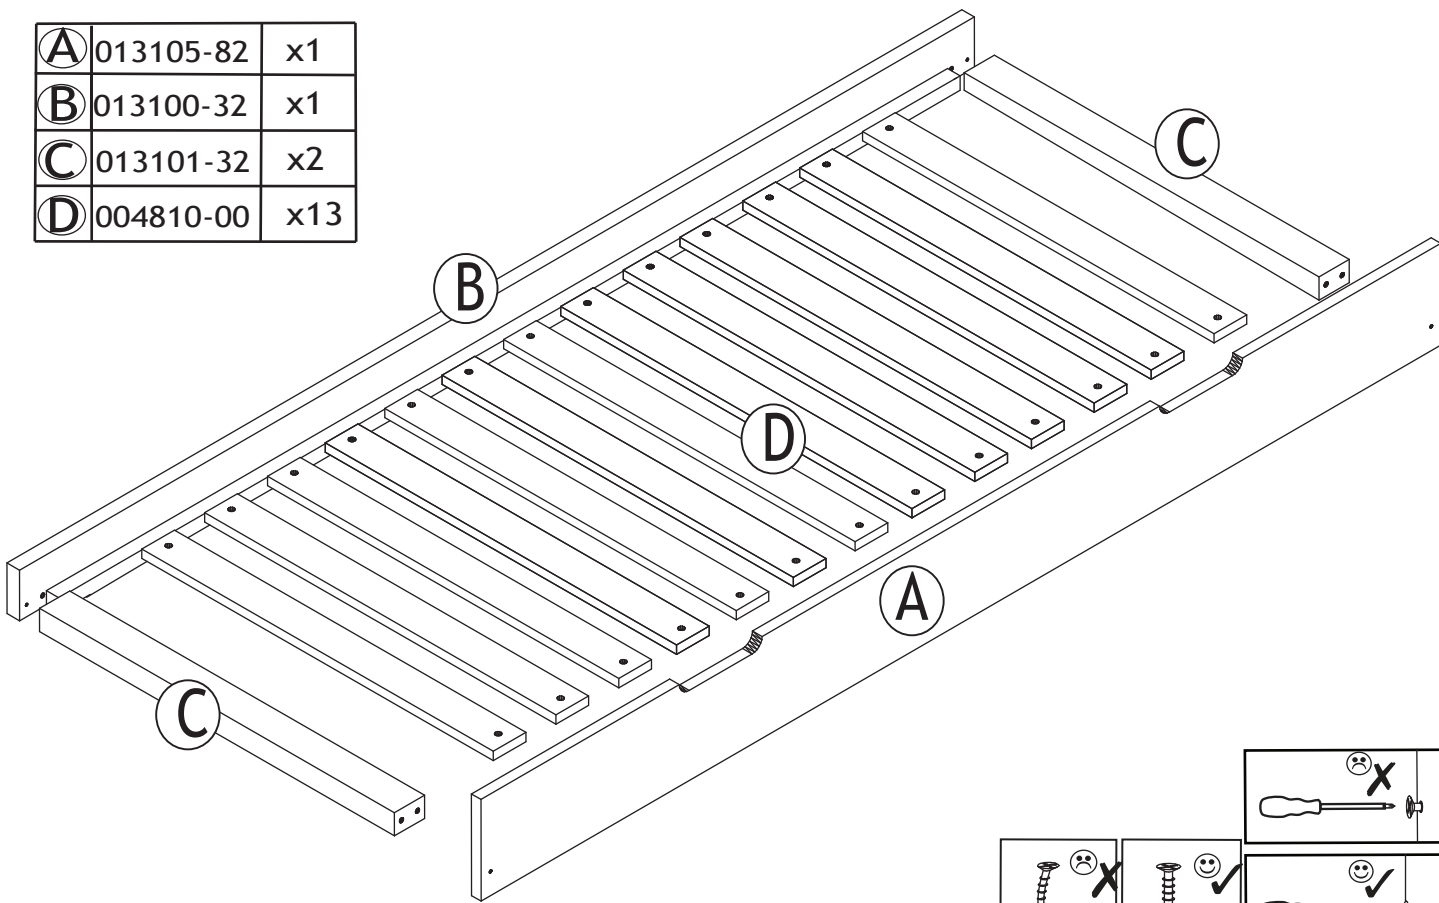

		mm	
1	1-000095-07	M6x16/6	x4
2	1-000111-07	M6x60	x4
3	1-000012-07	3x30	x26
4	1-000013-00	8x40	x4
5	1-000015-07	Z4	x1
6	1-000091-07	3x16	x8
7	1-000090-07	D40	x4
8	1-000113-82	67x67	x1

1.

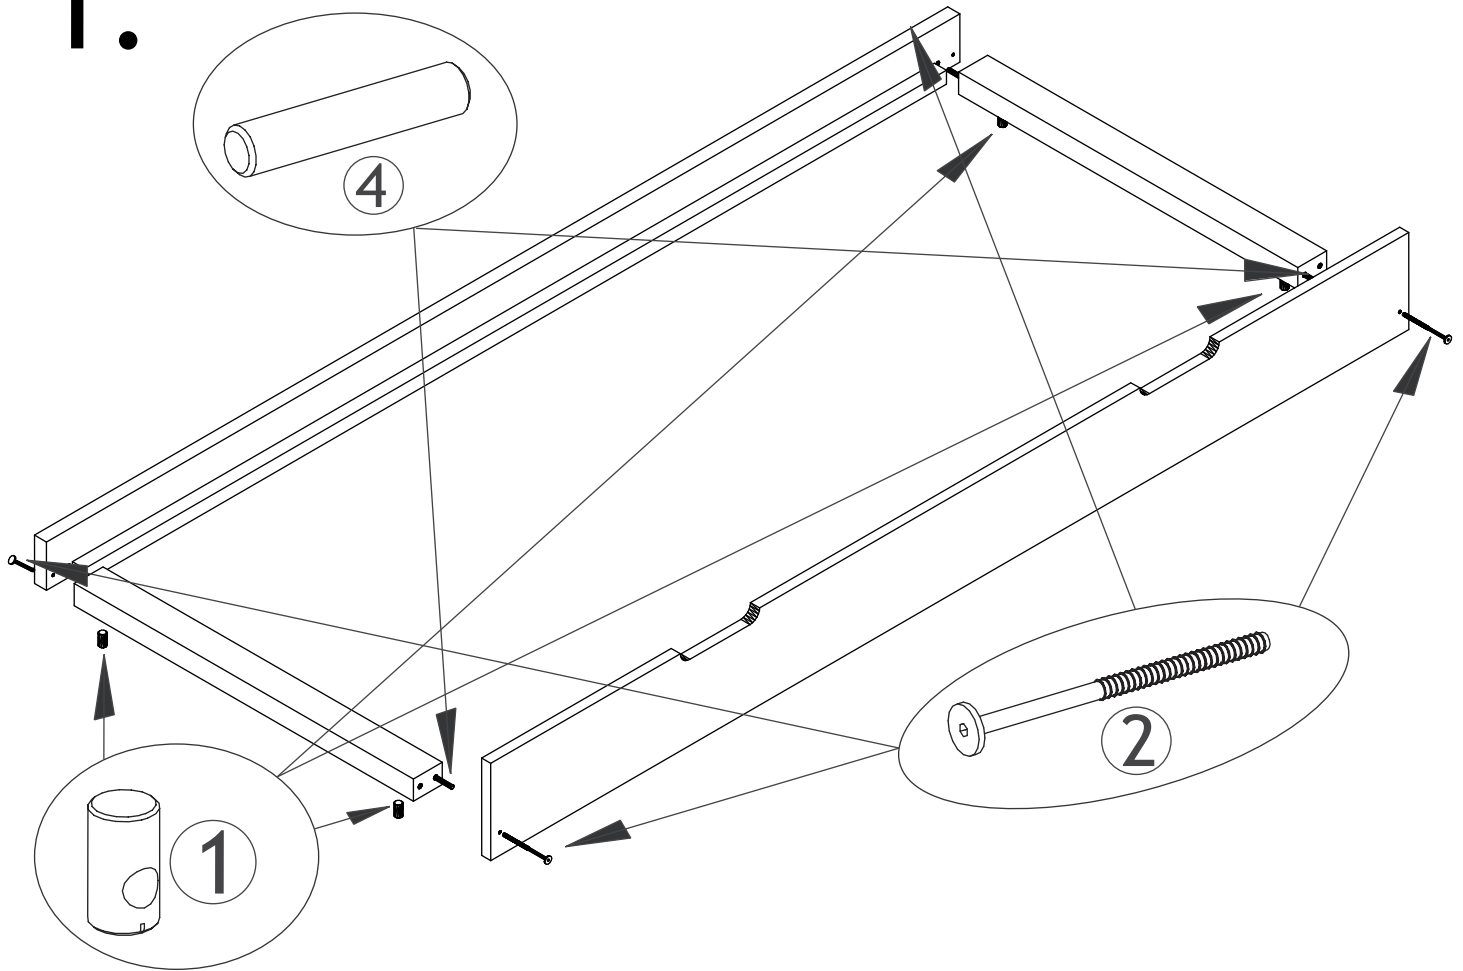

2.

