

Passend für die folgenden Modelle:

| Marke | Typennummer | Modell |
|--------------|--------------------|------------------------|
| KENWOOD | 0WKM260004 | KM260 PROSPERO |
| KENWOOD | 0WKM241002 | KM241 Prospero ProPlus |
| KENWOOD | 0W20010037 | KM280 |
| KENWOOD | 0WKM288001 | KM288 |
| KENWOOD | 0WKM282002 | KM282 |
| KENWOOD | 0WKM263002 | KM263 |
| KENWOOD | 0WKM285006 | KM285 |
| KENWOOD | 0WKM287001 | KM287 |
| KENWOOD | 0W20010012 | KM240 |
| KENWOOD | 0WKM266006 | KM266 |
| KENWOOD | 0WKM282006 | KM282 |
| KENWOOD | 0WKM244002 | KM244 |
| KENWOOD | 0WKM289002 | KM289 |
| KENWOOD | 0WKM285002 | KM285 |
| KENWOOD | 0WKM242007 | KM242 |
| KENWOOD | 0WKM266002 | KM266 |
| KENWOOD | 0WKM264008 | KM264 |
| KENWOOD | 0WKM241001 | KM241 |
| KENWOOD | 0W20010038 | KM280RD |
| KENWOOD | 0WKM265007 | KM265 |
| KENWOOD | 0WKM285001 | KM285 |
| KENWOOD | 0WKM283002 | KM283 |
| KENWOOD | 0WKM283001 | KM283 |
| KENWOOD | 0WKM262007 | KM262 |
| KENWOOD | 0WKM243004 | KM243 |
| KENWOOD | 0WKM248002 | KM248 |
| KENWOOD | 0WKM281001 | KM281 |
| KENWOOD | 0WKM287002 | KM287 |
| KENWOOD | 0WKM280001 | KM280 |
| KENWOOD | 0WKM286002 | KM286 |
| KENWOOD | 0WKM241006 | KM241 |
| KENWOOD | 0WKM261006 | KM261 |
| KENWOOD | 0WKM242006 | KM242 |
| KENWOOD | 0WKM280005 | KM280 |
| KENWOOD | 0WKM245002 | KM245 |
| KENWOOD | 0WKM240002 | KM240 |
| KENWOOD | 0WKM242002 | KM242 |
| KENWOOD | 0WKM241004 | KM241 |
| KENWOOD | 0WKM287006 | KM287 |
| KENWOOD | 0W20010016 | KM241 |
| KENWOOD | 0W20010045 | KM280RD |
| KENWOOD | 0W20010017 | KM241 |
| KENWOOD | 0WKM260007 | MX260 |