 
 
 
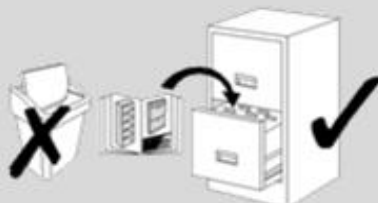 
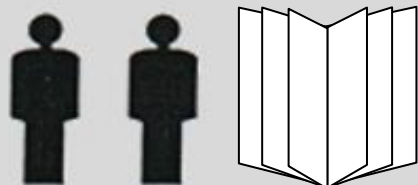 
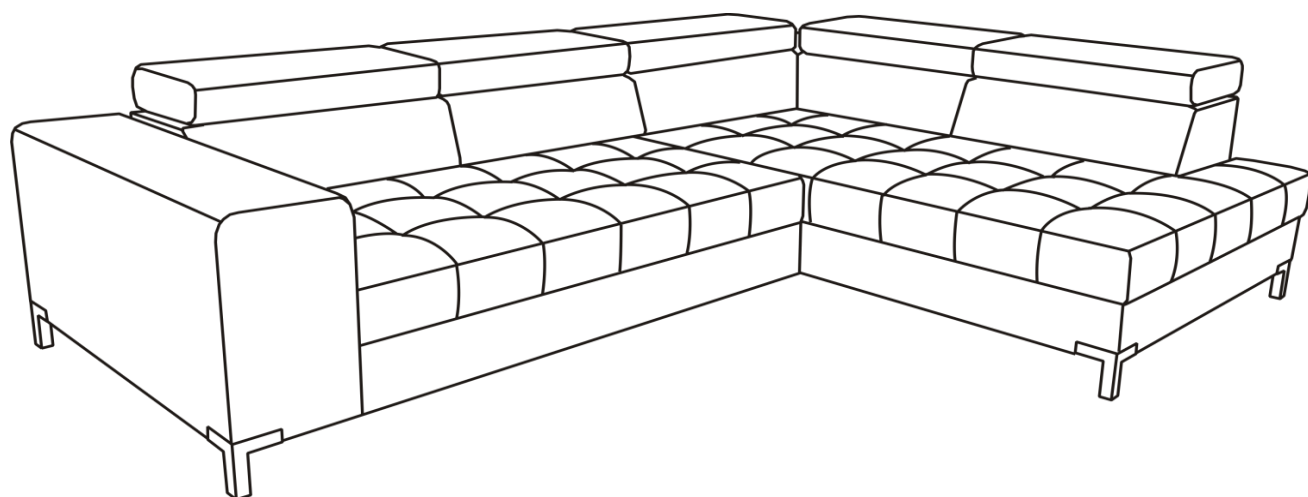 
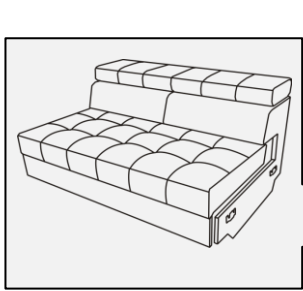 
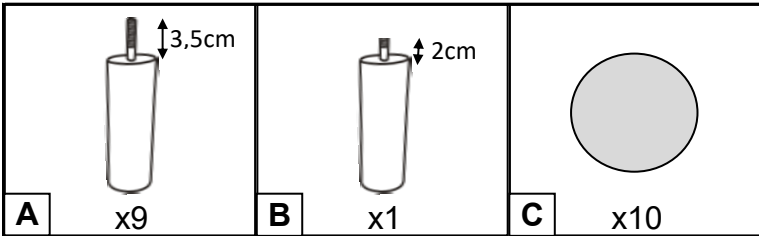 


# BOCCO 2SL-E-1R

 
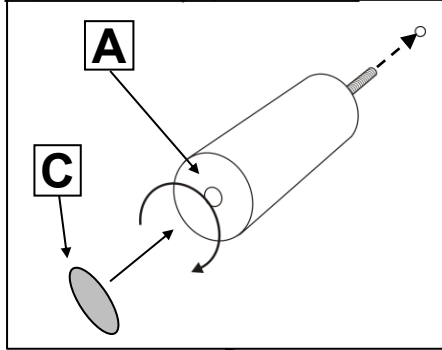 


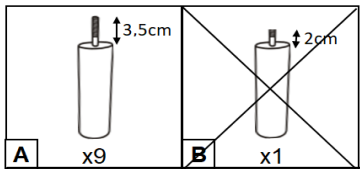








**1**

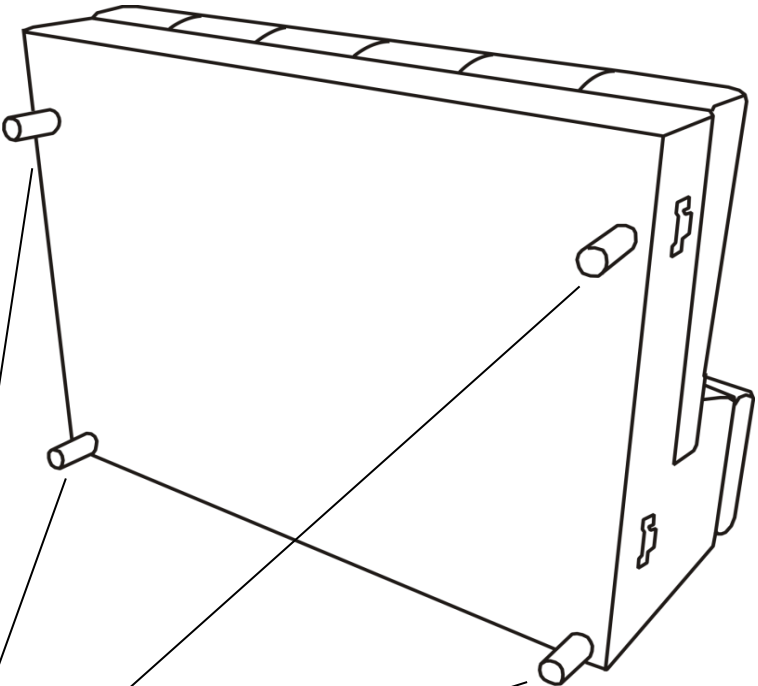


**2**

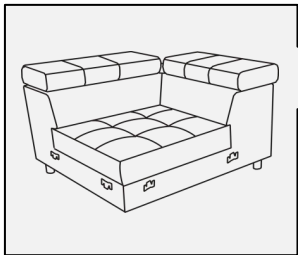
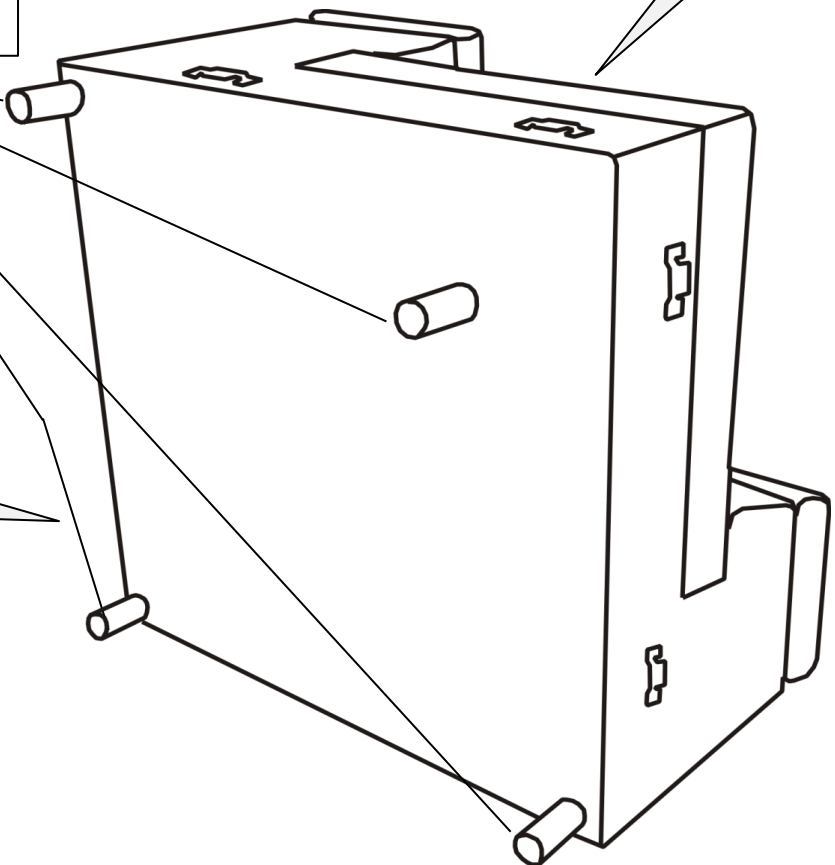









3

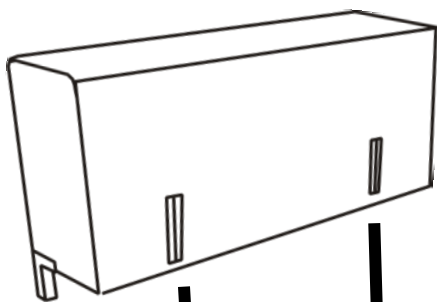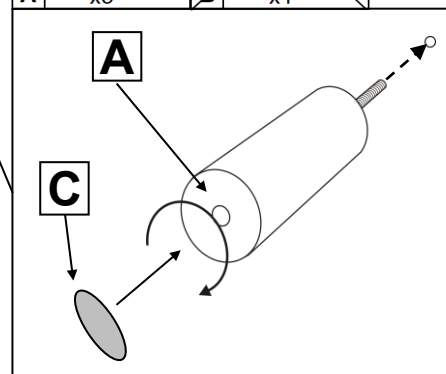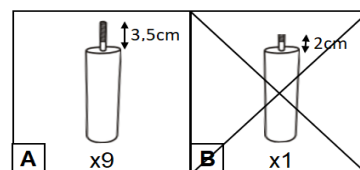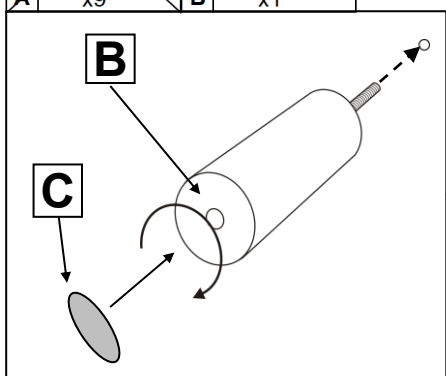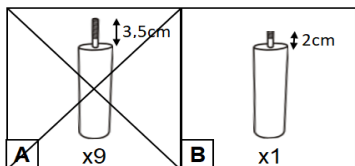     
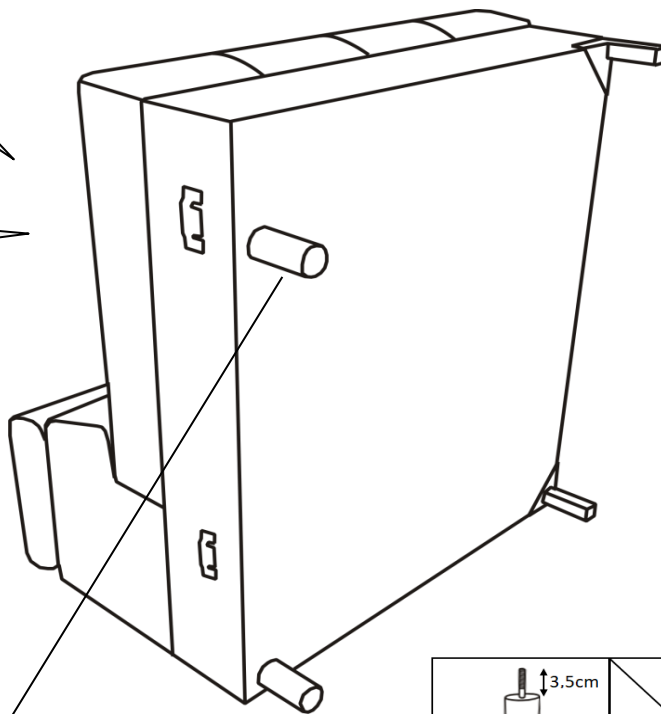 
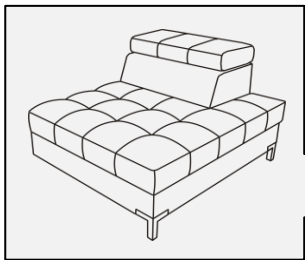 


4

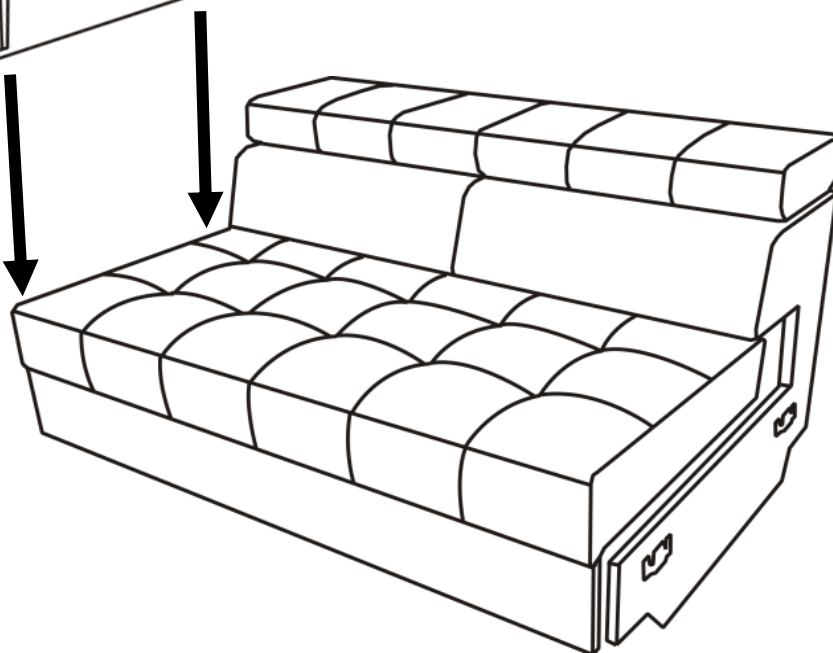 

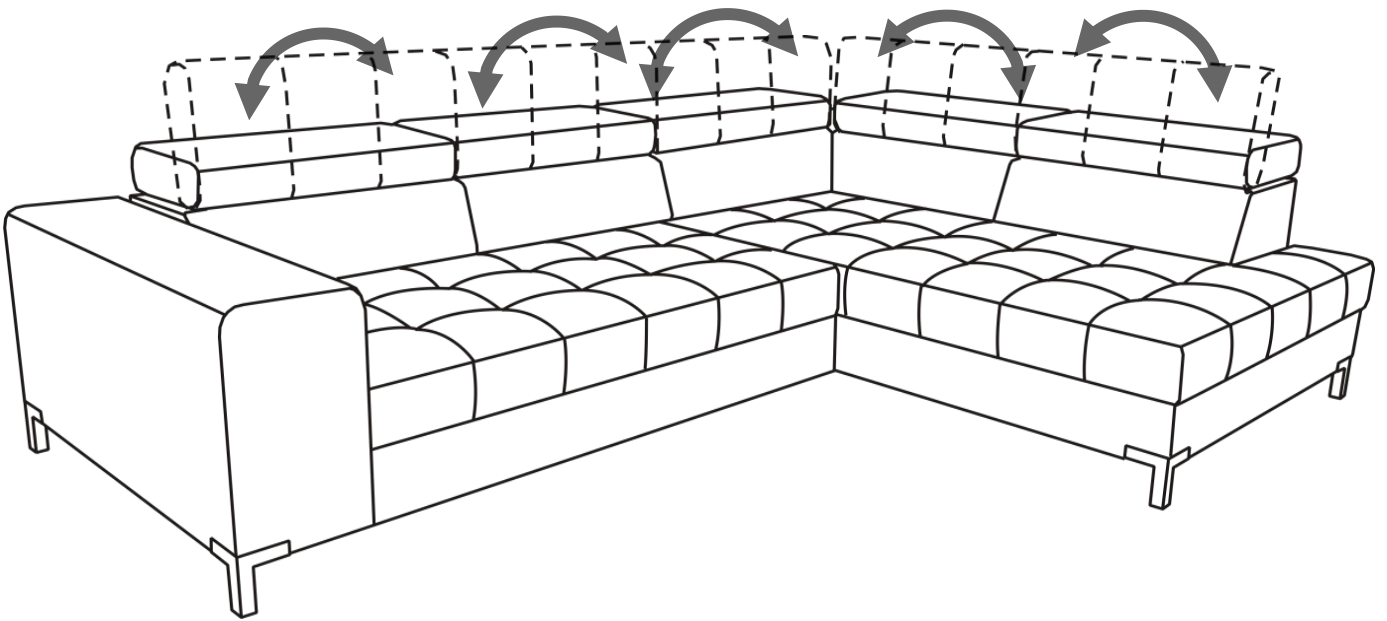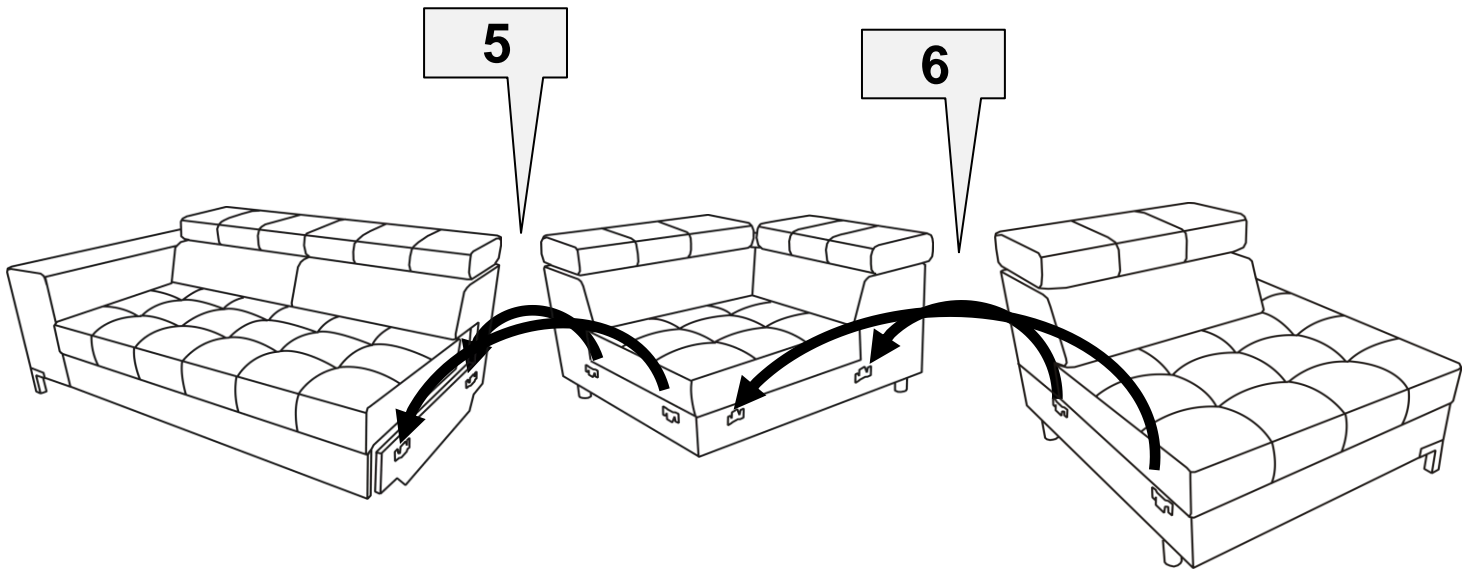  

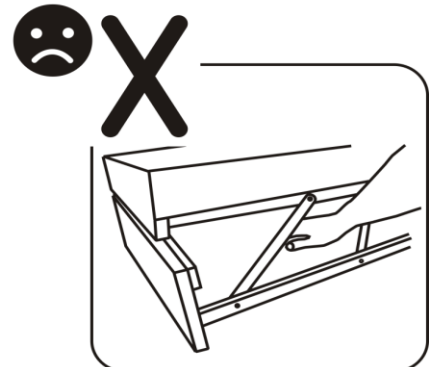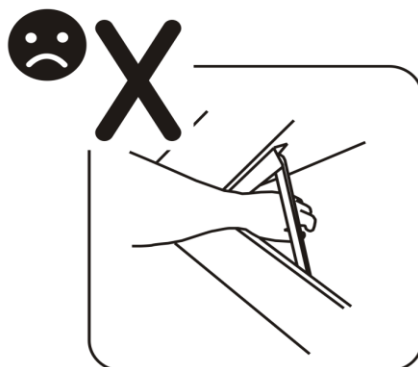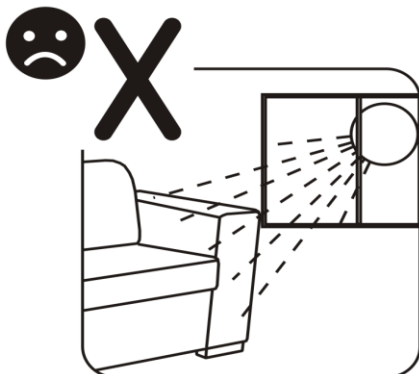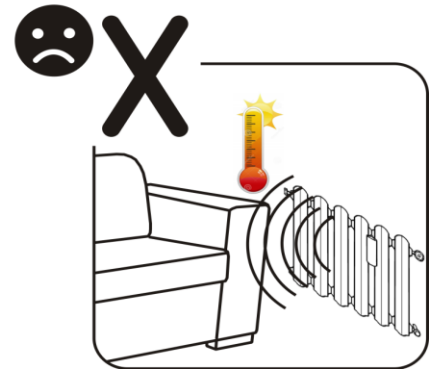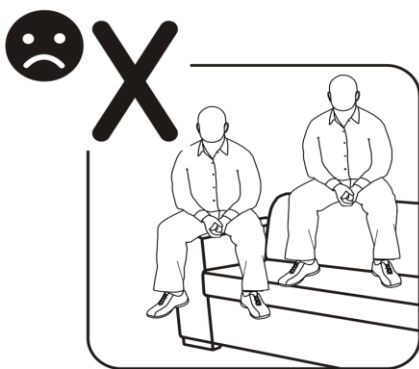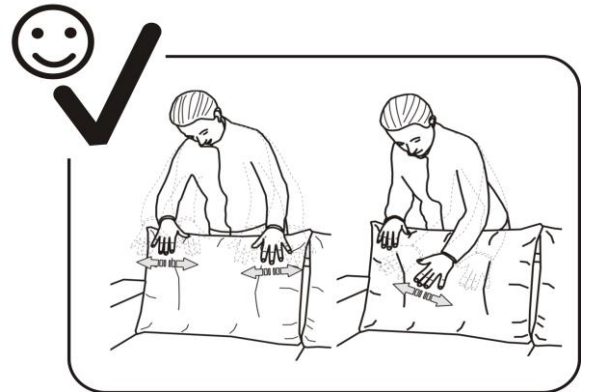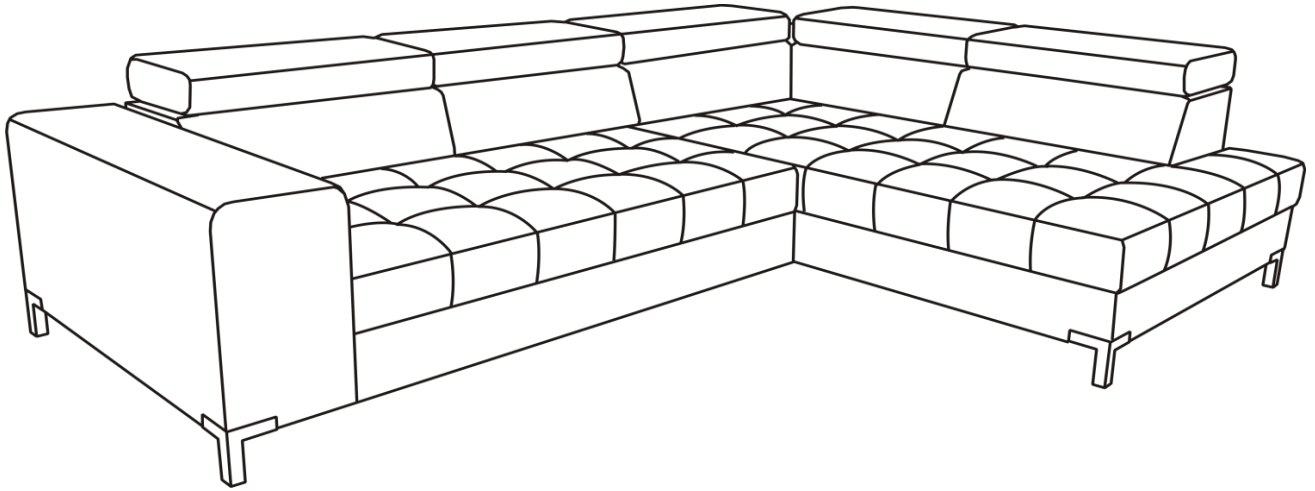       

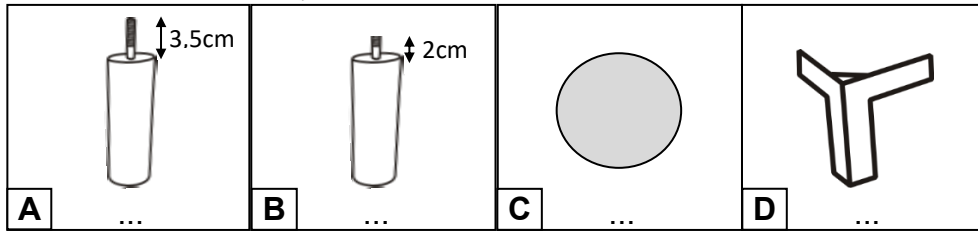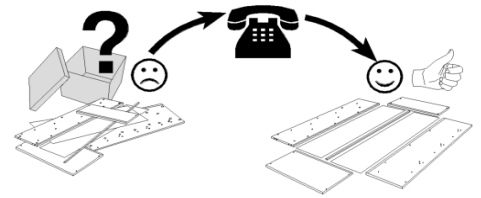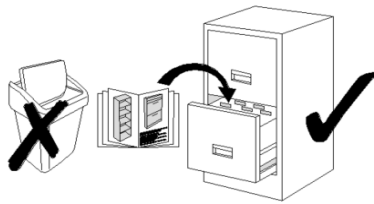   

Service – Dienstverlening – Serwis – Servis – Сервисная служба – Assistenza - Szerviz

Typ – Type – Tip – Тип – Тірүс - Тіро

**A**

**B**

**C**

**D**