Wooden Playhouse

User manual

- 1. Warning. Only for domestic use.
- 2. Warning. The product are suitable for up to two children.
- 3.WARNING. The maximum user weight of the product is 35kg.
- 4. Warning. Not suitable for children under 36 months. Small parts and small balls. Choking hazard.
- 5. Warning. The activity toy is intended for outdoor use.
- 6.WARNING. The product is suitable for children over three years old.
- 7.The main parts (such as roofs, supports, door, chair .etc) should be checked and maintained at regular intervals.
- 8.If checks are not carried out, the activity toy could overturn or become a fall off hazard.
- 9.At the beginning of each season as well as at regular intervals during the usage season, we should follow below maintenance instructions:
- 1) check all nuts and bolts for tightness and tighten when required;
- 2) oil all metallic moving parts;
- 3) check all coverings for bolts and sharp edges and replace when required;
- 4) replace defective parts in accordance with the manufacturer's instructions.
- 8.Do not allow children to play without (parental) supervision.
- 9. Climbing or playing on the roof of the wooden playhouse is not permitted.
- 10. Place the activity toy on a level surface at least 2 m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires;
- 11. Activity toys shall not be installed over concrete, asphalt or any other hard surface;
- 12. Keep the assembly and installation instructions for further reference;
- 13. Please do not modify the product or the assembly details in any way. Modifications will affect the structural integrity of the product.











