

Passend für die folgenden Modelle:

<b>Marke</b>	<b>Typennummer</b>	<b>Modell</b>
Philips	HD7892/64	SENSEO Switch
Philips	HD7892/00	SENSEO Switch
Philips	HD6592/60	SENSEO Switch
Philips	HD6592/00	SENSEO Switch
Philips	HD6593/20	SENSEO Switch
Philips	HD6591/20	SENSEO Switch
Philips	HD6597/50	SENSEO Switch Premium
Philips	HD6591/69	SENSEO Switch
Philips	HD6592/61	SENSEO Switch
Philips	HD6591/40	SENSEO Switch
Philips	HD7478/20	Daily Collection
Philips	HD7479/20	Daily Collection
Philips	HD7892/29	SENSEO Switch
Philips	HD7472/20	Daily Collection
Philips	HD7474/20	Daily Collection
Philips	HD7476/20	Daily Collection
Philips	HD7478/20R1	Daily Collection
Philips	HD7542/20	Philips Caf? Gaia Coffee maker HD7542/20 With thermal jug Compact size Black & m
Philips	HD6592/81	SENSEO Swich Pod and filter coffee machine HD6592/81 Pad and filter machine Du
Philips	HD6596/51	SENSEO Swich Premium Pod and filter coffee machine HD6596 Pad and filter machi
Philips	HD7892/80	SENSEO Switch
Philips	HD6597/00	SENSEO Switch 3in1 Pod and filter coffee machine HD6597/00 Pad and filter machi
Philips	HD6592/01	SENSEO Switch Pod and filter coffee machine HD6592/01 Pad and filter machine Du
Philips	HD6591/21	SENSEO Switch Pod and filter coffee machine HD6591/21 Pad and filter machine Du
Philips	HD7892/60	SENSEO Switch
Philips	HD6592/80	SENSEO Switch

Philips	HD6594/00	SENSEO Switch
Philips	HD6594/80	SENSEO Switch
Philips	HD6596/50	SENSEO Switch Premium
Philips	HD6594/60	SENSEO Switch
Senseo	HD7892/81	
Senseo	HD7892/61	
Senseo	HD7892/01	
Senseo	HD7891/79	Switch
Senseo	HD6592/80R1	Switch
Senseo	HD6592/00R1	Switch