


ENG – In case of any quality issues, contact your local dealer and always mention item reference No.


FR - En cas de problèmes de qualité, contactez votre revendeur local et mentionnez toujours la référence de l'article.


IT - In caso di eventuali problemi di qualità, contattare il rivenditore locale e citare sempre punto di riferimento No.


ES - En caso de problemas de calidad, póngase en contacto con su distribuidor local y mencione siempre la referencia del artículo.


DE - Wenn Sie Qualitätsprobleme haben wenden Sie sich bitte an ihren örtlichen Händler und erwähnen Sie immer die Artikelnummer.

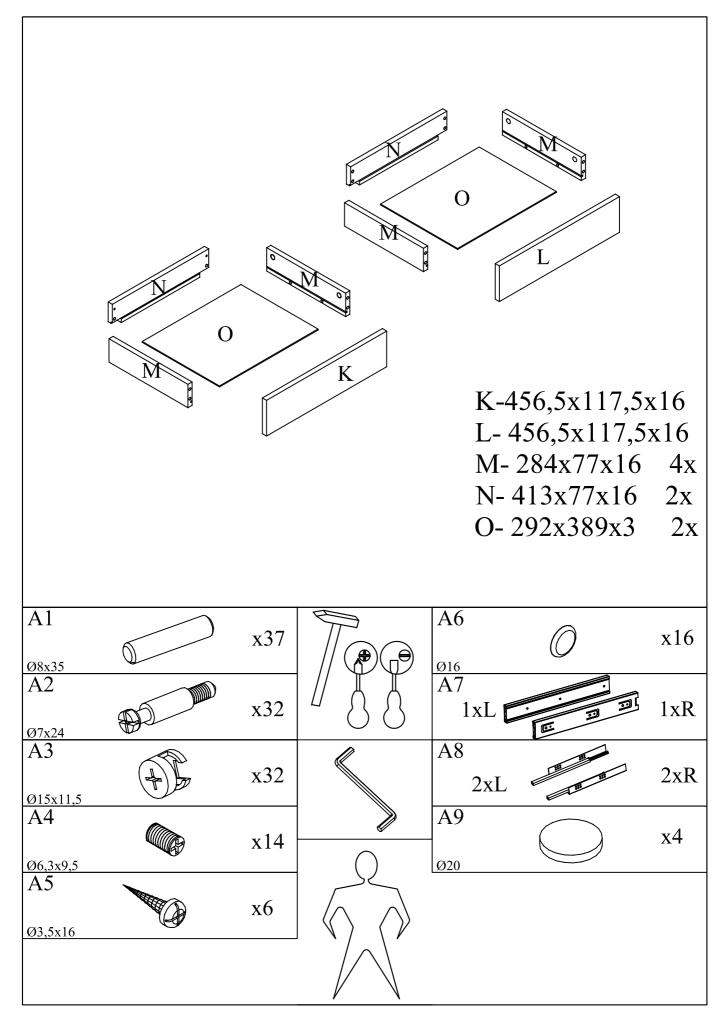


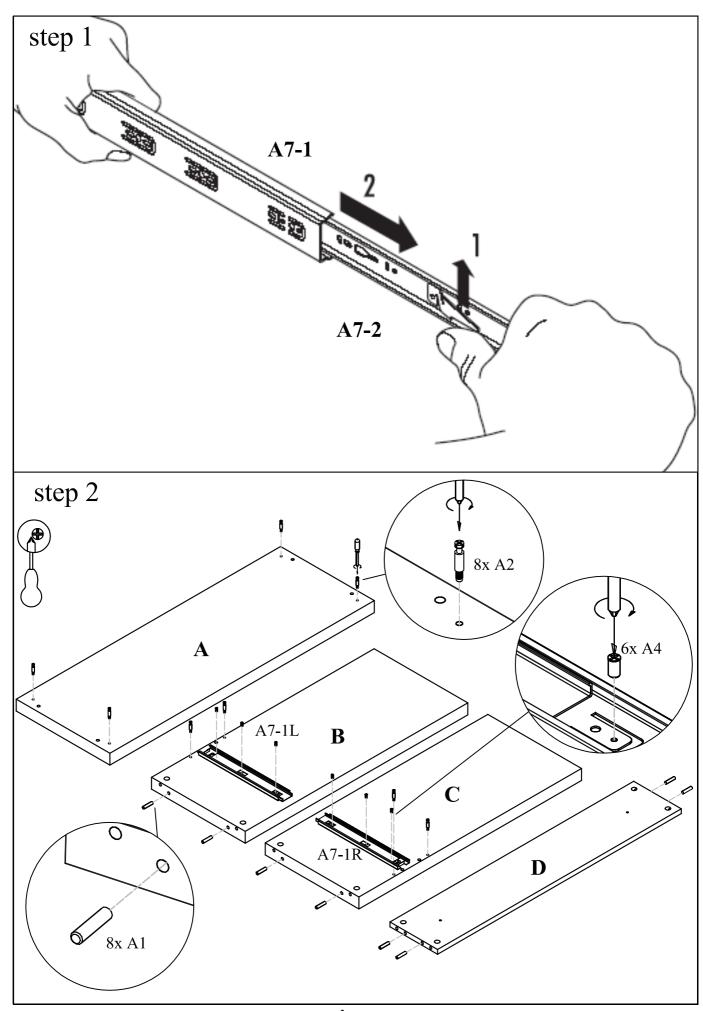


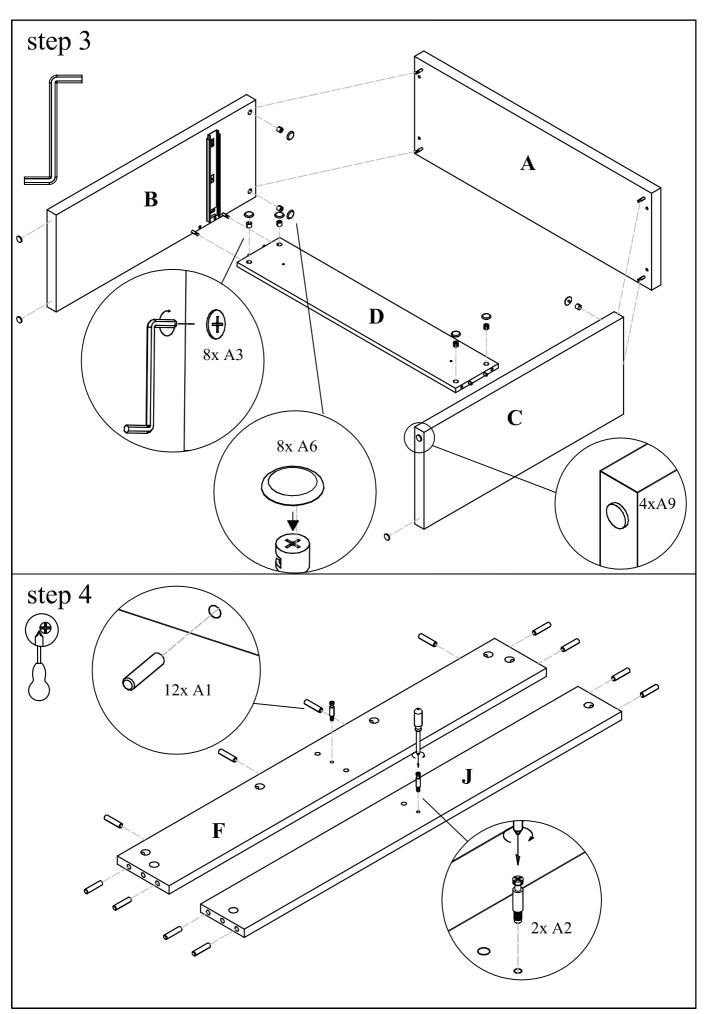


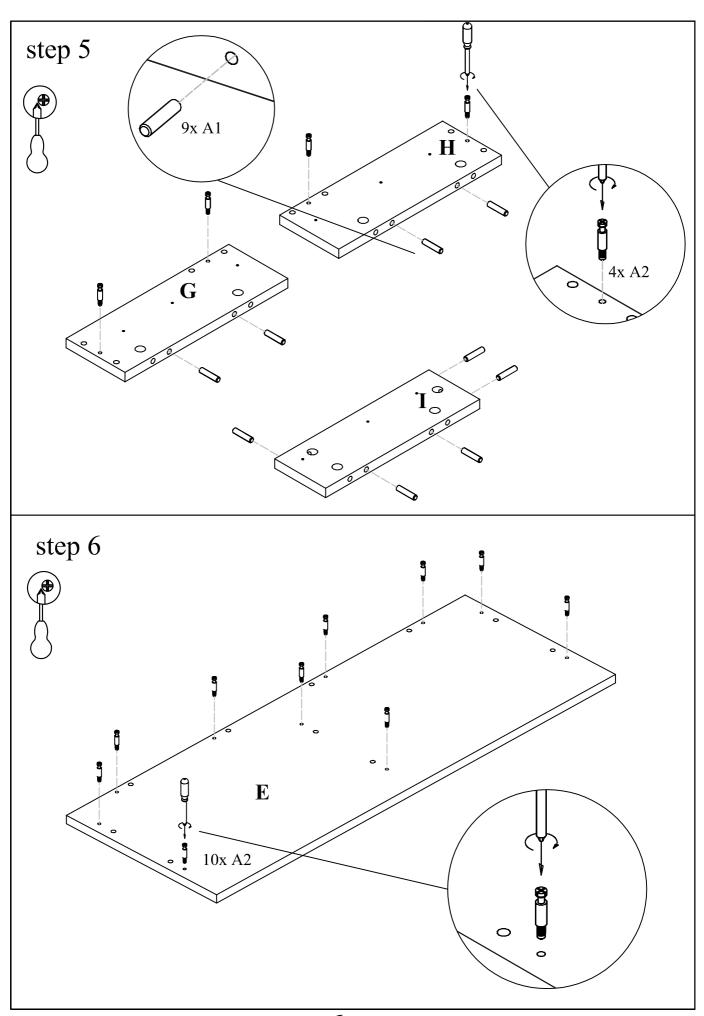

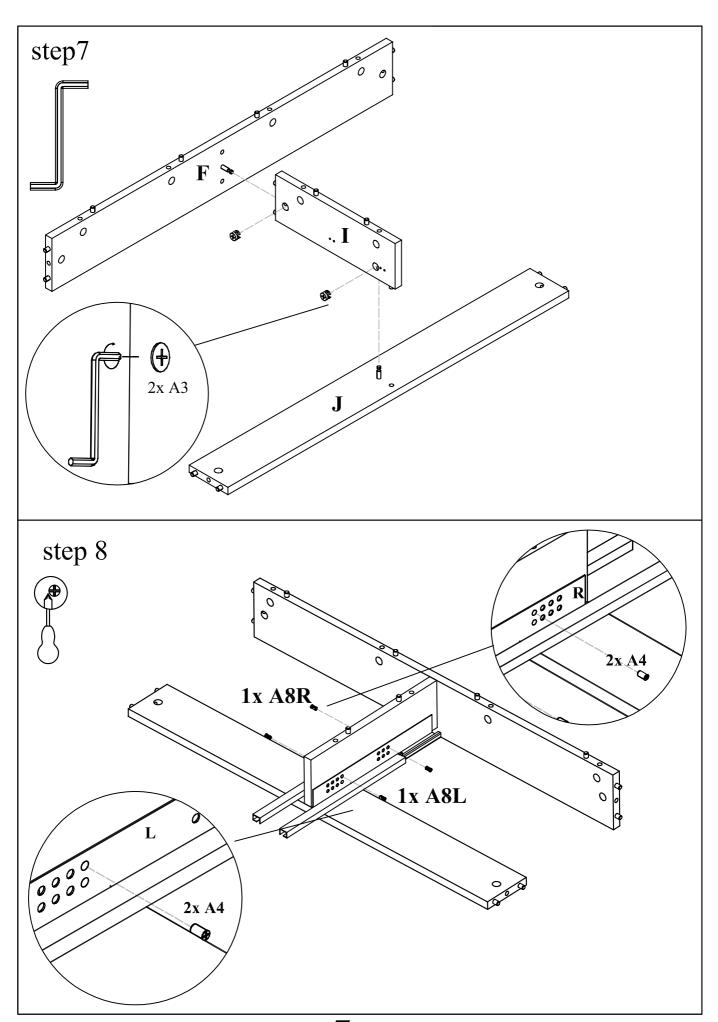

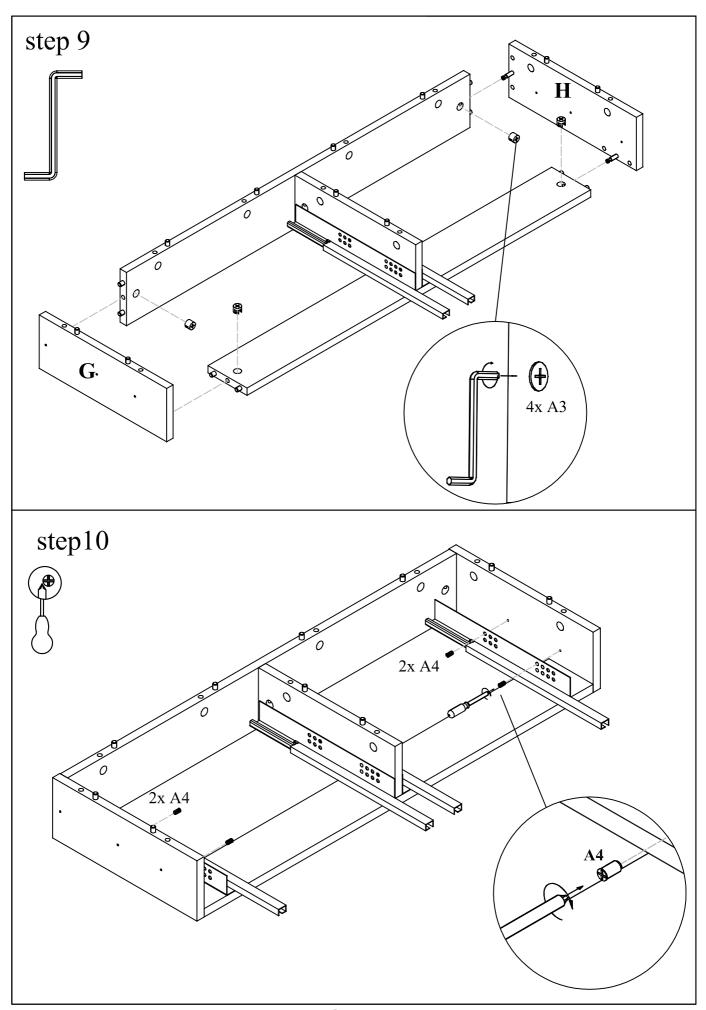


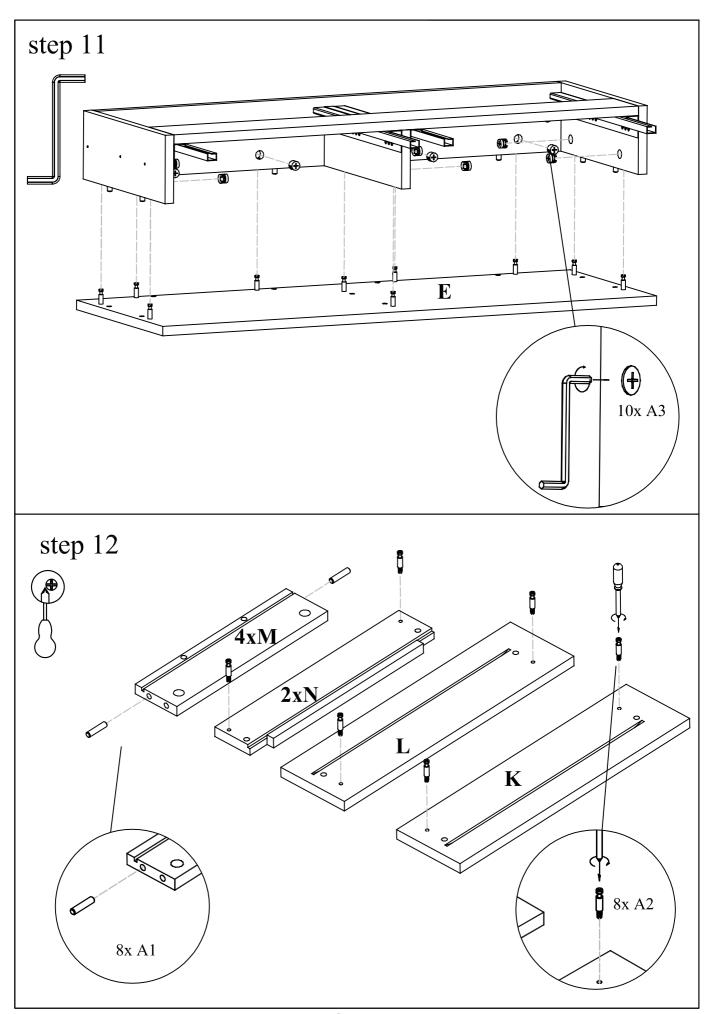

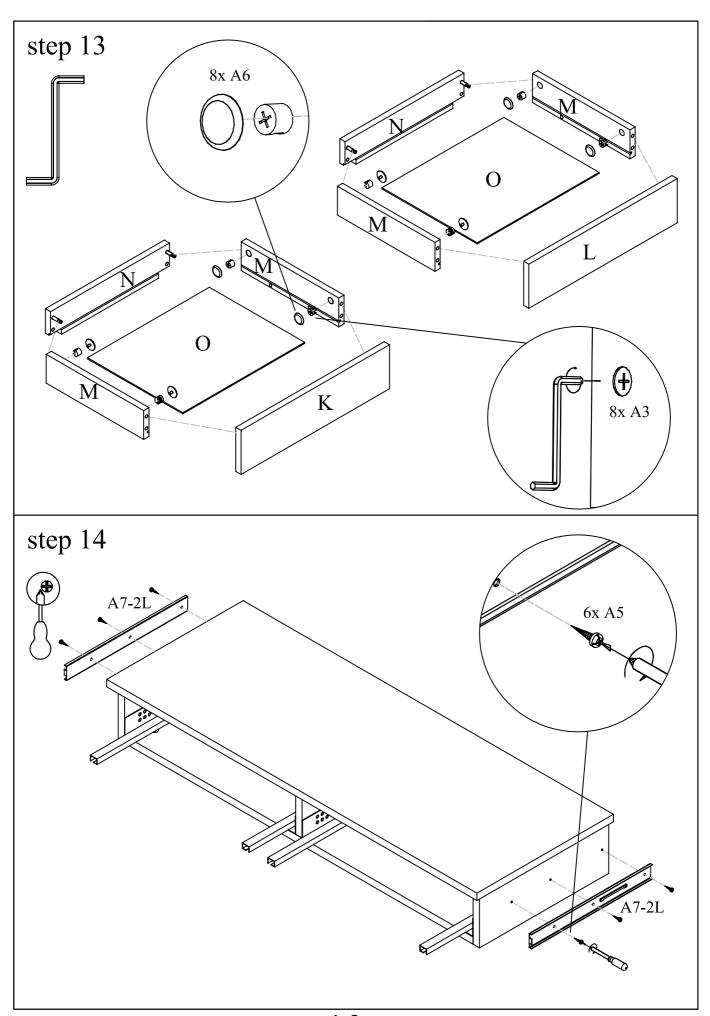


# Wall fixing with anti-topple bracket (If necessary) Furniture

# Wall fixing - if in doubt seek professional advice

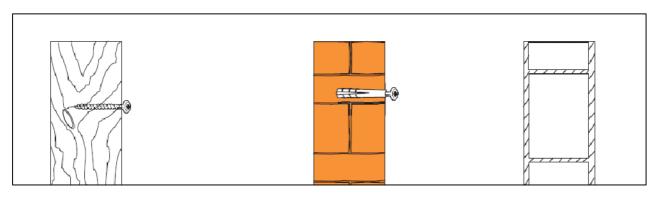

Wood
If fixing to wood
make sure that it
isn't chipboard as
screws can easily
pull away from the
core structure

Brick or Masonry Use an appropriate wall plug provided you are sure your wall is sound Cavity wall Special toggle wall plugs are needed. Seek expert advice

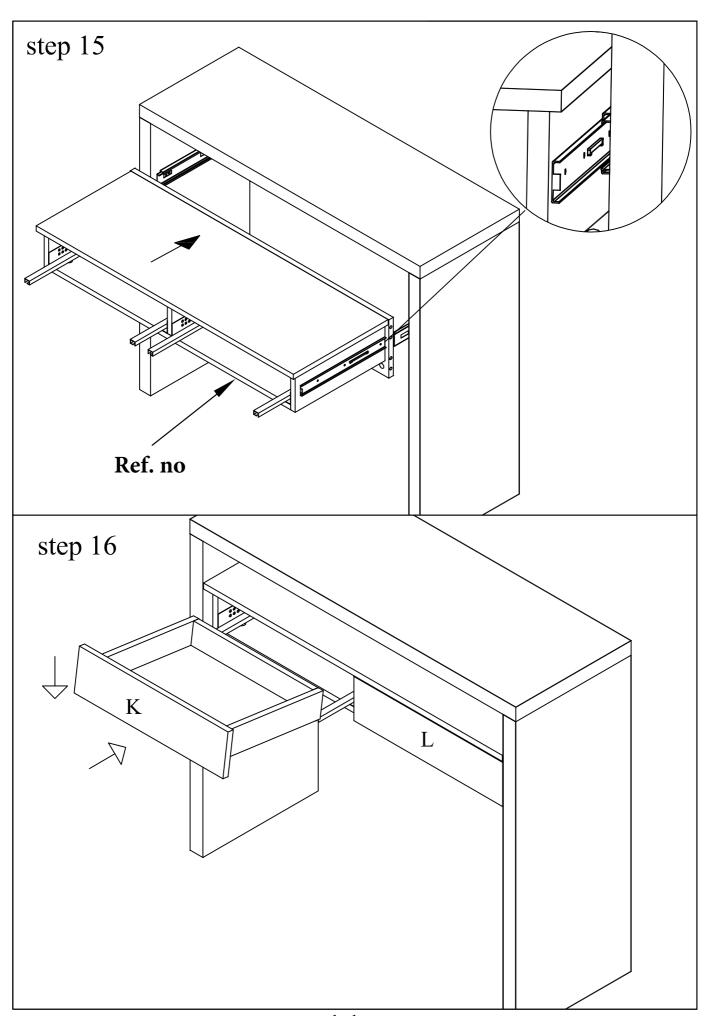

# Important - Please read these instructions fully before starting assembly

Check you have all the components and tools.

Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts could choke if swallowed.

Make sure you have enough space to layout the parts before starting.

Do not stand or put weight on the product, this Assemble on a soft level surface to avoid could cause damage.

Assemble the item as close to its final position (in the same room) as possible. Do not place furniture directly in front of radiators, fires or any other source of heat.



Parts of the assembly will be easier with 2 people.

damaging the unit or your floor.



We do not recommend the use of power drill/drivers for inserting screws, as this could

damage the unit. Only use hand screwdrivers.

Dispose of all packaging carefully and responsibly.

### General care and maintenance

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

From time to time check that there are no loose screws and connectors on this unit.

This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Cleaning and care of high gloss surfaces

Regular dusting with a dry cloth will keep your units clean.

Do not clean with products contaiing the following: Acetone, (e.g nail varnish remover). Ammonia (e.g.bleach). or Sodium hydroxide (e.g. Caustic soda, drain and oven cleaners).

Clean marks with a damp cloth.

Do not use abrasive cleaners.

In the event of accidental contact with aggresive cleaners, rinse thoroughly with water.

Do not allow spillages to stay on the surface for long.

To remove stubborn stains, wipe over with a damp cloth and washing up liquid.

Use place mats to protect the surface from moisture and heat.

## Maximum weight limit

