

140mm

Holiday Light Projector User Manual



Model: SE508-012

Please Only use the manufacturer-provided power adapter.

100mm

100mm

 
Introduction

Thank you for choosing our projection light. It's a perfect addition to your indoor and outdoor lighting needs. This dual-head projector offers holiday patterns and an RGBW ocean-wave effect. Easily create stunning visuals by adjusting pattern flash, speed, and color modes. Ideal for festivals and celebrations, it adds a festive and joyful atmosphere to any occasion.

Before You Begin

When you receive the light projector, carefully unpack and check that all parts are included and in good condition. If any parts are damaged or the packaging shows signs of mishandling, contact the retailer immediately and keep the packing materials for inspection. Save the original box and packing materials for possible returns. Please refer to the packing list below for contents.

Packing List

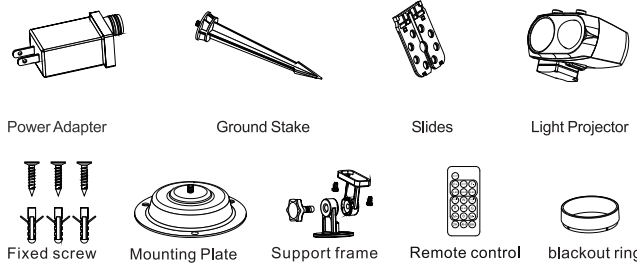

Attention

- 1.Please follow the user manual carefully.
- 2.Don't disassemble the unit; improper use may cause damage and void the warranty.
- 3.This product is suitable for both indoor and outdoor use.
- 4.Do not shine the light directly into eyes, and keep it away from children.
- 5.This unit is IP65 waterproof, but it cannot be submerged in water.
- 6.When used outdoors, keep the lens out of direct sunlight to prevent it from focusing the light and damaging internal parts.
- 7.Insert the slide with the groove side facing back to avoid jamming.

100mm

Mounting method

Type 1: Bracket mounting method

Step 1: As shown in the picture on the right, users can install the blackout ring according to actual needs.

Step 2. Align the screw holes on the support bracket with the screw holes on the bottom slot of the projection lamp, and then tighten the two screws with a screwdriver

Step 3. You can turn the nut freely to adjust the angle of the support bracket.

Step4 .Tighten the base to the support frame, which is the completion of installation.

Type 2:Ground Pile Installation Method

Step1: According to the installation instructions for the base, tighten the ground pile onto the support frame in steps 1-3.

Step 2: Use tools to dig a suitable hole in the ground.
Step 3: Insert into the hole and you're done.

Limited Warranty

This product carries a 1 year limited warranty against defects in workmanship and materials. We agree to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team, we will respond within 24 hours.

info@anysuntech.com

Support Hours

Mon-Fri, 9:00am-5:00pm PST/PDT

*Please have your order invoice and order ID ready before contacting Customer Support.

 
100mm

100mm

100mm

Adjusting the projection angle

Adjust the angle of the projection light by loosening or tightening the angle adjustment knob.

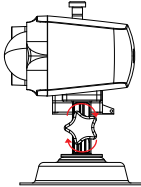


Placing the Light Projector

1. Fix the projector on the lawn with ground stakes or mount it on walls or hard surfaces using the base and screws.
2. Place the lamp 16.4 to 32.8 feet from the projection surface.
3. Adjust the distance for optimal results.
4. Use in a dark environment for the best projection effect.
5. Always use the provided power adapter for wall outlet connection.



Slide replacement steps

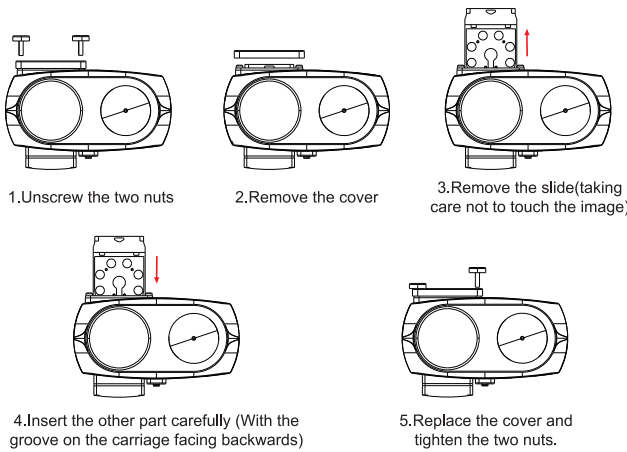


How to use the remote control (when the lamp body is on)

1. In the constant power state, the product has a memory function and the restart after shutdown is still the setting mode before shutdown; directly unplug the plug and restore the product to the factory settings. It is recommended to use the remote control to turn off the product.
2. To avoid interference and control from other remote controls with the same signal, please use the factory configured remote control within 3 seconds of turning on the projector. Press any button to detect and match the code, and the lamp will only be controlled by the matching remote control.
3. If the remote control is not used for 5 seconds after switching on, it is a pass code (other remote controls with the same signal can also remotely control the projection lamp).
4. Please remove the white insulating film of the remote control before using.



- 5.Timer settings:
(1) Default setting: After powering on, the lamp will automatically turn off after 8 hours of operation and restart after 16 hours. This cycle repeats.
(2) 2H: Turns off after 2 hour and restarts after 22 hours. This cycle repeats.
(3) 4H, 6H: Each setting turns off after the specified number of hours and restarts after 24 hours minus the set time. This cycle repeats.

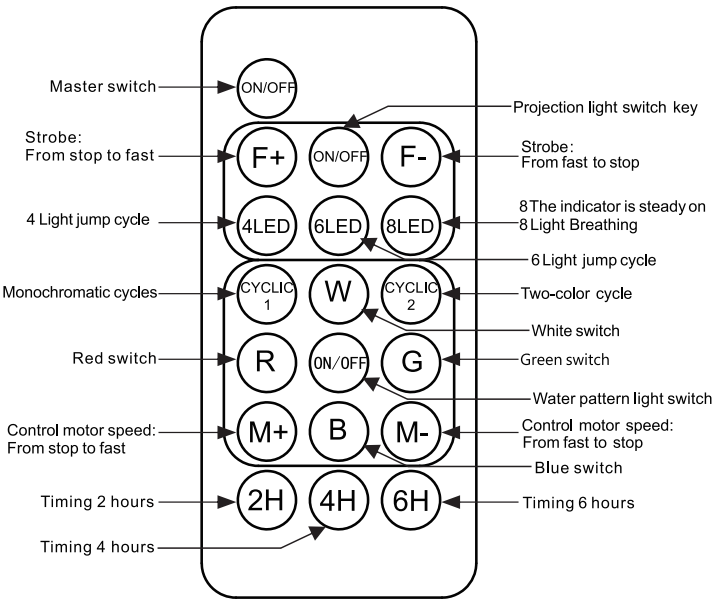


Product Specifications

Power rating	15W	Material quality	ABS
Light source	LED	Optimum projection distance	16.4-32.8feet
Waterproof Level	IP65	Operation	Indoors/Outdoors
Charging Cord Length	5m/16.4ft	Operating Temperature	-10~40 C

Battery type: CR2025

Nominal voltage: 3V

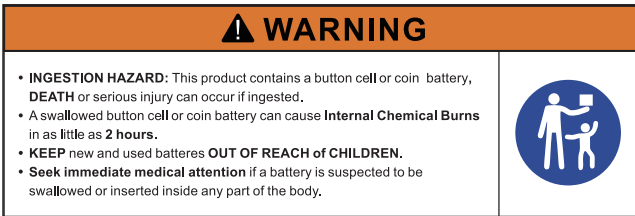

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

140mm