

Passend für folgende Modelle:

Marke	Typennummer	Modell
Balay	3GI7047F/01	
Balay	3GI7047F/02	
Balay	3GI7047F/03	
Balay	3GI7047F/04	
BOSCH	GIN81AE30G/01	
BOSCH	GIN81AE30/02	
BOSCH	GIN81AE20R/01	
BOSCH	GIN31AC30/01	
BOSCH	GIN41AC30R/01	
BOSCH	GIN81AC30/01	
BOSCH	GIN41AE30G/01	
BOSCH	GIN81AC30R/01	
BOSCH	GIN41AE20R/01	
BOSCH	GIN31AE30G/01	
BOSCH	GIN81AE30/01	
BOSCH	GIN41AE30/01	
BOSCH	GIN81AE20R/02	
BOSCH	GIN41AC30/01	
BOSCH	GIN81AC30/02	
BOSCH	GIN81AE30G/02	
BOSCH	GIN41AE20R/02	
BOSCH	GIN41AC30/02	
BOSCH	GIN81AE30G/04	
BOSCH	GIN81AE30G/03	
BOSCH	GIN81AC30/04	
BOSCH	GIN81AC30/03	
BOSCH	GIN31AC30/02	
BOSCH	GIN31AE30G/02	
BOSCH	GIN81AE30/03	
BOSCH	GIN81AE30/04	
BOSCH	GIN81AE3K5/01	
BOSCH	GIN81AE20R/04	
BOSCH	GIN81AE20R/03	
BOSCH	GIN41AE30/02	
BOSCH	GIN41AE30G/02	
BOSCH	GIN31ACE0/01	
BOSCH	GIN41ACE0/01	
BOSCH	GIN81ACF0/01	
BOSCH	GIN81HCE0/01	
BOSCH	GIN31ACE0/02	
BOSCH	GIN41ACE0/02	
BOSCH	GIN41AE20R/03	
BOSCH	GIN81AE30M/01	
BOSCH	GIN81HD30C/01	
BOSCH	GIN81AC30A/01	

BOSCH	GIN81HDE0D/01	
BOSCH	GIN81HD36C/01	
BOSCH	GIN81ACE0/02	
BOSCH	GIN81ACF0/02	
BOSCH	GIN81HNE0/01	
GAGGENAU	RF282303/01	
GAGGENAU	RF282303/02	
GAGGENAU	RF222303/01	
GAGGENAU	RF282303/03	
GAGGENAU	RF282303/04	
GAGGENAU	RF282305/01	
GAGGENAU	GI81NSCE0/02	
GAGGENAU	RF282306/02	
NEFF	GI7813C30/02	
NEFF	GI7413E30G/01	
NEFF	GI7813E30G/01	
NEFF	GI7413C30/01	
NEFF	GI7813C30/01	
NEFF	GI7413C30Y/01	
NEFF	GI7813C30Y/01	
NEFF	GI7813E30/01	
NEFF	GI7313C30/01	
NEFF	GI7313E30G/01	
NEFF	GI7813E30/02	
NEFF	GI7313C30Y/01	
NEFF	GI7813E30/04	
NEFF	GI7813E30/03	
NEFF	GI7813C30/04	
NEFF	GI7813C30/03	
NEFF	GI7813E30G/04	
NEFF	GI7813E30G/03	
NEFF	GI7813E30G/02	
NEFF	GI7413C30/02	
NEFF	GI7413E30G/02	
NEFF	GI7313C30/02	
NEFF	GI7313E30G/02	
NEFF	GI7316CE0/01	
NEFF	GI7416CE0/01	
NEFF	GI7815CE0/01	
NEFF	GI7813CF0/01	
NEFF	GI7316CE0/02	
NEFF	GI7416CE0/02	
NEFF	GI7815NE0/01	
NEFF	GI7416CE0/03	
NEFF	GI7815CE0/03	
NEFF	GI7815NE0/03	
NEFF	GI7813CE0/02	
NEFF	GI7316CE0/03	

NEFF	GI7813CE0/03	
NEFF	GI7815NE0/02	
SIEMENS	GI81NAC30/02	
SIEMENS	GI81NAE30G/01	
SIEMENS	GI41NAE30/01	
SIEMENS	GI41NAC30/01	
SIEMENS	GI31NAC30/01	
SIEMENS	GI41NAE30G/01	
SIEMENS	GI81NAC30/01	
SIEMENS	GI81NAC30R/01	
SIEMENS	GI81NAE30/01	
SIEMENS	GI31NAE30G/01	
SIEMENS	GI41NAC30R/01	
SIEMENS	GI81NAE30/02	
SIEMENS	GI81NAC30/04	
SIEMENS	GI81NAC30/03	
SIEMENS	GI81NAE30/03	
SIEMENS	GI81NAE30/04	
SIEMENS	GI41NAC30/02	
SIEMENS	GI31NAC30/02	
SIEMENS	GI31NAE30G/02	
SIEMENS	GI81NAE30G/02	
SIEMENS	GI81NAE30G/04	
SIEMENS	GI81NAE30G/03	
SIEMENS	GI41NAE30G/02	
SIEMENS	GI81NAE31I/01	
SIEMENS	GI31NACE0/01	
SIEMENS	GI81NSCE0/01	
SIEMENS	GI41NACE0/01	
SIEMENS	GI81NACF0/01	
SIEMENS	GI81NHCE0/01	
SIEMENS	GI41NACE0/02	
SIEMENS	GI31NACE0/02	
SIEMENS	GI81NAE30M/01	
SIEMENS	GI81NHD36C/01	
SIEMENS	GI81NHD30C/01	
SIEMENS	GI81NHNE0/01	
SIEMENS	GI81NHNE0/02	
SIEMENS	GI81NAC30A/02	
SIEMENS	GI81NECE0/02	
SIEMENS	GI81NACE0/02	
SIEMENS	GI81NSCE0/03	