

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
Tefal	SW341031/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME
Tefal	SW341812/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME
Tefal	SW342400/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME
Tefal	SW341B16/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME
Tefal	SW854D16/AMD	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW341D12/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME
Tefal	SW852D12/AMD	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW341512/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME COLORMANIA
Tefal	SW853D12/AMD	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW857D12/AMB	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW857D12/AMA	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW341112/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME
Tefal	SW341312/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME COLORMANIA
Tefal	SW341912/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME
Tefal	SW854D16/AMB	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW342D38/9ZA	TOSTI / WAFEL APPARAAT SNACK TIME
Tefal	SW852D12/AMC	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW853D12/AMC	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW854D16/AMC	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW853D12/AMA	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW852D12/AMB	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW853D12/AMB	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW852D12/AMA	TOSTI / WAFEL APPARAAT SNACK COLLECTION
Tefal	SW854D16/AMA	TOSTI / WAFEL APPARAAT SNACK COLLECTION