 
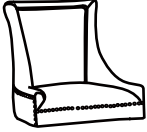 
 
 
 
 
 




ASSEMBLY INSTRUCTIONS

Ax1	 Seat
Bx2	 Front leg
Cx2	 Rear leg
Dx2	 Adjuster cap
Ex4	 Screw
Fx4	 Screw
Gx8	 Spring washer
Hx8	 Flat washer
Ix1	 Allen key

① The legs are hidden under the seat frame

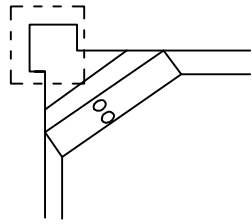

  Put the front leg in the dotted box place, Reach to the bottom and tighten the screws.

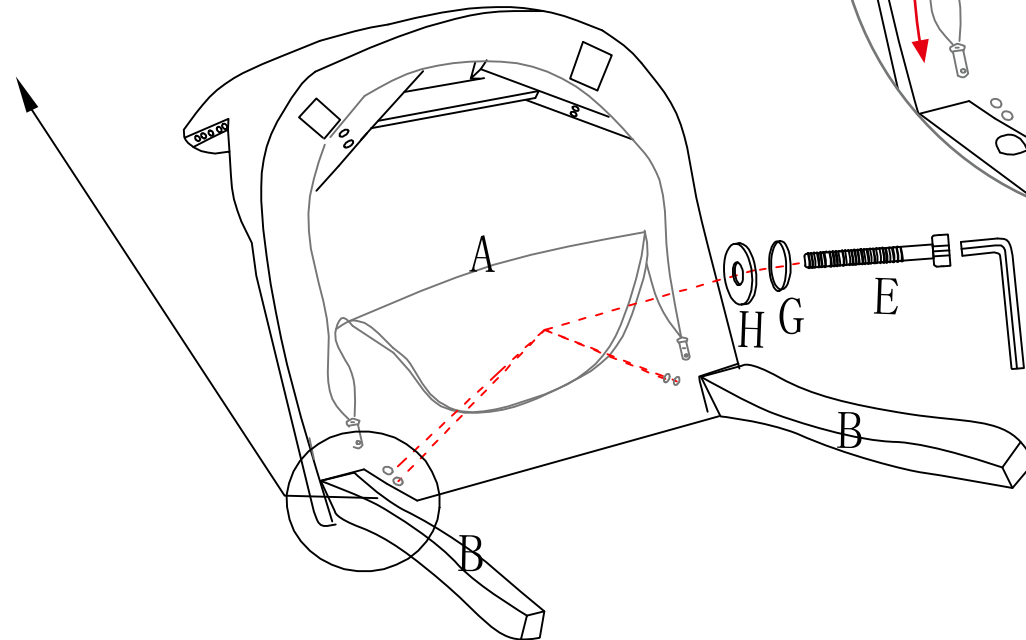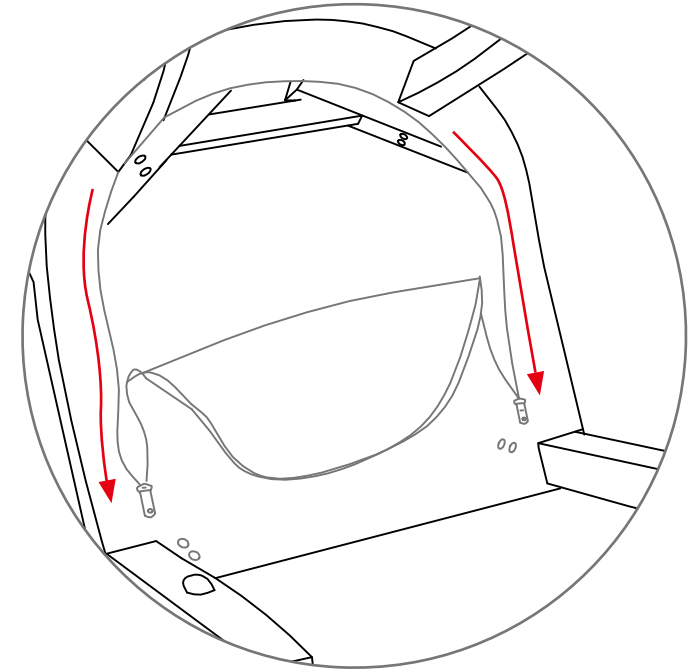

Tighten all the screws to 80% of maximum tightness

 
 
 
WARNING:

DO NOT STAND ON THE PRODUCT, DO NOT USE THIS PRODUCT AS A STEP LADDER.

DO NOT USE THIS PRODUCT UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.


PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR PRODUCT.

②

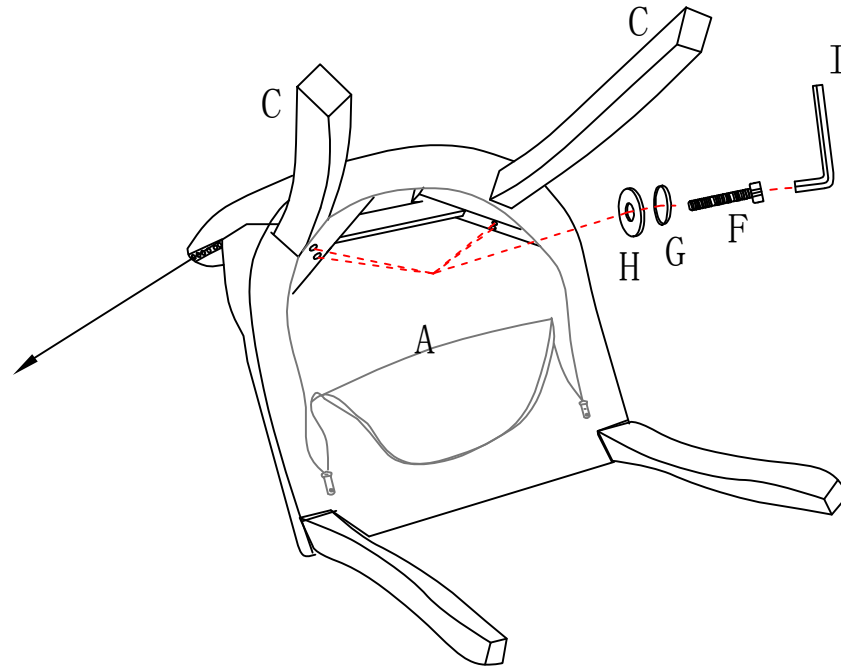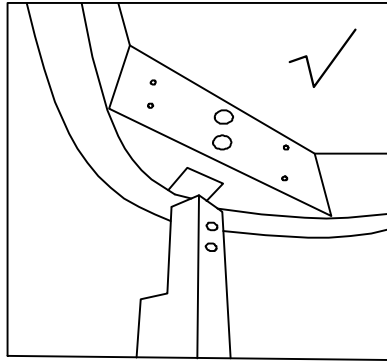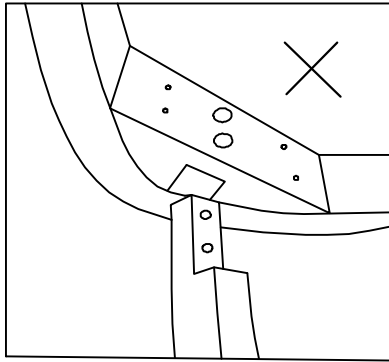


Tighten all the screws to 80% of maximum tightness

 ③

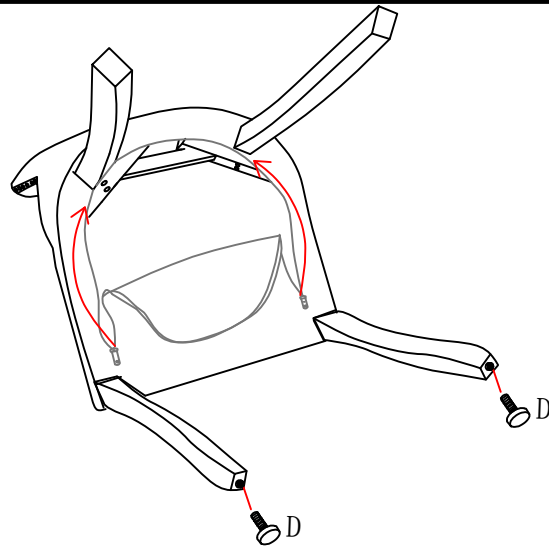

Close the zipper of bottom Non-Woven fabric.
Tighten all the screws to
100% of maximum tightness

 ④

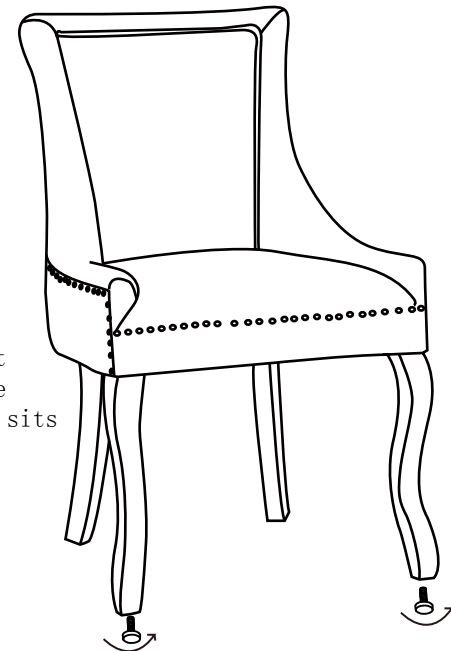

There are 2 small
adjusters on the front
legs, ensure these are
adjusted so the chair sits
level