



©2022 Cherub Technology-All rights reserved. No part of this publication may be reproduced in any form without prior written permission of Cherub Technology.

www.nuxefx.com


Made in China

NUX

MIGHTY SPACE

Wireless Stereo Modeling Amplifier

User's manual

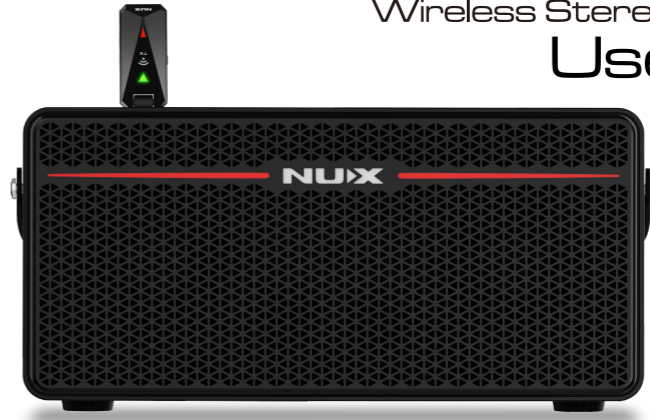

Desktop Amp

USB: Download your Favorite AMP

- 54 IRs
- 7hrs playing
- 7 Presets
- 9 Blocks
- Drum & Loop



WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.



The lightning symbol within a triangle means, "Electrical caution!" It indicates the presence of information about operating voltage and potential risks of electrical shock.




The exclamation point within a triangle means, "Caution!" Please read the information next to all caution signs.

Overview

Thank you for purchasing NUX MIGHTY SPACE, since we announced MIGHTY LITE BT, MIGHTY AIR, these desk-top modeling amplifiers became an iconic category of NUX brand. Now flagship MIGHTY SPACE offers more fun and good vibes for you.

MIGHTY SPACE provides a variety of effects for electric guitar and bass guitar including amp modeling, cabinet IRs. It also comes with acoustic amp modeling and acoustic IRs to let you simulate acoustic guitar sound. Now, you can even load 3rd party IRs through Mighty Editor™ edit software to expand your tone. (You can load any WAV format IRs, Mighty Editor™ will convert to 32bits/48kHz onto the device automatically.)

Note: There are 34 default IRs, and user IR slots are 20 (from 35 to 54).

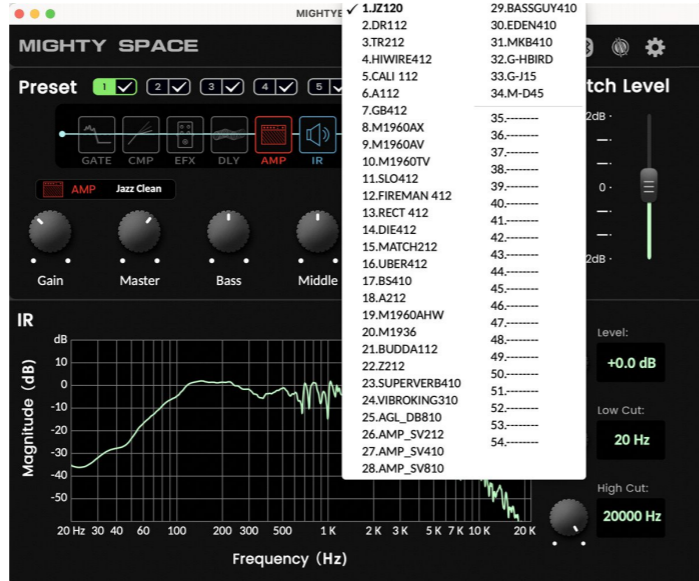

Overview


You can customize the presets through MightyAmp™ APP (mobile) or Mighty Editor™ edit software (PC). Change the effect blocks' order? Why not? You can do lots of things with the intuitive interface, experience it, feel the versatility and mighty!

The MightyAmp™ APP and Mighty Editor™ edit software can let you tweak all the signal blocks and parameters. MIGHTY PLUG PRO offers GATE, COMP, EFX, AMP, IR, EQ, MOD, DLY and RVB, you can adjust the block order freely. Besides the 34 built-in IRs, there are 20 empty slots for 3rd party IRs loading. No need to consider the sampling rate, Mighty Editor™ edit software can convert the WAV(IR) format automatically.

MIGHTY SPACE supports USB audio stream, it can be an USB recording interface. It supports Normal / Dry Out / Re-amp / Loopback routing, you can adjust it through MightyAmp™ APP or Mighty Editor™ edit software intuitively, no need to setup USB OUT in DAW. Even live stream jamming with Loopback!


**All of the brand and model names mentioned on this page are Trademarks of their respective owners, which are in no way associated or affiliated with NUX Effects and Cherub Technology CO. LTD.*

**Thank you Dian Iliev and Mighty Plug / Air group users to inspire us to develop MIGHTY SPACE with great functions and APP experience.*

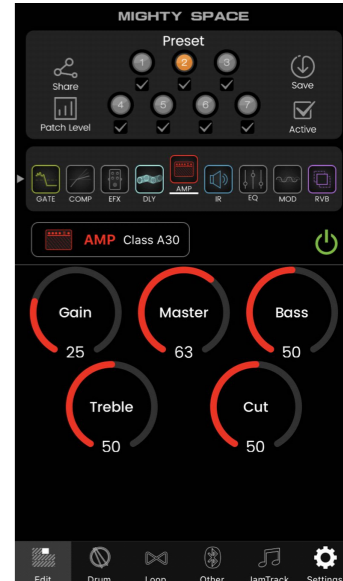


Control Panel & I/O Jacks

Front Panel

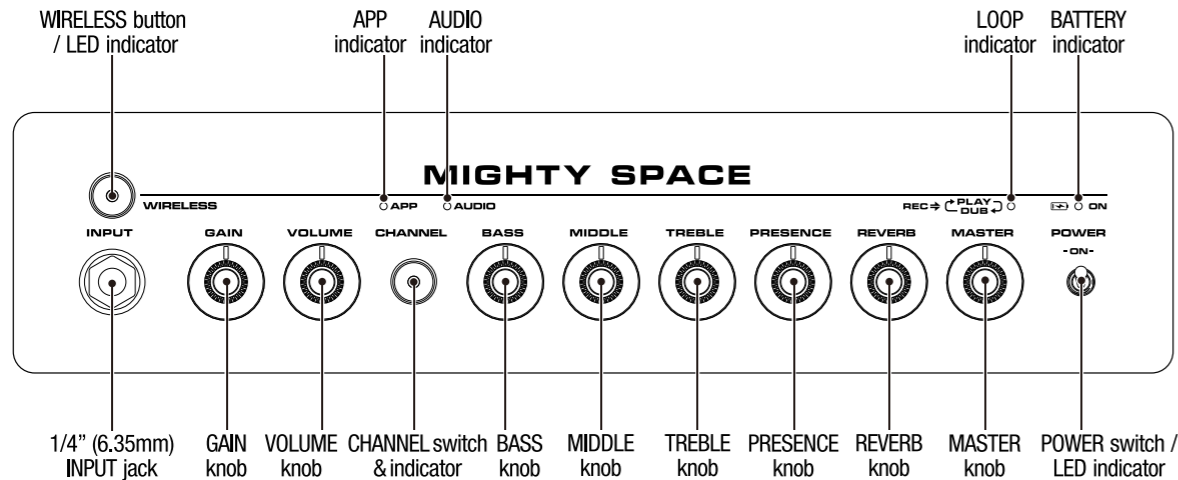

Control Panel & I/O Jacks

Rear Panel

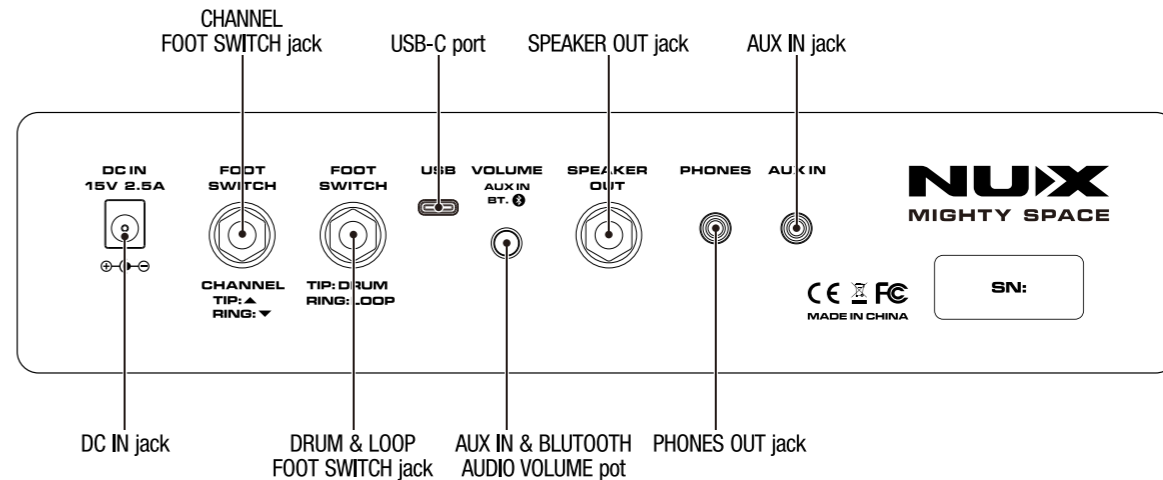

Operation

1/4" (6.35mm) INPUT jack



Connect your guitar cable with guitar into INPUT jack. Then you can enjoy the playing.

While you plug the TX (transmitter) into INPUT jack and MIGHTY SPACE is turned on, you can charge the TX. During charging, TX's LED indicator will show "Red". Once the TX is full charged, the LED indicator will turn off.

POWER switch / LED indicator



Toggle the POWER switch to boot-up the amplifier, while the amp is on, the LED indicator will show "Red". While you turn off the amp, the LED indicator will turn off.

If you connect the additional power adaptor to charge the amp, the LED indicator will flash "Red" during charging, while the amp if full charged, the LED indicator will turn off.

WIRELESS button / LED indicator



While the amp is boot-up, you can use cable into INPUT jack or use the included B-5MA TX as wireless cable. If you want to use B-5 TX, remember to POWER ON the TX, and hold the WIRELESS button to engage the amp's built-in RX. While the LED indicator shows RED, it means the RX doesn't receive TX's signal. While the TX & RX get paired, the LED indicator will show GREEN. Then you can enjoy the wireless playing.

Operation

APP indicator




While MightyAmp™ APP connects with the device, the APP indicator will turn on "Blue".

Operation: Turn on MightyAmp™ APP on your mobile phone, and press "Settings" to choose "Current Amp" as "MIGHTY SPACE", then "click to scan devices". While the APP find "MIGHTY SPACE", click it, the APP will connect with the device. In the meantime, the APP indicator will turn on "Blue".

NOTE: For Android OS, you may need to turn on GPS permission. PRIVACY NOTE: We do not use your GPS to track you. Where you want to play music is your business, not ours !

Applications that scan for Bluetooth devices must request permission in the manifest file. This LOCATION permission is required because it may be possible to guess the location of an Android device by seeing which BTLE devices are nearby.

https://developer.android.com/reference/android/media/midi/package-summary#btle_location_permissions

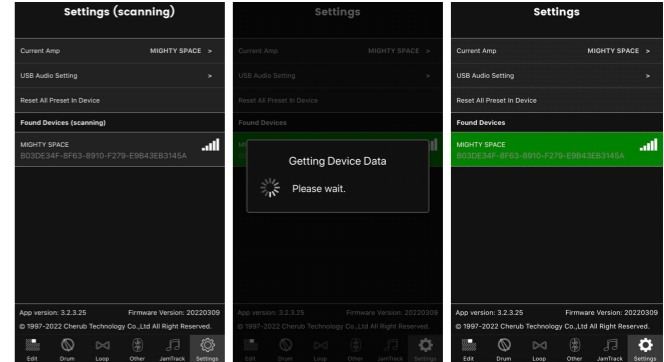

NOTE: The APP is using Bluetooth MIDI to communicate with the device.

Operation

AUDIO indicator


○ AUDIO

While the mobile phone or other player connect with MIGHTY SPACE's Bluetooth audio, the AUDIO indicator will turn on "Blue".

Operation: After the APP connected with the device, you can connect Bluetooth Audio from "Settings" on the mobile phone to play audio stream. Click "Settings" on the mobile phone. Enter "Bluetooth", and choose "MIGHTY SPACE", while you connect MIGHTY SPACE's Bluetooth audio, you will hear a hint sound.



Settings

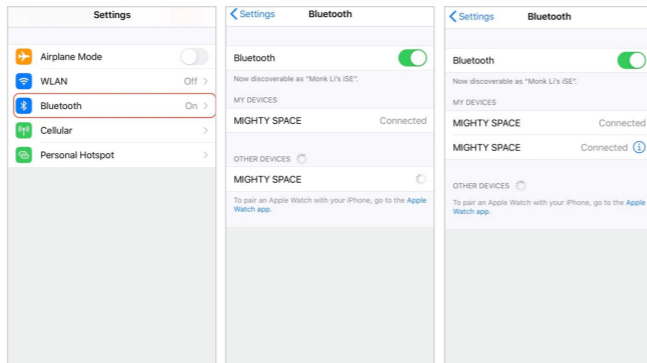

NOTE: The Bluetooth audio and Bluetooth MIDI are independent, you have to connect them separately.

Operation

CHANNEL switch & indicator



CHANNEL



While the device is engaged, you can press the CHANNEL switch to change the preset from 1~7. The indicator will show different color related to different preset.

NOTE: You can adjust which preset can be ACTIVE while you press the PRESET switch through MightyAmp™ APP or Mighty Editor™ edit software. (ACTIVE function)

MightyAmp™ APP example: Choose preset 1, 3, 5, 7 and press Active icon, then the device will know preset 1, 3, 5, 7 will be chosen while you press the PRESET switch.

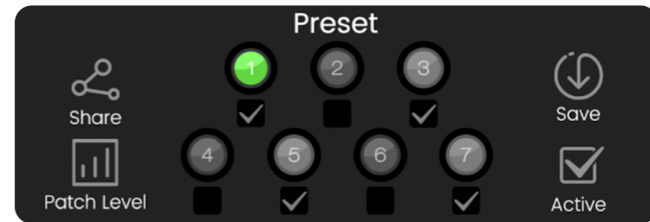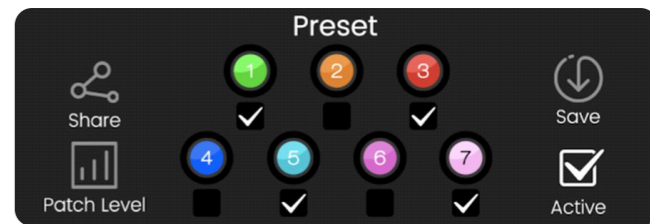

Operation

Mighty Editor™ example: Click icon, the 7 PRESETS will be COLORED, then choose the ones you want to active, like 1, 3, 5, 7. Then press icon again, Mighty Editor™ will show current preset, and according to the interface, you will see which is be chosen with .



Operation

 
BATTERY indicator



While you connect the included POWER ADAPTOR to the amp, it will charge the device, and the BATTERY indicator will show “Red” while charging. While the battery is full, the BATTERY indicator will show “Green”. While the device will run out of battery, the BATTERY indicator will flash “Red”.

NOTE: The charging time is around 7 hrs. Operation time is around 7 hrs.

GAIN , VOLUME , BASS , MIDDLE , TREBLE , PRESENCE , REVERB , MASTER knobs



- GAIN** controls AMP MODEL's gain (input level).
- VOLUME** controls AMP model's master (output level).
- BASS** controls AMP model's low-end response.
- MIDDLE** controls AMP model's mid frequency.
- TREBLE** controls AMP model's high-end frequency.
- PRESENCE** controls AMP model's brightness.
- REVERB** controls RVB model's mix level.
- MASTER** controls the overall volume of the amplifier.

Operation

LOOP indicator

REC → PLAY → OVERDUB →

DRUM & LOOP FOOT SWITCH jack

FOOT SWITCH



TIP: DRUM
RING: LOOP

Connect with the included NMP-2 footswitch (B&A jack) into DRUM & LOOP FOOT SWITCH jack, you can trigger the LOOP & DRUM function. In the meantime, A footswitch controls LOOP, B footswitch controls DRUM.

 


Loop Footswitch



REC: LOOP indicator shows "Red".
PLAY: LOOP indicator shows "Green".
OVERDUB: LOOP indicator shows "Orange".

Rhythm Footswitch



CHANNEL FOOT SWITCH jack

FOOT SWITCH



CHANNEL
TIP: ▲
RING: ▼

Operation

AUX IN jack

AUX IN



Connect MP3 player into the 1/8" AUX IN jack to play playbacks.

AUX IN & BLUETOOTH AUDIO VOLUME port

VOLUME
AUX IN
BT. ④



Controls Aux In & Bluetooth audio stream volume.

USB-C port

USB



Mighty Editor™ edit software communication, USB audio stream, and Firmware update.

Connect with the included NMP-2 footswitch (B&A jack) into CHANNEL FOOT SWITCH jack, you can trigger the presets UP & DOWN. In the meantime, A footswitch controls DOWN, B footswitch controls UP.

DC IN jack

DC IN
15V 2.5A



Connect the included power adaptor to charge MIGHTY SPACE.

PHONES OUT jack

PHONES



Connect with earphone to do silent practice, in the meantime MIGHTY SPACE will mute the speaker.

Operation

Recording:

For WIN OS, please go to the product page to download ASIO driver for recording.

For MAC OS, the device supports CORE AUDIO, so there is no need for driver.

Firmware Update:

Connect USB with PC, hold the CHANNEL switch and turn on the device by toggling POWER switch to enter to DFU (Device Firmware Update) mode. Then use DFU updater software to update the firmware. (You can get the firmware and firmware update guide on the product page.)


SPEAKER OUT jack



You can drive external cabinet with SPEAKER OUT jack, the output impedance is 4Ω, but it can drive 8Ω or 16Ω without issues. In the meantime, MIGHTY SPACE will mute its own speakers.

Mighty AMP™ App and Mighty Editor™

Mighty AMP™ App

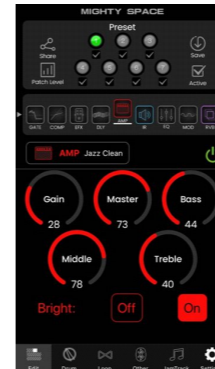

Mighty Editor™



You can check the MIGHTY SPACE tutorial on NUX YouTube channel for more details.

The MightyAmp™ APP allows you to tweak parameters, and move the block order using the mobile phone. In addition, you can even set Events on JamTrack or load custom tracks into your phone through the PC.

The Mighty Editor™ edit software can load 3rd party IRs, you can tweak parameters for all effects. You can use the edit software to move the effect block order, and export or import PRESETS.

Features

- Powerful 30 watts desktop wireless Modeling Amplifier.
- TSAC-HD (White-Box) Amp Modeling algorithm offers realistic playability & feedback.
- 512 samples IR resolution. (34 premium built-in IRs and 20 user slots for 3rd party)
- 7 presets with ACTIVE functions. (PRESET switch toggles ACTIVE ones sequentially.)
- GATE, CMP, EFX, AMP, IR, EQ, MOD, DLY, RVB effect blocks with free order.
- White-box algorithm EFX offers analog response and natural chaos.
- Stereo DLY / RVB effects with gorgeous tone.
- Patch Level function for each preset.
- Drum & Loop with additional NMP-2 footswitch control.
- 7hrs playing time. (11.1V / 5000mAh)
- Ultra-low system latency: 1.2ms
- Intuitive MightyAmp™ APP & Mighty Editor™ edit software (3rd party IR loader).

Specifications

- Input Impedance: 1MΩ
- Earphone Output Impedance: 32Ω
- Sampling Rate: 48kHz / 32-bit
- System Latency: 1.2ms
- Battery: 11.1V / 5000mAh
- Current Draw: 11.1V / 220mA
- Dimensions: 363mm(L) x 171mm(W) x 171mm (H)
- Weight: 4.06kg

Accessories

- AC adaptor
- NMP-2
- B-5 TX
- 6.35mm TRS cable for NMP-2
- Type-C cable
- Micro USB cable
- Handle strap

*Specifications and appearance subject to change without notice.

注意！重要安全说明。
在连接使用前，请阅读以下说明。

警告：为减少火灾或触电的危险，请勿将本产品置于雨中或潮湿的地方。

注意：为避免火灾或触电等危险，请勿擅自拆卸本产品。维修本产品内部部件对于非专业人员来说较为困难，若有损坏请交给专业维修人员处理。

注意：本产品已经过测试，证明符合FCC规则第15部分的B级数字设备的限制规定。操作应符合以下两个条件：（1）本产品不会产生有害干扰。（2）本产品必须接受任何干扰，包括可能会导致非正常操作的干扰。

1. 仅能使用与出厂附带规格相同的电源适配器。如果您不确定可用的电源类型，请咨询您的经销商。
2. 本产品不应遭受水滴或水溅，产品上不应放置诸如花瓶一类的装满液体的物品。
3. 请勿放置在热源附近，如散热器、电热器或其它产生高热量的设备。
4. 请勿尝试自行维修本产品。如需维修，请联系我司售后热线或交给专业的维修人员。
5. 本产品遭遇电源线或插头损坏、不明物体进入、进水等情况时，请谨慎使用，并主动联系售后维修。
6. 如果长时间不使用本产品，应拔掉电源线。
7. 避免踩踏电源线，避免过度绷紧电源线。
8. 人耳长时间接收高音量声音可能会导致无法挽回的听力损害，请始终保持“安全聆听”。


请遵守所有的指示和注意所有警告并保留这些说明！

产品简介

感谢您购买NUX MIGHTY SPACE! 自从我们发布了MIGHTY LITE BT以及MIGHTY AIR之后, 这种桌面型数字建模音箱便成了NUX具有典型性的一类产品。MIGHTY SPACE作为系列产品的旗舰款, 它将带给您强大的功能、更完善的体验和更多的乐趣。

MIGHTY SPACE内置了包括音箱模拟、箱体模拟在内的一系列可供吉他或贝斯使用的效果。我们还为喜欢木吉他音色的电吉他手准备了箱琴吉他音箱模拟以及箱琴吉他模拟功能。MIGHTY SPACE内置了34个出厂IR文件, 以及20个用户IR存储位置, 支持导入第三方IR文件来丰富您的音色。

此外, 新开发上线的桌面端编辑软件Mighty Editor™可以让您更便捷地调整效果参数, 导入第三方IR文件以及调整预设。值得一提的是Mighty Editor™还内置了IR文件格式转换工具, 在您导入的第三方IR文件(wav)时, Mighty Editor™会自动将其转换为MIGHTY SPACE所支持的32bit/48kHz格式, 让您不再为IR文件格式苦恼。

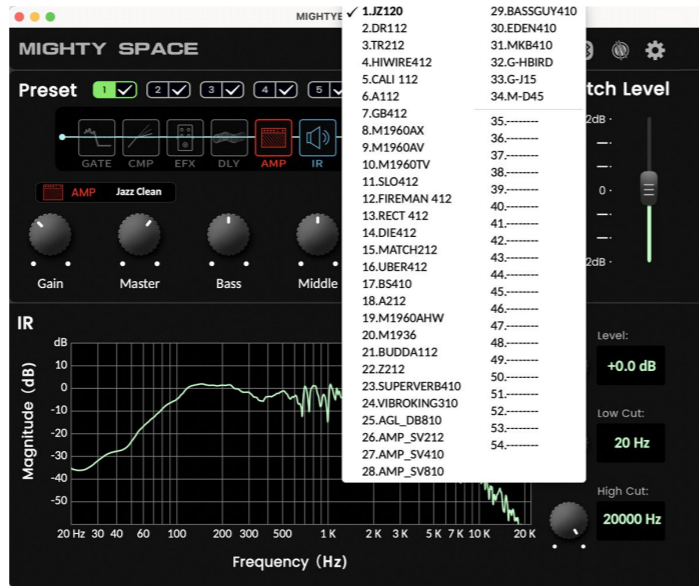


产品简介

除桌面端编辑软件外, 您当然还可以使用声名在外的Mighty Amp™ App来调整音色。MIGHTY SPACE的效果链由9个模块(GATE, COMP, EFX, AMP, IR, EQ, MOD, DLY以及RVB)组成, 各个模块在效果链上的位置可自由移动。


最后, MIGHTY SPACE还支持USB音频串流可用作简易USB录音声卡, 支持Normal、Dry Out、Re-amp以及Loopback四种录音模式。您可以根据实际需要, 使用Mighty Editor™或Mighty Amp™ App来选择合适的录音模式。顺带提一句, Loopback模式可以在直播时使用。

*本说明书中所提及的产品名称、注册商标和公司名称属于其各所有者, 与纽克斯效果器或深圳市蔚科电子科技有限公司无任何关联或附属关系。提及仅用于功能或特性说明, 而非侵犯其各所有者的各项权利。


*特别感谢给予我们开发MIGHTY SPACE灵感的Dian Iliev以及Mighty Plug/Air 用户群的所有人。

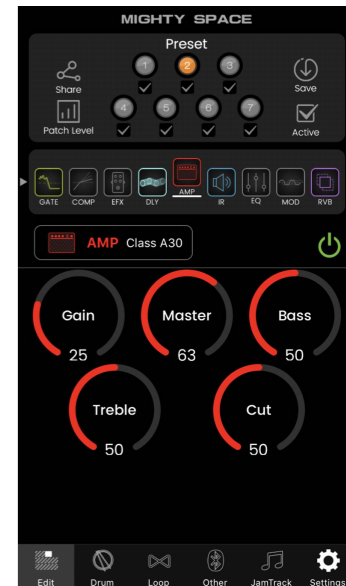

■ 前面板

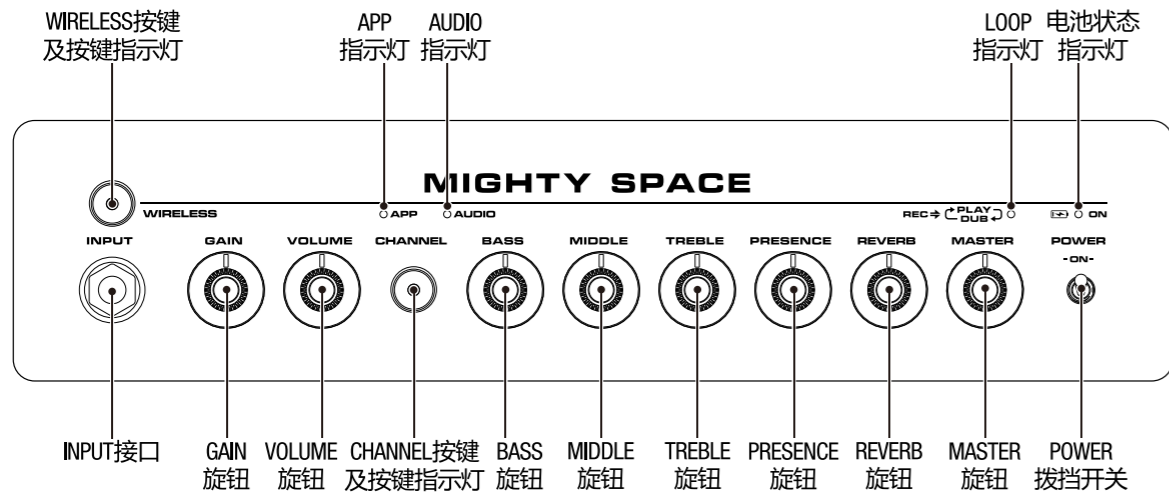

■ 背板接口

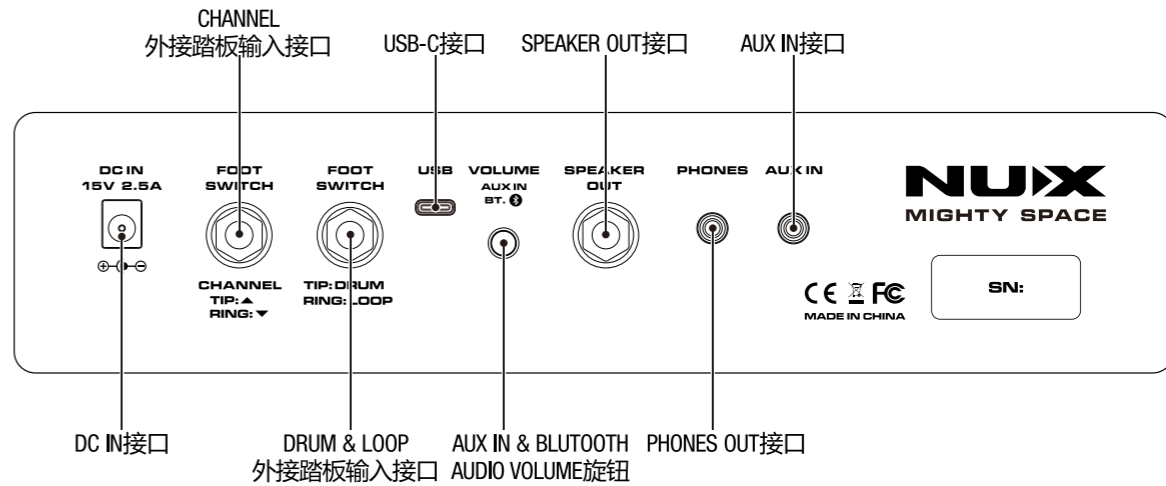

操作说明

INPUT接口

INPUT



6.35mm单声道输入接口，您可以使用此接口直接连接电吉他或贝斯。

当MIGHTY SPACE处于开机状态时，您可以将配套的无线发射器插入INPUT接口来为无线发射器充电。充电时无线发射器身上的LED指示灯呈红色长亮状态；充满电后无线发射器身上的LED指示灯会自动熄灭。

POWER拨档开关

ON

POWER

-ON-



电源拨档开关，拨动此开关可以打开或关闭MIGHTY SPACE。MIGHTY SPACE开机后，LED指示灯呈红色常亮状态；MIGHTY SPACE关机后，LED指示灯呈熄灭状态。

WIRELESS按键及按键指示灯



WIRELESS

MIGHTY SPACE内置无线接收器开关按键。MIGHTY SPACE集成了成熟的无线传输方案，只需简单设置即可尽享无线乐趣。

与无线发射器建立连接

1. 确保MIGHTY SPACE处于开机状态，长按WIRELESS按键开启内置无线接收器，然后将附赠的无线发射器开机。
2. 内置无线接收器开启后WIRELESS按键指示灯会亮红色，此时发射器与接收器尚未建立无线连接。
3. 发射器与接收器会在数秒钟内自动建立无线连接，连接后WIRELESS按键指示灯会呈绿色常亮状态。

操作说明

APP指示灯


APP

指示Mighty Amp™ App 与MIGHTY SPACE的联动状态。

Mighty Amp™ App 与MIGHTY SPACE连接指南:

1. 确认MIGHTY SPACE处于开机状态并在手机或平板电脑上打开Mighty Amp™ App。
2. 点击下方标签栏上的Settings图标进入设置列表，点击Current Amp（当前音箱）进入设备选择页面，然后点选“MIGHTY SPACE”选定设备。
3. 选定设备后，点击设置列表下方的“Click to scan device（点击后开始扫描设备）”，App开始自动扫描。
4. 当“MIGHTY SPACE”出现在“Found Devices（已找到的设备）”标题下时，点击“MIGHTY SPACE”进行连接。
5. 连接成功后APP指示灯会保持蓝色常亮状态；未连接时APP指示灯呈熄灭状态。

注意：Mighty Amp与MIGHTY SPACE是通过蓝牙MIDI来完成数据交换的。

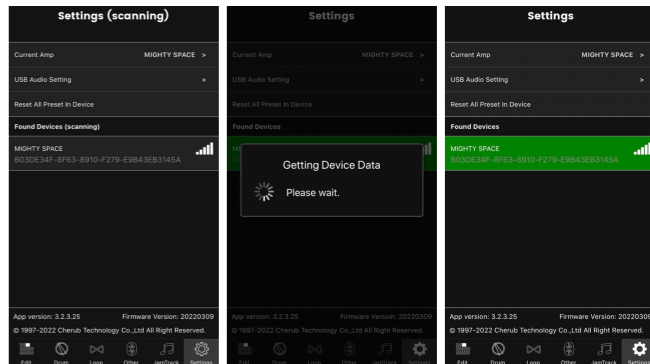

注意：多数安卓用户可能需要为Mighty Amp App开启位置权限，我们不会收集您的隐私信息。如果您想了解安卓系统为什么需要开启位置权限，请参考安卓官方的开发者文档：
https://developer.android.com/reference/android/media/midi/package-summary#btile_location_permissions

操作说明

AUDIO指示灯

○ AUDIO


指示MIGHTY SPACE的蓝牙音频连接状态。

蓝牙音频连接指南：

1. 确认MIGHTY SPACE处于开机状态，并且已经完成与Mighty Amp™ App建立连接。
2. 进入手机或平板电脑的设置选项，找到蓝牙设置菜单。
3. 进入蓝牙设置菜单，在蓝牙设备标题下找到MIGHTY SPACE，点击进行连接。
4. 连接成功后，会有提示音响起，同时AUDIO指示灯会保持蓝色常亮状态；蓝牙音频未连接时，AUDIO指示灯呈熄灭状态。



Settings

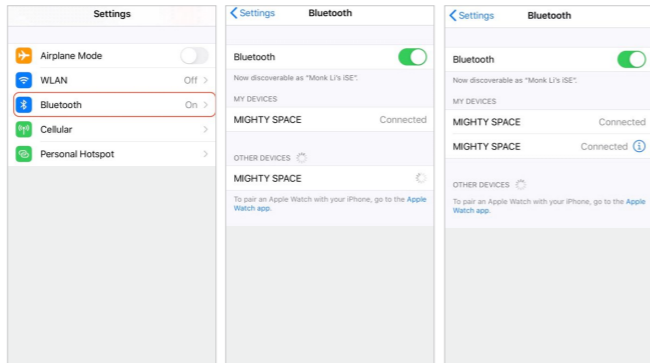

注意： 蓝牙音频与蓝牙MIDI是相对独立的，初次使用或更换控制设备后均需手动完成一次连接。

操作说明

CHANNEL按键及按键指示灯



CHANNEL



预设切换按键，MIGHTY SPACE内置七个预设，短按CHANNEL按键可循环切换预设。切换预设后CHANNEL按键指示灯的颜色也会变化。

提示： 您可以通过Mighty Amp™ App或者Mighty Editor™编辑软件来进行用户自选预设。

自选预设：您可以勾选任意数量的预设，简化切换预设的流程。

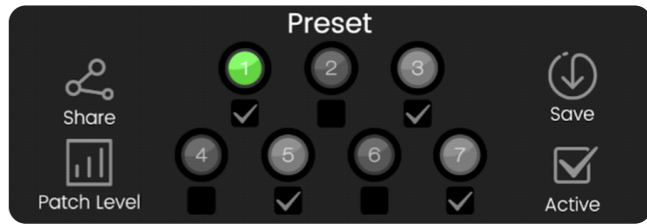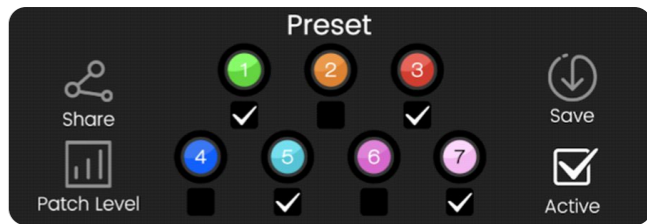

操作说明

例：吉他手大鹏日常练习需要用到四个预设，使用Mighty Editor™进行一番调整后大鹏在预设1、预设3、预设4以及预设7四个位置上编辑并保存了预设。此时大鹏只需要取消勾选预设2、预设5以及预设6三个预设并保存设置。这之后，大鹏便可以使用CHANNEL按键在这四个预设之间切换。



操作说明

电池状态指示灯



 
指示低电量及充电状态。

MIGHTY SPACE可持续工作约7小时，电池从低电量到充满整个过程需要约7小时。

充电状态：使用外接电源适配器为MIGHTY SPACE充电时，LED指示灯呈橘色长亮状态；充满电时，LED指示灯会长亮绿色。

低电量警告：当电池电量不足时，充电指示灯（红色）会持续闪烁，此时应尽快为电池充电。

GAIN , VOLUME , BASS , MIDDLE , TREBLE , PRESENCE , REVERB , MASTER旋钮



GAIN旋钮

调节音箱模拟的输入增益。

VOLUME旋钮

调节音箱模拟的输出音量。

BASS MIDDLE REEBLE旋钮

调节音箱模拟的三段均衡。

PRESENCE旋钮

调节音箱模拟音色的明亮度。

REVERB旋钮

调节混响效果的干湿比。

MASTER旋钮

调节MIGHTY SPACE输出音量大小。

操作说明

LOOP指示灯

REC → PLAY → ○

指示录音循环的工作状态。

DRUM & LOOP外接踏板输入接口

FOOT SWITCH



TIP: DRUM
RING: LOOP

将附赠的NMP-2(B&A输出口)通过此接口连接至MIGHTY SPACE后, 可激活录音循环与鼓机功能, 然后使用A踩钉控制录音循环, 使用B踩钉控制鼓机。

 


Loop踏板



录音时: LOOP指示灯呈红色
回放时: LOOP指示灯呈绿色。
叠录时: LOOP指示灯呈橙色。

Rhythm踏板



CHANNEL外接踏板输入接口

FOOT SWITCH



CHANNEL
TIP: ▲
RING: ▼

操作说明

将附赠的NMP-2(B&A输出口)通过此接口连接至MIGHTY SPACE后, 可使用NMP-2上的两个踩钉来向上或向下切换预设。A踩钉向下; B踩钉向上。

DC IN接口

DC IN
15V 2.5A



将附赠的电源适配器通过此接口连接至MIGHTY SPACE为MIGHTY SPACE充电。

PHONES OUT接口

PHONES



3.5mm音频输出接口, 可连接耳机进行静音练习。

AUX IN接口

AUX IN



3.5mm辅助音频输入接口, 可连接外部音频设备播放伴奏。

AUX IN & BLUETOOTH AUDIO VOLUME旋钮

VOLUME
AUX IN
BT. ②



调节辅助音频及蓝牙音频的音量大小。

USB-C接口

USB



数据交换接口。

操作说明

使用MIGHTY SPACE录音

Windows用户需要访问MIGHTY SPACE产品页面下载并安装专用ASIO驱动；MacOS原生支持Core Audio，所以Mac用户无需安装驱动。

为MIGHTY SPACE更新固件

使用高品质数据线并按照MIGHTY SPACE产品页面底部固件更新指南所述步骤进行操作即可。

SPEAKER OUT接口



输出阻抗为4欧姆但可以驱动4欧姆、8欧姆及16欧姆三种规格的箱体。连外部箱体时，MIGHTY SPACE上的扬声器将会静音。

Mighty Amp™ App及Mighty Editor™

Mighty Amp™ App



Mighty Editor™



您可以访问MIGHTY SPACE产品页面、我司微信公众号或哔哩哔哩获取MIGHTY SPACE更多文字及视频介绍。Mighty Amp™ App是MIGHTY SPACE配套的音色编辑软件。您可以使用它编辑预设音色，改变效果信号链以及解锁更多隐藏功能。此外，Mighty Amp™ App的伴奏播放功能不仅支持导入第三方伴奏甚至还支持自定义事件（例：AB循环）。Mighty Editor™ 是MIGHTY SPACE配套的桌面端音色编辑软件。您可以使用它编辑预设音色，改变效果信号链，导入第三方IR（冲级响应）文件以及导入导出预设等诸多实用功能。

产品特点

- 强中之强，30瓦桌面型数字建模音箱。
- TSAC-HD白盒建模音箱模拟算法，提供真实的演奏手感和反馈。
- 支持512点IR（冲击响应）解析度，出厂内置34个精选IR以及20个第三方IR存储位置。
- 7组预设带用户自选功能。
- 9大效果模块，支持自定义效果信号链。
- 立体声延迟效果，立体声混响效果。
- 11.1V/5000mAh超大容量电池，最长可连续使用7小时。
- 1.2ms超低系统延迟。
- 配套易于上手的移动端和桌面端音色编辑软件。

技术参数

- 输入阻抗：1M Ω
- 耳机接口输出阻抗：32 Ω
- 采样率：48kHz/32-bit
- 系统延迟：1.2ms
- 电池：11.1V/5000mAh
- 工作电流：11.1V/220mA
- 体积：363mm (L) x 171mm (W) x 171mm(H)
- 重量：4.06kg

随机附件

- 电源适配器
- NMP-2双踩钉脚踏开关
- B-5 TX
- 6.35mm TRS连接线（连接NMP-2）
- Type-C USB线
- Micro USB线
- 提手带

*技术规格如有变更，恕不另行通知。

有关产品中所含有害物质的说明

为了控制和减少电器电子产品废弃后对环境造成的污染，本资料就本公司产品中所含的特定有害物质及其安全性予以说明。本资料适用于2016年7月1号以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在制造日起的规定期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
主体	塑胶件	○	○	○	○	○
	五金件	×	○	○	○	○
	硅胶件	○	○	○	○	○
	内置电路板	×	○	○	○	○
附件	*交流电源适配器、线缆	×	○	○	○	○

*表示某些产品可能不含有这些项目，上表当中的信息仅在产品含有这些项目时适用。

本表格依据SJ/T 11364的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求，因根据现有的技术水平，还没有什么物质能够代替它。

保护环境

如果需要废弃本产品，请遵循本地相关指引，请勿随意丢弃或作为生活垃圾处理，以避免对环境造成污染。

质量承诺

亲爱的 **NUX** 用户：

在您使用 **NUX** 产品时，请仔细阅读产品说明书，当您有疑问和困难时，请拨打售后服务热线：400-990-9866

- 一周内出现质量问题可退货退款
- 一年内出现质量问题可免费维修
- 一月内出现质量问题可调换
- 终身享有咨询和维修服务

[请向销售商索取正规发票并予以保存]

售后服务地址

广东省珠海市高新区唐家湾镇科技九路10号
珠海市蔚科科技开发有限公司 售后服务部
邮编: 519085

制造商

深圳市蔚科电子科技有限公司

制造商地址

深圳市南山区蛇口兴华路6号南海意库1号楼507
电话: 0755-2686 9866
网址: cn.nuxefx.com

生产商

珠海市蔚科科技开发有限公司

生产商地址

珠海市高新区唐家湾镇科技九路10号
电话: 0756-3689866

换修政策

一、包换政策：

- 1、消费者通过正规授权渠道购买的产品，自购机之日起1个月之内，在正常使用情况下出现非人为的产品性能故障、且产品外观及包装保持完好，可向所购机的经销商换机。
- 2、消费者在换机时应出示由经销商开出的购机凭证，否则经销商可以不予更换。

二、保修政策：

- 1、消费者通过正规授权渠道购买的产品(以发票所示销售方为准)，自购买之日起1年内，若出现非人为损坏的性能故障，可享受免费维修服务。
- 2、对于超过1年或人为及不可抗力因素造成损坏的产品，我司可提供有偿维修服务。

*本售后政策仅适用于中国大陆地区，其它国家及地区以当地售后政策及法律法规为准。

合格证

Certificate

检验员
Inspector

名称
Name 蓝牙立体声数字无线音箱

型号
Type **MIGHTY SPACE**

生产日期
Date

本产品经检验合格
This product is inspected and approved.

执行标准: Q/WKDZ 002-2020
Product is certificated with Q/WKDZ 002-2020