

Ⓛ Aufbauanleitung

Ⓛ Notice de montage

Ⓛ Handleiding voor de montage

Ⓛ Montážní návod

Ⓛ Szerelési útmutató

Ⓛ Montaj talimatları

Ⓛ Assembly instruction

Ⓛ Istruzioni di montaggio

 
 
 
 
 
 
Ⓛ Instrukcja montażu

Ⓛ Navod na montaž

Ⓛ Instrucțiuni de montaj

Ⓛ Инструкция по монтажу

36-1006-39-07M

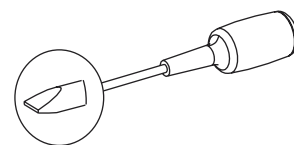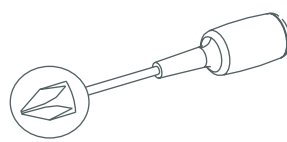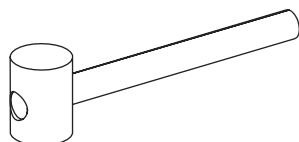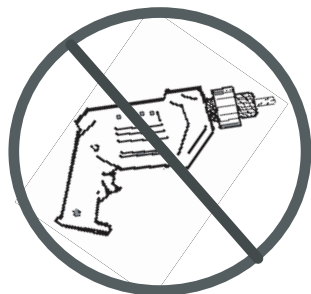
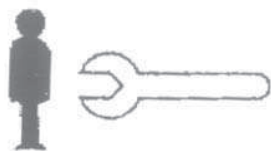
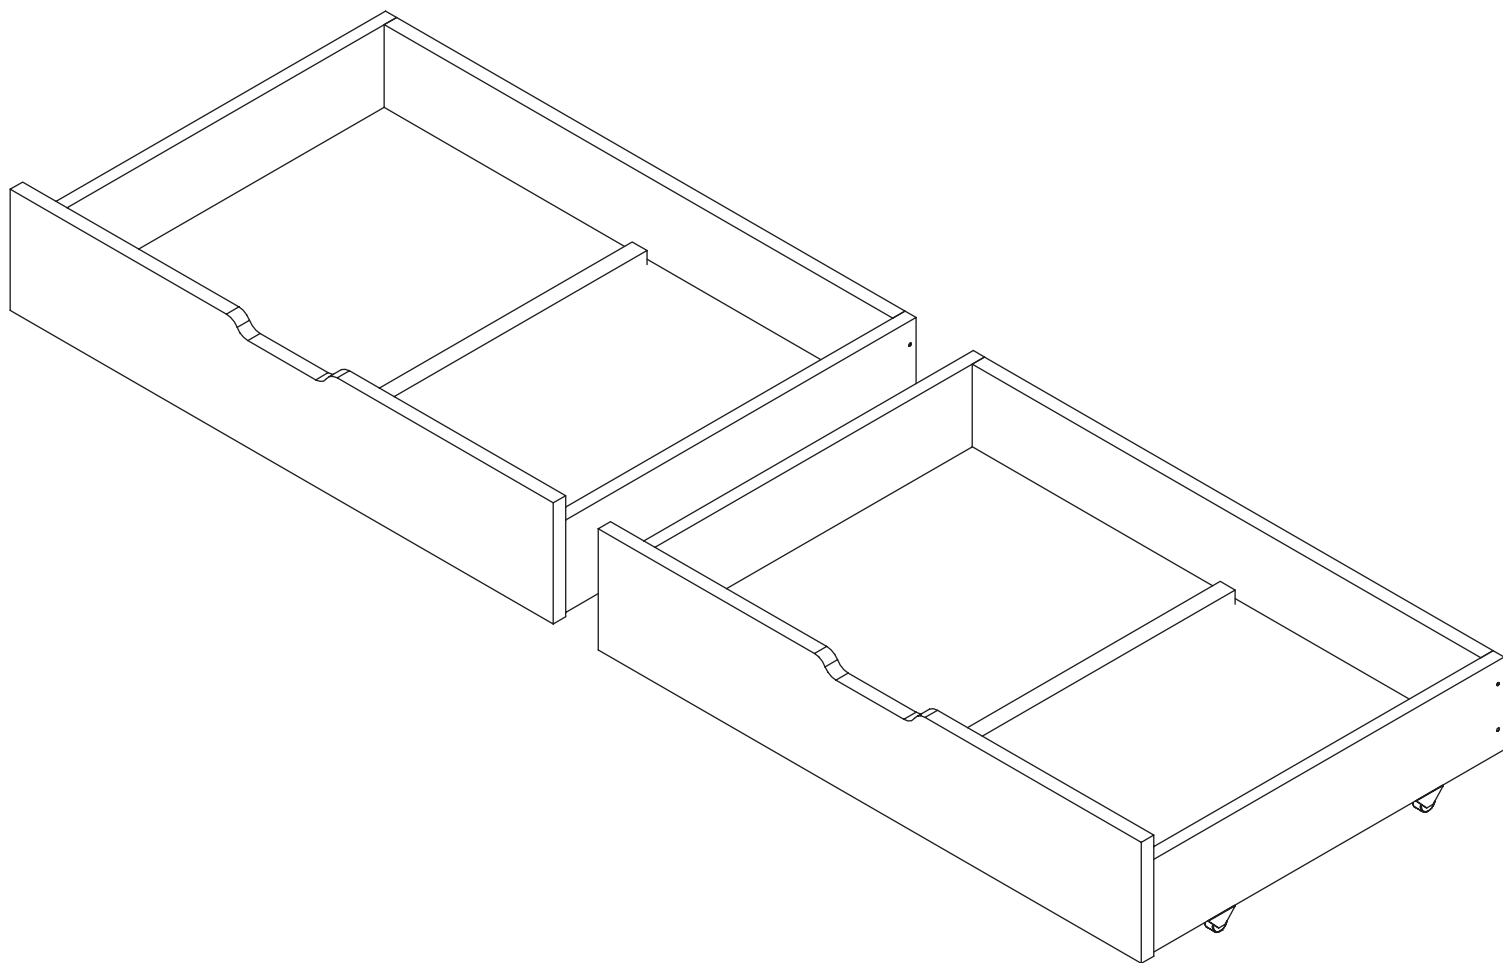


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба



Name • Nom • Nome • Naam • Nazwa • Jméno • Názov
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

   
Typ • Type • Tip • Tipus • Druh • Тиро • Тип

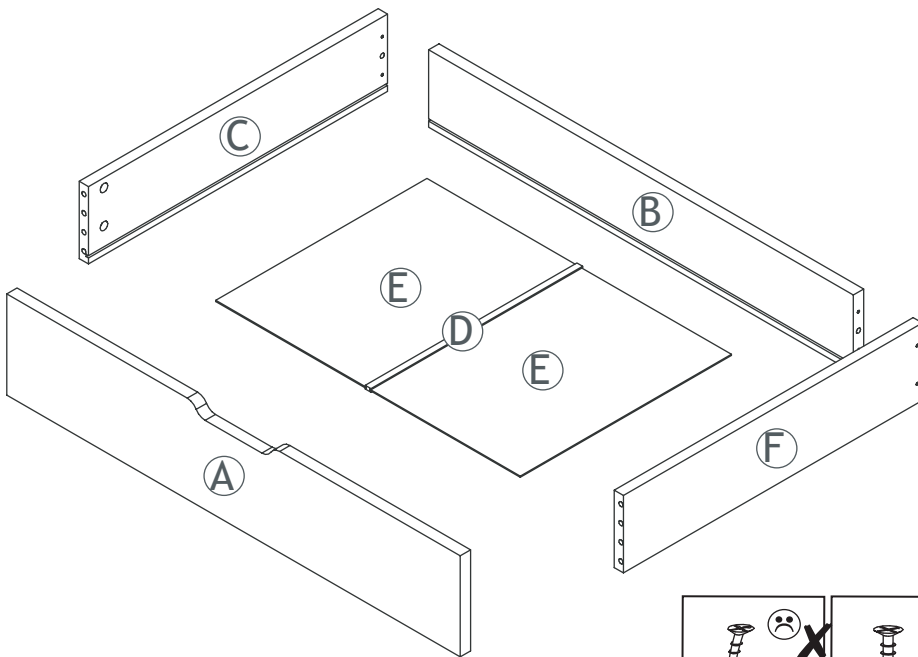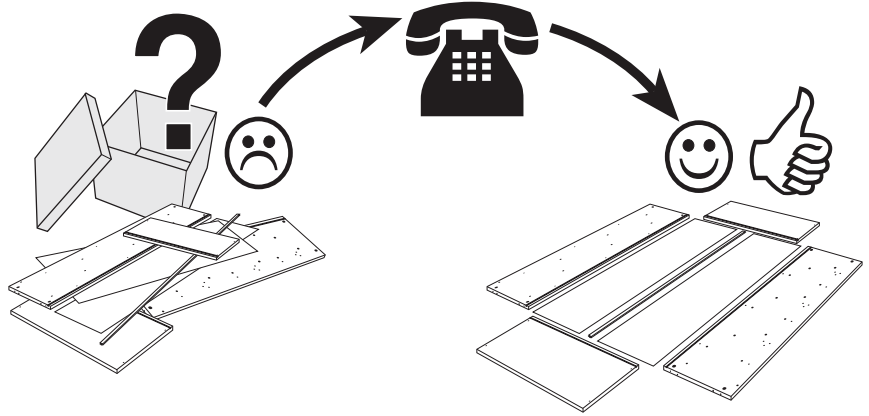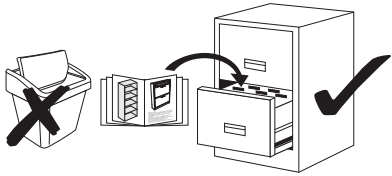


| | | |
|----------|-----------|----|
| A | 006181-39 | x2 |
| B | 006281-39 | x2 |
| C | 006382-39 | x2 |
| D | 149410-32 | x2 |
| E | 006580-52 | x4 |
| F | 006381-39 | x2 |

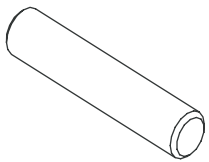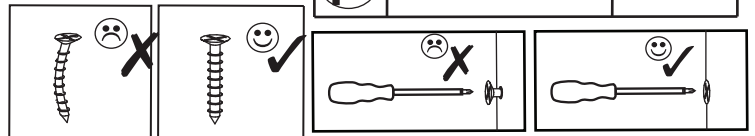  

6


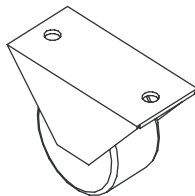 


13

 

14

  
1-000001=

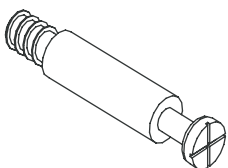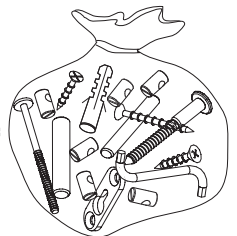

17



 
18

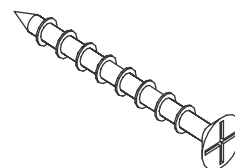


19

| | | mm | |
|----|-------------|--------|-----|
| 6 | 1-000013-00 | 8x40 | x12 |
| 13 | 1-000117-07 | D=28 | x8 |
| 14 | 1-000091-07 | 3x20 | x16 |
| 17 | 1-000046-07 | L34 | x8 |
| 18 | 1-000048-07 | 15x12 | x8 |
| 19 | 1-000057-57 | 3,5x40 | x8 |

 
1.

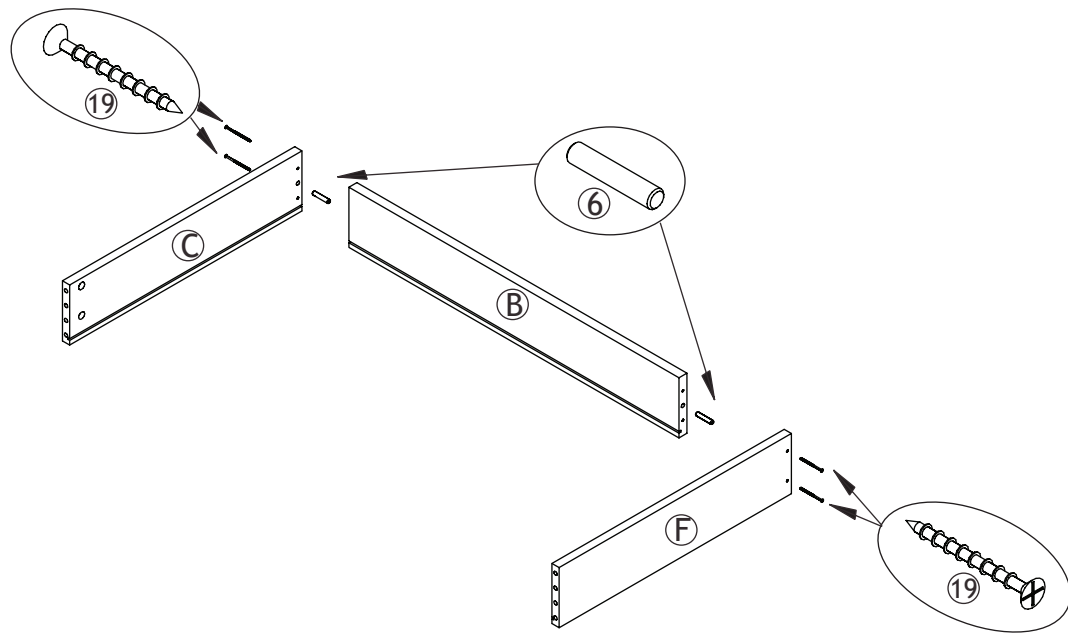

 2.

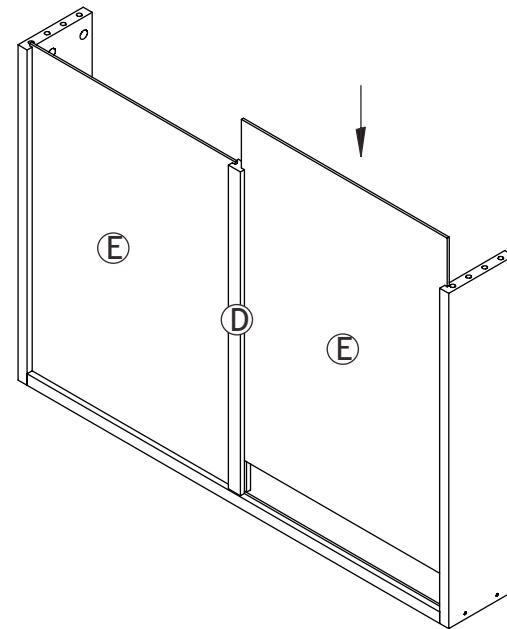

 3.

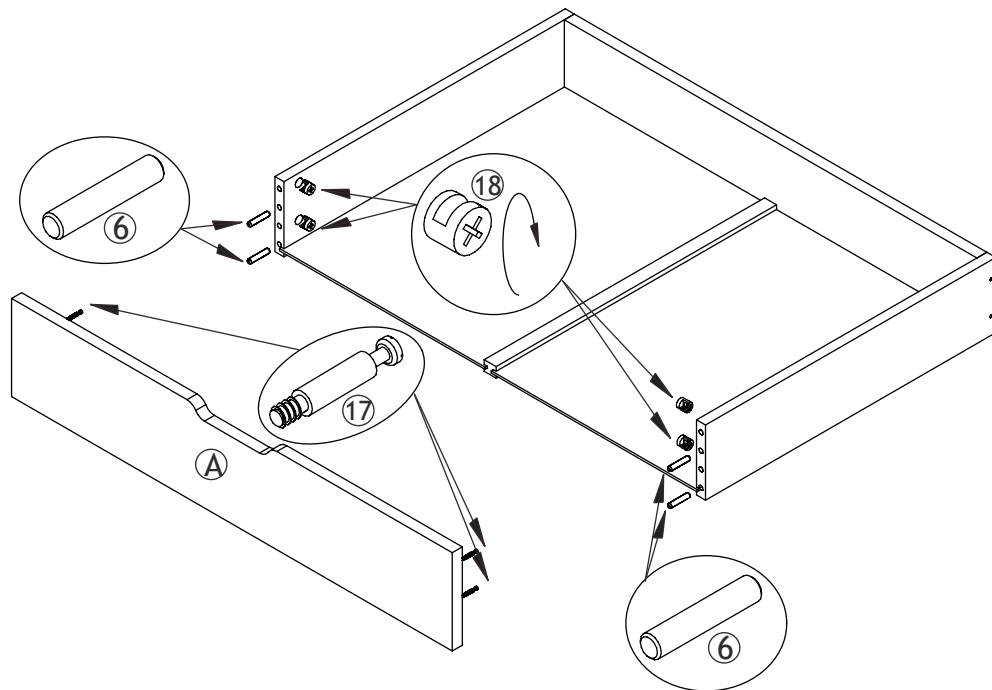

4.

