


# AIRMSSEN

## PORTABLE COUNTERTOP DISHWASHER

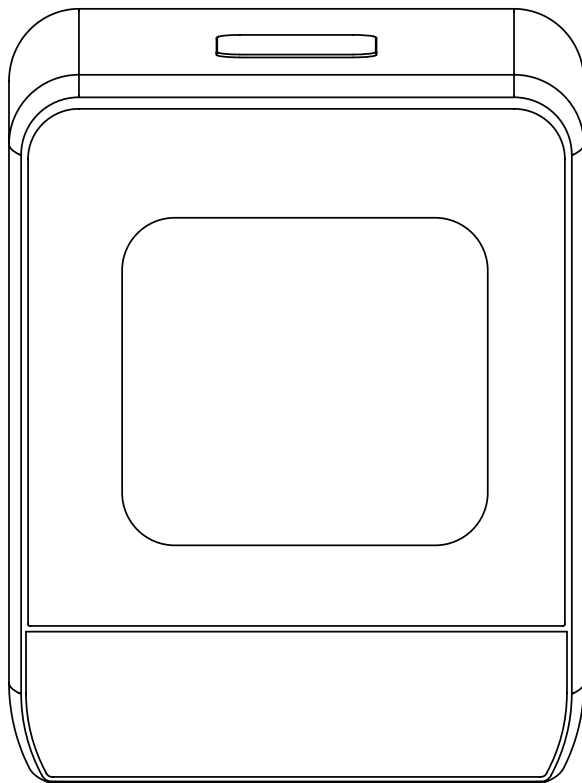

## USER MANUAL

---

If you are having problems using this dishwasher  
Please email: [support@airmsen.com](mailto:support@airmsen.com)  
for assistance: [www.airmsen.com](http://www.airmsen.com)

THANK YOU FOR MAKING AIRMSEN APPLIANCES A PART OF YOUR HOME.

## CONSTANT INNOVATION TO ALLOW CONSUMERS TO GET BETTER PRODUCTS

Take “technology, innovation, health” as its core value, to be the preferred brand of household products in your healthy and quality life.

AIRMOSEN focus on researching, developing and manufacturing various kinds of household supplies with advanced technologies and the idea of sustainable development, to promote the evolution and transform of our lifestyle, to make it more healthy, green, intelligent and with high quality, and to bring a happy, healthy and eco-friendly home life to around the world.

## SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



**This is the safety alert symbol.**

**This symbol alerts you to potential hazards that can cause serious injury to you and others.**

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

# CONTENTS

IMPORTANT SAFEGUARDS	04
PRODUCTS AND ACCESSORIES	08
INSTALLATION	09
DIRECTION FOR USE	10
OPERATION PANEL	10
STARTING A WASH CYCLE	11
CYCLE CHART	12
USING YOUR DISHWASHER	13
ADDING WATER TO DISHWASHER	14
FAUCET MODE	14
WATER TANK MODE	15
CLEANING AND MAINTENANCE	17
SPRAY ARMS	17
FILTER SYSTEM	18
LONG-TERM CARE	20
TROUBLESHOOTING	21
BASIC PARAMETER	22
WARRANTY	24
CUSTOMER SUPPORT	25

# IMPORTANT SAFEGUARDS

Congratulations on your new Airmesen dishwasher. This manual contains important information on the installation, use, and care of your appliance. Please take time to read this manual to take full advantage of your dishwasher's many benefits and features.

**⚠ NOTICE** The dishwasher passed the water test in the factory. A small amount of water remains, which is a normal phenomenon. Please feel free to use it. Please read this manual carefully before using the product and keep it properly. The product, accessories, user interface and other illustrations in the manual are schematic diagrams for reference only. Due to the update and upgrade of the product, the actual product and the diagram may be slightly different, please refer to the material item.

## WHAT YOU NEED TO KNOW ABOUT THE SAFETY INSTRUCTIONS

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your dishwasher.

### California Proposition 65 Warning

## CALIFORNIA PROPOSITION 65 WARNING

**⚠ WARNING** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

### ⚠ WARNING

When using your dishwasher, follow basic precautions, including the following:

1. Read all instructions before using the dishwasher.
2. Use the dishwasher only for its intended function.
3. Use only detergents or wetting agents recommended for use in a dishwasher and keep them out of the reach of children.
4. When loading items to be washed:
  - locate sharp items so that they are not likely to damage the door seal, and
  - load sharp knives with the handles up to reduce the risk of cut-type injuries.
5. Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent.  
For plastic items not so marked, check the manufacturer's recommendations.
6. Do not touch the HEATING ELEMENT during or immediately after use.
7. Do not operate your dishwasher unless all ENCLOSURE panels are properly in place.
8. Do not tamper with the controls.
9. Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
10. To reduce the risk of injury, do not allow children to play in or on the dishwasher.

11. Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hotwater system has not been used for such a period, before using the dishwasher turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
12. Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.

## **CAUTION**

- After unpacking the dishwasher, keep the packaging out of the reach of children.
- The dishwasher is extremely heavy. Do not attempt to move or carry the dishwasher by yourself. Two or more people are needed to move a dishwasher and avoid potential injuries.
- As with any equipment using electricity, water, and moving parts, potential hazards exist.
- Do not install the dishwasher near electrical components. Keep the dishwasher away from open flames.
- Install and level your dishwasher on an uncarpeted floor that can support its weight.
- Your dishwasher must be properly grounded. Never connect it to an ungrounded outlet.
- After the dishwasher is installed, check that the drain hose is properly connected and that there is no leakage from the hose connectors. If the drain hose is loose, it may cause property damage.
- The water supply line is susceptible to breakage. As time goes by, it becomes less flexible. Check the line periodically. If it is swollen, torn, cut, or there is a water leak, replace it immediately.
- To safely operate this appliance, familiarize yourself with its operations and exercise care when using it.
- Do not put gasoline, solvents, or other flammable materials inside the dishwasher. Do not wash dishes exposed to these materials.
- Keep your dishwasher detergent out of the reach of children. Detergent has an adverse effect on human organs. It contains elements for polishing and is corrosive. Avoid letting the detergent come into contact with your skin and eyes.
- Do not push or place pressure on the door when it is open, as this may damage the dishwasher or cause harm.
- Do not allow children to play in or on the dishwasher. They may harm themselves or damage the dishwasher.
- Disconnect the power cable (or set the circuit breaker to off) before servicing your dishwasher.
- Do not repair, replace, or service any part of your dishwasher yourself.

Disassembly, repairs, and modifications are permitted by authorized service technicians only. Work done by an unauthorized person may void your warranty.

- Before disposing of your dishwasher, remove the door of the washing compartment or the door latch so that children or small animals cannot get trapped inside.
- If the dishwasher is left unused for an extended period of time, turn off the water supply.
- This dishwasher is intended for residential use only.

## BEFORE USING YOUR DISHWASHER

### **WARNING**



#### **Tip-Over Hazard**

- Do not use the dishwasher until it is correctly installed.
- Do not push down on the dishwasher door when it is open.
- Do not place excessive weight on the dishwasher door when it is open.



#### **Electric Shock Hazard**

Failure to follow these instructions can result in death, fire, or electric shock:

- Electrically ground the dishwasher.
- Do not use an extension cord.

## SAFETY INSTRUCTIONS



WARNING

Before using the appliance, check it for any externally visible damage. Under no circumstances should you use a damaged appliance. A damaged appliance could be dangerous.



The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective grounding system. It is most important that this basic safety requirement is present and regularly tested and where there is any doubt the electrical system in the house should be checked by a qualified electrician.

The manufacturer cannot be held liable for the consequences of an inadequate grounding system (e.g. electric shock).





CAUTION


Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).



This appliance may only be installed in mobile installations such as ships if a risk assessment of the installation has been carried out by a suitably qualified engineer.

 Faulty components must only be replaced by original spare parts. Only when these parts are fitted can the safety of the appliance can be guaranteed.

 Always disconnect the dishwasher from the electrical supply for maintenance work (switch off at the wall socket and remove the plug).

 If the connection cable is damaged it must be replaced with a special cable, available from the manufacturer. For safety reasons, this must only be fitted by the service department or an authorised service technician.


## ABOUT ELECTRICITY CONNECTING

 **CAUTION**, for personal safety:

DO NOT USE AN EXTENSION CORD OR AN ADAPTER PLUG WITH THIS APPLIANCE. DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD GROUNDING PRONG FROM THE POWER CORD.

### Electrical requirements


- An 220–240 V, 50 Hz fuse or a circuit breaker.
- An individual branch circuit serving your dishwasher.
- The rated current of the socket used alone is not less than 6A.


 In the event of a fault or for cleaning purposes, the appliance is only completely isolated from the electricity supply when:

- it is switched off at the wall socket and the plug is withdrawn, or
- it is switched off at the mains, or
- the mains fuse is disconnected, or
- the screw-out fuse is removed (in countries where this is applicable).

 Do not make any alterations to the appliance, unless authorised to do so by the manufacturer.


 
 
 

Never open the casing/housing of the appliance.

 Tempering with electrical connections or components and mechanical parts is highly dangerous and can cause operational faults or electric shock.

 While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the guarantee will be invalidated.

# SAVE THESE INSTRUCTIONS

# PRODUCTS AND ACCESSORIES

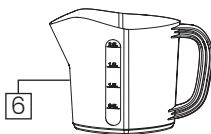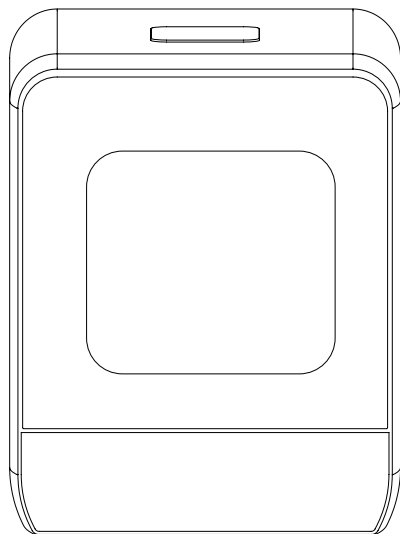

1. Hose Collar
2. Suck Disc
3. Instruction Manual
4. Drain Hose
5. Inlet Hose
6. Pitcher
7. Fruit Basket

## NOTE:


The product, accessories, user interface and other illustrations in the manual are schematic diagrams for reference only.

With the update and upgrade of the product, the actual product and the diagram may be slightly different, please refer to the actual product.



# INSTALLATION

## CONNECTING THE DRAIN HOSE TO THE MACHINE

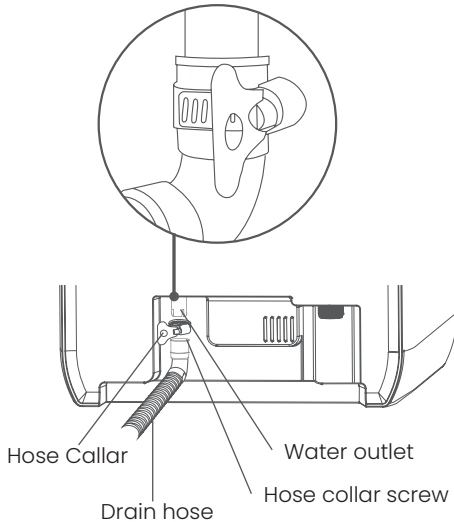


**⚠ WARNING** The dishwasher drain hose is an essential part of the machine, so it must be installed correctly to drain water and perform its job effectively.

- Connect the drain hose to the water outlet located on the back of the machine.
- Tighten the hose collar screw through rotate it counterwise.


## CONNECTING THE DRAIN HOSE TO A SEWER

1. There are three options for sewer connection, **A(sink)**, **B(sink drainpipe)**, and **C(drainage pipe)**. For options B and C, it is required to drill a hole on or under the counter so that the pipe can go through the counter.
2. The drain hose must be properly fitted to its containment source (such as a sink, bucket, etc.) to avoid water leaks, Ensure that the drain hose is not kinked or impeded in any way.

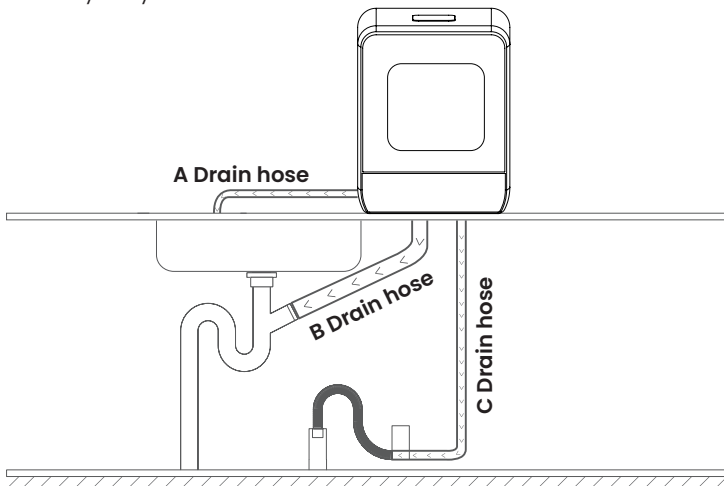

# DIRECTION FOR USE

## OPERATION PANEL

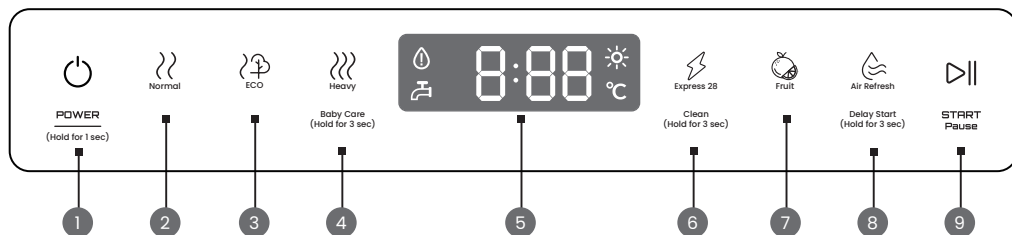

1	POWER	When you press the Power button, the Cycle On light for the most recently started cycle turns on. When the selected cycle is complete, the dishwasher powers off automatically.
2	Normal	Use this cycle for normally soiled dishes.
3	ECO	This is the standard program suitable for normally soiled loads, such as pots, plates, glasses and lightly soiled pans.
4	Heavy	Use this cycle for heavily soiled dishes.
5	Display	Displays information about the current cycle including the cycle time, remaining time, Delay Start settings, and other cycle-specific information.  If a problem occurs during operation, an information code appears with a warning sound. Refer to the information codes on <b>page 18</b> .
6	Express 28	Use this cycle when you need to wash dishes quickly. It takes about 28 min.
7	Fruit	Use this mode to wash hard surface fruits with room temperature water. There is no need to add detergent.
8	Air Refresh	1. 72 hours of automatic intermittent ventilation to remove odors and facilitate storage. 2. After turning on the machine and selecting the desired wash cycle, press and hold for 3 seconds to enter the schedule settings. Press the <b>Air Refresh</b> button to select the time you want to reserve (1-24H). Press the <b>START/Pause</b> button to start running the program.
9	Start/Pause	Press this button to start or pause a wash cycle.

**If you need to cancel the scheduled setting or the current wash cycle, please restart the machine via the POWER button.**

## LED DISPLAY



⚠ Water tank is short of water.

**Icon stays on:** Water is added to the tank through the water inlet hose.


🔧 **Icon off:** The water tank is filled with water.

**Icon flashes:** Water tank is short of water.

☀ Hot air drying or 72 hours ventilation cycle storage.

°C The current water temperature in the dishwasher.

## STARTING A WASH CYCLE

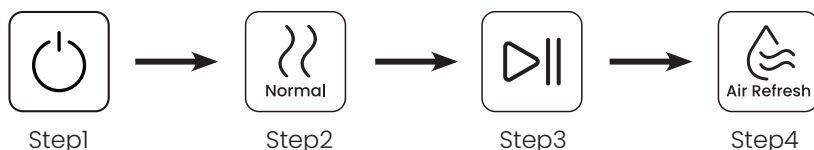

**Step1:** Press and hold for 1 second to turn on the power.

**Step2:** Choose the right wash cycle. (**Normal, ECO, Heavy, Express 28, Fruit, Air Refresh**)

**Step3:** Press the **Air Refresh** button to turn off/on the 72-hour automatic intermittent ventilation according to your needs. According to your needs, long press the **Air Refresh** button for 3 seconds to enter the reservation settings, and short press the **Air Refresh** button again to adjust the reservation duration.

**Step4:** Press the **START/Pause** button to start the wash cycle.

### ⚠ NOTE

- For the **ECO** Wash cycle, enable Automatic Intermittent Ventilation by pressing the **AIR Refresh** button after selecting the **ECO** Wash option. The dishwasher will then engage this feature automatically upon completion of the wash cycle.
- For **Normal/ Heavy/ Baby Care / Express 28 / Clean** wash cycles, the dishwasher will automatically initiate automatic intermittent ventilation after the one-hour hot dry phase. To cancel this feature, press the Air Refresh button twice immediately after selecting the desired wash cycle.
- After washing, the automatic intermittent ventilation will be kept for 72 hours by default. Tap the **Air Refresh** key to switch to 7-day automatic intermittent ventilation (the display shows 7D), and then press the **Air Refresh** key to turn off the **Air Refresh** function.

## CYCLE CHART

Function	Procedure	Time	Detergent	Temperature	Drying	Available Options
Normal	Hot Water Washing Cold Water Rinsing Cold Water Rinsing Hot Water Rinsing	58Min	10g	Washing:55°C Hot Rinsing:68°C	60Min	Fresh Air:72H(Auto)
Express 28	Hot Water Washing Cold Water Rinsing Hot Water Rinsing	28Min	10g	Washing:50°C Hot Rinsing:62°C	60Min	Fresh Air:72H(Auto)
Heavy	Hot Water Washing Hot Water Rinsing Cold Water Rinsing Hot Water Rinsing	78Min	10g	Washing:55°C Hot Rinsing:55°C Hot Rinsing:75°C	60Min	Fresh Air:72H(Auto)
Baby Care*	Hot Water Washing Hot Water Rinsing Cold Water Rinsing Hot Water Rinsing	98Min	10g	Washing:55°C Hot Rinsing:55°C Hot Rinsing:75°C	60Min	Fresh Air:72H(Auto)
ECO	Hot Water Washing Cold Water Rinsing Hot Water Rinsing	88Min	10g	Washing:43°C Hot Rinsing:57°C	60Min	Fresh Air:72H(Auto)
Clean*	Hot Water Rinsing Cold Water Rinsing Hot Water Rinsing	18Min	10g	Washing:50°C Hot Rinsing:62°C	60Min	Fresh Air:72H(Auto)
Fruit	Cold Water Rinsing Cold Water Rinsing Cold Water Rinsing	19Min	/	/	/	/
Air Refresh	/	/	/	/	60Min	Fresh Air:72H(Auto)


### NOTE

- Please hold the **Heavy** button 3 second to run **Baby Care** cycle.
- To clean the interior of the dishwasher to remove any dirt or food particles, please hold the **Express 28** button for 3 seconds to run **Clean** cycle.
- After turning on the machine and selecting the desired wash cycle, press and hold the **Air Refresh** button for 3 seconds to enter the schedule settings, selecting the time you want to reserve (1-24H). Press the **START/Pause** button to start running the program.
- Compared to **Fast** mode, the **Normal / Heavy / ECO** washing works the same time, but run the rinsing two times.


# USING YOUR DISHWASHER

## LOADING THE DISHWASHER BASKET

- Remove large, hard food scraps before loading tableware into the dishwasher

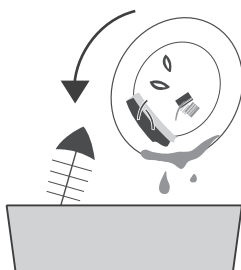


- Refer to the illustration when loading the dishwasher. All tableware and cutlery should be tilted to improve cleaning performance, with the dirty side facing toward the spray arm. Load tableware such that they are leaning against each other, and load hollow items such as pitchers, glasses, etc. with the opening facing downwards. Ladles should face open side down. Improper placement of tableware and cutlery may block the spray arm, which may affect the cleaning.

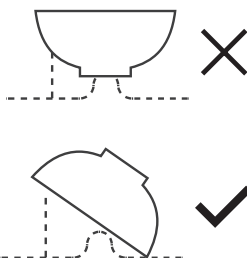

**Try to leave the dirty facing toward the spray arm.**

## RECOMMENDED LAYOUT

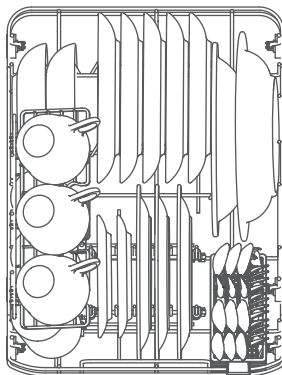

**Recommended Layout for 4 Place Settings.**

# ADDING WATER TO DISHWASHER

## FAUCET MODE

- Remove the silica gel plug from the water inlet on the back of the machine. Then, attach one end of the water inlet hose onto water inlet of the machine.
- Connect the other end of the water inlet hose to your faucet and make sure it is fastened tightly in place. Turn on the faucet valve.
- Press the **POWER** button to start the dishwasher and choose a wash cycle. Then, press the **START / Pause** button to start the wash cycle.

**If the included water inlet hose does not fit your faucet, you may need to buy a threaded faucet adapter from a plumbing supply manufacturer. If you are unsure of what to do, please feel free to contact our customer service team.**

### **NOTE**

- After pressing the START/Pause button, a faucet icon will appear on the display panel, indicating that the water tank is filling.
- When the water tank is full, the faucet icon on the display panel will go out and the machine will sound three alarm sounds. There is no need to add more water during the washing process.
- When the machine starts running a wash cycle, it does not mean that the water tank is filled with water. Do not close the faucet water valve. If the water tank filling process is interrupted, the machine will stop running, the red water shortage icon and faucet icon on the display panel will flash, and an alarm will sound. After normal water filling resumes, the START/Pause button needs to be pressed again to start the washing process.
- When the water tank is filled with water, you can choose to close the faucet valve or remove the water inlet hose according to your needs (This is not required).

## WATER TANK MODE

Power on, add some water to the tank until it beeps three times.

### ⚠ NOTE

- Open the water tank lid and fill with approximately 2.5 pitchers. When the tank is full, 3 beeps will be heard.


### ⚠ ATTENTION

Even if you didn't hear any beep sound after adding water, please stop adding water into the tank after seeing the water get close to the top net. (Sometimes, a noisy environment might make it hard for you to hear the 3-beep sound.)

- Press the **POWER** button to start the dishwasher and choose a wash cycle. Then, press the **START/Pause** button to start the wash cycle.

### ⚠ NOTE

If the water tank is not full when the wash cycle starts, the red water shortage indicator light on the display panel and the faucet indicator light will flash and an alarm will sound. Once the water tank is filled, the machine will automatically restart the wash cycle you selected with no need to press the **START/Pause** button again.

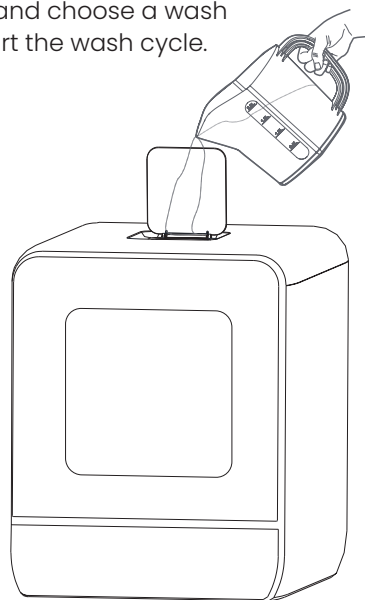

### **ATTENTION**

1. Gold, silver, aluminum products and other valuable items will reduce the surface finish after repeated washing; Antique tableware, glass products and general plastic tableware that are easy to fade, may cause the surface color texture to deteriorate .  
It is recommended not to put them in the dishwasher . Wood and bamboo tableware should be take out after washing in time to avoid mildew.
2. It should not be used to wash large components such as pots and pans, which may lead to poor effect. Tableware or pans with teflon coating should not be put into the dishwasher.
3. It is recommended that you should choose the strong mode or use other cleaning tools to remove stubborn stains, such as: baking tray/tea pitcher used a long time and so on.
4. The plastic liner and the upper shelf can not be completely dried, and it is normal that there is a small amount of residual water below the filter assembly.
5. Some water stains may appear on the dishes, The higher the water hardness, the more obvious, which is a normal phenomenon.
6. Spoons longer than 230mm shall not be placed on the upper shelf for cleaning.

#### **Hint:**

The number of 4 sets refers to standard dishes. The number of other types of dishes may vary.



# CLEANING AND MAINTENANCE

Keep the dishwasher clean to improve performance, reduce unnecessary repairs, and lengthen its lifecycle.

## EXTERIOR

Clean spills on the surface of the dishwasher as they occur. Use a soft, damp cloth on the control panel to gently wipe away spills and dust.

### ⚠ CAUTION

- Do not use benzene, wax, thinner, chlorine bleach, alcohol, or other chemical substances. These materials may discolour the surface of the dishwasher and cause stains.
- The dishwasher has electric parts inside. Do not sprinkle water directly onto the dishwasher. Protect electrical components from coming in contact with water.

## INTERIOR

Clean the interior of the dishwasher on a regular basis to remove any dirt or food particles. Wipe inside the dishwasher and inside the door with a wet dishcloth.

To remove white spots and odors from placemats, place 10g detergent in the lower basket of an empty dishwasher. Close the door and run a **Clean** cycle.



Use a damp cloth to remove lime scale or grease deposits inside the dishwasher. Alternatively, apply some detergent, and then run an empty cycle using the highest rinse temperature.

### ⚠ CAUTION


- Do not remove the front seal (the long rubber seal enclosing the opening of the dishwasher). The seal keeps the inner side of the dishwasher sealed.

## SPRAY ARMS



1. Open the door and take out the basket.
2. Remove the lower spray arm by grasping the middle arm and pulling upwards. Unscrew the upper spray arm by rotating counterclockwise.

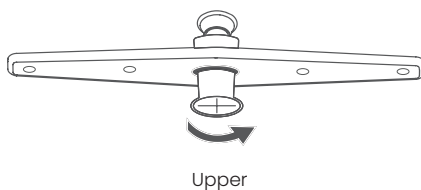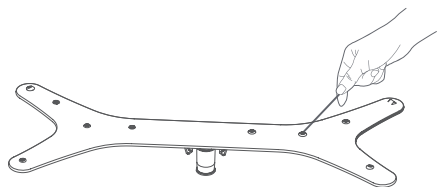

3. Wash the arms under running water and brush each spray arm. Use tools with a sharp point, such as a needle, to clean nozzles if needed.

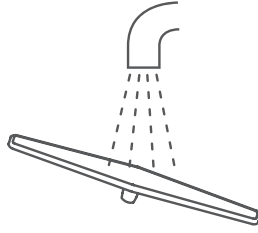

 4. Replace the lower spray arm to its seat by pushing downward until it clicks into place. Replace the upper spray arm by screwing clockwise into its seat. Ensure that the spray arm movement is not impeded before running another cycle.

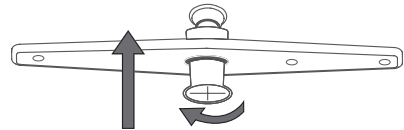


Upper


## FILTER SYSTEM

### TO REMOVE THE FILTER SYSTEM

1. Turn the filter counterclockwise to remove it from the machine.

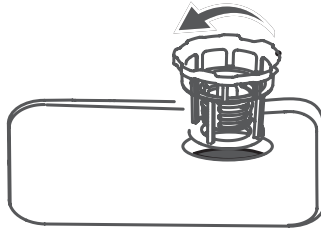

2. Remove the flat filter by pulling upwards.

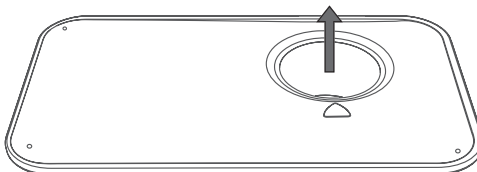


## TO CLEAN THE FILTER SYSTEM

1. Rinse the filter system under running water. Use a soft cleaning brush to clean the filter and the flat filter.
2. To reinstall the filter system, position the flat filter on its seat and push downwards, align the tabs on the bottom of the filter with the corresponding hole of the fine filter, and then insert the coarse filter into the fine filter. Then, place the fine filter into its seat and rotate clockwise to tighten.


### **⚠ CAUTION**

Before using the machine, you need to turn the filter clockwise to tighten the filter and align the triangle indicator arrow.

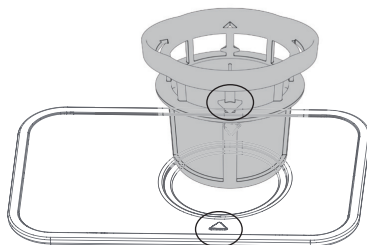

## DISHWASHER FILTER REMOVAL METHOD

1. Rotate the filter counterclockwise;
2. Extract the filter and flat filter upward;

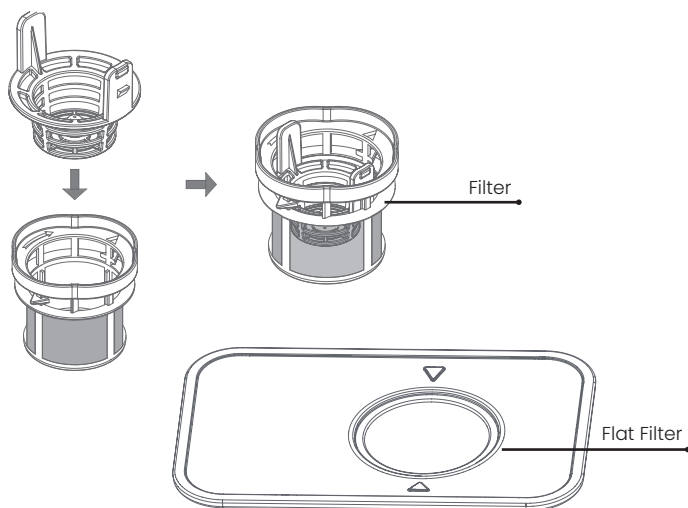

The purpose of the filter system is to prevent larger food scraps or other objects from entering the wash pump. After many washes in the dishwasher, food debris can clog the filtration system, which consists of the filters shown above. Clean the filter assembly regularly according to the "Maintenance" operation guide.

## LONG-TERM CARE

If you will not use the dishwasher for an extended period of time, first drain the unit completely, and then disconnect the water hose. Shut off the water supply valve and the power outlet. Water remaining in the hoses or the internal components can damage the dishwasher.

## DRAIN THE WATER FROM THE TANK

If you need to store your dishwasher for an extended period of time, first drain and disconnect it. If you leave water in the hoses and internal components, you can damage the dishwasher.

After draining and disconnecting the dishwasher, be sure to turn off the water supply valve and power outlet.


### **⚠ CAUTION**

After the dishwasher is powered on, in standby mode (POWER button flashes), Hold the Air Refresh button and POWER button at the same time for 3 seconds to forcefully drain the water in the tank.

Hold the POWER button for 1 second to cancel forced draining.

### **Notice:**

1. Do not plug the air outlet, otherwise it will affect the drying.
2. Do not close to the outlet to prevent high-temperature steam.
3. The outlet of the dishwasher will blow out high temperature and high humidity steam, the outlet should not be directly against the socket and other non-contact water devices.

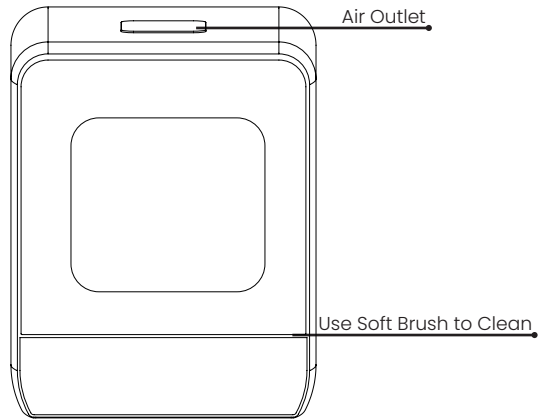


## TROUBLESHOOTING

Phenomenon	Reason	Solution
Tableware Not Completely Dry	Tableware Are Not Set Properly	According To The Manual, Set The Tableware Correctly
Tableware Not Clean	1. Powder Not Enough 2. Tableware Not Set Properly 3. Filter Jammed 4. Select Other Washing Mode	1. Add Correct Powder 2. According To The Manual 3. Clean The Filter 4. Select The Correct Washing Mode
Crash In The Dishwasher	1. Spray Arm Crash The Tableware 2. Tableware Swings With The Spray Water	1. Pause, Check The Tableware 2. Lay The Tiny Tableware On A Steady Position
Much Foam In Wanshing Room	Use Wrong Powder	Use The Correct Washing Powder
Dish Basket Change Colour	Tableware Faded	Don't Wash Such Tableware

Exception	Analysis	Solution
Water Shortage Light On	1. The Water Supply Tap Closed, Or The Water Supply Pressure Is Lower Than 0.04mpa. 2. The Water Inlet hose Abnormal. 3. The Water Inlet Valve Of The Dishwasher Is Abnormal.	1. Make Sure The Water Supply Faucet Is Open; If The Water Pressure Is Lower Than 0.04mpa, Purchase A Water Inlet Pump. 2. Smooth The Water Inlet hose Without Bending, Squeezing Or Blocking. 3. Contact After-Sales Service.
The Start Key Cannot Work	1. Door Open 2. Door Sensor Fault	1. Close The Door 2. Contact After-Sales Service.
Error Code	E1: Water Intake Fault E2: Drainage Fault E3: Overflow Fault E4: Water Temperature Sensor Fault E5: Commuciation Fault E6: Heater Fault E7: Fan Fault	E1: Check The Faucet, Try To Add Water; E2: Contact After-Sales Service. E3: Contact After-Sales Service. E4: Contact After-Sales Service. E5: Contact After-Sales Service. E6: Contact After-Sales Service. E7: Contact After-Sales Service.

## SCHEMATIC DIAGRAM

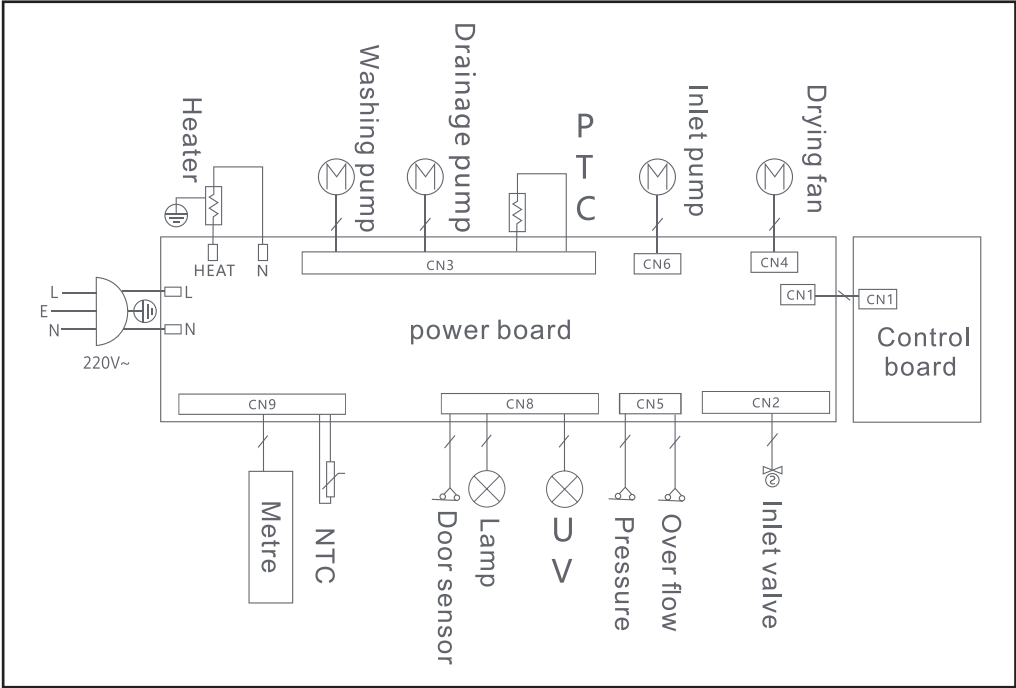

## BASIC PARAMETER

Name	Portable Countertop Dishwasher
Model	ZMW-DUHC01
Product Size	370x510x452mm
Rated Voltage	220-240V~
Rated Frequency	50Hz
Net Product Weight	12.8Kg
Rated Power	950-1050W
Drying Method	Hot Air
Rated Capacity (Set)	4
Rated Water Pressure	0.04-1.0Mpa

Filter type: Manual filter

**The name and content of harmful substances in the product:**

Harmful Substance						
Part name	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Plastic	O	O	O	O	O	O
Sheet metal parts	O	O	O	O	O	O
Washing pump	O	O	O	O	O	O
Heater	O	O	O	O	O	O
PCB	X	O	O	O	O	O
Packing material	O	O	O	O	O	O

This form is prepared in accordance with the requirements of SJ/T 11364.

O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572.



X: Indicates that the concentration of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.

(This product meets ROHS environmental protection requirements: At present, there is no mature technology in the world to replace or reduce the lead content of electronic ceramics, optical glass, copper and copper alloys)

# WARRANTY

Product Name	Model Number	Default Warranty Period	Date of Purchase	Order Number	For your own reference, we strongly recommend that you record your order number and date of purchase.
PORTABLE COUNTERTOP DISHWASHER	ZMW-DUHC01	2 years			

## TERMS & POLICY

AIRMCEN warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

AIRMCEN will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. AIRMCEN is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional safety or usage warnings included in the product packaging and manual.

## THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

AIRMCEN assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

**ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

## DEFECTIVE PRODUCTS & RETURNS

Should your product prove defective within the specified warranty period, please contact Customer Support via [support@airmcen.com](mailto:support@airmcen.com) with your order number. DO not dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the unit with a copy of your invoice and order number.



# CUSTOMER SUPPORT

## WE'RE HERE TO HELP!

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

## CUSTOMER SUPPORT

Email: **support@airmsen.com**

Website: **www.airmsen.com**

If you need to purchase product accessories, please visit **www.airmsen.com**.

\* Please have your order confirmation number ready before contacting Customer Support.



<https://www.facebook.com/Airmsen>



<https://www.youtube.com/@AIRMSEN>

For product operation videos, please subscribe to AIRMSEN's official Youtube account.

NOTES:

NOTES:

# AIRMSSEN

QUESTIONS OR COMMENTS?

EMAIL	OR VISIT US ONLINE AT
<a href="mailto:support@airmsen.com">support@airmsen.com</a>	<a href="http://www.airmsen.com">www.airmsen.com</a>



Printed in China