 


XRocker®

PANTHER XL REVERSIBLE GAMING DESK

 
 
 
 

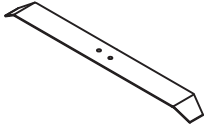 
 

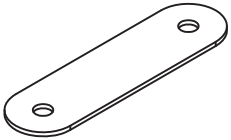 
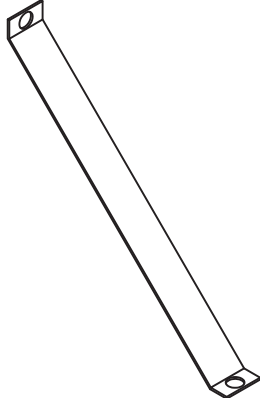 
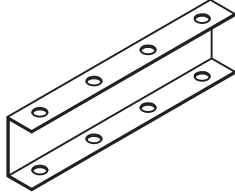 
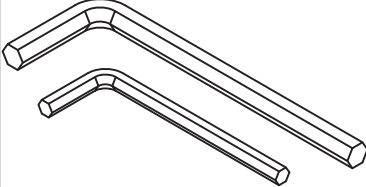 

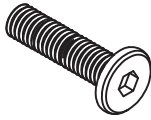 
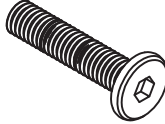 
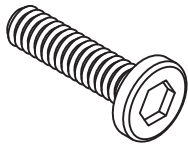 
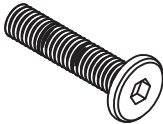 

 

Assembly Instructions

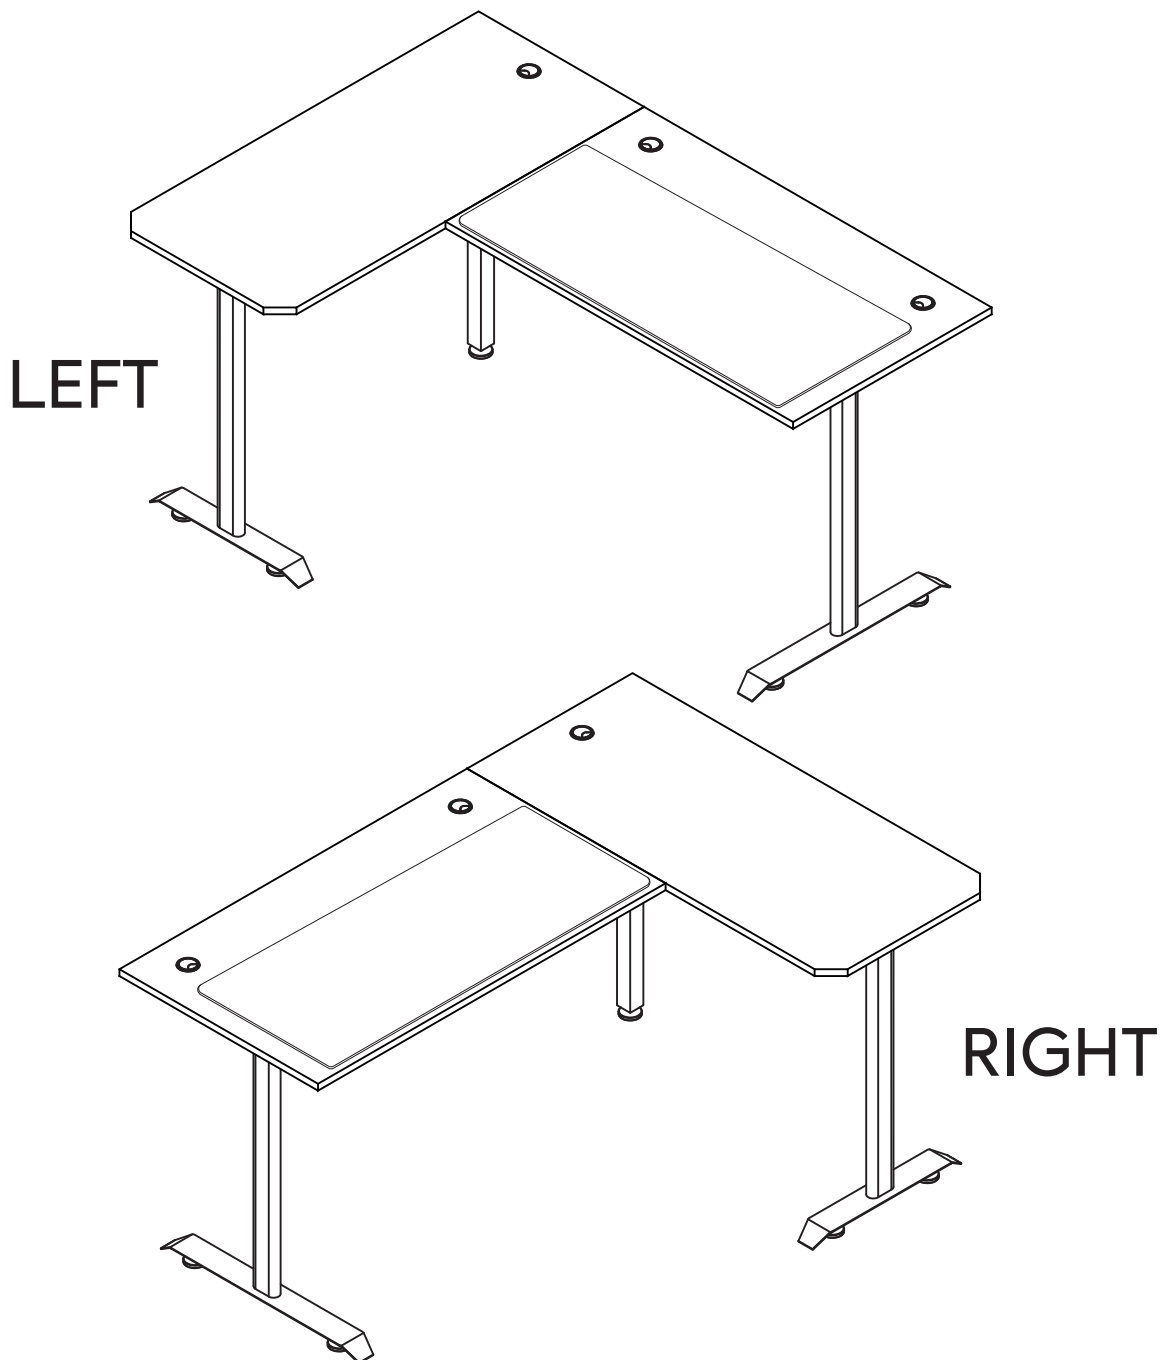


Need Help? Contact X Rocker at : www.xrockeruk.com/pages/support





IMPORTANT: You must keep your original retail receipt as proof of purchase.

Please retain for future reference


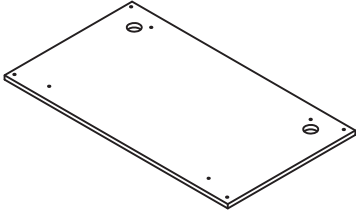
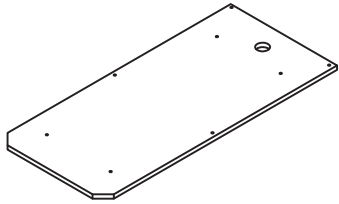
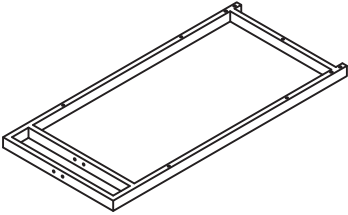
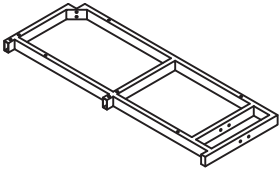
<p>1.</p>  <p>X1</p>	<p>2.</p>  <p>X1</p>	<p>3.</p>  <p>X1</p>	<p>4.</p>  <p>X1</p>
<p>5.</p>  <p>X2</p>	<p>6.</p>  <p>X1</p>	<p>7.</p>  <p>X1</p>	<p>8.</p>  <p>X1</p>
<p>9.</p>  <p>X2</p>	<p>10.</p>  <p>X2</p>	<p>11.</p>  <p>X2</p>	<p>12.</p>  <p>X1</p>
<p>A.</p>  <p>M6X12 X16</p>	<p>B.</p>  <p>M6X30 X8</p>	<p>C.</p>  <p>M6X50 X8</p>	<p>D.</p>  <p>M8X40 X2</p>
<p>E.</p>  <p>M8X30 X4</p>	<p>F.</p>  <p>X3</p>	<p>G.</p>  <p>X5</p>	<p>H.</p>  <p>X8</p>


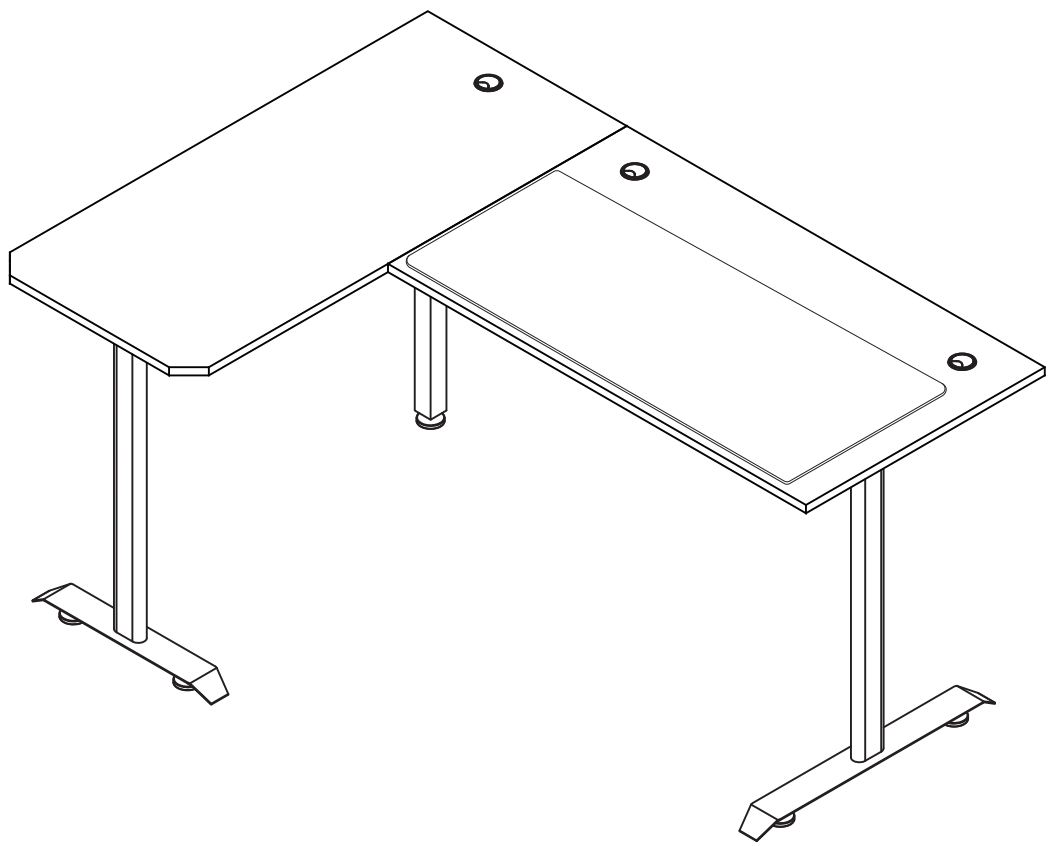 


LEFT

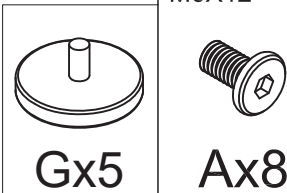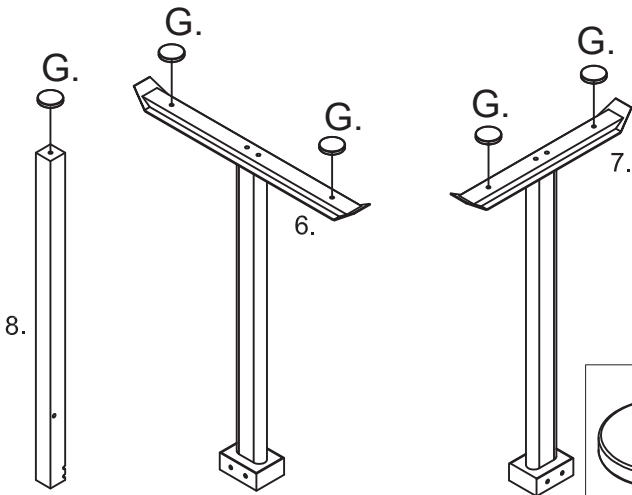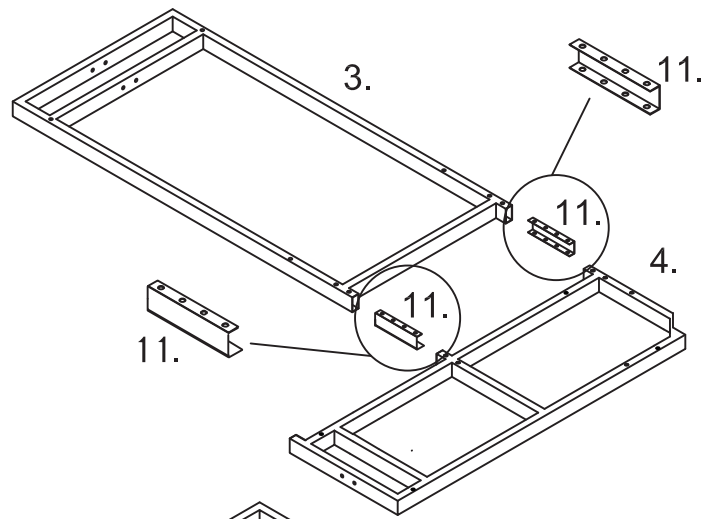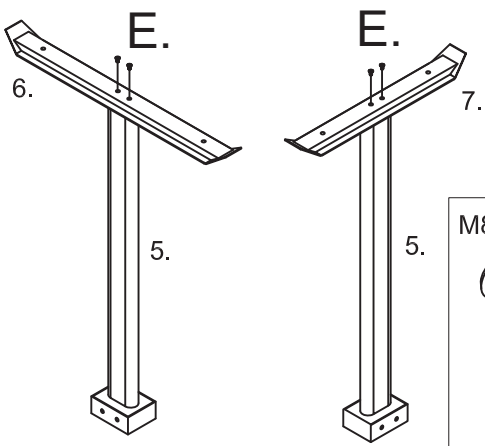    


       Screw inner bolts first, outer bolts second.

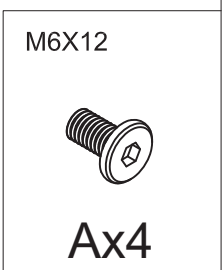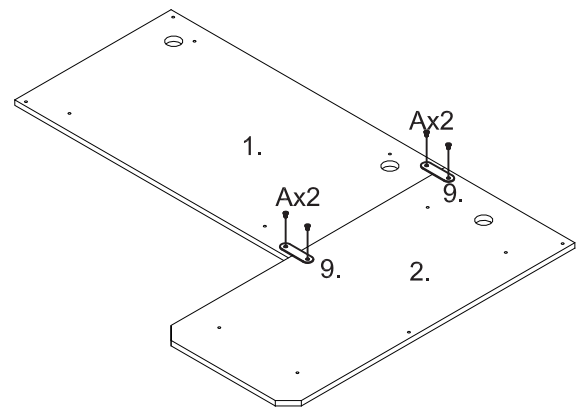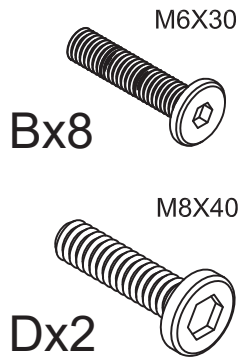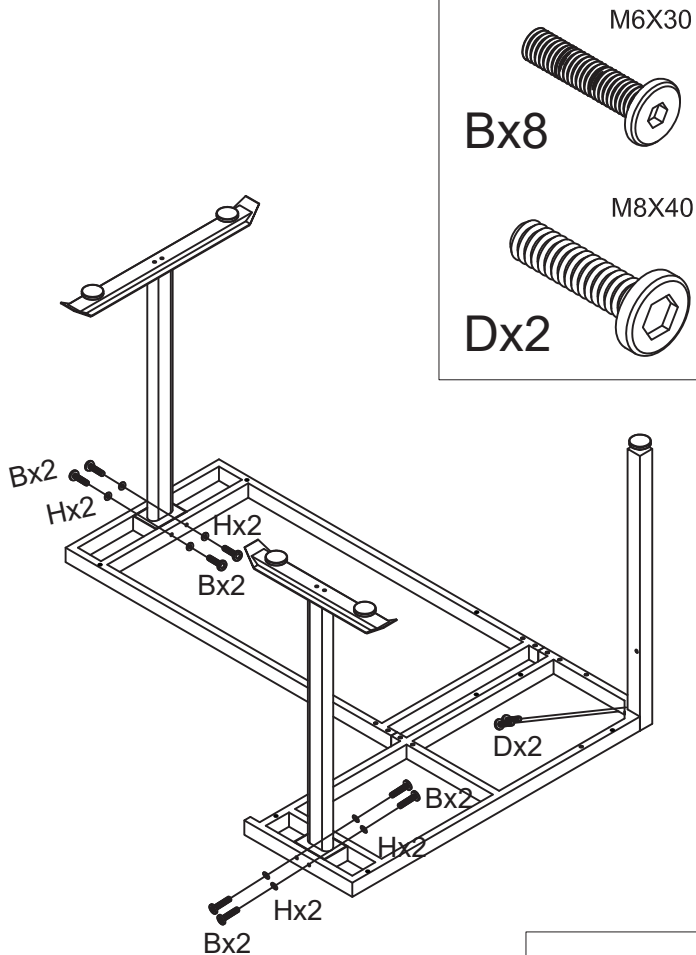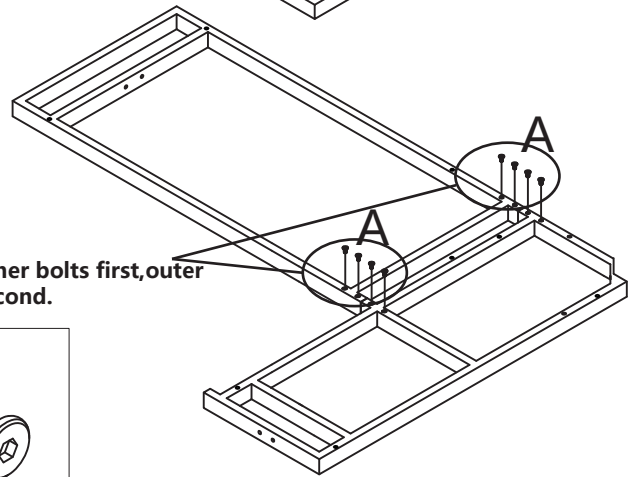

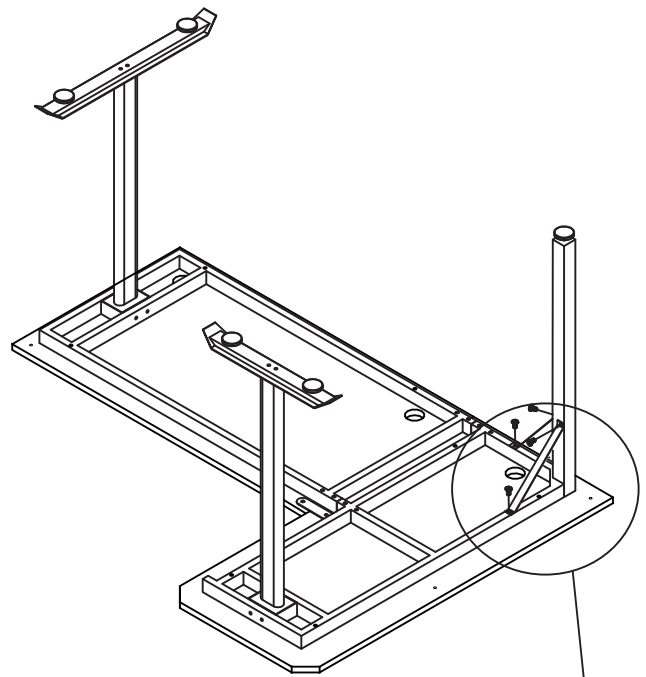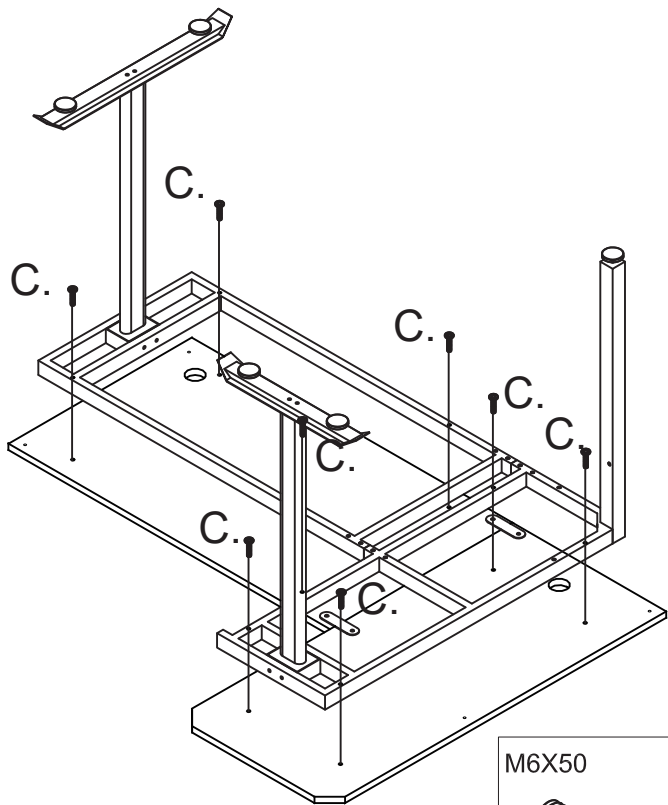

M6X50


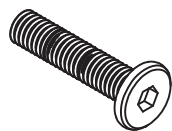 


Cx8


M6X12









 
 
Ax4

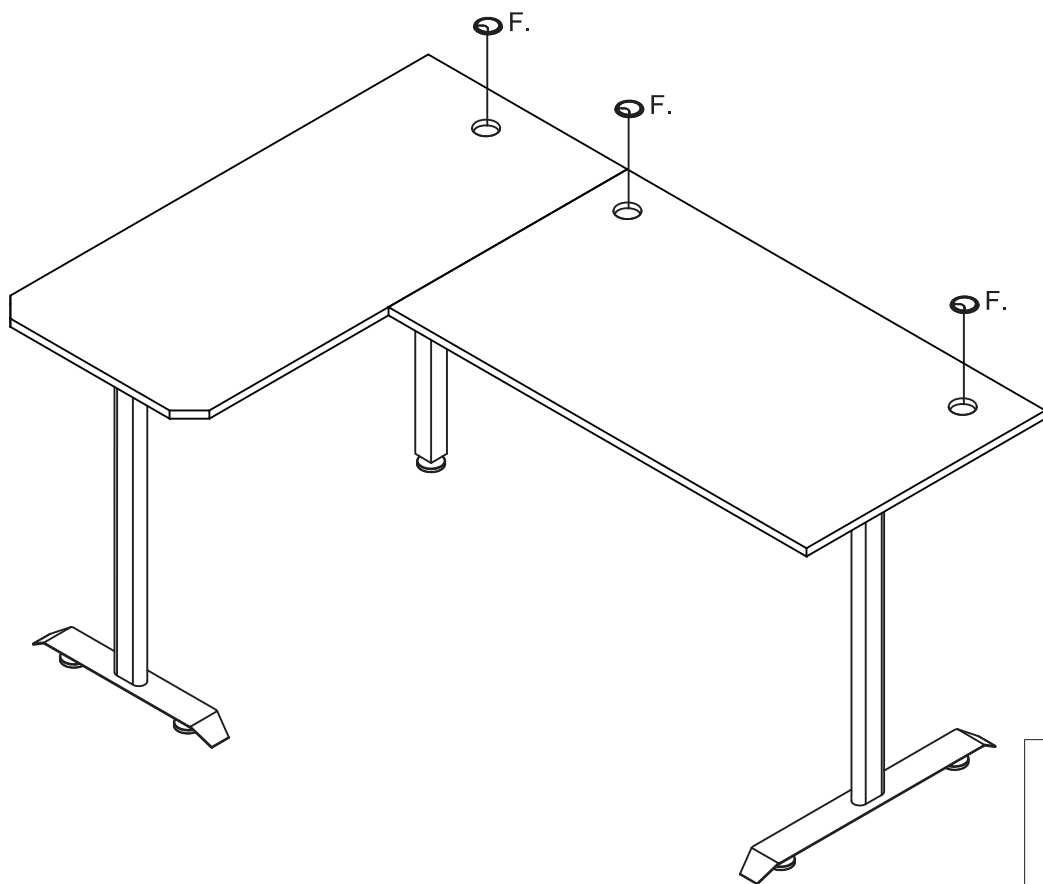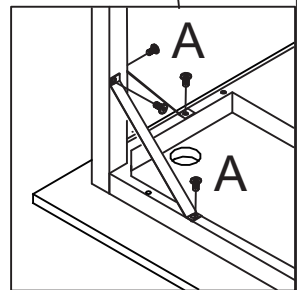


Fx3

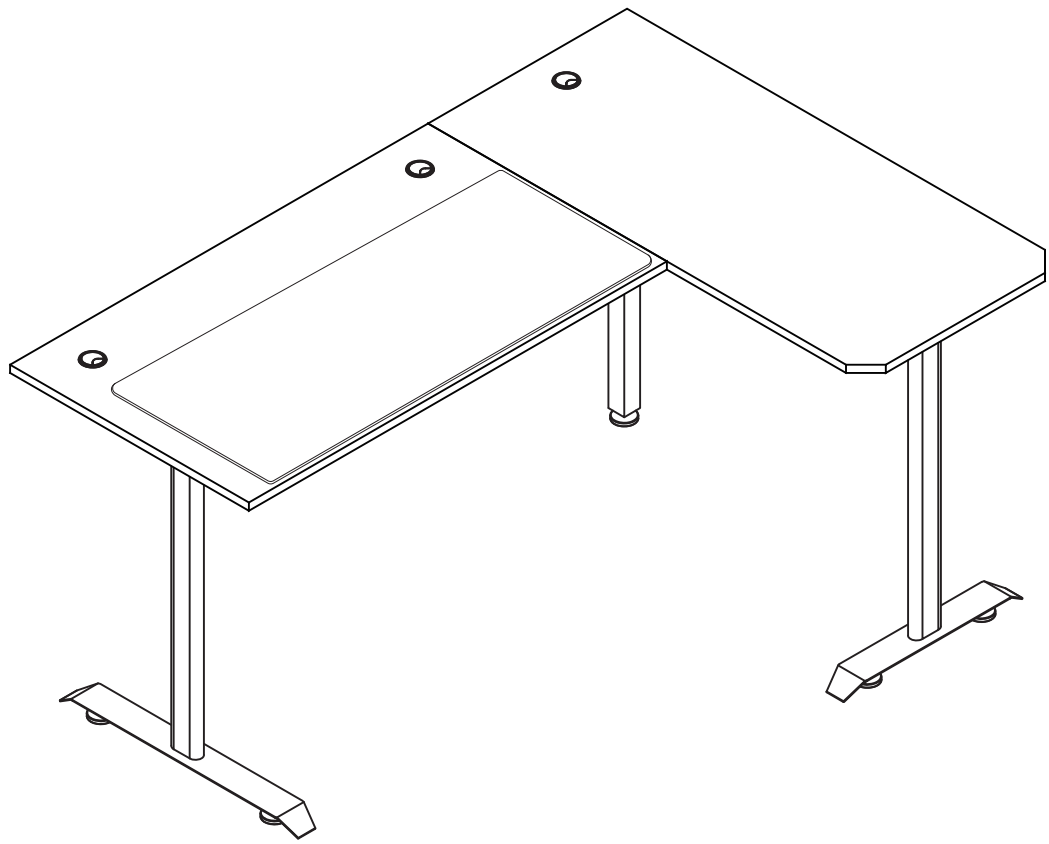 


RIGHT

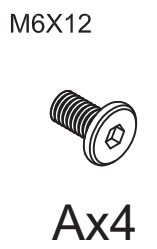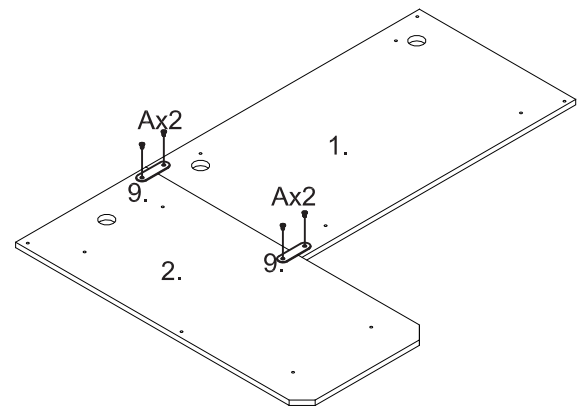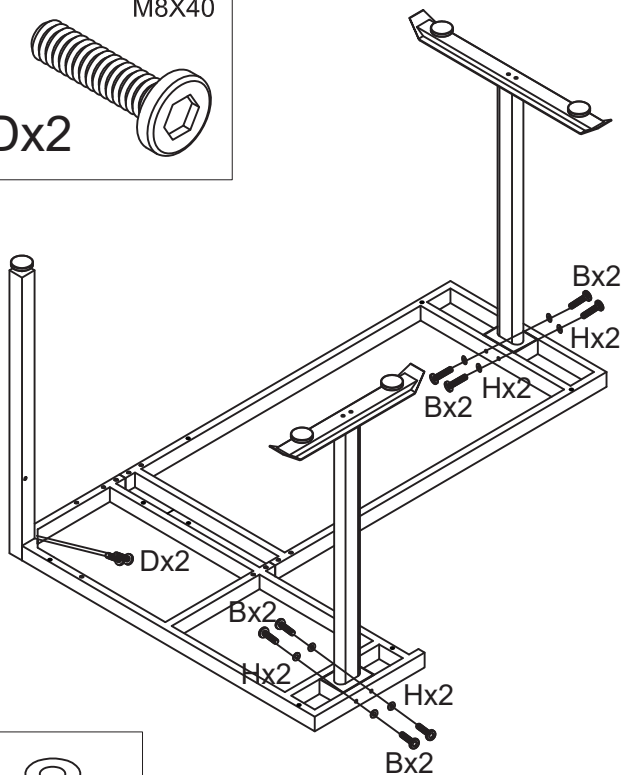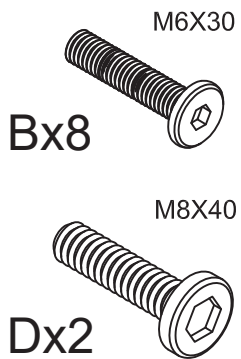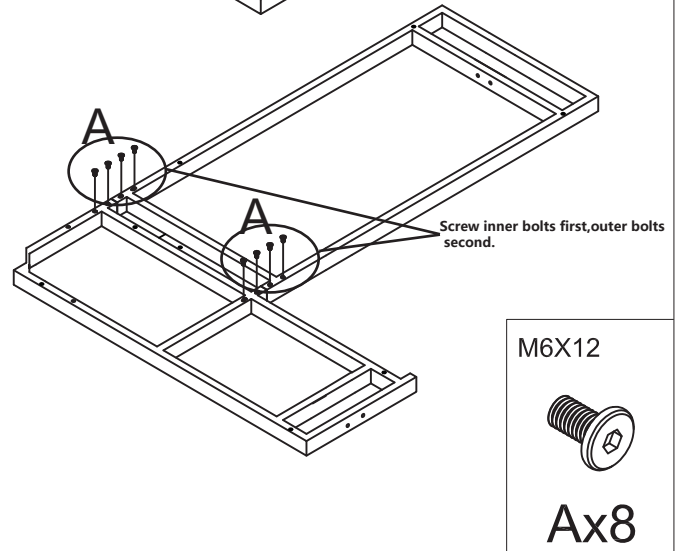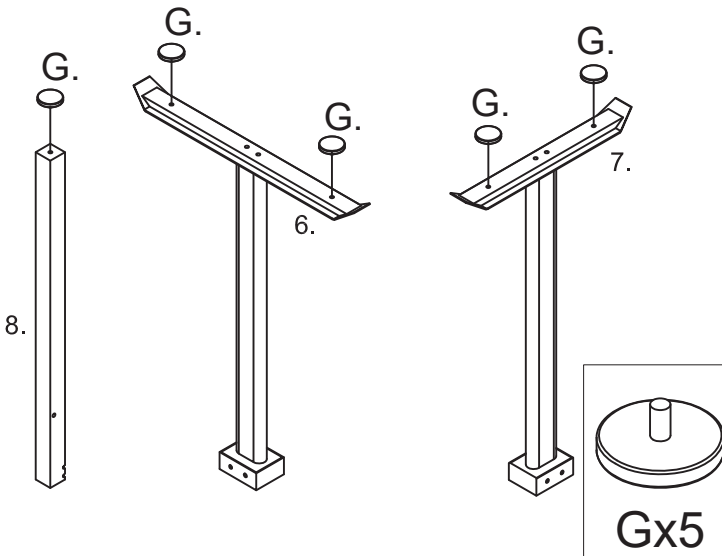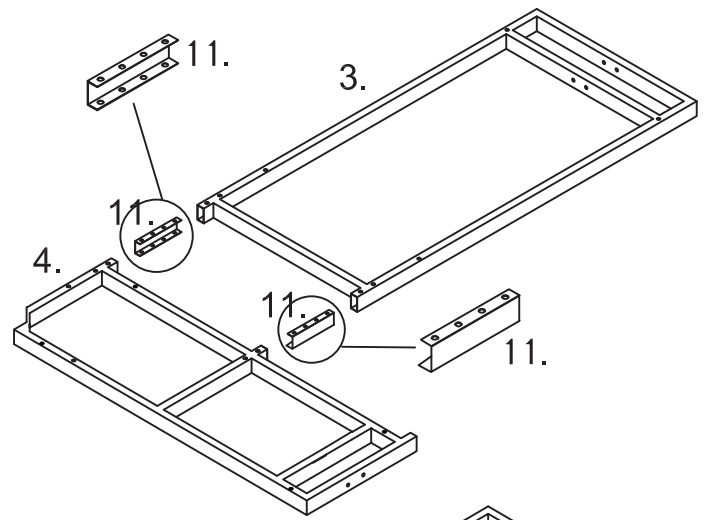       
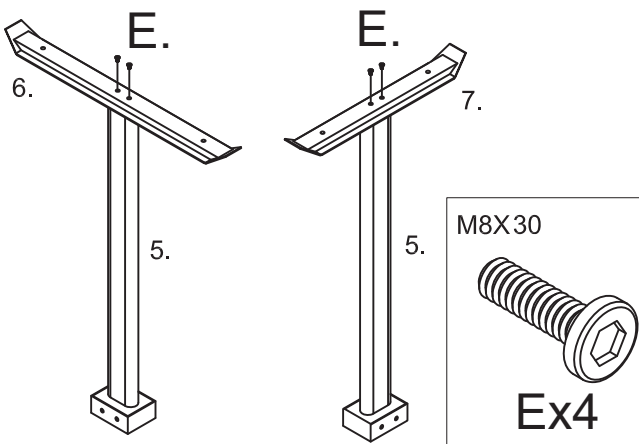 


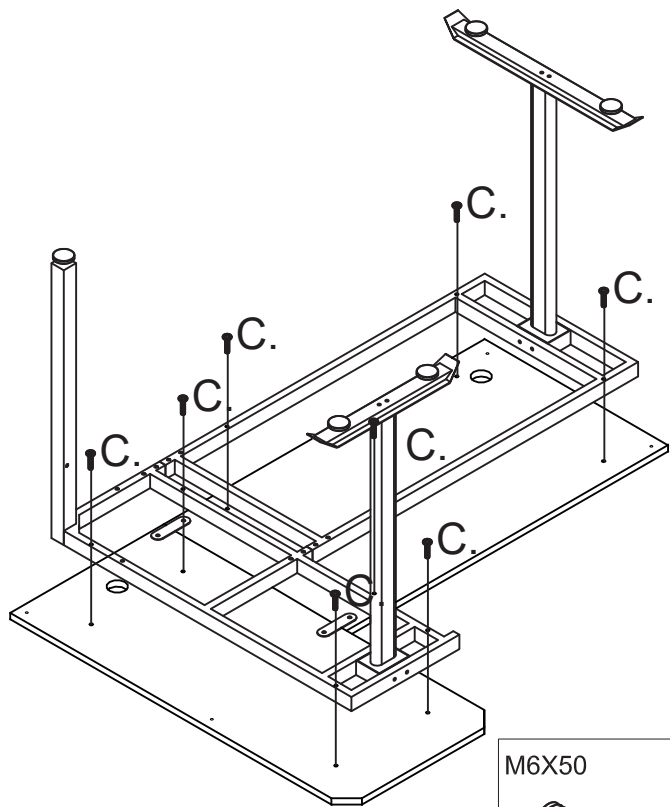 

M6X50

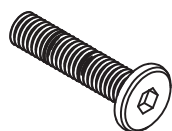 


Cx8

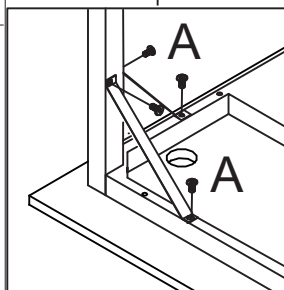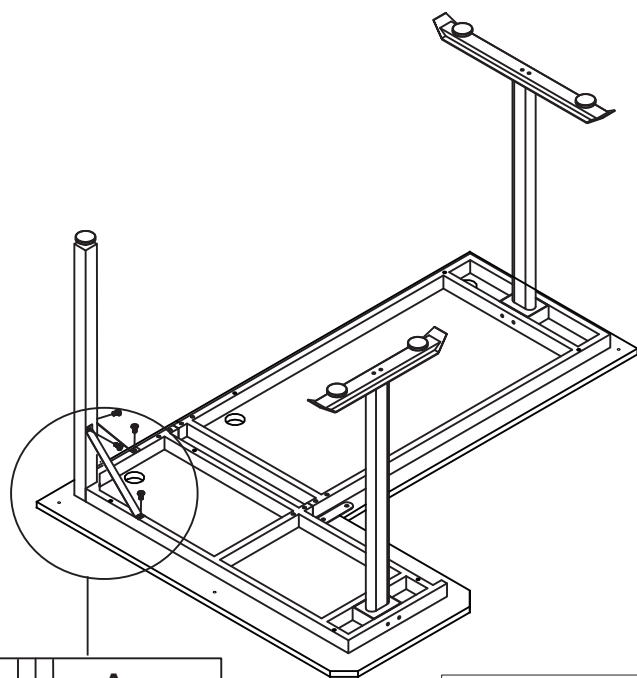  

M6X12



 Ax4

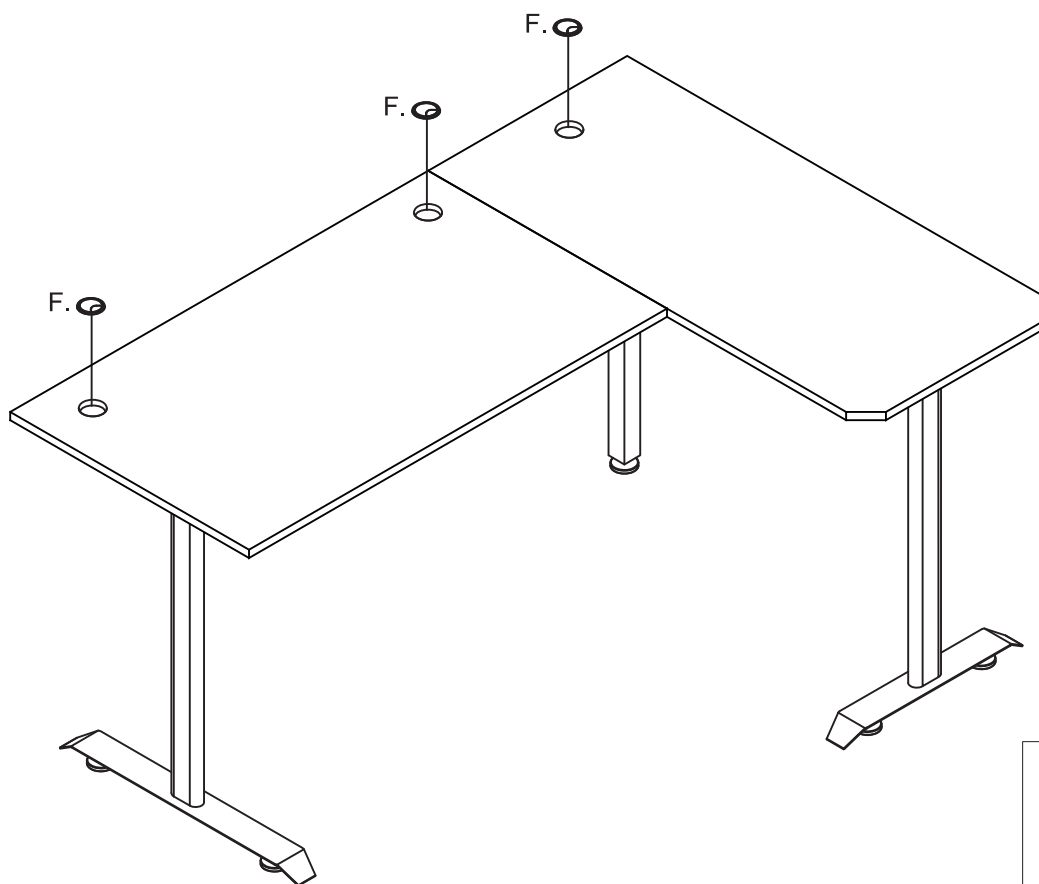

Fx3