

 
- D Montageanleitung
- GB Assembly Instructions
- NL Handleiding voor de montage
- PL Instrukcja montażu
- HU Szerelés útmutató
- RO Instrucțiuni de montaj
- FR Notice de montage
- IT Istruzioni di montaggio
- CZ Montážní návod
- SK Návod na montáž
- TR Montaj talimatı
- RU Инструкция по монтажу

A7		4x
b3		4x
e11		10x
n		8x
r9		4x
s6		4x
t1		4x
v		2x

**Service • Assistenza • Dienstverlening • Serwis  
Servis • Szerviz • Сервисная служба**

Астана • Алматы • Бишкек • Душанбе  
 Астана • Алматы • Бишкек • Душанбе  
 Астана • Алматы • Бишкек • Душанбе

At. • No. • № • Номер • Číslo  
 7.0361



- 1. ASL 321x430x15mm 1
- 2. ASR 321x430x15mm 1
- 3. MSL 321x415x15mm 1
- 4. MSR 321x415x15mm 1
- 5. BL 1601x450x15mm 1
- 6. EB 481x414x15mm 1
- 7. BD 1601x450x15mm 1
- 8. BLD 1600x61x15mm 1
- 9. BLL 260x61x15mm 1
- 9a. BLR 260x61x15mm 1
- 11. KL 486x254x16mm 2
- 12. RW 1581x333x3mm 1

A7		4x	r9		4x
b3		4x	s6		4x
e11		10x	t6		12x
f1		10x	t1		18x
i		2x	v		2x
l		8x	x8		6x
n		8x	y4		1x
r		4x	z		10x

