

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
BOSCH	BCH3PT25CN/01	
BOSCH	BBH32551/01	Flexxo Serie 4
BOSCH	BCH3ALL21/01	
BOSCH	BCH3K255/01	
BOSCH	BCH3251TW/01	
BOSCH	BCH3252TW/01	
BOSCH	BCH3251CN/01	
BOSCH	BCH3ALL25/01	
BOSCH	BBH32101/01	Flexxo Serie 4
BOSCH	BBH3ZOO25/01	
BOSCH	BCH3PT25TW/01	
BOSCH	BBH3211GB/01	
BOSCH	BCH3252CN/01	
BOSCH	BCH3P210/01	Flexxo Serie 4
BOSCH	BBH3251GB/01	
BOSCH	BCH3P255/01	
BOSCH	BCH3K210/01	
BOSCH	BCH3P210/03	Flexxo Serie 4
BOSCH	BBH32101/03	Flexxo Serie 4
BOSCH	BBH3ZOO25/03	
BOSCH	BCH3ALL21/03	
BOSCH	BCH3P255/04	
BOSCH	BBH3ZOO25/04	
BOSCH	BBH32101/04	Flexxo Serie 4
BOSCH	BBH3K2801/04	
BOSCH	BCH3ALL21/04	
BOSCH	BCH3P255/03	
BOSCH	BBH3K2801/03	
BOSCH	BBH32WHITE/03	
BOSCH	BCH3P210/04	Flexxo Serie 4
BOSCH	BBH32WHITE/01	
BOSCH	BBH32WHITE/04	
BOSCH	BBH3ZOO25/05	
BOSCH	BBH32WHITE/05	
BOSCH	BCH3ALL21/05	
BOSCH	BBH3P280/05	
BOSCH	BCH3P255/05	
BOSCH	BBH3K2801/05	
BOSCH	BCH3251CN/04	
BOSCH	BBH3ALL28/05	
BOSCH	BCH3PT25CN/04	
BOSCH	BBH32551/05	Flexxo Serie 4
BOSCH	BCH3P210/05	Flexxo Serie 4
BOSCH	BCH3K210/05	
BOSCH	BBH3P2801/05	Flexxo Serie 4

BOSCH	BBH32101/05	Flexxo Serie 4
BOSCH	BCH3252CN/04	
BOSCH	BBH3P2801/06	
BOSCH	BBH3P280/06	
BOSCH	BBH32101/06	
BOSCH	BCH3K2852/06	
BOSCH	BCH3P255/06	
BOSCH	BCH3P210/06	
BOSCH	BCH3K210/06	
BOSCH	BBH3K2801/06	
BOSCH	BCH3ALL21/06	
BOSCH	BBH3ALL28/06	
BOSCH	BCH3ALL25/06	
BOSCH	BBH32551/06	
BOSCH	BBH3ZOO28/06	
BOSCH	BBH32WHITE/06	
BOSCH	BBH3ZOO25/06	
BOSCH	BBH3ALL23/06	
BOSCH	BBH32WHITE/07	
BOSCH	BBH3ALL23/07	
BOSCH	BCH3K2301/07	
BOSCH	BBH32551/07	
BOSCH	BBH32101/07	
BOSCH	BBH3K2801/07	
BOSCH	BBH3ZOO25/07	
BOSCH	BCH3K210/07	
BOSCH	BBH3P2801/07	
BOSCH	BCH3ALL21/07	
BOSCH	BBH3P280/07	
BOSCH	BBH3ZOO28/07	
BOSCH	BCH3ALL25/07	
BOSCH	BCH3K255/07	
BOSCH	BBH3ALL28/07	
BOSCH	BCH3K2801/07	
BOSCH	BCH3K2852/07	
BOSCH	BCH3P210/07	
BOSCH	BCH3P255/07	
BOSCH	BCH3K2851/07	
BOSCH	BCH3P2301/07	