

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
Braun	0X64184741	4184-MX2050
Braun	0X64184710	4184-MX2050
Braun	0X64184750	4184-MX2050
Braun	0X64184713	4184-MX2050
Braun	0X64184756	4184-MX2050
Braun	0X64184703	4184-MX2050
Braun	0X64184752	4184-MX2050
Braun	0X81313425	4184-MX2050BL
Braun	0X81325939	4184-MX2050BL
Braun	0X81329146	4184-MX2050
Braun	0X64184717	4184 MX 2050 MN NEW
Braun	0X64184724	4184-MX2050
Braun	0X64184742	4184-MX2050
Braun	0X64184751	4184-MX2050
Braun	0X64184761	4184-MX2050
Braun	0X64184771	4184-MX2050
Braun	0X64184725	4184-MX2050
Braun	0X64184769	4184-MX2050
Braun	0X64184719	4184-MX2050
Braun	0X81372100	4184-MX2050
Braun	0X64184720	4184-MX2050
Braun	0X64184707	4184 MX 2050, vanilla
Braun	0X81260804	4184-MX2050
Braun	0X64184757	4184-MX2050
Braun	0X64184762	4184-MX2050
Braun	0X81260794	4184-MX2050
Braun	0X81260801	4184-MX2050

Braun	0X81260798	4184-MX2050
Braun	0X64184715	4184 MX 2050 MN FRULLATORE
Braun	0X64184760	4184-MX2050
Braun	0X64184755	4184-MX2050
Braun	0X81251283	4184-MX2050BL
Braun	0X64184744	4184-MX2050
Braun	0X64184767	4184-MX2050
Braun	0X64184711	4184-MX2050
Braun	2000	Blender MX 2000 kunststof
Braun	2050	MX 2050 purewhite
Braun	0X22311003	4186-JB3060WH
Braun	0X22311004	4186-JB3060WH
Braun	0X22311009	4186-JB3060WH
Braun	0X22311007	4186-JB3060WH
Braun	0X22311017	4186-JB3060WH
Braun	0X22311006	4186-JB3060BK
Braun	0X22311023	4186-JB3060WHS
Braun	0X22311026	4186-JB3060BK
Braun	0X22311030	4186-JB3060WHS
Braun	0X22311031	4186-JB3060BK
Braun	0X22311034	4186-JB3060WHS
Braun	0X22311037	4186-JB3060WHS
Braun	0X22311044	4186-JB3070WHS
Braun	0X22311043	4186-JB3060BK
Braun	0X22311062	4186-JB3060WH
Braun	0X22311063	4186-JB3060WH
Braun	0X22311065	4186-JB3060BK
Braun	0X22311066	4186-JB3060WH
Braun	0X22311068	4186-JB3060WHS

Braun	0X22311069	4186-JB3060BK
Braun	0X22311070	4186-JB3060WHS
Braun	0X22311071	4186-JB3060BK
Braun	0X22311072	4186-JB3060WHS
Braun	0X22311073	4186-JB3060WHS
Braun	0X22311074	4186-JB3060BK
Braun	0X22311075	4186-JB3070WHS