


Instruction Manual

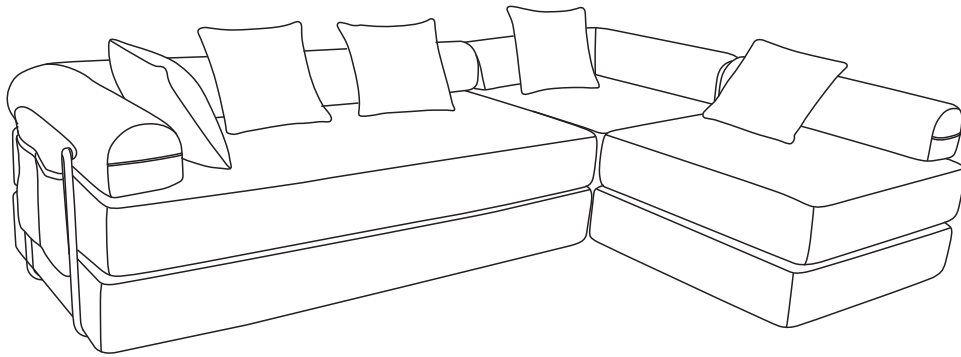


72 HOURS
The seat and back cushions need **72** hours to decompress and fully inflate before using them


A*1



B*1

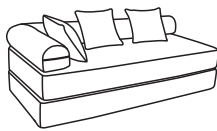


C*12

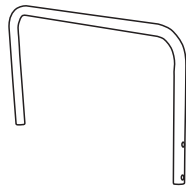


D*6



 E*6



F*2

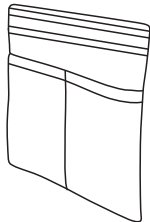

G*48




H*1




①

Do not use knife

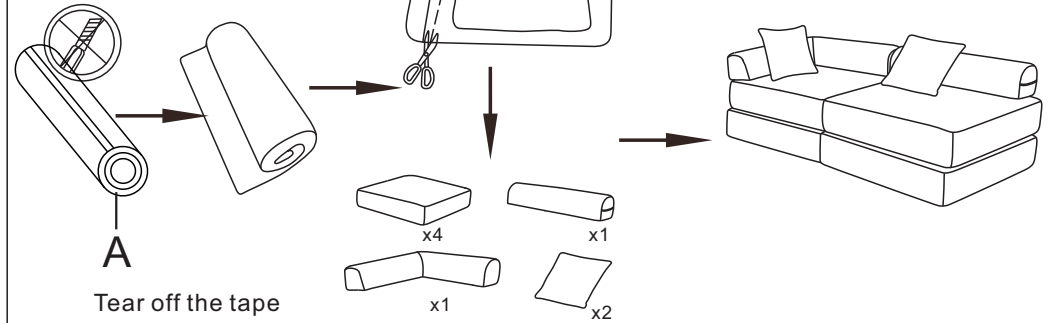


②

Do not use knife

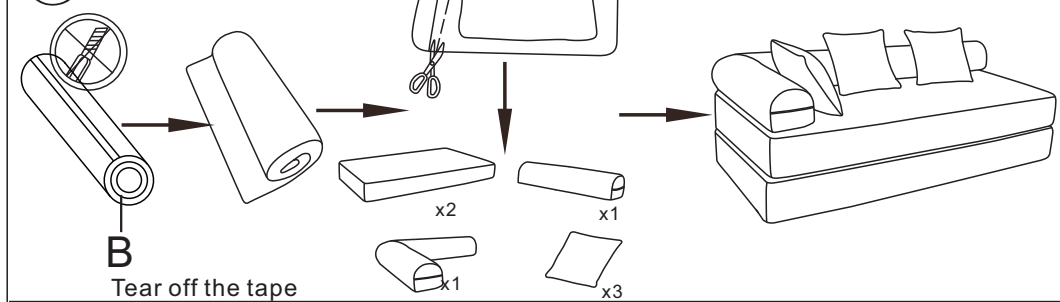


③

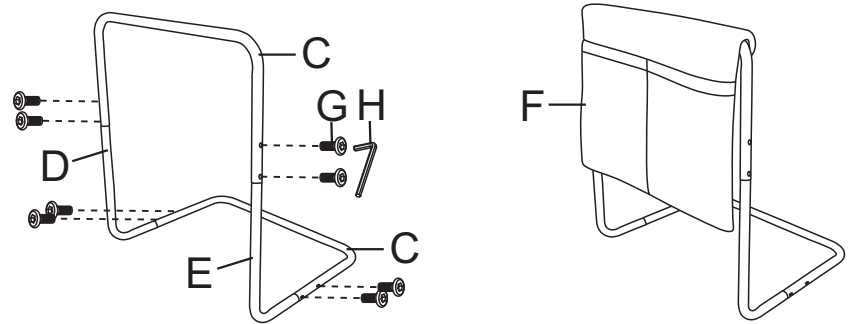

④

The sofa sets can be freely arranged and switched.

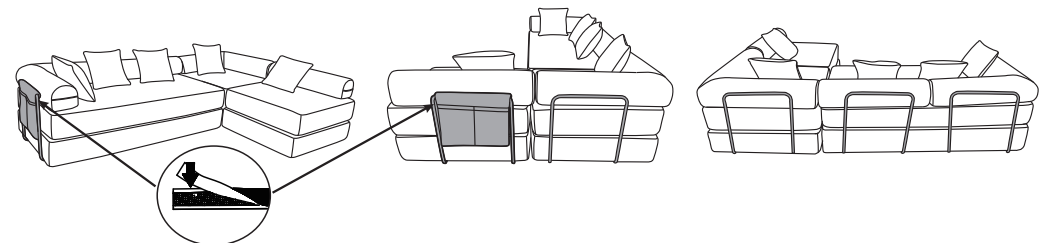

SAFETY INFORMATION OR WARNING

EN

Please read carefully

Warnings:

Do not use on uneven surfaces;
Avoid climbing or tilting the product;
Check for loose screws during use;
Keep away from fires, direct sunlight, and damp environments.

DE

Bitte sorgfältig lesen

Verwenden Sie das Produkt nicht auf unebenen Oberflächen;
Vermeiden Sie das Klettern oder Kippen des Produkts;
Überprüfen Sie während der Nutzung die Schrauben auf lockeren Sitz;
Von Feuer, direktem Sonnenlicht und feuchten Umgebungen fernhalten.

FR

Veuillez lire attentivement

Ne pas utiliser sur des surfaces inégales;
Évitez de grimper ou d'incliner le produit;
Vérifiez les vis desserrées pendant l'utilisation;
Tenir à l'écart du feu, de la lumière directe du soleil et des environnements humides.

IT

Leggere con attenzione

Non utilizzare su superfici irregolari;
Evitare di arrampicarsi o inclinare il prodotto;
Controllare durante l'uso se le viti sono allentate;
Tenere lontano da fiamme libere, luce solare diretta e ambienti umidi.

ES

Por favor, lea atentamente

No usar en superficies irregulares;
Evitar subirse o inclinar el producto;
Revisar si hay tornillos sueltos durante el uso;
Mantener alejado de llamas, exposición directa al sol y lugares húmedos.