

<b>A</b>	600 mm
<b>B</b>	50 mm
<b>C</b>	20 mm
<b>D</b>	
<b>E</b>	5 mm

**DE** Einbauanleitung  
Autarkkkochfelder


**EN** Installation instructions  
Autarkic hobs

**FR** Notice de montage  
Plaques de cuisson  
autarciques


**NL** Inbouw instructies  
Autarkische kookplaten








**IT** Istruzioni per il montaggio a incasso  
Piani di cottura Autarkic

**ES** Manual de instalación  
Placas de cocción  
autónómicas

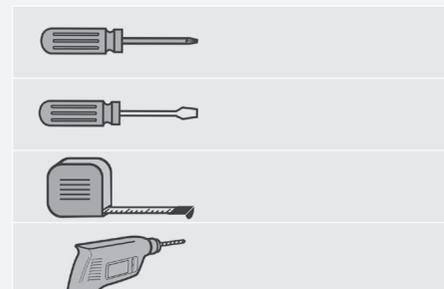

Typ	L	W	H	D
EKC600	590	520	52	60
EKI600	590	520	52	60
	A	B	X	
	560	490	50 min	

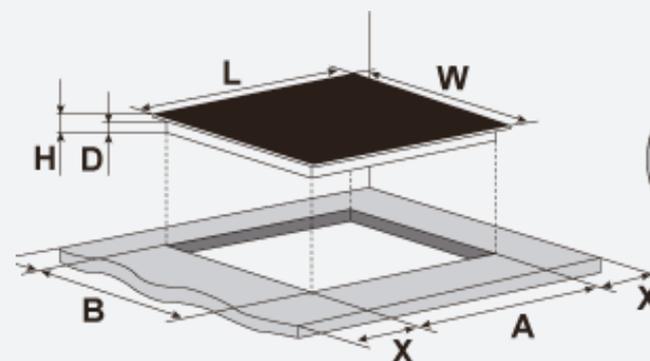

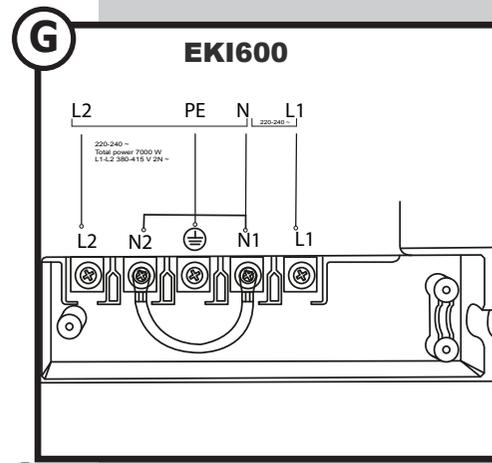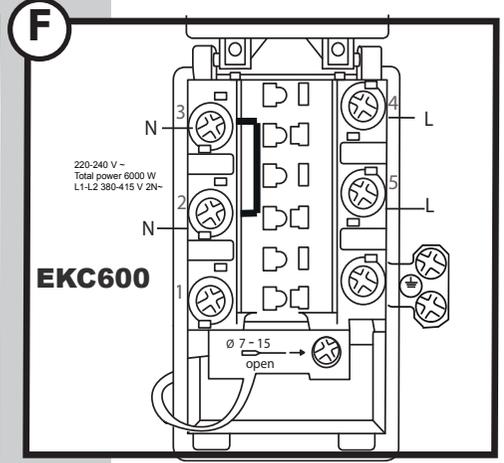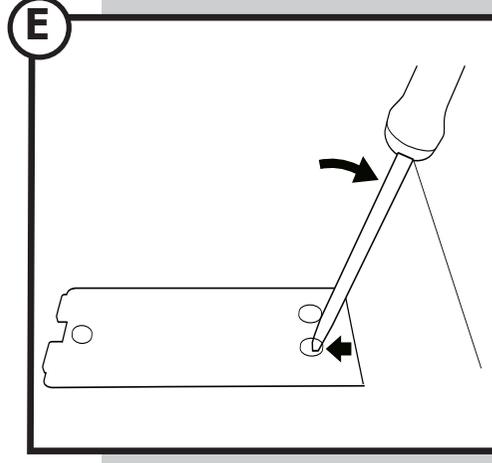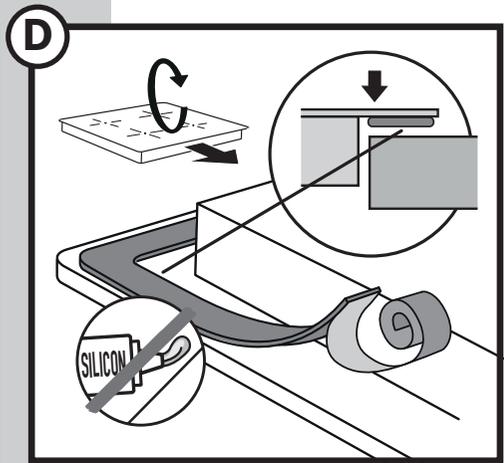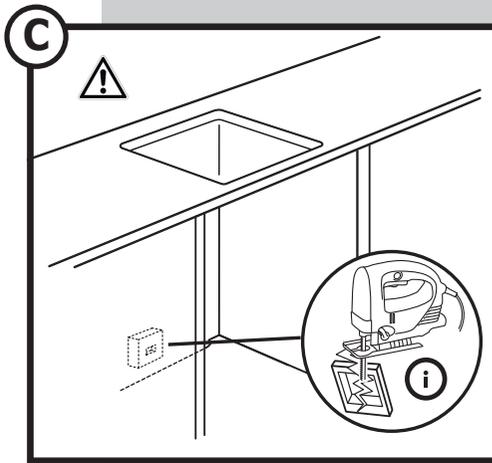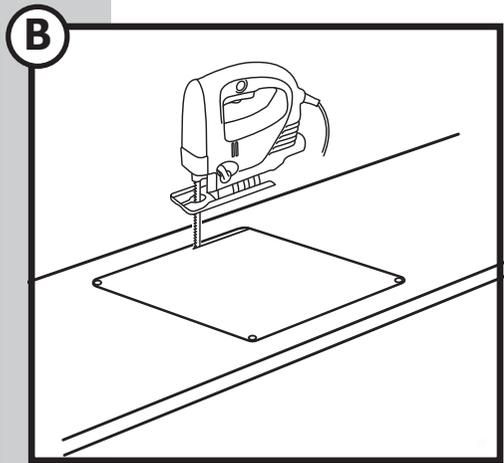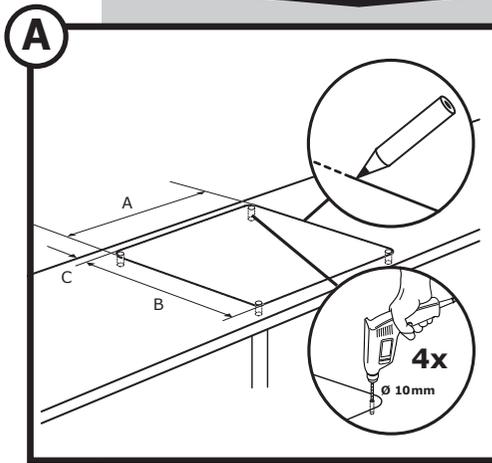

**H**

**Hinweis für EK1600**

Wenn nach dem Elektrischen Anschluss in der Anzeige des Geräts "E" ersichtlich ist (Bild J), oder alle Anzeigen blinken, ist der Elektrische Anschluss nicht korrekt. Den Anschluss prüfen und ggfs. verändern.

