

Declaration of Conformity

This product has been manufactured according to actual technical standards. The product is matching the requirements of the existing European and national guidelines. The Declaration of Conformity has been proofed. AMEWI Trade e.K. declares that this product is matching the basic requirements and remaining regulations of the guideline 2014/53/EU (RED). The declarations and documents are stored at the manufacturer and can be requested and applied there.

The full text of the declaration of conformity can be found at: <https://amewi.com/Konformitaetserklaerungen>

For additional questions to the product and conformity please contact:

AMEWI Trade e.K. Nikolaus-Otto-Str. 18, 33178 Borcheln or via the website amewi.com



Security and Hazard Warnings



Attention! For damage, caused by disregarding of the manual, warranty expires !
We are not liable for secondary failures, material or personal damage, caused by improper usage or disregarding the security notices.

Attention! Based on security and registration (CE) reasons, it is forbidden to modify the product personally. Do not disassemble the product.

Attention! Small parts. Danger of suffocation or risk of injury caused by small parts.



Even a drop down from a small height can cause damage to the product. Usage of more than one Products of same Frequency at the same time is not possible, because it will affect each other.

Battery Notice and Battery Disposal



Attention! Battery do not belong in childrens hands. A change of the battery has to be done by an adult person. Never mix chargeable batteries with non-chargeable batteries. Never mix fully charged batteries with almost empty batteries. Never mix batteries of different capacities. Never try to charge dry batteries. Take care of the correct polarity. Defective batteries belong to special waste. Never leave a charging battery unattended. For questions about the charging time please read the manual or ask the manufacturer.

Disposal



The company AMEWI is registered below the WEEE Reg. Nr. DE93834722 at the foundation EAR and recycles all used electronic parts properly. Electric and electrical products are not allowed to put in household garbage. Please dispose the product at the end of the lifetime according to the actual laws. You as a customer are responsible by law for the return of all used batteries, a disposal over the household garbage is forbidden !



Batteries containing hazardous substances are marked with the alongside symbols, which point to the prohibition of disposal in household garbage.

Additional notations for the critical heavy metal are: Cd=Cadmium, Hg=Quecksilver, Pb=lead (Label is placed on the batteries, for example below the bottom left trash symbols).



Based on RoHS labeling the manufacturer confirms, that all limit values were taken care of at the time of manufacturing.



Batteries labeled with the recycling symbol can be put into used battery collecting tank. (Most supermarkets have)
They are not allowed to be put into local household garbage.



AMEWI Trade e.K. is involved in the dual system for boxing over the company Firma Landbell AG. All used boxes are collected from partner companies (waste disposal contractor) at private customers (local household), sorted and properly utilized. The Involvement in a Dual Systems helps to save CO² Emissions.



8+

AIRPROP SPEED RC HIGH SPEED KATAMARAN

 
 
 


Item: 26094

ATTENTION!


1. The boat switches on automatically when it comes into contact with water. Insert the battery, switch on the remote control and then put the boat in the water.
2. Do not exceed the range of the remote control (about 80m) while using the boat. This can cause the boat to get out of control.
3. The boat can be operated for about 15 minutes with a fully charged battery.
4. The boat will slow down when the battery power is low. Please steer the boat back in time.
5. Do not operate the boat on lakes with aquatic plants or pollution. Doing so could damage the propeller and render the boat unable to control.
6. Do not ride into pools or lakes where swimmers are nearby to avoid injuring them.

Turn left

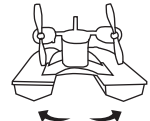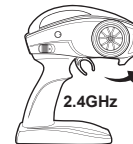


How to control (as the pictures shows) :
Using this adjusting knob to control the direction. When sailing straight, please manually adjust to the right if drifting left, and adjust to the left if drifting right.

 RC boat main structure diagram

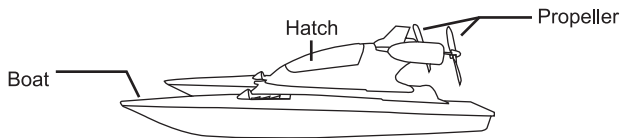


Remote control functions

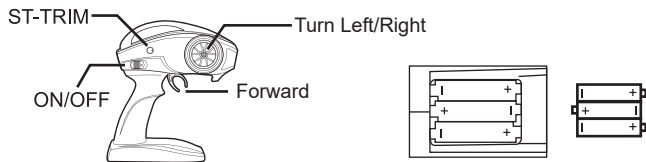 

Inserting batteries: open the battery cover of the remote controller and insert 3 "AA" size batteries, paying attention to the polarity markings in the battery compartment. (batteries are not included)

 Charging the model battery

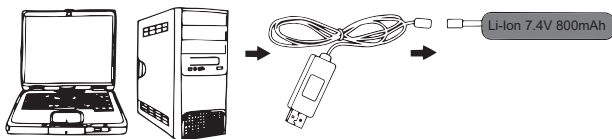


Charging time is approx 120 mins. The red indicator turn off when charging and turn on when charging is complete.



1. Install batteries in correct polarity.
2. Do not mix old and new batteries
3. Do not mix different type of batteries.
4. Rechargeable battery must be charged under adult supervision.
5. Power terminal shall not be short circuit.
6. Unable to connect to more than the recommended number of power supply.
7. Please use the USB cable for charging that from the manufacturer.

 Inserting battery into the boat



Insert the battery in the boat, then mount the battery holder. Make sure to insert the battery the right way round.



 
Insert the cabin cover onto the ship body 45 degrees, push it forward, and engage the buckle.

Functions

Forward



Turn right
Forward



Maintenance

1. Avoid prolonged exposure to sunlight on the surface of the product and clean the contaminated soil with neutral detergent and clean water.
2. Before storage, please clean the boat after play to ensure that the product is free from moisture.
3. The battery must be removed from the hull and stored with half charge before storage.
4. Please remove the battery from remote control before storage to avoid leakage and damage to the remote control.