

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
Kenwood	0WKM241002	KM241 KITCHEN MACHINE PROSPERO PROPLUS
Kenwood	0WKM241001	KM241 KITCHEN MACHINE PROSPERO
Kenwood	0WKM260004	KM260 PROSPERO
Kenwood	0WKM261006	KM261 PROSPERO
Kenwood	0WKM262007	KM262 PROSPERO
Kenwood	0WKM263002	KM263 PROSPERO
Kenwood	0WKM264008	KM264 PROSPERO
Kenwood	0WKM265007	KM265 PROSPERO
Kenwood	0WKM266006	KM266
Kenwood	0WKM266002	KM266 PROSPERO
Kenwood	0WKM282002	KM282 PROSPERO KITCHEN MACHINE
Kenwood	0WKM283001	KM283 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0WKM285002	KM285 KITCHEN MACHINE – SILVER
Kenwood	0WKM286002	KM286 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0WKM287002	KM287 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0WKM288001	KM288 PROSPERO KITCHEN MACHINE – BLACK
Kenwood	0WKM242002	KM242 PROSPERO KITCHEN MACHINE
Kenwood	0WKM242006	KM242 PROSPERO KITCHEN MACHINE
Kenwood	0WKM245002	PROSPERO KM245
Kenwood	0WKM243004	PROSPERO KM243
Kenwood	0WKM244002	PROSPERO KM244
Kenwood	0WKM280001	KM280 PROSPERO KITCHEN MACHINE – WHITE
Kenwood	0WKM280005	KM280 PROSPERO KITCHEN MACHINE – WHITE
Kenwood	0WKM282006	KM282 PROSPERO KITCHEN MACHINE
Kenwood	0WKM242007	KM242 PROSPERO KITCHEN MACHINE
Kenwood	0WKM289002	KM289 PROSPERO KITCHEN MACHINE – BLACK
Kenwood	0WKM240002	KM240 KITCHEN MACHINE PROSPERO PROPLUS

Kenwood	0WKM241004	KM241 KITCHEN MACHINE PROSPERO
Kenwood	0WKM248002	KM248 PROSPERO KITCHEN MACHINE – BLACK
Kenwood	0WKM241006	KM241 KITCHEN MACHINE PROSPERO
Kenwood	0WKM281001	KM281 PROSPERO KITCHEN MACHINE – WHITE
Kenwood	0W20010012	KM240 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0WKM287001	KM287 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0WKM287006	KM287 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0WKM285006	KM285 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0WKM285001	KM285 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0WKM283002	KM283 PROSPERO KITCHEN MACHINE – SILVER
Kenwood	0W20010037	KM280BK PROSPERO KITCHEN MACHINE – BLACK
Kenwood	0W20010038	KM280RD PROSPERO KITCHEN MACHINE – RED
Kenwood	0W20010045	KM280RD PROSPERO KITCHEN MACHINE – RED
Kenwood	0W20010016	KM241 PROSPERO KITCHEN MACHINE
Kenwood	0W20010017	KM241 PROSPERO KITCHEN MACHINE
Kenwood	0WMX260007	MX260